

PART NAME	CODE	PART NAME	CODE
-----------	------	-----------	------

**ALPHABETICAL INDEX**

**A**

Absorber, shock. . . . .	17-23-3 to 17-23-56	Arm and idler arm, power steering gear . . . . .	19-27-2 to 19-27-55
Accelerator pedal . . . . .	14-01-1 to 14-01-22	Arm and idler arm, std. steering gear . . . . .	19-27-2 to 19-27-55
Accelerator pedal return spring . . .	14-06-1 to 14-06-10	Ash receiver . . . . .	23-02-1 to 23-02-148
Accelerator pedal to accelerator Shaft Rod . . . . .	14-07-1 to 14-07-18	Automatic choke . . . . .	14-64-2
Accelerator shaft . . . . .	14-11-1 to 14-11-51	Automatic choke to carburetor rod . . . . .	14-65-4
Actuator . . . . .	24-29-1 to 24-29-10	Automatic lamp door switch . . . . .	8-12-2 to 8-12-22
Actuating switch . . . . .	8-50-98	Auto. 3 speed transmission . . . . .	21-02-1 to 21-02-6
Adaptor, carburetor lever . . . . .	14-08-36 to 14-08-37	Auto. 3 speed transmission band . . . . .	21-136-5 to 21-136-236
Adjuster, hand brake . . . . .	4-07-1 to 4-07-28	Auto. 3 speed transmission case . . . . .	21-03-1 to 21-03-12
Adjuster, seat . . . . .	23-47-6 to 23-47-455	Auto. 3 speed transmission case extension . . . . .	21-04-1 to 21-04-2
Adjuster, wheel brake automatic . . .	5-20-20 to 5-20-25	Auto. 3 speed transmission clutch . . . . .	21-133-5 to 21-133-71
Air conditioning . . . . .	24-01-1 to 24-01-87	Auto. 3 speed transmission control lever . . . . .	21-142-5 to 21-142-21
Air condition control . . . . .	24-24-5 to 24-24-160	Automatic 3-speed transmission gearshift button . . . . .	21-30-28 to 21-30-405
Air intake . . . . .	23-61-39 to 23-61-132	Automatic 3-speed transmission gearshift cable . . . . .	21-30-28 to 21-30-405
Anchor, parking brake shoe . . . . .	4-06-1 to 4-06-11	Auto. 3 speed transmission gear-shift lever . . . . .	21-30-28 to 21-30-405
Antenna, radio . . . . .	1-88-1 to 1-88-230	Auto. 3 speed transmission governor . . . . .	21-138-2 to 21-138-38
Anti-squeak, body . . . . .	23-31-6 to 23-31-205	Auto. 3 speed transmission input shaft . . . . .	21-129-5 to 21-129-33
Arm, front wheel lower control . . . .	2-10-2 to 2-10-79	Auto. 3 speed transmission kick-down planet pinion carrier and component parts . . . . .	21-134-5 to 21-134-51
Arm, front wheel upper control . . . .	2-08-1 to 2-08-75		
Arm, parking brake lever . . . . .	4-18-2		
Arm, steering linkage knuckle . . . . .	2-05-4 to 2-05-8		

1955-58 PASSENGER CAR PARTS LIST

PART NAME	CODE	PART NAME	CODE
Auto. 3 speed transmission low and reverse planet pinion carrier and component parts . . . . .	21-135-2 to 21-135-50	Back-up lamp switch . . . . .	1-10-3 8-56-1 to 8-56-79
Auto. 3 speed transmission neutral starter switch. . . . .	21-113-24 to 21-113-29	Ball, carburetor . . . . .	14-37-2 to 14-37-49
Auto. 3 speed transmission neutral starter switch package . . . . .	21-113-24	Band, auto. 3 speed transmission. . . . .	21-136-5 to 21-136-236
Auto. 3 speed transmission oil pan . . . . .	21-119-3 to 21-119-19	Band, parking brake . . . . .	4-03-1 to 4-03-11
Auto. 3 speed transmission oil pump. . . . .	21-118-1 to 21-118-50	Band, powerflite transmission. . . . .	21-136-5 to 21-136-52
Auto. 3 speed transmission oil pump strainer. . . . .	21-117-1 to 21-117-10	Bar, body belt . . . . .	23-51-5 to 23-51-43
Auto. 3 speed transmission output shaft . . . . .	21-05-1 to 21-05-35	Bar, front bumper face . . . . .	13-64-3 to 13-64-157
Auto. 3 speed transmission package . . . . .	21-01-3	Bar, radiator upper cross . . . . .	7-33-1 to 7-33-20
Auto. 3 speed transmission speedometer cable, includes shaft and housing . . . . .	21-84-1 to 21-84-14	Bar, rear bumper face. . . . .	13-66-3 to 13-66-154
Auto. 3 speed transmission regulator valve body and valves . . . . .	21-131-5 to 21-131-50	Battery and cable . . . . .	8-01-1 to 8-01-63
Auto. 3 speed transmission servos . . . . .	21-137-5 to 21-137-208	Battery heat shield . . . . .	13-35-1 to 13-35-6
Auto. 3 speed transmission set . . . . .	21-01-3	Battery hold-down cover . . . . .	13-34-3
Auto. 3 speed transmission speedometer pinion . . . . .	21-85-5 to 21-85-76	Battery hold-down strap . . . . .	13-34-3
Automatic 3-speed transmission torque converter intermediate shaft . . . . .	21-129-5 to 21-129-33	Battery hold-down stud . . . . .	13-36-5
Auto. 3 speed transmission torque convertor reaction shaft . . . . .	21-129-5 to 21-129-33	Battery support . . . . .	13-33-61 to 13-33-64
Auto. 3 speed transmission valve body and valves . . . . .	21-139-4 to 21-139-224	Bearing, camshaft . . . . .	9-16-6 to 9-16-17
Auxiliary seat . . . . .	23-44-11 to 23-44-155	Bearing, clutch release . . . . .	6-19-2 to 6-19-3
<b>B</b>		Bearing, differential . . . . .	3-11-1 to 3-11-14
Back-up lamp . . . . .	1-10-1 to 1-10-47 8-56-2 to 8-56-79	Bearing, drive pinion . . . . .	3-22-24 to 3-22-45
		Bearing, drive shaft . . . . .	3-33-1 to 3-33-24
		Bearing, front wheel . . . . .	22-06-1 to 22-06-18
		Bearing, propeller shaft center . . . . .	16-16-1 to 16-16-47
		Bearing, standard transmission countershaft . . . . .	21-25-2 to 21-25-6
		Bearing, standard transmission main shaft pilot. . . . .	21-17-2 to 21-17-7

PART NAME	CODE	PART NAME	CODE
Bearing, standard transmission main shaft rear . . . . .	21-19-2 to 21-19-20	Body liner . . . . .	23-31-3 to 23-31-205
Belt, fan and related drive . . . . .	7-03-1	Body pad . . . . .	23-31-3 to 23-31-205
Bleeder, carburetor high speed . . . . .	14-48-1	Body pan . . . . .	23-32-110
Bloc, rear spring silent . . . . .	17-17-3 to 17-17-5	Body panel . . . . .	23-34-20 to 23-34-409
Block, cylinder . . . . .	9-02-5 to 9-02-38	Body plug . . . . .	23-32-11 to 23-32-110
Block, terminal . . . . .	8-21-1 to 8-21-11	Body reinforcement . . . . .	23-07-168 to 23-07-374
Block, universal joint cross roller and bearing . . . . .	16-09-1 to 16-09-2	Body seal . . . . .	23-31-205
Blower motor switch . . . . .	24-24-5	Body side sill . . . . .	23-51-5 to 23-51-43
Board, floor . . . . .	23-04-2 to 23-04-257	Body strainer . . . . .	23-07-168 to 23-07-374
Board, toe . . . . .	23-04-2 to 23-04-257	Body striker . . . . .	23-08-12 to 23-08-76
Body, pillar . . . . .	23-36-5 to 23-36-122	Body support . . . . .	23-07-168 to 23-07-374
Body, universal joint . . . . .	16-04-1	Bolt, drive gear . . . . .	3-20-1 to 3-20-19
Body, water pump . . . . .	7-43-1 to 7-43-14	Bolt, rear spring center . . . . .	17-14-10
Body and valve, auto. 3 speed transmission regulator valve . . . . .	21-131-5 to 21-131-50	Bolt, wheel brake shoe anchor. . . . .	5-19-4 to 5-19-21
Body and valve, auto. 3 speed transmission valve . . . . .	21-139-4 to 21-139-224	Bolt and nut, clutch pressure plate eye. . . . .	6-18-1
Body and valve, powerlite regulator valve . . . . .	21-131-5 to 21-131-50	Booster brake hose clamp . . . . .	5-112-1
Body and valve, powerlite transmission valve . . . . .	21-139-4 to 21-139-193	Boot, master cylinder . . . . .	5-40-3
Body anti-squeak . . . . .	23-31-6 to 23-31-205	Boot, wheel cylinder . . . . .	5-69-1
Body belt bar . . . . .	23-51-5 to 23-51-43	Box, glove . . . . .	23-06-4 to 23-06-102
Body brace . . . . .	23-07-168 to 23-07-374	Brace, body . . . . .	23-07-168 to 23-07-374
Body bracket . . . . .	23-07-168 to 23-07-374	Brace, front fender side shield . . . . .	12-07-1 to 12-07-8
Body bumper . . . . .	23-08-12 to 23-08-76	Bracket, body . . . . .	23-07-168 to 23-07-374
Body insulator . . . . .	23-32-110 to 23-31-205	Bracket, brake pedal . . . . .	5-31-15 to 5-31-21
		Bracket, brake tube . . . . .	5-57-2
		Bracket, frame body . . . . .	13-39-1
		Bracket, front fender . . . . .	12-06-3
		Bracket, parking brake lever and cable . . . . .	4-11-1 to 4-11-14
		Bracket, power steering post . . . . .	19-31-1 to 19-31-24

1955-58 PASSENGER CAR PARTS LIST

PART NAME	CODE	PART NAME	CODE
Bracket, shock absorber . . . . .	17-24-28	Button, automatic 3-speed trans- mission gearshift . . . . .	21-30-28 to 21-30-405
Bracket, std., steering post . . . . .	19-31-1 to 19-31-24	Button, universal joint centering . . . . .	16-06-1 to 16-06-3
Brake, bushing and pedal . . . . .	5-27-1 to 5-27-35	<b>C</b>	
Brake, parking-foot operated . . . . .	4-25-1 to 4-25-14	Cable, auto. 3 speed transmission gearshift . . . . .	21-30-28 to 21-30-405
Brake, power . . . . .	1-42-1	Cable, engine ground . . . . .	8-18-2 to 8-18-6
Brake drum . . . . .	22-04-1 to 22-04-39	Cable, parking brake control . . . . .	4-23-1 to 4-23-51
Brake flexible hose . . . . .	5-62-1 to 5-62-20	Cable, speedometer, includes shaft and housing, automatic 3 speed transmission . . . . .	21-84-1 to 21-84-14
Brake frame tube . . . . .	5-53-3 to 5-53-34	Cable, speedometer, includes shaft and housing, powerlite trans- mission . . . . .	21-84-1 to 21-84-18
Brake pedal and bushing . . . . .	5-27-1 to 5-27-35	Cable, speedometer, includes shaft and housing, standard transmission	21-84-1 to 21-84-18
Brake pedal bracket . . . . .	5-31-15 to 5-31-21	Cable and battery . . . . .	8-01-1 to 8-01-63
Brake pedal pad . . . . .	5-28-8	Cable and connection . . . . .	8-16-17
Brake pedal pull-back spring . . . . .	5-34-1	Camshaft . . . . .	9-15-1 to 9-15-10
Brake pedal shaft . . . . .	5-29-1 to 5-29-5	Camshaft bearing . . . . .	9-16-6 to 9-16-7
Brake pedal stop . . . . .	5-30-9 to 5-30-10	Camshaft sprocket . . . . .	9-17-5 to 9-17-23
Brake shoe guide adjusting spring . . . . .	5-25-1 to 5-25-8	Camshaft sprocket oil tube . . . . .	9-19-3
Brake shoe guide spring . . . . .	5-26-1 to 5-26-7	Cap, crankshaft bearing . . . . .	9-10-2 to 9-10-22
Brake tube bracket . . . . .	5-57-2	Cap, fuel tank locking . . . . .	1-39-2 to 1-39-7
Brake tube clip . . . . .	5-56-2	Cap, hub . . . . .	22-08-5 to 22-08-57
Brake tube tee . . . . .	5-58-1	Cap, radiator filler . . . . .	7-12-1
Bulb . . . . .	8-44-1	Carburetor . . . . .	14-30-1 to 14-30-7
Bumper, body . . . . .	23-08-12 to 23-08-76	Carburetor air cleaner . . . . .	14-29-2 to 14-29-65
Bumper, hood . . . . .	23-32-11 to 23-32-110	Carburetor air horn . . . . .	14-47-1
Bumper, rear spring . . . . .	15-09-4 to 15-09-22	Carburetor ball . . . . .	14-37-2 to 14-37-49
Bumper guard . . . . .	17-19-3 to 17-19-11	Carburetor body flange . . . . .	14-33-1
Bushing and pedal, brake . . . . .	1-01-1 to 1-01-25	Carburetor choke . . . . .	14-39-1 to 14-39-85
Bushing and roller, universal joint cross . . . . .	13-68-6 to 13-68-65		

PART NAME	CODE	PART NAME	CODE
Carburetor dash pot. . . . .	14-50-13	Carrier and component parts, powerflite transmission kickdown planet pinion . . . . .	21-134-5 to 21-134-40
Carburetor float. . . . .	14-50-29 14-40-1		
	to		
Carburetor gasket . . . . .	14-40-26 14-34-1	Carrier and component parts, powerflite transmission reverse planet pinion . . . . .	21-135-5 to 21-135-35
	to		
Carburetor heat shield . . . . .	14-59-1	Carrier and differential, rear axle .	3-03-1 to 3-03-43
	to		
Carburetor high speed bleeder. . . .	14-48-1	Case, auto. 3 speed transmission. .	21-03-1 to 21-03-12
Carburetor idling parts. . . . .	14-45-1		
	to	Case, differential . . . . .	3-04-6 to 3-04-26
Carburetor jet . . . . .	14-45-26 14-35-1		
	to	Case, powerflite transmission . . . .	21-03-1 to 21-03-45
Carburetor kickdown switch . . . . .	14-35-42 14-51-24		
	to	Case, standard transmission . . . .	21-03-1 to 21-03-33
Carburetor lever adaptor . . . . .	14-51-72 14-08-36		
	to	Chain, timing . . . . .	9-20-1 to 9-20-8
Carburetor lockout . . . . .	14-08-37 14-53-5		
	to	Chain case cover . . . . .	9-23-5 to 9-23-40
Carburetor plug . . . . .	14-53-10 14-37-2		
	to	Chain case cover plate . . . . .	9-24-5 to 9-24-11
Carburetor pump . . . . .	14-37-49 14-41-3		
	to	Channel, glass . . . . .	23-09-2 to 23-09-95
Carburetor screw . . . . .	14-41-49 14-54-3		
	to	Chassis and body wiring. . . . .	8-15-2 to 8-15-53
Carburetor spring. . . . .	14-54-165 14-36-1		
	to	Check, door . . . . .	23-10-1 to 23-10-17
Carburetor step-up piston . . . . .	14-36-55 14-43-3		
	to	Choke, automatic . . . . .	14-64-2
Carburetor switches. . . . .	14-43-10 14-51-24	Choke, carburetor. . . . .	14-39-1 to 14-39-68
	to		
Carburetor throttle . . . . .	14-51-65 14-38-4	Cigar lighter. . . . .	1-12-1 to 8-20-8
	to		
Carburetor tube . . . . .	14-38-62 14-44-1	Clamp, booster brake hose . . . . .	5-112-1
Carburetor vacuum piston . . . . .	14-44-1 14-46-1	Clamp and support, exhaust pipe . .	11-08-1 to 11-08-24
Carburetor washer . . . . .	14-46-1 14-54-3		
	to	Cleaner, carburetor air . . . . .	14-29-2 to 14-29-65
Carrier, spare wheel. . . . .	14-54-165 22-20-29		
	to	Cleaner, power brake air . . . . .	5-113-17 to 5-113-22
Carrier and component parts, automatic 3-speed transmission kickdown planet pinion . . . . .	22-20-125 21-134-5	Clip, brake tube . . . . .	5-56-2
	to	Clip, rear spring . . . . .	17-15-1 to 17-15-30
Carrier and component parts, automatic 3-speed transmission low and reverse planet pinion . . .	21-134-51 21-135-2	Clock . . . . .	1-21-1 to 1-21-30
	to	Clutch . . . . .	6-01-3
	21-135-50	Clutch, auto. 3 speed transmission .	21-133-5 to 21-133-71

# 1955-58 PASSENGER CAR PARTS LIST

PART NAME	CODE	PART NAME	CODE
Clutch, powerflite transmission direct . . . . .	21-133-5 to 21-133-43	Component parts and carrier, automatic 3-speed transmission kickdown planet pinion . . . . .	21-135-2 to 21-135-50
Clutch Cover and Pressure Plate . .	6-14-1 to 6-14-10	Component parts and carrier, automatic 3-speed transmission low and reverse planet pinion . . .	21-135-2 to 21-135-50
Clutch disc . . . . .	6-13-1 to 6-13-8	Compressor . . . . .	24-25-3 to 24-25-261
Clutch housing . . . . .	6-09-1 to 6-09-11	Condenser . . . . .	24-27-5 to 24-27-15
Clutch housing pan . . . . .	6-10-2 to 6-10-10	Conditioning, air . . . . .	24-01-1 to 24-01-87
Clutch housing ventilator hole screen . . . . .	6-11-2 to 6-11-6	Connecting rod . . . . .	9-31-4 to 9-31-10
Clutch parts, rear axle differential .	3-09-1 to 3-09-2	Connecting rod bearing package . . .	9-32-2
Clutch pedal . . . . .	6-38-1 to 6-38-26	Connection, cylinder head water outlet . . . . .	9-05-5 to 9-05-41
Clutch pedal bracket . . . . .	6-46-1	Connection, power brake . . . . .	5-110-18
Clutch pedal pad . . . . .	6-39-2	Connection and cable . . . . .	8-16-17
Clutch pedal rod . . . . .	6-50-1 to 6-50-12	Control, air conditioning . . . . .	24-24-5 to 24-24-160
Clutch pressure plate . . . . .	6-15-1	Control, door lock and remote . . .	23-18-5 to 23-18-120
Clutch pressure plate eye bolt and nut . . . . .	6-18-1	Control, horn . . . . .	8-33-4 to 8-33-165
Clutch pressure spring . . . . .	6-16-1	Control, standard transmission overdrive . . . . .	21-52-4 to 21-52-42
Clutch release bearing . . . . .	6-19-2 to 6-19-3	Control, switch . . . . .	24-24-5
Clutch release bearing pull-back spring . . . . .	6-20-14	Convertor, torque . . . . .	9-46-4 to 9-46-130
Clutch release fork . . . . .	6-22-1 to 6-22-19	Core, radiator . . . . .	7-11-3 to 7-11-49
Clutch release fork pull-back spring . . . . .	6-27-5	Countershaft, standard transmission .	21-24-2 to 21-24-22
Clutch release fork rod . . . . .	6-24-3 to 6-24-23	Courtesy Lamp . . . . .	8-11-5 to 8-11-21
Clutch release fork seal . . . . .	6-23-3	Courtesy Lamp or light . . . . .	1-14-4 to 1-14-40
Clutch release lever . . . . .	6-17-1 to 6-17-28	Courtesy Lamp switch . . . . .	8-11-6
Clutch release overcenter spring . .	6-35-1 to 6-35-17	Cover, battery hold-down . . . . .	13-34-3
Clutch torque shaft . . . . .	6-52-1 to 6-52-19	Cover, chain case . . . . .	9-23-5 to 9-23-40
Coil, ignition . . . . .	8-35-3 to 8-35-122	Cover, oil pump . . . . .	10-08-2 to 10-08-3
Component parts, distributor . . . . .	8-27-4 to 8-27-353	Cover, power steering gear housing .	19-04-1 to 19-04-12
Component parts, for power brake power units . . . . .	5-100-4 to 5-100-210		
Component parts, generator . . . . .	8-29-1 to 8-29-327		

PART NAME	CODE	PART NAME	CODE
Cover, std. steering gear housing . . .	19-04-1 to 19-04-13	Cylinder, wheel brake . . . . .	5-64-1 to 5-64-25
Cover, tire . . . . .	1-116-2	Cylinder and keys, lock . . . . .	23-17-2 to 23-17-66
Cover, universal joint dust . . . . .	16-07-3 to 16-07-4	Cylinder block . . . . .	9-02-5 to 9-02-38
Cover, valve spring . . . . .	9-40-1 to 9-40-20	Cylinder head . . . . .	9-03-4 to 9-03-37
Cover, valve tappet . . . . .	9-40-1 to 9-40-20	Cylinder head water outlet connection . . . . .	9-05-5 to 9-05-41
Cowl vent . . . . .	23-61-29 to 23-61-180	Cylinder head water outlet elbow . .	9-05-5 to 9-05-41
Crank, power steering gearshift control bell . . . . .	19-52-2 to 19-52-22	<b>D</b>	
Crank, std. steering gearshift control bell . . . . .	19-52-2 to 19-52-22	Damper, vibration . . . . .	9-13-5 to 9-13-23
Crank, throttle control bell . . . . .	14-14-1 to 14-14-40	Deck lid . . . . .	23-19-8 to 23-19-185
Crankcase breather pipe . . . . .	10-01-9 to 10-01-44	Deflector, radiator stone . . . . .	7-35-2 to 7-35-36
Crankcase ventilator . . . . .	10-02-8 to 10-02-33	Deflector, stone . . . . .	12-23-4 to 12-23-6
Crankshaft . . . . .	9-07-5 to 9-07-22	Diaphragm, fast idle . . . . .	14-28-23 to 14-28-41
Crankshaft Bearing Cap . . . . .	9-10-2 to 9-10-22	Differential and carrier, rear axle . .	3-03-1 to 3-03-43
Crankshaft Bearing Package . . . . .	9-09-2	Differential bearing . . . . .	3-11-1 to 3-11-14
Crankshaft Rear Bearing Oil Seal . .	9-11-1 to 9-11-7	Differential case . . . . .	3-04-6 to 3-04-26
Crankshaft Sprocket . . . . .	9-08-5	Differential pinion shaft . . . . .	3-08-1 to 3-08-15
Cross, universal joint . . . . .	16-08-6 to 16-08-7	Differential side gear . . . . .	3-06-5 to 3-06-8
Crossmember, frame ("X" shaped) .	13-02-1	Dimmer Switch . . . . .	8-53-150
Crossmember, frame engine to rear support . . . . .	9-69-4 to 9-69-22	Directional lamp . . . . .	8-50-82 to 8-50-380
Crossmember, frame front . . . . .	3-11-5 to 3-11-7	Directional signal cancelling switch .	8-50-125
Crossmember, frame rear . . . . .	13-18-4 to 13-18-32	Directional signal lamp . . . . .	8-50-82
Crossmember, frame rear shock absorber . . . . .	13-22-1 to 13-22-7	Disc, clutch . . . . .	6-13-1 to 6-13-8
Cup, master cylinder piston . . . . .	5-45-1 to 5-45-13	Distributor, ignition . . . . .	8-27-1 to 8-27-353
Cylinder, master . . . . .	5-39-1 to 5-39-75	Distributor component parts . . . . .	8-27-4 to 8-27-353
Cylinder, power steering gear . . . .	19-55-1		

PART NAME	CODE	PART NAME	CODE
Dome lamp and switch . . . . .	8-05-6	Engine front support foot . . . . .	9-64-6
	to		to
	8-05-38		9-64-24
Dome lamp wiring . . . . .	8-06-6		
Door . . . . .	23-11-1	Engine front support insulator . . . . .	9-67-2
	to		to
	23-11-21		9-67-25
Door check . . . . .	23-10-1	Engine front support plate . . . . .	9-65-6
	to		to
	23-10-17		9-65-19
Door hinge . . . . .	23-15-1	Engine ground cable . . . . .	8-18-2
	to		to
	23-15-29		8-18-6
Door lock . . . . .	23-18-5	Engine rear support insulator . . . . .	9-71-5
	to		to
	23-18-120		9-71-12
Door regulator . . . . .	23-14-10	Evaporator unit . . . . .	24-28-5
	to		to
	23-14-156		24-28-390
Door remote control . . . . .	23-18-5	Exhaust . . . . .	11-01-1
	to	Exhaust pipe . . . . .	11-05-1
	23-18-120		to
Door remote control handle . . . . .	23-14-10		11-05-38
	to	Exhaust pipe flange gasket	
	23-14-156	and stud . . . . .	11-06-2
Drain Cock, radiator . . . . .	7-13-2		to
Drain trough . . . . .	23-59-25	Exhaust pipe support and clamp . . . . .	11-08-1
	to		to
	23-59-80		11-08-24
Drain trough moulding . . . . .	23-59-25	Exhaust system . . . . .	1-31-1
	to		to
	23-59-80		1-31-10
Drive, fan . . . . .	7-07-1	Expander, piston . . . . .	9-38-1
Drive gear and pinion set . . . . .	3-19-1	Expander, wheel cylinder piston cup . . . . .	5-72-1
Drive gear bolt . . . . .	3-20-1	Extension, auto. 3 speed trans. case . . . . .	21-04-1
	to		to
	3-20-19		21-04-2
Drive pinion bearing . . . . .	3-22-24		
	to	Extension, powerlite transmission	
	3-22-45	case . . . . .	21-04-1
Drive shaft . . . . .	3-32-1		to
	to		21-04-20
	3-32-9	Extension, standard transmission	
Drive shaft bearing . . . . .	3-33-1	case . . . . .	21-04-1
	to		to
	3-33-24		21-04-13
Drive shaft oil seal . . . . .	3-35-14		
Drum, brake . . . . .	22-04-1	<b>F</b>	
	to	Fan . . . . .	7-02-1
	22-04-39		to
Drum, hand brake . . . . .	4-01-1	Fan and generator belt . . . . .	7-02-16
Drum, hub and brake . . . . .	22-03-1	Fan and generator belt idler pulley . . . . .	7-03-1
	to		7-04-1
	22-03-2		to
			7-04-16
<b>E</b>		Fan and related drive belt . . . . .	7-03-1
Elbow, cylinder head water		Fan drive . . . . .	7-07-1
outlet . . . . .	9-05-5	Fan pulley . . . . .	7-06-1
	to		to
	9-05-41		7-06-14
Elbow, water pump . . . . .	7-48-1	Fan pulley hub . . . . .	7-05-1
	to	Fan shroud . . . . .	7-08-2
	7-48-22		to
Electric door lock switch . . . . .	23-18-103		7-08-18
Electric seat adjuster switch . . . . .	23-47-446		
Electric window lift switch . . . . .	23-41-170		
Engine . . . . .	9-01-5		
	to		
	9-01-24		



PART NAME	CODE	PART NAME	CODE
Fast idle diaphragm . . . . .	14-28-23	Frame rear spring hanger. . . . .	13-54-4
	to		to
	14-28-41		13-54-15
Fan shroud support . . . . .	7-29-62	Frame sidemember front bumper	
Fender, front . . . . .	12-01-5	reinforcement . . . . .	13-03-21
	to	Front bumper face bar. . . . .	13-64-3
	12-01-117		to
Fender skirt . . . . .	1-45-1		13-64-157
Filter, fuel . . . . .	14-67-1	Front fender. . . . .	12-01-5
	to		to
	14-67-28		12-01-117
Filter, oil . . . . .	10-26-1	Front fender bracket . . . . .	12-06-3
	to	Front fender liner . . . . .	12-02-11
	10-26-68		to
Flange, carburetor body . . . . .	14-33-1		12-02-25
Flange, propeller shaft . . . . .	16-20-1	Front fender moulding and name plate	12-15-2
	to		to
	16-20-3		12-15-27
Float, carburetor . . . . .	14-40-1	Front fender plate . . . . .	12-04-4
	to		to
	14-40-26		12-04-33
Floor board . . . . .	23-04-2	Front fender shield . . . . .	12-04-4
	to		to
	23-04-257		12-04-33
Floor mat . . . . .	23-20-8	Front fender side shield brace. . . . .	12-07-1
	to		to
	23-20-65		12-07-8
Fluid, super brake . . . . .	5-01-2	Front seat . . . . .	23-45-6
Flywheel . . . . .	9-45-1		to
	to		23-45-330
	9-45-7	Front spring . . . . .	17-01-3
Fog light. . . . .	1-34-1		to
	to		17-01-12
	1-34-41	Front suspension repair package . . . . .	2-15-3
Folding top. . . . .	23-58-3	Front suspension torsion parts . . . . .	2-14-3
	to		to
	23-58-607		2-14-15
Folding top lift switch . . . . .	23-58-532	Front wheel bearing . . . . .	22-06-1
Foot, engine front support . . . . .	9-64-6		to
	to		22-06-18
	9-64-24	Front wheel lower control arm . . . . .	2-10-2
Fork, clutch release . . . . .	6-22-1		to
	to		2-10-79
	6-22-19	Front wheel upper control arm . . . . .	2-08-1
Fork, standard transmission gearshift	21-39-3		to
	to		2-08-75
	21-39-39	Fuel filter . . . . .	14-67-1
Fork and Rail, transmission			to
overdrive shifting . . . . .	21-66-2		14-67-28
	to	Fuel inlet strainer. . . . .	14-58-2
	21-66-45	Fuel line tube . . . . .	14-89-1
Frame . . . . .	13-01-1		to
Frame body bracket . . . . .	13-39-1		14-89-57
Frame clinch nut . . . . .	13-32-1	Fuel line tube attaching parts . . . . .	14-90-1
Frame crossmember ("X" shaped) . . . . .	13-02-1		to
Frame engine rear support			14-90-251
Frame crossmember plate . . . . .	13-04-18	Fuel pump . . . . .	14-73-1
crossmember . . . . .	9-69-4		to
	to		14-73-7
	9-69-22	Fuel pump mounting . . . . .	14-74-1
Frame front crossmember . . . . .	13-11-5		to
	to		14-74-2
	13-11-7	Fuel pump to carburetor tube . . . . .	14-85-1
Frame front spring hanger. . . . .	13-53-17		to
Frame rear crossmember. . . . .	13-18-4		14-85-4
	to	Fuel pump to fuel filter tube. . . . .	14-85-1
	13-18-32		to
			14-85-4
Frame rear shock absorber		Fuel tank. . . . .	14-86-1
crossmember . . . . .	13-22-1		to
	to		14-86-85
	13-22-7		

PART NAME	CODE	PART NAME	CODE
Fuel tank dust shield . . . . .	14-87-2	Generator . . . . .	8-28-3 to 8-28-303
Fuel tank gauge . . . . .	14-72-1 to 14-72-47	Generator component parts . . . . .	8-29-1 to 8-29-327
Fuel tank locking cap . . . . .	1-39-2 to 1-39-7	Glass channel . . . . .	23-09-2 to 23-09-95
Fuel tank stone deflector . . . . .	14-87-2	Glove box . . . . .	23-06-4 to 23-06-102
Fuel tank support . . . . .	14-88-4 to 14-88-51	Glove compartment light . . . . .	1-19-1 8-38-1
Fuse, clock . . . . .	8-17-2	Governor . . . . .	14-68-3 to 14-68-20
<b>G</b>		Governor, auto. 3 speed trans. . . . .	21-138-2 to 21-138-38
Garnish moulding . . . . .	23-22-4 to 23-22-161	Governor, powerflite transmission . . . . .	21-138-2 to 21-138-38
Gas heater and components . . . . .	1-48-1 to 1-48-999	Governor, standard transmission overdrive . . . . .	21-57-2 to 21-57-45
Gasket, carburetor . . . . .	14-34-1 to 14-34-80	Grille, radiator . . . . .	7-16-10 to 7-16-113
Gasket, manifold . . . . .	9-50-1 to 9-50-18	Grille, radio . . . . .	1-89-3
Gasket and Stud, exhaust pipe flange . . . . .	11-06-2 to 11-06-8	Grille guard . . . . .	1-01-1
Gauge, fuel tank . . . . .	14-72-1 to 14-72-47	Grommet . . . . .	8-30-31 to 8-30-52
Gear, annulus standard transmission overdrive . . . . .	21-55-2 to 21-55-16	Guard, bumper . . . . .	1-01-1 13-68-6 to 13-68-65
Gear, differential side . . . . .	3-06-5 to 3-06-8	Guard, grille . . . . .	1-01-1
Gear, power steering . . . . .	19-01-8	Guard, throttle . . . . .	14-28-23 to 14-28-41
Gear, standard steering . . . . .	19-01-3 to 19-01-25	Guide, seat . . . . .	23-47-6 to 23-47-455
Gear, standard transmission . . . . .	21-10-4 to 21-10-97	<b>H</b>	
Gear, standard transmission clutch. . . . .	21-14-1 to 21-14-20	Hand brake signal lamp . . . . .	1-09-1 to 1-09-10
Gear, standard transmission counter- shaft . . . . .	21-15-2 to 21-15-34	Hand brake signal lamp switch . . . . .	8-31-2 to 8-31-16
Gear, standard transmission overdrive . . . . .	21-54-6 to 21-54-51	Hand brake support . . . . .	1-09-10 8-31-10 4-29-1 to 4-29-16
Gear, standard transmission reverse idler . . . . .	21-11-1 to 21-11-9	Handle, door regulator and deck lid. . . . .	23-14-10 to 23-14-156
Gear and pinion, standard transmission speedometer . . . . .	21-85-4 to 21-85-76	Handle, door remote control . . . . .	23-14-10 to 23-14-156
Gearshift, standard transmission remote control. . . . .	21-42-11 to 21-42-43	Hanger, frame front spring . . . . .	13-53-17
		Hanger, frame rear spring . . . . .	13-54-4 to 13-54-15
		Head, cylinder . . . . .	9-03-4 to 9-03-37

PART NAME	CODE	PART NAME	CODE
Head lamp package . . . . .	1-08-1	Housing, standard transmission gear-	
Headlamp . . . . .	8-34-1	shift . . . . .	21-29-3
	to		to
	8-34-362		21-29-37
	8-39-3	Hub, fan pulley. . . . .	7-05-1
	to	Hub, water pump. . . . .	7-05-1
Headlamp beam indicator light . . . . .	8-39-15	Hub, wheel. . . . .	22-05-1
Headlamp switch. . . . .	8-53-270		to
Hinge, door . . . . .	23-15-1		22-05-45
	to	Hub and brake drum . . . . .	22-03-1
	23-15-29		to
Hinge, hood . . . . .	15-19-2		22-03-2
	to	Hub cap . . . . .	22-08-5
Hood . . . . .	15-19-40		to
	15-03-3		22-08-57
	to		
	15-03-55	<b>I</b>	
Hood bumper . . . . .	15-09-4	Idling parts, carburetor . . . . .	14-45-1
	to		to
	15-09-22		14-45-26
Hood grille spacer . . . . .	15-22-3	Ignition coil . . . . .	8-35-3
Hood hinge . . . . .	15-19-2		to
	to		8-35-122
	15-19-40	Ignition distributor. . . . .	8-27-1
Hood lock . . . . .	15-11-3		to
	to		8-27-353
	15-11-86	Ignition lamp. . . . .	8-40-7
Hood lock striker . . . . .	15-13-2		to
	to		8-40-30
	15-13-9	Ignition switch and lock cylinder . . . . .	8-35-4
Hood moulding . . . . .	15-25-2		to
	to		8-35-122
	15-25-18	Ignition wiring and spark plug. . . . .	8-36-1
Hood name plate. . . . .	15-06-3		to
	to		8-36-139
	15-06-25	Impeller and Shaft, water pump. . . . .	7-45-2
	15-28-3		to
	to		7-45-54
Horn . . . . .	15-28-18	Indicator, oil level. . . . .	10-03-4
	8-32-2		to
	to		10-03-11
	8-32-108	Inside visor panel . . . . .	23-103-7
Horn, carburetor air . . . . .	14-47-1		to
Horn control . . . . .	8-33-4		23-103-50
	to	Instrument headlamp switch . . . . .	8-53-270
	8-33-165		to
Hose, brake flexible . . . . .	5-62-1		8-53-210
	to	Instrument lamp switch . . . . .	8-53-210
	5-62-20	Instrument panel. . . . .	23-33-10
Hose, oil gauge . . . . .	10-05-4		to
	to		23-33-238
	10-05-19	Instrument panel instruments . . . . .	8-37-1
Hose, power brake . . . . .	5-111-17		to
Hose, power steering gear . . . . .	19-58-31		8-37-545
Hose, radiator . . . . .	7-14-4	Instrument panel light . . . . .	8-41-35
	to		to
	7-14-24		8-41-62
Housing, clutch . . . . .	6-09-1	Instrument panel wiring . . . . .	8-19-39
Housing, gear power steering . . . . .	19-02-4		to
	to		8-19-82
	19-02-86	Instruments, instrument panel . . . . .	8-37-1
Housing, propeller shaft center			to
bearing . . . . .	16-17-1		8-37-545
Housing, rear axle. . . . .	3-02-1	Insulator, body . . . . .	23-31-3
	to		to
	3-02-20		23-31-205
Housing, standard steering gear. . . . .	19-02-4	Insulator, engine front support . . . . .	9-67-4
	to		to
	19-02-47		9-67-25

# 1955-58 PASSENGER CAR PARTS LIST

PART NAME	CODE	PART NAME	CODE
Insulator, engine rear support . . . .	9-71-5 to 9-71-12	Lamp, quarter . . . . .	8-11-2 to 8-11-21
Intake, air . . . . .	23-61-39 to 23-61-132	Lamp, stop . . . . .	8-58-51 to 8-58-98
Internal parts and unit housing, standard transmission overdrive .	21-51-4 to 21-51-20	Lamp, tail and stop . . . . .	8-55-7 to 8-55-380
<b>J</b>		Lamp, trunk . . . . .	8-13-1
Jack . . . . .	1-51-1	Lamp, trunk compartment . . . . .	1-30-1 to 1-30-9
Jacket, power steering gear column .	19-14-1 to 19-14-56	Lamp, quarter . . . . .	8-11-5 to 8-11-16
Jacket, standard steering gear column	19-14-1 to 19-14-77	Lamp and Switch, dome . . . . .	8-05-6 to 8-05-38
Jet, carburetor . . . . .	14-35-1 to 14-35-42	Leaf, rear spring . . . . .	17-12-3 to 17-12-14
Joint, throttle control ball. . . . .	14-13-1 to 14-13-5	Lever, auto 3 speed trans. control .	21-142-5 to 21-142-21
Joint, universal . . . . .	16-03-1 to 16-03-20	Lever, auto 3 speed trans gearshift.	21-30-28 to 21-30-405
<b>K</b>		Lever, clutch release . . . . .	6-17-1 to 6-17-28
Keys and Cylinder, lock. . . . .	23-17-2 to 23-17-66	Lever, parking brake . . . . .	4-08-1 to 4-08-36
King pin . . . . .	2-04-1 to 2-04-6	Lever, parking brake operating . . .	4-26-1 to 4-26-23
Knuckle, steering . . . . .	2-03-3 to 2-03-27	Lever, powerflite transmission control. . . . .	21-142-5 to 21-142-21
<b>L</b>		Lever, powerflite transmission gearshift . . . . .	21-30-2 to 21-30-394
Lamp, back-up . . . . .	1-10-1 to 1-10-47	Lever, standard transmission gearshift . . . . .	21-30-2 to 21-30-107
Lamp, courtesy . . . . .	8-56-1 to 8-56-79	Lever, transmission overdrive control	21-60-1 to 21-60-6
Lamp, directional signal . . . . .	8-11-2 to 8-11-21	License mounting parts . . . . .	8-47-8 to 8-47-141
Lamp, hand brake signal . . . . .	8-50-82 1-09-1 to 1-09-10	License plate lamp. . . . .	8-57-10 to 8-57-113
Lamp, ignition. . . . .	8-31-2 to 8-31-16	Lid, deck . . . . .	23-19-8 to 23-19-185
Lamp, license plate . . . . .	8-40-7 to 8-40-30	Lift, window (electric) . . . . .	23-41-4 to 23-41-300
Lamp, map . . . . .	8-57-10 to 8-57-113	Lift, window (manual) . . . . .	23-39-2 to 23-39-53
Lamp, parking. . . . .	8-42-1 to 8-42-35	Light, fog . . . . .	1-34-1 to 1-34-41
	8-50-82 to 8-50-380	Light, glove compartment . . . . .	1-19-1 8-38-23

PART NAME	CODE	PART NAME	CODE
Light, headlamp beam indicator . . . . .	8-39-3 to 8-39-15	Map lamp switch . . . . .	8-12-2
Light, instrument panel . . . . .	8-41-35 to 8-41-62	Master cylinder . . . . .	5-39-1 to 5-39-75
Light, underhood . . . . .	1-13-1 to 1-13-10	Master cylinder boot . . . . .	5-40-1 to 5-40-3
Light or lamp, courtesy . . . . .	1-14-4 to 1-14-40	Master cylinder brake tube . . . . .	5-52-3 to 5-52-62
Light or lamp, map . . . . .	1-14-4 to 1-14-40	Master cylinder piston . . . . .	5-44-3 to 5-44-8
Lighter, cigar . . . . .	8-20-8 to 8-20-16	Master cylinder piston cup . . . . .	5-45-1 to 5-45-13
Liner, body . . . . .	23-31-3 to 23-31-205	Master cylinder piston push rod . . . . .	5-47-2 to 5-47-7
Liner, front fender . . . . .	12-02-11 to 12-02-25	Master cylinder piston return spring . . . . .	5-46-1
Lining and Shoe, wheel brake . . . . .	5-03-1 to 5-03-27	Master cylinder reinforcement . . . . .	5-42-10
Lock, door . . . . .	23-18-5 to 23-18-120	Master cylinder valve . . . . .	5-43-1 to 5-43-23
Lock, hood . . . . .	15-11-3 to 15-11-86	Mat, floor . . . . .	23-20-8 to 23-20-65
Lock cylinder and keys . . . . .	23-17-2 to 23-17-66	Medallion, radiator grille . . . . .	7-17-1 to 7-17-21
Lockout, carburetor . . . . .	14-53-5 to 14-53-10	Mirror . . . . .	1-76-1 to 1-76-14
Low oil pressure switch . . . . .	8-53-327	Motor, starting . . . . .	8-52-4 to 8-52-433
Luggage rack . . . . .	1-74-2 23-40-82 to 23-40-194	Moulding, drain trough . . . . .	23-59-25 to 23-59-80
<b>M</b>		Moulding, garnish . . . . .	23-22-7 to 23-22-161
Manifold . . . . .	9-48-6 to 9-48-140	Moulding, hood . . . . .	15-25-2 to 15-25-18
Manifold gasket . . . . .	9-50-1 to 9-50-18	Moulding, outside finish . . . . .	1-23-1 to 1-23-45
Manifold heat control valve . . . . .	9-59-2 to 9-59-15	Moulding, trim finish . . . . .	23-23-2 to 23-23-85
Manifold heat control valve stop . . . . .	9-62-1 to 9-62-2	Mounting parts, license . . . . .	8-47-8 to 8-47-141
Manifold heat control valve thermostat . . . . .	9-58-1 to 9-58-20	Mounting, fuel pump . . . . .	14-74-1 to 14-74-2
Map lamp or light . . . . .	1-14-4 to 1-14-40	Muffler . . . . .	11-01-1 to 11-01-23
	8-42-1 to 8-42-35		to

# 1955-58 PASSENGER CAR PARTS LIST

PART NAME	CODE	PART NAME	CODE
Muffler support . . . . .	11-02-1 to 11-02-18	Pad, brake pedal . . . . .	5-28-8
		Pad, clutch pedal . . . . .	6-39-2
		Pan, auto. 3 speed trans. oil . . . . .	21-119-3 to 21-119-19
			23-32-15
		Pan, body . . . . .	to 23-32-110
<b>O</b>		Pan, clutch housing . . . . .	6-10-2 to 6-10-10
Oil filter . . . . .	10-26-1 to 10-26-68	Pan, oil . . . . .	10-24-1 to 10-24-37
Oil filter tube . . . . .	10-27-1 to 10-27-12	Pan, powerflite transmission oil. . . . .	21-119-3 to 21-119-19
Oil gauge hose . . . . .	10-05-4 to 10-05-19	Panel, body . . . . .	23-34-20 to 23-34-409
Oil gauge tube . . . . .	10-05-4 to 10-05-19	Panel, inside visor . . . . .	23-103-7 to 23-103-50
Oil level indicator . . . . .	10-03-4 to 10-03-11	Panel, instrument . . . . .	23-33-10 to 23-33-238
Oil pan . . . . .	10-24-1 to 10-24-37	Parking brake adjuster . . . . .	4-07-1 to 4-07-28
Oil pressure relief valve . . . . .	10-22-6 to 10-22-43	Parking brake band . . . . .	4-03-1 to 4-03-11
Oil pump . . . . .	10-07-3 to 10-07-32	Parking brake control cable . . . . .	4-23-1 to 4-23-51
Oil pump and distributor drive gear . . . . .	10-10-1 to 10-10-3	Parking brake drum . . . . .	4-01-1
Oil pump cover . . . . .	10-08-2 to 10-08-3	Parking brake, foot operated . . . . .	4-25-1 to 4-25-14
Oil pump drive shaft . . . . .	10-09-1 to 10-09-7	Parking brake lever . . . . .	4-08-1 to 4-08-36
Oil pump outlet pipe . . . . .	10-16-4	Parking brake lever and cable bracket . . . . .	4-11-1 to 4-11-14
Oil pump rotor . . . . .	10-14-18 to 10-14-19	Parking brake lever arm . . . . .	4-18-2
Oil pump suction pipe . . . . .	10-18-4	Parking brake lever return spring . . . . .	4-19-1 to 4-19-4
Oil strainer . . . . .	10-23-7	Parking brake operating lever . . . . .	4-26-1 to 4-26-23
Outside finish moulding . . . . .	1-23-1 to 1-23-45	Parking brake pawl . . . . .	4-13-6 to 4-13-10
	23-23-2 to 23-23-85	Parking brake shoe . . . . .	4-03-1 to 4-03-11
Overdrive, switch . . . . .	14-51-60	Parking brake shoe anchor . . . . .	4-06-1 to 4-06-11
		Parking brake support . . . . .	4-29-1 to 4-29-16
<b>P</b>		Parking lamp . . . . .	8-50-82 to 8-50-380
Package, auto. 3 speed trans. . . . .	21-01-3	Partition . . . . .	23-35-82 to 23-35-101
Package, connecting rod bearing . . . . .	9-32-2		
Package, crankshaft bearing . . . . .	9-09-2		
Package, front suspension repair . . . . .	2-15-3		
Package, headlamp . . . . .	1-08-1		
Package, lighter package . . . . .	1-12-1		
Package, powerflite transmission . . . . .	21-01-3		
Package, standard transmission . . . . .	21-01-1 to 21-01-36		
Package, wheel cylinder . . . . .	5-63-1 to 5-63-3		
Pad, body . . . . .	23-31-3 to 23-31-205		

PART NAME	CODE	PART NAME	CODE
Parts, front suspension torsion . . .	2-14-3	Plate, clutch cover and pressure . .	6-14-1
	to		to
	2-14-15		6-14-10
Parts, fuel line tube attaching. . . . .	14-90-1	Plate, clutch pressure . . . . .	6-15-1
	to	Plate, engine front support . . . . .	9-65-6
	14-90-251		to
Pawl, hand brake . . . . .	4-13-6		9-65-19
	to	Plate, frame crossmember . . . . .	13-04-18
	4-13-10	Plate, front fender . . . . .	12-04-4
Pedal, accelerator . . . . .	14-01-1		to
	to		12-04-33
	14-01-22	Plate, front fender moulding and	
Pedal, clutch . . . . .	6-38-1	name . . . . .	12-15-2
	to		to
	6-38-26		12-15-27
Pedal and bushing, brake . . . . .	5-27-1	Plate, hood name . . . . .	15-06-3
	to		to
	5-27-35		15-06-25
Pillar, body . . . . .	23-36-5	Plate, water pump body cover. . . . .	7-44-2
	to		to
	23-36-122		7-44-6
Pin, king . . . . .	2-04-1	Player, record . . . . .	1-49-10
	to	Plug, body . . . . .	23-32-11
	2-04-6		to
Pin, piston . . . . .	9-36-5		23-32-110
	to	Plug, carburetor . . . . .	14-37-2
	9-36-7		to
Pin, wheel brake shoe adjusting. . .	5-21-6		14-37-49
Pinion, auto - 3 speed trans.		Plug, ignition wiring and spark . . . .	8-36-1
speedometer. . . . .	21-85-5		to
	to		8-36-139
	21-85-76	Plug, spark . . . . .	8-36-1
Pinion and gear, standard			to
transmission speedometer . . . . .	21-85-5		8-36-139
	to	Pot, carburetor dash . . . . .	14-50-13
	21-85-76		to
Pipe, crankcase breather. . . . .	10-01-9		14-50-29
	to	Power brake . . . . .	1-42-1
	10-01-44	Power brake air cleaner . . . . .	5-113-17
Pipe, exhaust . . . . .	11-05-1		to
	to		5-113-22
	11-05-38	Power brake check valve. . . . .	5-105-1
Pipe, oil pump outlet. . . . .	10-16-4		to
Pipe, oil pump suction . . . . .	10-18-4		5-105-20
Pipe, tail . . . . .	11-09-1	Power brake connection . . . . .	5-110-18
	to	Power brake hose . . . . .	5-111-17
	11-09-38	Power brake power unit . . . . .	5-100-1
Piston, carburetor step-up. . . . .	14-43-3		to
	to		5-100-165
	14-43-10	Power brake tube . . . . .	5-107-21
Piston, carburetor vacuum. . . . .	14-46-1	Power brake vacuum tank . . . . .	5-102-2
Piston, master cylinder . . . . .	5-44-3		to
	to		5-102-7
	5-44-8	Power steering gear . . . . .	19-01-8
Piston, power steering gear . . . . .	19-56-4	Power steering gear arm and idler	
	to	arm . . . . .	19-27-2
	19-56-88		to
Piston, wheel cylinder . . . . .	5-70-1		19-27-55
Piston, with pin. . . . .	9-34-5	Power steering gear column jacket .	19-14-1
	to		to
	9-34-6		19-14-56
Piston expander . . . . .	9-38-1	Power steering gear cylinder . . . . .	19-55-1
Piston Pin . . . . .	9-36-5	Power steering gear hose . . . . .	19-58-31
	to	Power steering gear housing. . . . .	19-02-4
	9-36-7		to
Piston ring set . . . . .	9-35-1		19-02-86
Plate, chain case cover . . . . .	9-24-5	Power steering gear housing cover .	19-04-1
	to		to
	9-24-11		19-04-12

# 1955-58 PASSENGER CAR PARTS LIST

ALPHABETICAL  
INDEX

PART NAME	CODE	PART NAME	CODE
Power steering gear piston . . . . .	19-56-4 to 19-56-88	Powerflite transmission neutral starter switch . . . . .	21-113-24 to 21-113-30
Power steering gear shaft and roller tooth . . . . .	19-19-4 to 19-19-72	Powerflite transmission neutral starter switch package . . . . .	21-113-24 21-119-3
Power steering gear tube and worm	19-15-2 to 19-15-69	Powerflite transmission oil pan . . .	to 21-119-19
Power steering gear valve . . . . .	19-57-3 to 19-57-90	Powerflite transmission oil pump . .	21-118-6 to 21-118-50
Power steering gearshift control bell crank . . . . .	19-52-2 to 19-52-22	Powerflite transmission oil pump strainer . . . . .	21-117-1 to 21-117-24
Power steering gearshift control rod.	19-48-1 to 19-48-23	Powerflite transmission output shaft	21-05-1 to 21-05-30
Power steering gearshift rod . . . .	19-46-3 to 19-46-55	Powerflite transmission package . . .	21-01-3
Power steering gearshift selector rod	19-47-2 to 19-47-22	Powerflite transmission regulator valve body and valves . . . . .	21-131-1 to 21-131-50
Power steering gearshift tube . . . .	19-46-2 to 19-46-55	Powerflite transmission reverse planet pinion carrier and component parts . . . . .	21-135-5 to 21-135-35
Power steering oil pump . . . . .	19-54-2 to 19-54-251	Powerflite transmission servos . . .	21-137-5 to 21-137-59
Power steering post bracket . . . . .	19-31-1 to 19-31-24	Powerflite transmission set . . . . .	21-01-3
Power steering wheel . . . . .	19-30-4	Powerflite transmission speedometer cable, includes shaft and housing .	21-84-1 to 21-84-18
Powerflite transmission . . . . .	21-02-1 to 21-02-6	Powerflite transmission speedometer pinion . . . . .	21-85-5 to 21-85-76
Powerflite transmission band . . . .	21-136-5 to 21-136-52	Powerflite transmission torque converter reaction shaft . . . . .	21-129-5 to 21-129-23
Powerflite transmission case . . . . .	21-03-1 to 21-03-45	Powerflite transmission valve body and valve . . . . .	21-139-4 to 21-139-193
Powerflite transmission case extension . . . . .	21-04-1 to 21-04-20	Propeller shaft . . . . .	16-02-1 to 16-02-5
Powerflite transmission control lever	21-142-5 to 21-142-21	Propeller shaft center bearing . . . .	16-16-1 to 16-16-47
Powerflite transmission direct clutch . . . . .	21-133-5 to 21-133-43	Propeller shaft center bearing housing . . . . .	16-17-1 16-20-1
Powerflite transmission gearshift lever . . . . .	21-30-2 to 21-30-394	Propeller shaft flange . . . . .	to 16-20-3
Powerflite transmission governor . .	21-138-2 to 21-138-38	Propeller shaft sliding yoke . . . . .	16-14-1 to 16-14-9
Powerflite transmission input shaft .	21-129-5 to 21-129-23	Propeller shaft spline . . . . .	16-14-1 to 16-14-9
Powerflite transmission kickdown planet pinion carrier and component parts . . . . .	21-134-5 to 21-134-40	Propeller shaft yoke . . . . .	16-20-1 to 16-20-3
		Pulley, fan . . . . .	7-06-1 to 7-06-14



PART NAME	CODE	PART NAME	CODE
Pulley, fan and generator belt Idler .	7-04-1 to 7-04-16	Rail, roof . . . . .	23-40-82 to 23-40-194
Pump, auto 3 speed trans. oil . . . .	21-118-7 to 21-118-50	Rail, standard transmission gearshift . . . . .	21-34-8 to 21-34-47
Pump, carburetor . . . . .	14-41-3 to 14-41-49	Rear axle control strut . . . . .	3-01-25 to 3-01-35
Pump, fuel . . . . .	14-73-1 to 14-73-7	Rear axle differential and carrier . . .	3-03-1 to 3-03-43
Pump, oil . . . . .	10-07-2 to 10-07-32	Rear axle differential clutch parts . .	3-09-1 to 3-09-2
Pump, power steering oil . . . . .	19-54-2 to 19-54-251	Rear axle housing . . . . .	3-02-1 to 3-02-20
Pump, powerflite transmission oil . .	21-118-2 to 21-118-50	Rear bumper face bar . . . . .	13-66-3 to 13-66-154
Pump, water . . . . .	7-42-1 to 7-42-4	Rear fender skirt . . . . .	12-18-10
<b>Q</b>		Rear spring . . . . .	17-11-1 to 17-11-10
Quarter lamp . . . . .	8-11-5 to 8-11-21	Rear spring bumper . . . . .	17-19-3 to 17-19-11
<b>R</b>		Rear spring center bolt . . . . .	17-14-10
Rack, luggage . . . . .	23-40-82 to 23-40-194	Rear spring clip . . . . .	17-15-1 to 17-15-30
Radiator core . . . . .	7-11-3 to 7-11-49	Rear spring leaf . . . . .	17-12-3 to 17-12-14
Radiator drain cock . . . . .	7-13-2	Rear spring shackle . . . . .	17-16-1
Radiator filler cap . . . . .	7-12-1	Rear spring silent bloc . . . . .	17-17-3 to 17-17-5
Radiator grille . . . . .	7-16-10 to 7-16-113	Receiver, ash . . . . .	23-02-1 to 23-02-148
Radiator grille medallion . . . . .	7-17-1 to 7-17-21	Receiver tank . . . . .	24-26-3 to 24-26-100
Radiator hose . . . . .	7-14-4 to 7-14-24	Record player . . . . .	1-49-10
Radiator shield . . . . .	7-31-1 to 7-31-45	Refrigerant tubing . . . . .	24-26-3 to 24-26-100
Radiator stone deflector . . . . .	7-35-2 to 7-35-36	Regulator, door . . . . .	23-14-10 to 23-14-156
Radiator upper cross bar . . . . .	7-33-1 to 7-33-20	Reinforcement, body . . . . .	23-07-168 to 23-07-374
Radiator yoke . . . . .	7-26-2 to 7-26-27	Reinforcement, frame sidemember front bumper . . . . .	13-03-21
Radio . . . . .	1-87-2 to 1-87-464	Reinforcement, master cylinder . . .	5-42-10
Radio antenna . . . . .	1-88-1 to 1-88-230	Relay, std. transmission overdrive kickdown solenoid . . . . .	21-69-2 to 21-69-10
Radio grille . . . . .	1-89-3	Ring set, piston . . . . .	9-35-1
		Rocker, valve . . . . .	9-43-1 to 9-43-27
		Rod, accelerator pedal to accelerator shaft rod . . . . .	14-07-1 to 14-07-18

# 1955-58 PASSENGER CAR PARTS LIST

PART NAME	CODE	PART NAME	CODE
Rod, automatic choke to carburetor .	14-65-4		
Rod, clutch pedal . . . . .	6-50-1		
	to		
	6-50-12		
Rod, clutch release fork . . . . .	6-24-3		
	to		
	6-24-23		
Rod, connecting . . . . .	9-31-4		
	to		
	9-31-10		
Rod, master cylinder piston push . .	5-47-2		
	to		
	5-47-10		
Rod, power steering gearshift . . . .	19-46-3		
	to		
	19-46-55		
Rod, power steering gearshift control	19-48-1		
	to		
	19-48-23		
Rod, power steering gearshift selector . . . . .	19-47-2		
	to		
	19-47-22		
Rod, standard steering gearshift . .	19-46-3		
	to		
	19-46-55		
Rod, standard steering gearshift control . . . . .	19-48-1		
	to		
	19-48-23		
Rod, standard steering gearshift selector . . . . .	19-47-2		
	to		
	19-47-15		
Rod, steering knuckle tie . . . . .	2-07-1		
	to		
	2-07-58		
Rod, throttle lever . . . . .	14-15-3		
	to		
	14-15-14		
Rod, valve push . . . . .	9-42-1		
Rod, wheel cylinder piston push . . .	5-12-1		
	to		
	5-12-7		
Roller, standard transmission countershaft free wheeling cam . .	21-49-3		
	to		
	21-49-21		
Roller and bushing, universal joint cross . . . . .	16-01-1		
	to		
	16-10-2		
Roller tooth and shaft, power steering gear . . . . .	19-19-4		
	to		
	19-19-72		
Roller tooth and shaft, standard steering gear . . . . .	19-19-4		
	to		
	19-19-35		
Roof rail . . . . .	23-40-82		
	to		
	23-40-194		
Rotor, oil pump . . . . .	10-14-18		
	to		
	10-14-19		
Run, window glass . . . . .	23-42-13		
	to		
	23-42-59		
		<b>S</b>	
		Screen, clutch housing ventilator hole . . . . .	6-11-2
		Screw, carburetor . . . . .	14-54-3
			to
			14-54-165
		Screw, wheel cylinder bleeder . . . .	5-67-1
		Seal, body . . . . .	23-31-6
			to
			23-31-205
		Seal, clutch release fork . . . . .	6-23-3
		Seal, crankshaft rear bearing oil . .	9-11-1
			to
			9-11-7
		Seal, drive shaft oil . . . . .	3-15-14
		Seal, standard transmission main shaft rear bearing oil . . . . .	21-22-2
		Seal, water pump . . . . .	7-46-1
			to
			7-46-13
		Seal, wheel brake adjusting cam dust shield . . . . .	5-22-8
		Seal, wheel cylinder . . . . .	5-69-1
		Seat, auxiliary . . . . .	23-44-11
			to
			23-44-155
		Seat, front . . . . .	23-45-6
			to
			23-45-330
		Seat, guide . . . . .	23-47-6
			to
			23-47-455
		Seat adjuster . . . . .	23-47-6
			to
			23-47-455
		Seat spring . . . . .	23-52-1
		Seat, second . . . . .	23-48-6
			to
			23-48-195
		Seat, third . . . . .	23-48-6
			to
			23-48-195
		Second seat . . . . .	23-48-6
			to
			23-48-195
		Servos, auto. 3 speed trans. . . . .	21-137-5
			to
			21-137-208
		Servos, powerflite transmission . . .	21-137-5
			to
			21-137-59
		Set, auto 3 speed trans. . . . .	21-01-3
		Set, drive gear and pinion . . . . .	3-19-1
		Set, powerflite transmission . . . . .	21-01-3
		Set, standard transmission . . . . .	21-01-1
			to
			21-01-36
		Shackle, rear spring . . . . .	17-16-1
		Shaft, accelerator . . . . .	14-11-1
			to
			14-11-51
		Shaft, auto 3 speed trans. input. . .	21-129-5
			to
			21-129-33
		Shaft, auto. 3 speed trans. output. .	21-05-1
			to
			21-05-35

PART NAME	CODE	PART NAME	CODE
Shaft, automatic 3-speed transmission torque converter intermediate . . .	21-129-5 to 21-129-33	Shield, carburetor heat . . . . .	14-59-1 to 14-59-3
Shaft, auto. 3 speed trans. torque convertor reaction . . . . .	21-129-5 to 21-129-33	Shield, front fender . . . . .	12-04-4 to 12-04-33
Shaft, brake pedal . . . . .	5-29-1 to 5-29-5	Shield, fuel tank dust . . . . .	14-87-2
Shaft, clutch torque . . . . .	6-52-1 to 6-52-19	Shield, radiator . . . . .	7-31-1 to 7-31-45
Shaft, differential pinion . . . . .	3-08-1 to 3-08-15	Shield, wheel brake dust . . . . .	5-16-1
Shaft, drive . . . . .	3-32-1 to 3-32-9	Shock Absorber . . . . .	17-23-3 to 17-23-56
Shaft, oil pump drive . . . . .	10-09-1 to 10-09-7	Shock absorber bracket . . . . .	17-24-28
Shaft, powerflite transmission input .	21-129-5 to 21-129-16	Shoe, hand brake . . . . .	4-03-1 to 4-03-11
Shaft, PowerFlite transmission output	21-129-23 to 21-05-30	Shoe and Lining, wheel brake . . . . .	5-03-1 to 5-03-27
Shaft, powerflite transmission torque convertor reaction . . . . .	21-129-5 to 21-129-23	Shroud, fan . . . . .	7-08-2 to 7-08-18
Shaft, propeller . . . . .	16-02-1 to 16-02-5	Sill, body side . . . . .	23-51-5 to 23-51-43
Shaft, standard transmission main . .	21-16-3	Skirt, fender . . . . .	1-45-1
Shaft, standard transmission overdrive control . . . . .	21-59-1 to 21-59-10	Skirt, rear fender . . . . .	12-18-10
Shaft, standard transmission overdrive main . . . . .	21-53-4 to 21-53-61	Solenoid, standard transmission overdrive kickdown . . . . .	21-68-2 to 21-68-41
Shaft, standard transmission reverse idler . . . . .	21-12-1 to 21-12-2	Spacer, hood grille . . . . .	15-22-3
Shaft, sway eliminator . . . . .	17-29-5 to 17-29-21	Spare wheel carrier . . . . .	22-20-29 to 22-20-125
Shaft and Impeller, water pump . . .	7-45-2 to 7-45-54	Spark, plug . . . . .	8-36-1 to 8-36-139
Shaft and Roller Tooth, power steering gear . . . . .	19-19-4 to 19-19-72	Spline, propeller shaft . . . . .	16-14-1 to 16-14-9
Shaft and Roller Tooth, standard steering gear . . . . .	19-19-4 to 19-19-35	Spotlight . . . . .	1-108-1 to 1-108-61
Shield, battery heat . . . . .	13-35-1 to 13-35-6	Spring, accelerator pedal return . .	14-06-1 to 14-06-10
		Spring, brake pedal pull-back . . . .	5-34-1
		Spring, brake shoe guide . . . . .	5-26-1 to 5-26-7
		Spring, brake shoe guide adjusting	5-25-1 to 5-28-8
		Spring, carburetor . . . . .	14-36-1 to 14-36-55
		Spring, clutch pressure . . . . .	6-16-1
		Spring, clutch release bearing pull-back . . . . .	6-20-14
		Spring, clutch release fork pull-back	6-27-5
		Spring, clutch release overcenter	6-35-1 to 6-35-17
		Spring, front . . . . .	17-01-3 to 17-01-12

# 1955-58 PASSENGER CAR PARTS LIST

ALPHABETICAL  
INDEX

PART NAME	CODE	PART NAME	CODE
Spring, master cylinder piston return	5-46-1	Standard transmission countershaft	21-24-2
Spring, parking brake lever return .	4-19-1	to	to
	to	Standard transmission countershaft	21-24-22
	4-19-4	bearing . . . . .	21-25-2
Spring, rear . . . . .	17-11-1	to	to
	to	Standard transmission countershaft	21-25-6
	17-11-10	free wheeling cam roller . . . . .	21-49-3
Spring, seat . . . . .	23-52-1	to	to
Sprocket, camshaft . . . . .	9-17-5	Standard transmission countershaft	21-49-21
	to	gear . . . . .	21-15-2
Sprocket, crankshaft . . . . .	9-17-23	to	to
Standard parts . . . . .	9-08-5	Standard transmission free wheeling	21-48-1
Standard steering gear	see Group 18	to	to
	19-01-3	Standard transmission gear . . . . .	21-10-4
	to	to	to
	19-01-25	Standard transmission gearshift fork	21-39-3
Standard steering gear arm and idler	19-27-2	to	to
arm . . . . .	to	Standard transmission gearshift	21-29-3
	19-27-55	housing . . . . .	21-29-37
Standard steering gear column jacket	19-14-1	to	to
	to	Standard transmission gearshift lever	21-30-2
	19-14-77	to	to
Standard steering gear housing . . .	19-02-4	Standard transmission gearshift rail	21-34-8
	to	to	to
	19-02-47	Standard transmission main drive	21-09-2
Standard steering gear housing cover	19-04-1	pinion . . . . .	21-09-33
	to	to	to
	19-04-13	Standard transmission main shaft . .	21-16-3
Standard steering gear shaft and	19-19-4	Standard transmission main shaft	21-17-2
roller tooth . . . . .	to	pilot bearing . . . . .	to
	19-19-35	to	to
Standard steering gear tube and worm	19-15-3	Standard transmission main shaft	21-17-7
	to	rear bearing . . . . .	21-19-2
	19-15-63	to	to
Standard steering gearshift control	19-52-2	Standard transmission main shaft	21-19-20
bell crank . . . . .	to	rear bearing oil seal. . . . .	21-22-2
	19-52-22	Standard transmission overdrive	21-55-2
Standard steering gearshift control	19-48-1	annulus gear . . . . .	to
rod . . . . .	to	Standard transmission overdrive	21-55-16
	19-48-23	control. . . . .	21-52-4
Standard steering gearshift rod . . .	19-46-3	to	to
	to	Standard transmission overdrive	21-52-42
	19-46-55	control lever . . . . .	21-60-1
Standard steering gearshift selector	19-47-2	to	to
rod . . . . .	to	Standard transmission overdrive	21-60-6
	19-47-15	control shaft . . . . .	21-59-1
Standard steering gearshift tube . . .	19-46-3	to	to
	to	Standard transmission overdrive gear	21-59-10
	19-46-55	to	to
Standard steering post bracket. . . .	19-31-1	Standard transmission overdrive	21-54-6
	to	control shaft . . . . .	21-54-51
	19-31-24	to	to
Standard steering wheel . . . . .	19-30-4	Standard transmission overdrive	21-57-2
	to	governor . . . . .	to
	19-30-18	to	to
Standard transmission . . . . .	21-02-1	Standard transmission overdrive	21-57-45
Standard transmission case . . . . .	21-03-1	control shaft . . . . .	
	to		
	21-03-33		
Standard transmission case extension	21-04-1		
	to		
	21-04-13		
Standard transmission clutch gear. .	21-14-1		
	to		
	21-14-20		

PART NAME	CODE	PART NAME	CODE
Standard transmission overdrive kickdown solenoid . . . . .	21-68-2 to 21-68-41	Stone deflector . . . . .	12-23-4 to 12-23-6
Standard transmission overdrive kickdown solenoid relay . . . . .	21-69-2 to 21-69-10	Stop, brake pedal . . . . .	5-30-9 to 5-30-10
Standard transmission overdrive kickdown solenoid switch . . . . .	21-68-18	Stop, manifold heat control valve . .	9-62-1 to 9-62-6
Standard transmission overdrive main shaft . . . . .	21-53-4 to 21-53-61	Stop lamp . . . . .	8-58-51 to 8-58-98
Standard transmission overdrive rail lockout switch . . . . .	21-50-2 to 21-50-5	Stop lamp switch . . . . .	8-58-60
Standard transmission overdrive shifting fork and rail . . . . .	21-66-2 to 21-66-45	Strainer, auto. 3 speed transmission oil pump . . . . .	21-117-1 to 21-117-10
Standard transmission overdrive unit housing and internal parts . .	21-51-4 to 21-51-20	Strainer, body . . . . .	23-07-168 to 23-07-374
Standard transmission overdrive wiring . . . . .	21-64-2 to 21-64-5	Strainer, fuel inlet . . . . .	14-58-2
Standard transmission package . . .	21-01-3 to 21-01-36	Strainer, hood top . . . . .	15-28-3 to 15-28-18
Standard transmission remote control gearshift . . . . .	21-42-11 to 21-42-43	Strainer, oil . . . . .	10-23-7
Standard transmission reverse idler gear . . . . .	21-11-1 to 21-11-9	Strainer, powerflite transmission oil pump . . . . .	21-117-1 to 21-117-24
Standard transmission reverse idler shaft . . . . .	21-12-1 to 21-12-2	Strap, battery hold-down . . . . .	13-34-3
Standard transmission set . . . . .	21-01-1 to 21-01-36	Striker, body . . . . .	23-08-12 to 23-08-76
Standard transmission speedometer cable, includes shaft and housing .	21-84-1 to 21-84-18	Striker, hood lock . . . . .	15-13-2 to 15-13-9
Standard transmission speedometer gear and pinion . . . . .	21-85-4 to 21-85-76	Strut, rear axle control . . . . .	3-01-25 to 3-01-35
Starter and ignition switch . . . . .	8-35-59	Stud, battery hold-down . . . . .	13-36-5
Starting motor . . . . .	8-52-4 to 8-52-433	Stud and gasket, exhaust pipe flange .	11-06-2 to 11-06-8
Starting motor solenoid switch . . .	8-52-330	Super brake fluid . . . . .	5-01-2
Steering knuckle . . . . .	2-03-3 to 2-03-27	Support, battery . . . . .	13-33-61 to 13-33-64
Steering knuckle tie rod . . . . .	2-07-1 to 2-07-58	Support, body . . . . .	23-07-168 to 23-07-374
Steering linkage knuckle arm . . . .	2-05-4 to 2-05-8	Support, fan shroud . . . . .	7-29-62
		Support, fuel tank . . . . .	14-88-4 to 14-88-51
		Support, Muffler . . . . .	11-02-14 to 11-02-18
		Support, parking brake . . . . .	4-29-1 to 4-29-16
		Support, tail pipe . . . . .	11-10-3 to 11-10-46
		Support, wheel brake . . . . .	5-13-1 to 5-13-10
		Support and Clamp, exhaust pipe . .	11-08-1 to 11-08-24

PART NAME	CODE	PART NAME	CODE
Sway eliminator shaft . . . . .	17-29-5 to 17-29-21	Switch and Lock Cylinder, ignition . . . . .	8-35-3 to 8-35-122
Switch, automatic lamp door . . . . .	8-12-2 to 8-12-22	Switch package, automatic 3-speed transmission neutral starter . . . . .	21-113-24
Switch, actuating . . . . .	8-50-98	Switch package, PowerFlite trans- mission neutral starter . . . . .	21-113-24
Switch, auto. 3 speed transmission neutral starter . . . . .	21-113-24 to 21-113-29	Switch package, standard trans- mission governor . . . . .	21-01-36
Switch, back-up lamp . . . . .	1-10-3 8-56-1 to 8-56-79	Switches . . . . .	8-53-150 to 8-53-294
Switch, blower motor . . . . .	24-24-5	System, exhaust . . . . .	1-31-1 to 1-31-5
Switch, carburetor . . . . .	14-51-24 to 14-51-65	<b>T</b>	
Switch, carburetor kickdown . . . . .	14-51-24 to 14-51-72	Tail and stop lamp . . . . .	8-55-7 to 8-55-380
Switch, control . . . . .	24-24-5 to 24-24-156	Tail pipe . . . . .	11-09-1 to 11-09-37
Switch, courtesy lamp . . . . .	8-11-6	Tail pipe support . . . . .	11-10-3 to 11-10-46
Switch, dimmer . . . . .	8-53-150	Tailgate . . . . .	23-54-1 to 23-54-212
Switch, directional signal . . . . .	8-50-82	Tank, fuel . . . . .	14-86-1 to 14-86-85
Switch, directional signal cancelling . . . . .	8-50-125	Tank, power brake vacuum . . . . .	5-102-2 to 5-102-7
Switch, dome lamp manual . . . . .	8-05-14	Tank, refrigerant receiver . . . . .	24-26-3 to 24-26-100
Switch, electric door lock . . . . .	23-18-103	Tappet, valve . . . . .	9-41-4 to 9-41-12
Switch, electric seat adjuster . . . . .	23-47-446	Tee, brake tube . . . . .	5-58-1
Switch, electric window lift . . . . .	23-41-170	Temperature control switch . . . . .	24-24-150
Switch, folding top lift . . . . .	23-58-532	Terminal block . . . . .	8-21-1 to 8-21-11
Switch, hand brake signal lamp . . . . .	1-09-10 8-31-10	Thermostat . . . . .	7-41-4 to 7-41-16
Switch, headlamp . . . . .	8-53-270	Thermostat, manifold heat control valve . . . . .	9-58-1 to 9-58-20
Switch, heater . . . . .	1-48-770	Third seat . . . . .	23-48-6 to 23-48-195
Switch, heater defroster . . . . .	1-48-300	Throttle, carburetor . . . . .	14-38-4 to 14-38-62
Switch, horn blowing . . . . .	8-33-90	Throttle control ball joint . . . . .	14-13-1 to 14-13-5
Switch, instrument lamp . . . . .	8-53-210 to 8-53-270	Throttle control bell crank . . . . .	14-14-1 to 14-14-40
Switch, low oil pressure . . . . .	8-53-327	Throttle lever rod . . . . .	14-15-3 to 14-15-14
Switch, map and dome lamp . . . . .	8-42-25		
Switch, map lamp . . . . .	8-12-2		
Switch, motor driven radio antenna . . . . .	1-88-205		
Switch, overdrive . . . . .	14-51-60		
Switch, powerflite transmission neutral starter . . . . .	21-113-24 to 21-113-30		
Switch, standard transmission over- drive kickdown solenoid . . . . .	21-68-18		
Switch, starter and ignition . . . . .	8-35-59		
Switch, starting motor solenoid . . . . .	8-52-330		
Switch, stop lamp . . . . .	8-58-60		
Switch, temperature control . . . . .	24-24-150		
Switch, transmission overdrive kickdown . . . . .	21-68-21		
Switch, transmission overdrive rail lockout . . . . .	21-50-2 to 21-50-5		
Switch, trunk lamp (w/socket and wire) . . . . .	8-13-1 1-13-10		
Switch, underhood light . . . . .	8-05-14		
Switch and Lamp, Dome . . . . .	8-05-23		

PART NAME	CODE	PART NAME	CODE
Throttle guard . . . . .	14-28-23 to 14-28-41	Tube and worm, standard steering gear . . . . .	19-15-3 to 19-15-63
Timing chain . . . . .	9-20-1 to 9-20-8	Tubing, refrigerant . . . . .	24-26-3 to 24-26-100
Tire cover . . . . .	1-116-2	<b>U</b>	
Toe board . . . . .	23-04-2 to 23-04-257	Underhood light . . . . .	1-13-1 to 1-13-10
Top, folding . . . . .	23-58-3 to 23-58-607	Underhood light switch . . . . .	1-13-10
Torque converter . . . . .	9-46-4 to 9-46-130	Unit, evaporator . . . . .	24-28-5 to 24-28-390
Transmission auto. 3 speed . . . . .	21-02-1 to 21-02-6	Unit, power brake power . . . . .	5-100-1 to 5-100-165
Transmission, powerflite . . . . .	21-02-1 to 21-02-6	Unit housing and internal parts, standard transmission overdrive. . . . .	21-51-4 to 21-51-20
Transmission, standard . . . . .	21-02-1	Universal joint . . . . .	16-03-1 to 16-03-20
Trim finish moulding . . . . .	23-26-2 to 23-26-86	Universal joint body . . . . .	16-04-1
Trough, drain . . . . .	23-59-25 to 23-59-80	Universal joint centering button . . . . .	16-06-1 to 16-06-3
Trunk compartment lamp . . . . .	1-30-1 to 1-30-9	Universal joint cross . . . . .	16-08-6 to 16-08-7
Trunk lamp . . . . .	8-13-1	Universal joint cross roller and bearing block . . . . .	19-09-1 to 19-09-2
Trunk lamp switch (w/socket and wire) . . . . .	8-13-1	Universal joint cross roller and bushing . . . . .	16-10-1 to 16-10-2
Tube, brake frame . . . . .	5-53-34	Universal joint dust cover . . . . .	16-07-3 to 16-07-4
Tube, camshaft sprocket oil . . . . .	9-19-3	<b>V</b>	
Tube, carburetor . . . . .	14-44-1	Valve, exhaust . . . . .	9-39-1 to 9-39-21
Tube, fuel line . . . . .	14-89-1 to 14-89-58	Valve, intake . . . . .	9-39-1 to 9-39-21
Tube, fuel pump to carburetor. . . . .	14-85-1 to 14-85-4	Valve, manifold heat control . . . . .	9-59-2 to 9-59-15
Tube, fuel pump to fuel filter . . . . .	14-85-1 to 14-85-4	Valve, master cylinder . . . . .	5-43-1 to 5-43-23
Tube, master cylinder brake . . . . .	5-52-10 to 5-52-62	Valve, oil pressure relief . . . . .	10-22-6 to 10-22-43
Tube, oil filter . . . . .	10-27-1 to 10-27-12	Valve, power brake check . . . . .	5-105-1 to 5-105-20
Tube, oil gauge . . . . .	10-05-4 to 10-05-19	Valve, power steering gear . . . . .	19-57-3 to 19-57-90
Tube, power brake . . . . .	5-107-21		
Tube, power steering gearshift . . . . .	19-46-3 to 19-46-55		
Tube, rear axle brake . . . . .	5-54-1		
Tube, standard steering gearshift . . . . .	19-46-3 to 19-46-55		
Tube, wheel cylinder connecting . . . . .	5-55-1		
Tube and worm, power steering gear . . . . .	19-15-2 to 19-15-67		

# 1955-58 PASSENGER CAR PARTS LIST

ALPHABETICAL  
INDEX

PART NAME	CODE	PART NAME	CODE
Valve body and valve, powerlite transmission . . . . .	21-139-4 to 21-139-193	Wheel, power steering . . . . .	19-30-4
Valve body and valve, powerlite transmission regulator . . . . .	21-131-5 to 21-131-50	Wheel, standard steering . . . . .	19-30-4 to 19-30-18
Valve push rod . . . . .	9-42-1	Wheel balance weight . . . . .	22-09-1
Valve rocker . . . . .	9-43-1 to 9-43-27	Wheel brake adjusting cam dust shield seal . . . . .	5-22-8
Valve spring cover . . . . .	9-40-1 to 9-40-20	Wheel brake automatic adjuster . . . . .	5-20-20 to 5-20-25
Valve tappet . . . . .	9-41-4 to 9-41-12	Wheel brake cylinder . . . . .	5-64-1 to 5-64-25
Valve tappet cover . . . . .	9-40-1 to 9-40-20	Wheel brake dust shield . . . . .	5-16-1
Vent, cowl . . . . .	23-61-29 to 23-61-180	Wheel brake shoe adjusting pin . . . . .	5-21-6
Vent wing . . . . .	23-64-4 to 23-64-350	Wheel brake shoe anchor bolt . . . . .	5-19-4 to 5-19-21
Ventilator, crankcase . . . . .	10-02-8 to 10-02-33	Wheel brake shoe and lining . . . . .	5-03-1 to 5-03-27
Vibration damper . . . . .	9-13-5 to 9-13-23	Wheel brake support . . . . .	5-13-1 to 5-13-10
Visor . . . . .	1-32-2	Wheel cylinder bleeder screw . . . . .	5-67-1
<b>W</b>			
Washer, carburetor . . . . .	14-54-3 to 14-54-165	Wheel cylinder boot . . . . .	5-69-1
Washer, windshield . . . . .	1-82-2 to 1-82-40	Wheel cylinder connecting tube . . . . .	5-55-1
Water pump . . . . .	7-42-1 to 7-42-4	Wheel cylinder package . . . . .	5-63-1 to 5-63-3
Water pump body . . . . .	7-43-1 to 7-43-14	Wheel cylinder piston . . . . .	5-70-1
Water pump cover plate . . . . .	7-44-2 to 7-44-6	Wheel cylinder piston cup . . . . .	5-71-1 to 5-71-2
Water pump elbow . . . . .	7-48-1 to 7-48-22	Wheel cylinder piston cup expander . . . . .	5-72-1
Water pump hub . . . . .	7-05-1	Wheel cylinder piston push rod . . . . .	5-12-1 to 5-12-7
Water pump seal . . . . .	7-46-1 to 7-46-13	Wheel cylinder seal . . . . .	5-69-1
Water pump shaft and impeller . . . . .	7-45-2 to 7-45-54	Wheel hub . . . . .	22-05-1 to 22-05-45
Weatherstrip . . . . .	23-63-8 to 23-63-209	Wheeling, standard transmission free . . . . .	21-48-1 to 21-48-11
Weight, wheel balance . . . . .	22-09-1	Window . . . . .	23-64-4 to 23-64-350
Wheel . . . . .	22-01-5 to 22-01-50	Window glass run . . . . .	23-42-6 to 23-42-59
		Window lift (electric) . . . . .	23-41-4 to 23-41-300
		Window lift (manual) . . . . .	23-39-2 to 23-39-53
		Windshield . . . . .	23-66-4 to 23-66-235
		Windshield washer . . . . .	1-82-2 to 1-82-40



PART NAME	CODE	PART NAME	CODE
Windshield wiper . . . . .	23-67-5	Worm and tube, power steering gear	19-15-2
	to		to
	23-67-204		19-15-69
Wing, vent. . . . .	23-64-4	Worm and tube, standard steering	
	to	gear . . . . .	19-15-3
	23-64-350		to
Wiper, windshield. . . . .	23-67-5		19-15-63
	to		
	23-67-204		
Wiring, chassis and body . . . . .	8-15-2		
	to		
	8-15-53		
Wiring, dome lamp . . . . .	8-06-6	Yoke, propeller shaft. . . . .	16-20-1
Wiring, instrument panel. . . . .	8-19-39		to
	to		16-20-3
	8-19-82	Yoke, propeller shaft sliding. . . . .	16-14-1
Wiring, standard transmission			to
overdrive . . . . .	21-64-2	Yoke, radiator. . . . .	16-14-9
	to		7-26-2
	21-64-5		to
			7-26-27

### NOTES

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

