

# INDEX

## INTRODUCTION

	<i>Page</i>	<i>Para- graph</i>		<i>Page</i>	<i>Para- graph</i>
<b>INTRODUCTION</b> .....	3	—	Proper Care of New Engine.....	4	—
Creating Customer Confidence...	3	—	License Data .....	5	—
Correspondence .....	3	—	General Data and Specifications..	6	—
Seasonal Preparation .....	4	—			

## SECTION I—FRONT WHEEL SUSPENSION

<b>SECTION I—FRONT WHEEL SUSPENSION</b>					
<b>SUSPENSION</b> .....	7	—	Removal of Upper Control Arm...	12	4
Data and Specifications.....	8	—	Assembly of Upper Control Arm..	12	5
Tightening Reference .....	8	—	Installing Upper Control Arm, Pin, Bushing and Dust Seal....	13	6
Essential Tools .....	8	—	Removal of Lower Control Arm and Front Spring .....	13	7
Description .....	9	1	Sway Eliminator .....	14	8
Lubricating Suspension Parts....	9	2	Installation of Lower Control Arm	14	9
<b>SERVICE PROCEDURES</b> .....	12	—	<b>SERVICE DIAGNOSIS</b> .....	15	—
Removal and Disassembly of Upper Control Arm .....	12	3	Front End Noisy .....	15	10

## SECTION II—REAR AXLE

<b>SECTION II—REAR AXLE</b>					
<b>REAR AXLE</b> .....	21	—	Disassembly and Inspection of Barrel-Type Differential with Screwed-On Case Cap.....	32	11
Data and Specifications .....	16	—	Assembly of Cage Type Differential .....	33	12
Tightening Reference .....	17	—	Assembly of Barrel Type Differential With Bolted-On Case Cap .....	33	13
<b>REAR AXLE</b> .....	21	—	Assembly of Barrel Type Differential with Screwed-On Case Cap .....	34	14
Description .....	21	1	Removal of Axle Drive Pinion From Carrier (All Models)....	35	15
Cleanliness .....	21	2	Installation of Drive Pinion Bearing Cups .....	37	16
Inspection .....	21	3	Rear Axle Adjustment.....	38	17
<b>REMOVAL AND INSTALLATION</b> ...	23	—	Setting Drive Pinion Pre-Load, C-67 (Except Town and Country Wagon) .....	38	18
Removal and Installation of Axle Drive Shaft and Axle Shaft Oil Seal .....	23	4	Setting Drive Pinion, C-67 (Except Town and Country Wagon)....	39	19
Removing Broken End of Axle Drive Shaft .....	26	5	Pinion Pre-Load and Pinion Setting (C-68, C-69, C-70 and C-67, Town and Country Wagon) .....	40	20
Setting Axle Shaft End Play....	26	6			
Removal and Inspection of Differ- ential and Carrier Assembly....	28	7			
Removing Differential Case and Drive Gear Assembly From Carrier (All Models) .....	29	8			
Disassembly and Inspection of Cage-Type Differential.....	29	9			
Disassembly and Inspection of Bar- rel-Type Differential with Bolted-On Case Cap.....	31	10			

## SECTION II—REAR AXLE (Cont'd)

	<i>Page</i>	<i>Para- graph</i>		<i>Page</i>	<i>Para- graph</i>
Setting Differential Bearing Pre-Load and Backlash (All Models)	42	21	Rear Axle Drive Shaft Breakage.	47	28
Gear Adjustment for Correct Tooth Contact	44	22	Differential Case Breakage.....	48	29
Installation of Axle Assembly....	45	23	Differential Side Gear Broken at Hub	48	30
Rear Axle Housing Alignment....	45	24	Scoring of Differential Gears.....	48	31
Welding Rear Axle Housing.....	46	25	Tooth Breakage (Drive Gear and Pinion)	48	32
<b>SERVICE DIAGNOSIS</b> .....	47	—	Rear Axle Noise	49	33
Rear Wheel Noise.....	47	26	Loss of Lubricant.....	49	34
Noise in Rear Axle Assembly....	47	27	Over-Heating of Unit.....	50	35

## SECTION III—BRAKES

<b>SECTION III—BRAKES</b> .....	52	—	<b>DISC BRAKES</b> .....	73	—
Data and Specifications.....	52	—	Operation	73	18
Hand Brakes	53	—	<b>SERVICE PROCEDURES</b> .....	76	—
Disc Brakes (C-70 Model).....	53	—	Disassembly of Front Disc Brake	76	19
Tightening Reference	53	—	Inspection of Brake Housings....	78	20
<b>SHOE TYPE SERVICE BRAKES</b> ....	55	—	Assembly of Front Disc Brake....	78	21
General	55	1	Disassembly of Rear Disc Brake..	79	22
<b>SERVICE PROCEDURES</b> .....	55	—	Inspection of Brake Housings....	79	23
Servicing The Master Cylinder... Removal and Installation of Brake Shoes	56	3	Assembly of Rear Disc Brake....	80	24
Servicing Wheel Cylinders.....	57	4	Disassembly of Inner and Outer Pressure Plates	80	25
Bleeding The Brake System.....	57	5	Servicing Pressure Plate Expanding Balls	81	26
Compressed Air Bleeder Tank... Testing For Fluid Contamination	59	7	Assembly of Inner and Outer Pressure Plates	81	27
<b>ADJUSTMENTS</b> .....	59	—	<b>SERVICING THE AUTOMATIC ADJUSTERS</b> .....	82	—
Minor Brake Adjustment.....	59	8	Disassembly of Automatic Adjuster	82	28
Major Brake Adjustment.....	59	9	Assembly of Automatic Adjuster	82	29
<b>SERVICING THE HAND BRAKE</b> ....	65	—	Servicing Wheel Cylinder.....	84	30
Servicing The External Type Hand Brake	65	10	Assembling The Brakes.....	85	31
Adjusting The External Type Hand Brake	65	11	<b>POWER BRAKES</b> .....	86	—
Adjusting External Type Hand Brake Cable	66	12	Description	86	32
Servicing The Internal Type Hand Brake	66	13	<b>SERVICE PROCEDURES</b> .....	86	—
Servicing Internal Type Hand Brake Cable	68	14	Removal of Power Brake Unit... Disassembly of Major Components	86	33
<b>RELINING PROCEDURE</b> .....	69	—	Disassembly of Body Assembly... Disassembly of Power Piston and Guide Assembly	89	35
Cyclebond Brake Lining.....	69	15	Disassembly of Hydraulic Cylinder Assembly	91	37
Removal of Worn Lining.....	69	16	Assembly of Power Brake Unit... Final Assembly of Complete Power Brake Unit	92	38
Preparing Brake Shoes For Relining	69	17		94	39

**SECTION III—BRAKES (Cont'd)**

	<i>Page</i>	<i>Para- graph</i>		<i>Page</i>	<i>Para- graph</i>
Installing Unit On Vehicle.....	96	40	Dragging Brakes .....	101	53
Bleeding The System After Installation .....	97	41	Wheel Locks .....	101	54
Pedal Adjustment .....	97	42	All Brakes Drag.....	102	55
<b>SERVICE DIAGNOSIS—</b>			No Pedal Reserve.....	102	56
<b>STANDARD BRAKES</b> .....	97	—	<b>POWER UNIT SERVICE</b>		
Hard Pedal .....	97	43	<b>DIAGNOSIS</b> .....	102	—
Pumping of Pedal Necessary.....	98	44	Brake System Loses Fluid.....	102	57
Binding Brakes Pedal.....	98	45	Brakes Do Not Release Properly..	103	58
Poor Brakes .....	98	46	Power Unit Does Not Boost.....	103	59
Grabbing Brakes .....	98	47	Power Unit Does Not Operate After Performing Test.....	103	60
Side Pull .....	98	48	Loss of Pedal.....	104	61
Squealing Brakes.....	99	49	Spongy Pedal .....	104	62
Brake Squeaks .....	99	50	Pedal Travel Too Great.....	104	63
Overheating Brakes .....	101	51	Pedal Chatter .....	104	64
Fading Brakes .....	101	52			

**SECTION IV—CLUTCH**

<b>SECTION IV—CLUTCH</b> .....	105	—	Replacing Clutch Torque Shaft Pivot Bushings .....	115	7
Data and Specifications.....	106	—	Adjusting the Over-Center Spring	115	8
Essential Tools .....	106	—	Clutch Pedal Adjustment (Free Movement) .....	115	9
Tightening Reference .....	106	—	Clutch Housing Alignment.....	116	10
General Information .....	107	1	<b>SERVICE DIAGNOSIS</b> .....	117	—
<b>SERVICE PROCEDURES</b> .....	108	—	Chattering Clutch .....	117	11
Removal and Installation of Clutch	108	2	Grabbing Clutch .....	118	12
Servicing the Clutch (Using Fix- ture, Tool C-585).....	109	3	Slipping Clutch .....	118	13
Adjusting the Release Levers....	110	4	Dragging Clutch .....	119	14
Servicing Transmission Drive			Squeaking Clutch .....	120	15
Pinion Pilot Bushing .....	111	5	Vibrating Clutch .....	120	16
Removing or Installing the Clutch Fork .....	111	6	Vibration Periods .....	120	17

**SECTION V—COOLING SYSTEM**

<b>SECTION V—COOLING SYSTEM</b> ..	121	—	Cooling System Protectors.....	128	8
Data and Specifications .....	122	—	<b>SERVICE DIAGNOSIS</b> .....	129	—
Description .....	123	—	External Leakage .....	129	9
<b>SERVICE PROCEDURES</b> .....	123	—	Internal Leakage .....	130	10
Removal and Installation of Water Pump .....	123	1	Overflow Loss .....	130	11
Installation of Water Pump to Engine .....	125	2	Poor Circulation .....	130	12
Radiator (All Models) .....	125	3	Corrosion .....	131	13
Water Temperature Gauge .....	126	4	Overheating .....	131	14
Thermostat .....	127	5	Factors Which May Cause Higher Than Normal Engine Operating Temperature .....	131	15
Testing Thermostat .....	128	6	Overcooling .....	132	16
Radiator Pressure Cap.....	128	7			

## SECTION VI—ELECTRICAL SYSTEM

	<i>Page</i>	<i>Para- graph</i>		<i>Page</i>	<i>Para- graph</i>
<b>SECTION VI—ELECTRICAL SYSTEM</b> .....	133	—	Burned Contact Arm.....	162	31
Data and Specifications.....	134	—	Stuck Current Regulator Points..	162	32
<b>STARTING MOTOR</b> .....	141	—	Sticking Voltage Regulator Contact Points .....	162	33
Starting Motor Solenoid.....	141	1	<b>BATTERY</b> .....	163	—
Removal of Starting Motor.....	141	2	Battery Maintenance .....	163	34
Disassembly and Assembly of Starting Motor (Removed)....	141	3	Testing Battery .....	164	35
Adjusting Pinion Clearance.....	141	4	Corroded Battery Terminals.....	165	36
Replacing Brushes and Reducing Spring Tension .....	142	5	Resealing the Battery.....	166	37
Testing Starting Motor (Assembled) .....	143	6	<b>SERVICE DIAGNOSIS</b> .....	166	—
Testing Starting Motor (Disassembled) .....	143	7	Battery Run Down.....	166	38
<b>SERVICE DIAGNOSIS</b> .....	144	—	Battery Will Not Retain Water...	167	39
Starter Fails to Operate.....	144	8	Battery Will Not Take Charge....	167	40
Starter Fails and Lights Dim....	145	9	<b>AMMETER</b> .....	169	—
Starter Turns but Does Not Engage .....	145	10	Ammeter .....	169	41
Starter Locks .....	145	11	<b>IGNITION SYSTEM—DISTRIBUTOR</b>	169	—
<b>GENERATOR</b> .....	147	—	Description .....	169	42
Removal and Installation of Generator .....	147	12	Principles of Operation.....	169	43
Disassembly of Generator.....	147	13	Removal and Installation of Dis- tributor .....	171	44
Assembly of Generator.....	151	14	Servicing the Distributor.....	171	45
Testing Generator .....	152	15	Testing Breaker Spring Tension..	172	46
Generator Maintenance .....	153	16	Checking Distributor Governor Advance .....	172	47
<b>SERVICE DIAGNOSIS</b> .....	154	—	Checking the Vacuum Advance...	172	48
Generator Fails to Charge.....	154	17	Adjustment of Distributor Breaker Points .....	173	49
Low, Unsteady Charging Rate...	155	18	Adjusting Ignition Timing.....	173	50
Excessive Charging Rate.....	155	19	Checking Distributor Drive Shaft Bushings .....	175	51
Generator Noisy .....	155	20	Ignition Coil .....	175	52
Noise and Arcing at Generator Brushes .....	156	21	Spark Plugs .....	175	53
Armature Failure (Premature)..	156	22	<b>SERVICE DIAGNOSIS</b> .....	176	—
<b>CURRENT AND VOLTAGE</b>			Burned or Pitted Points.....	176	54
<b>REGULATOR</b> .....	157	—	Ignition Coil Failure.....	177	55
Regulator Inspection .....	157	23	Condenser Failure .....	177	56
Testing Cut Out Relay.....	158	24	Fouled or Burned Spark Plugs...	177	57
Testing Voltage Regulator.....	158	25	<b>SWITCHES</b> .....	178	—
Testing Current Regulator.....	159	26	Ignition Starter Switch.....	178	58
Servicing Regulator Contact Points .....	159	27	Removal and Installation of Igni- tion Lock Cylinder.....	178	59
<b>SERVICE DIAGNOSIS</b> .....	161	—	Windshield Wiper Switch.....	178	60
Regulator Points Oxidized.....	161	28	<b>HORNS</b> .....	179	—
Regulator Points Pitted.....	161	29	<b>SERVICE DIAGNOSIS</b> .....	181	—
Burned Coil Windings.....	162	30	Horns Will Not Blow.....	181	61
			Horns Blow Continuously.....	181	62

SECTION VI—ELECTRICAL SYSTEM (Cont'd)

	<i>Page</i>	<i>Para- graph</i>		<i>Page</i>	<i>Para- graph</i>
<b>LIGHTING SYSTEM</b> .....	182	—	<b>SERVICE DIAGNOSIS—CONDI-</b>		
Description .....	182	63	<b>TIONS—POSSIBLE CAUSES</b> ....	194	—
Replacing Light Bulbs .....	182	64	Wiper Operates Slowly .....	194	84
Headlight Aiming .....	183	65	Wiper Fails to Operate.....	194	85
Testing Voltage at Headlights....	184	66	Short Service Life of Blades....	195	86
Entrance Lights .....	184	67	Noisy Wiper Motor.....	195	87
Inspecting Lighting Circuit			Blades Strike Moulding and Park		
Wiring .....	184	68	High .....	195	88
Turn Signal .....	185	69	Wiper Will Not Start.....	195	89
Power Window Lift.....	185	70	Wiper Will Not Park In Off-Glass		
Body Wiring .....	185	71	Position (Off-Glass Parking		
<b>SERVICE DIAGNOSIS</b> .....	189	—	Wiper Only) .....	195	90
Lights Do Not Burn.....	189	72	Wiper Blades Park Early or Late	195	91
Lights Flicker .....	189	73	Blade Chatters in One Direction,		
Bulbs Burn Out Frequently.....	189	74	Scrapes Glass in Other.....	195	92
<b>WINDSHIELD WIPERS</b> .....	190	—	<b>POWER WINDOW LIFTS</b> .....	198	—
Description .....	190	75	Description .....	198	93
Operation .....	190	76	Wiring .....	198	94
Wiper Assembly Removal .....	191	77	Removal of Window Lift.....	198	95
Disassembly of Windshield Wiper			Installation of Window Lift.....	199	96
Links .....	191	78	<b>POWER SEAT LIFTS</b> .....	199	—
Reassembly of Motor Switch.....	191	79	Description .....	199	97
Reassembly of Windshield Wiper			Removal and Installation of Front		
Link .....	191	80	Seat Assembly .....	201	98
Installing New Pivot.....	192	81	Replacing Left Seat Guide and Ver-		
Reinstallation of Windshield Wiper			tical Power Unit (Without Re-		
Motor Bracket and Link			moval of Front Seat Assembly		
Assembly .....	192	82	From Car) .....	201	99
<b>SERVICE PROCEDURES</b> .....	194	—	Replacing Horizontal Power Unit		
Servicing Motor .....	194	83	and Shaft Assembly.....	201	100
			Removal of Seat Tracks.....	201	101
			Installation of Seat Tracks.....	201	102

SECTION VII—ENGINE

<b>SECTION VII—ENGINE</b> .....	202	—	Cylinder Block .....	223	6
Data and Specifications.....	202	—	Camshaft and Camshaft Bearing		
Tightening Reference .....	208	—	Shell Installation .....	225	7
Special Tools .....	209	—	Rear Main Bearing Oil Seal Instal-		
Essential Tools .....	209	—	lation .....	226	8
Desirable Tools .....	209	—	Main Bearings .....	226	9
<b>SPITFIRE V-8 ENGINE</b> .....	215	—	Timing Gear and Chain.....	227	10
Description .....	215	1	Timing Chain Case Cover Installa-		
Engine Tune-Up .....	218	2	tion .....	229	11
New Car Engines In Storage.....	219	3	Pistons, Pins, and Rings.....	229	12
<b>SERVICE PROCEDURES</b> .....	220	—	Connecting Rods.....	232	13
Engine Removal .....	220	4	Oil Pump .....	234	14
Engine Disassembly .....	221	5	Hydraulic Tappets .....	236	15
			Rocker Arm Assembly.....	238	16

## SECTION VII—ENGINE (Cont'd)

	<i>Page</i>	<i>Para- graph</i>		<i>Page</i>	<i>Para- graph</i>
Cylinder Head .....	239	17	Hydraulic Tappets .....	271	49
Crankshaft Pulley, Hub, and Damper Installation .....	244	18	Cylinder Head .....	272	50
Water Pump .....	244	19	Rocker Arm Assemblies.....	278	51
Fuel Pump .....	244	20	Crankshaft Pulley, Hub and Damper Installation .....	280	52
Distributor Drive Shaft Bushing..	244	21	Water Pump .....	280	53
Distributor Basic Timing.....	245	22	Fuel Pump .....	280	54
Checking The Valve Timing.....	245	23	Distributor Drive Shaft Bushing..	280	55
Final Assembly Of Engine.....	246	24	Distributor Basic Timing.....	281	56
Engine Installation .....	247	25	Valve Timing Checking.....	281	57
<b>SERVICING OF COMPONENTS ...</b>	<b>248</b>	<b>—</b>	Final Assembly of Engine.....	282	58
Preliminary To Checking Hydraulic Tappets .....	248	26	<b>INSTALLATION OF ENGINE.....</b>	<b>283</b>	<b>—</b>
Tappet Noises .....	248	27	Engine Installation .....	283	59
Removal and Installation of the Hydraulic Tappet .....	249	28	<b>C-300 CHRYSLER ENGINE.....</b>	<b>284</b>	<b>—</b>
Locating Low Point of Camshaft Lobe in Conjunction With Tappet Face .....	250	29	General Information .....	284	60
Removal of Cylinder Heads.....	250	30	Tune Up Information.....	284	61
Removal and Installation of the Chain Case Cover Oil Seal....	251	31	Tune Up Data.....	285	62
Removal and Installation of Engine Oil Pan .....	251	32	<b>SERVICE DIAGNOSIS.....</b>	<b>285</b>	<b>—</b>
Removal and Installation of Oil Pump .....	252	33	Engine Will Not Start.....	285	63
Removal and Installation of Main Bearing Shells .....	252	34	Engine Stalls .....	286	64
Replacing the Rear Main Bearing Oil Seal .....	252	35	Engine Has No Power.....	286	65
Removal of Camshaft.....	253	36	Engine "Lopes" or Misses (At Idle) .....	287	66
Replacing Full Flow Type Oil Filter .....	253	37	Engine Misses While Idling.....	287	67
<b>CHRYSLER FIREPOWER</b>			Engine Misses At High Speed....	287	68
<b>V-8 ENGINE.....</b>	<b>254</b>	<b>—</b>	External Oil Leakage .....	288	69
Engine Disassembly .....	254	38	Oil Pumping Past Piston Rings..	288	70
Cylinder Block .....	257	39	Oil Pumping At Valve Guides....	289	71
Camshaft and Camshaft Bearings Installation .....	259	40	High Oil Consumption Due To Lu- bricating Oil .....	289	72
Rear Main Bearing Oil Seal Installation .....	259	41	High Oil Consumption Miscellane- ous .....	289	73
Main Bearings .....	260	42	No Oil Pressure When Engine is First Started .....	289	74
Timing Gear and Chain.....	261	43	No Oil Pressure At Idle.....	289	75
Timing Chain Case Cover Installation .....	262	44	No Oil Pressure On Fast Starts Or Rapid Acceleration .....	289	76
Pistons, Pins and Rings.....	263	45	Broken Valves .....	290	77
Connecting Rods .....	265	46	Burned or Sticking Valves.....	290	78
Oil Pump .....	267	47	Noisy Valves .....	290	79
Oil Filter .....	270	48	Broken Valve Springs.....	290	80
			Valve Deposits .....	290	81
			Conditions Common to Intake Valve Failure .....	291	82
			Conditions Common to Exhaust Valve Failure .....	292	83
			Piston Ring Noise.....	292	84
			Piston Noise .....	292	85

**SECTION VII—ENGINE (Cont'd)**

	<i>Page</i>	<i>Para- graph</i>		<i>Page</i>	<i>Para- graph</i>
Connecting Rod Noise.....	292	86	After-Running .....	294	92
Main Bearing Noise.....	292	87	Ignition Timing .....	294	93
Broken Piston Rings.....	293	88	Starting Noise .....	295	94
Broken Pistons .....	293	89	All Tappets Noisy .....	295	95
Detonation .....	293	90	One or More Tappets Noisy.....	296	96
Pre-ignition .....	293	91	Intermittent Tappet Noise.....	298	97

**SECTION VIII—FUEL AND EXHAUST SYSTEMS**

<b>SECTION VIII—FUEL AND EXHAUST SYSTEMS</b>					
<b>EXHAUST SYSTEMS</b> .....	299	—	Unloader Adjustment .....	316	21
Data and Specifications.....	300	—	Accelerator Pump Adjustment...	316	22
<b>FUEL PUMP (All Models)</b> .....	303	—	Dashpot Adjustment .....	317	23
Description .....	303	1	Engine Idle Speed Adjustment...	317	24
Testing Fuel Pump (On Car)....	303	2	Adjusting the Carburetor (On the Engine) .....	317	25
<b>SERVICING PROCEDURES</b> .....	304	—	<b>CARBURETOR (Model</b>		
Disassembly and Assembly of Fuel Pump .....	304	3	WCFB-2126S).....	318	—
Performance and Economy Tests.	304	4	Description .....	318	1
<b>SERVICE DIAGNOSIS</b> .....	305	—	Float Systems .....	319	2
Fuel Pump Leaks—Fuel.....	305	5	Low-Speed Systems .....	319	3
Fuel Pump Leaks—Oil.....	305	6	High-Speed System .....	319	4
Insufficient Fuel Delivery.....	305	7	Primary Side .....	319	5
Fuel Pump Noise.....	305	8	Secondary Side .....	319	6
<b>CARBURETOR</b> .....	307	—	Anti-Percolator .....	321	7
Description .....	307	1	Pump System .....	321	8
The Float System.....	307	2	Integral Automatic Choke.....	321	9
The Idle System.....	307	3	<b>SERVICE PROCEDURES</b> .....	321	—
High-Speed System .....	307	4	Disassembling the Carburetor....	321	10
Accelerator Pump System.....	309	5	Disassembly of Integral Automatic Choke .....	324	11
Automatic Integral Choke.....	309	6	Disassembly of Main Body.....	325	12
The Dashpot Control.....	309	7	Disassembly of Throttle Body....	325	13
Carburetor Model Identification..	309	8	Disassembly of Vacuum Diaphragm	326	14
<b>SERVICE PROCEDURES</b> .....	309	—	Automatic Choke Inspection.....	327	15
Removal of Carburetor (from En- gine) .....	309	9	Inspection and Reassembly.....	327	16
Servicing the Carburetor.....	309	10	Main Body Assembly.....	329	17
Disassembly of Carburetor.....	310	11	Accelerator Pump Test.....	330	18
Disassembly of Main Body.....	310	12	Air Horn Assembly.....	331	19
Cleaning Carburetor Parts.....	312	13	Float Level Adjustment.....	333	20
Inspection and Assembly.....	312	14	Float Drop Adjustment.....	333	21
Idle Mixture Screw Adjustment..	313	15	Carburetor Adjustments .....	335	22
Assembling the Automatic Choke.	313	16	<b>SERVICE DIAGNOSIS</b> .....	338	—
Assembling the Main Body.....	314	17	Insufficient Fuel Delivery.....	338	23
Checking Float Height.....	315	18	Fuel Pump Leaks—Fuel.....	338	24
Carburetor Adjustments .....	315	19	Fuel Pump Leaks—Oil.....	338	25
Fast Idle Adjustment.....	315	20	Fuel Pump Noise.....	338	26
			Poor Idling.....	339	27
			Poor Acceleration.....	339	28

## SECTION VIII—FUEL AND EXHAUST SYSTEMS (Cont'd)

	<i>Page</i>	<i>Para- graph</i>		<i>Page</i>	<i>Para- graph</i>
Carburetor Floods or Leaks . . . . .	339	29	Choke Unloader Adjustment . . . . .	363	29
Poor Performance — Mixture Too			Fast Idle Adjustment (On Work		
Rich . . . . .	340	30	Bench) . . . . .	363	30
<b>CARBURETOR (Model</b>			Fast Idle Adjustment (Carburetor		
<b>WCFB-2317S) (C-300 Series) . . . . .</b>	340	—	on Engine) . . . . .	363	31
Description . . . . .	340	1	Velocity Valve Lockout Adjustment	363	32
Float Systems . . . . .	341	2	Installation of Carburetors on		
Low-Speed System . . . . .	341	3	Engine . . . . .	364	33
High-Speed System . . . . .	341	4	Idle Speed and Mixture Adjust-		
Primary Side . . . . .	341	5	ments . . . . .	364	34
Secondary Side . . . . .	342	6	<b>EXHAUST SYSTEM . . . . .</b>	367	—
Anti-Percolator . . . . .	342	7	Description . . . . .	367	1
Pump System . . . . .	342	8	<b>SERVICE PROCEDURES . . . . .</b>	367	—
Integral Automatic Choke . . . . .	342	9	Intake and Exhaust Manifolds (All		
<b>SERVICE PROCEDURES . . . . .</b>	346	—	Models) . . . . .	367	2
Servicing the Carburetor . . . . .	346	10	Inspection of Intake and Exhaust		
Disassembling the Carburetor . . . . .	346	11	Manifolds (All Models) . . . . .	368	3
Air Horn Disassembly . . . . .	348	12	Exhaust Pipes, Mufflers and Tail		
Integral Automatic Choke Disas-			Pipes . . . . .	369	4
sembly . . . . .	350	13	Exhaust System (C-67 Model) . . . . .	369	5
Main Body Disassembly . . . . .	351	14	Removal . . . . .	369	6
Throttle Body Disassembly . . . . .	353	15	Installation . . . . .	370	7
Cleaning Carburetor Parts . . . . .	355	16	Dual Exhaust System (C-68, C-69		
Inspection and Reassembly—Throt-			and C-70 Models) . . . . .	370	8
tle Body . . . . .	356	17	Alignment of Exhaust Systems . . . . .	370	9
Air Horn Assembly . . . . .	358	18	<b>MANIFOLD HEAT CONTROL</b>		
Float Level Adjustment . . . . .	359	19	<b>VALVE . . . . .</b>	371	—
Float Drop Adjustment . . . . .	359	20	Description . . . . .	371	10
Accelerator Pump Test . . . . .	360	21	Testing Manifold Heat Control		
Intake Check Ball . . . . .	360	22	Valve (On Engine) . . . . .	372	11
Discharge Check Needle . . . . .	360	23	<b>SERVICE DIAGNOSIS . . . . .</b>	373	—
Accelerator Pump Adjustment . . . . .	361	24	Excessive Exhaust Noise . . . . .	373	12
Optional Accelerator Pump Adjust-			Leaking Exhaust Gases . . . . .	373	13
ment . . . . .	361	25	Engine Hard to Warm Up . . . . .	374	14
Metering Rod Adjustment . . . . .	361	26	Engine Will Not Return to Idle . . . . .	374	15
Choke Rod Adjustment . . . . .	362	27	Manifold Heat Control Valve Rattle	374	16
Velocity Valve Adjustment . . . . .	362	28			

## SECTION IX—FRAME, SPRINGS AND SHOCK ABSORBERS

<b>SECTION IX—FRAME, SPRINGS</b>		<b>AND SHOCK ABSORBERS</b>			
<b>SECTION IX—FRAME, SPRINGS</b>					
<b>AND SHOCK ABSORBERS . . . . .</b>	375	—	Replacement of Rear Spring Inter-		
Data and Specifications . . . . .	375	—	liners . . . . .		
<b>FRAME . . . . .</b>	377	—	381	7	
Description . . . . .	377	1	<b>SHOCK ABSORBERS . . . . .</b>	382	—
Checking Frame Alignment . . . . .	378	2	Description . . . . .	382	8
Frame Alignment . . . . .	378	3	Operation . . . . .	383	9
Replacing Body Support Brackets . . . . .	378	4	Testing Oriflow Shock Absorbers . . . . .	383	10
<b>SPRINGS . . . . .</b>	379	—	Removal and Installation of Front		
Description . . . . .	379	5	Shock Absorbers . . . . .	383	11
Spring Maintenance . . . . .	379	6	Removal and Installation of Rear		
			Shock Absorbers . . . . .	385	12



**SECTION X—STEERING**

	<i>Page</i>	<i>Para- graph</i>		<i>Page</i>	<i>Para- graph</i>
<b>SECTION X—STEERING</b> .....	386	—	Replacing Steering Gear Shaft Oil Seal (Unit Mounted in Car).....	423	22
Data and Specifications.....	386	—	Hydraulic Steering Pump Pressure Check .....	423	23
Tightening Reference.....	390	—	Removal and Installation of Hydraulic Steering Pump Assembly	423	24
<b>STEERING</b> .....	393	—	Servicing the Hydraulic Steering Pump .....	424	25
Linkage .....	393	1	Front Wheel Alignment.....	427	26
Steering Gear (Three-Tooth Roller and Worm) .....	393	2	<b>SERVICE DIAGNOSIS</b> .....	427	—
Removal of Steering Wheel Assembly .....	394	3	Leakage Through Vent in Upper Housing .....	427	27
Removal of Steering Gear Assembly	394	4	Noise Originating in Power Steering Unit .....	429	28
Disassembly of Steering Gear (Unit Removed from Car).....	394	5	Improper Steering .....	430	29
Assembly of Steering Gear (Unit Removed from Car).....	394	6	Inability to Maintain Control Valve Adjustment .....	432	30
Adjusting Worm Bearings (In Car)	395	7	Lack of Assistance.....	432	31
Installation and Alignment of Steering Gear Assembly.....	395	8	<b>FRONT WHEEL ALIGNMENT</b>		
Adjustment of Roller Tooth and Worm (In Car).....	396	9	(All Models).....	433	—
Servicing Idler Arm.....	396	10	Description .....	433	32
Removal and Installation of Steering Knuckle Tie Rods.....	396	11	King Pin Inclination.....	433	33
Adjustment of Front Wheel Bearings .....	396	12	Camber .....	434	34
Reconditioning Front Wheel Hub and Drum Assembly.....	397	13	Caster .....	434	35
Removal and Installation of Steering Knuckle King Pins and Bushings .....	397	14	Toe-in and Toe-out.....	434	36
<b>COAXIAL POWER STEERING</b> .....	399	—	<b>CHECKING FRONT WHEEL ALIGNMENT</b> .....	435	—
Description .....	399	15	Checking King Pin Inclination... ..	435	37
<b>MAINTENANCE AND ADJUSTMENT OF COAXIAL POWER STEERING</b>	407	—	Remove Wheel Cover Assembly... ..	435	38
Removal of Coaxial Power Steering Unit From Car.....	407	16	Checking Camber.....	436	39
Disassembling the Coaxial Power Steering Unit .....	407	17	Checking Caster.....	436	40
Assembly of Coaxial Power Steering Gear.....	413	18	Measuring Toe.....	437	41
Adjusting Coaxial Gear Assemblies (Removed) .....	420	19	Measuring Toe-out on Turns.....	437	42
Installation of Coaxial Power Steering Gear (In Car).....	421	20	<b>ADJUSTING FRONT WHEEL ALIGNMENT</b> .....	438	—
Adjustments of Coaxial Gear (Installed) .....	421	21	Adjusting Caster and Camber... ..	438	43
			Adjusting Toe .....	438	44
			Toe-Out on Turns.....	438	45
			<b>SERVICE DIAGNOSIS (Manual Steering)</b> .....	439	—
			Excessive Play or Looseness in the Steering Wheel.....	439	46
			Hard Steering.....	439	47

## SECTION XI—TRANSMISSION

	<i>Page</i>	<i>Para- graph</i>		<i>Page</i>	<i>Para- graph</i>
<b>SECTION XI—TRANSMISSION . . . .</b>	441	—	<b>MAINTENANCE TESTS, AND</b>		
Data and Specifications . . . . .	441	—	<b>ADJUSTMENTS . . . . .</b>	477	—
PowerFlite Transmission . . . . .	441	—	Checking Fluid Level . . . . .	477	23
Transmission Speedometer Pinion			Draining and Refilling . . . . .	477	24
Chart . . . . .	442	—	Seasonal Preparation . . . . .	477	25
Essential Tool List . . . . .	443	—	Gearshift Linkage Adjustment . .	479	26
Tightening Reference . . . . .	444	—	Throttle Pressure and Throttle		
			Linkage Adjustment . . . . .	479	27
<b>TRANSMISSION (STANDARD</b>			Adjustment of Kickdown (Front)		
<b>TYPE) . . . . .</b>	447	—	Band . . . . .	481	28
Description . . . . .	447	1	Adjustment of Reverse (Rear)		
			Band . . . . .	481	29
<b>SERVICE PROCEDURES . . . . .</b>	447	—	Testing Neutral and Back-Up Light		
Removal and Installation . . . . .	447	2	Switches . . . . .	481	30
Disassembly and Inspection of			Service Diagnosis Chart . . . . .	482	31
Transmission . . . . .	447	3	Hydraulic Control Pressure Checks	484	32
Servicing the Synchronizer . . . .	449	4	Road Testing . . . . .	485	33
Assembly of Transmission . . . . .	450	5	Checking for Oil Leaks . . . . .	486	34
Installation and Alignment . . . . .	452	6			
Replacing Transmission Rear Oil			<b>SERVICING OF COMPONENT</b>		
Seal . . . . .	452	7	<b>PARTS WITH TRANSMISSION</b>		
			<b>IN VEHICLE . . . . .</b>	487	—
<b>LINKAGE ADJUSTMENTS . . . . .</b>	453	—	Oil Pan . . . . .	487	35
Gearshift Control Adjustment . . .	453	8	Valve Body and Transfer Plate		
Disassembly of Gearshift Control			Assembly . . . . .	487	36
and Control Rod Lever . . . . .	453	9	Manual Control Valve Lever Shaft		
Adjustment of Gearshift Control			Oil Seal . . . . .	488	37
Rod . . . . .	453	10	Kickdown Piston . . . . .	488	38
Adjusting Gearshift Selector Rod .	453	11	Reverse Servo . . . . .	489	39
			Speedometer Pinion . . . . .	490	40
<b>SERVICE DIAGNOSIS . . . . .</b>	455	—	Neutral Starter Switch . . . . .	491	41
Hard Shifting . . . . .	455	12	Back-Up Light Switch . . . . .	491	42
Transmission Slips Out of Gear . .	455	13	Transmission Output Shaft Rear		
Transmission Noises . . . . .	455	14	Bearing Oil Seal . . . . .	491	43
			Transmission Regulator Valve As-		
<b>POWERFLITE TRANSMISSION . . . .</b>	457	—	sembly . . . . .	491	44
Description . . . . .	457	15	Torque Converter Control Valve As-		
			sembly . . . . .	492	45
<b>POWERFLITE OPERATING</b>			Oil Cooler . . . . .	492	46
<b>INFORMATION . . . . .</b>	457	—			
Selector Lever Positions . . . . .	457	16	<b>REMOVAL AND INSTALLATION</b>		
Starting with PowerFlite Trans-			<b>OF TRANSMISSION . . . . .</b>	493	—
mission . . . . .	457	17	Removal of Transmission From Ve-		
Driving with PowerFlite Transmis-			hicle . . . . .	493	47
sion . . . . .	460	18	Installation of Transmission in Ve-		
Towing PowerFlite Equipped Ve-			hicle . . . . .	496	48
hicle . . . . .	460	19			
The Planetary Gear Set . . . . .	461	20	<b>RECONDITIONING OF TRANS-</b>		
Power Flow of the Chrysler Power-			<b>MISSION ASSEMBLY . . . . .</b>	497	—
Flite Transmission . . . . .	461	21	Transmission Extension Housing . .	497	49
			Transmission Output Shaft Rear		
<b>HYDRAULIC CONTROL SYSTEM . .</b>	463	—	Bearing . . . . .	499	50
Description . . . . .	463	22			

SECTION XI—TRANSMISSION (Cont'd)

	<i>Page</i>	<i>Para- graph</i>		<i>Page</i>	<i>Para- graph</i>
Governor .....	500	51	Installation of Manual Control Le- ver Shaft Oil Seal .....	519	73
Rear Oil Pump.....	502	52	Installation of Torque Converter Reaction Shaft .....	519	74
<b>SERVICING THE TORQUE CONVERTER.....</b>					
Checking and Correcting Torque Converter Hub Runout.....	504	—	Assembly and Installation of Kick- down Piston .....	520	75
Removal of Torque Converter From Vehicle .....	506	54	Assembly and Installation of Re- verse Servo Piston .....	521	76
Replacing Starter Ring Gear on Torque Converter.....	506	55	Installation of Regulator Valve Body .....	521	77
Installation of Torque Converter in Vehicle .....	507	56	Installation of Torque Converter Outlet Check Valve .....	521	78
<b>DISASSEMBLY, INSPECTION, AND ASSEMBLY OF TRANSMISSION.</b>					
Removal of Exterior Components, Pumps, and Governor.....	508	—	Assembly and Installation of Front Oil Pump .....	522	79
Removal of Output Shaft Support, Planet Pinion Carriers, and Di- rect Clutch Assemblies.....	509	58	Installation of Reverse Band, Kick- down Band and Lever Assem- blies .....	523	80
Removal (and Inspection) of Plan- et Pinion Carriers from Housing Assembly .....	510	59	Installation of Planet Pinion Car- riers in Housing.....	524	81
Disassembly and Inspection of Di- rect Clutch Piston Retainer ....	512	60	Installation of Output Shaft Sup- port, Planet Pinion Carrier, and Direct Clutch Assemblies.....	525	82
Assembly of Direct Clutch Piston Retainer .....	514	61	Rear Oil Pump Assembly and In- stallation .....	527	83
Removal and Inspection of Reverse and Kickdown Band Assemblies	515	62	Assembly of Governor on Output Shaft.....	527	84
Reverse and Kickdown Band Lever Assemblies .....	516	63	Assembly and Installation of Trans- mission Extension, Oil Seal and Bearing .....	527	85
Removal, Disassembly, and Inspec- tion of Front Oil Pump .....	516	64	Checking Transmission End Play.	528	86
Removal and Inspection of Regula- tor Valve Body .....	517	65	Adjustment of Kickdown Band (Front) .....	528	87
Removal and Inspection of Reverse Servo Piston .....	517	66	Adjustment of Reverse Band.....	529	88
Removal and Inspection of Kick- down Piston .....	518	67	Installation of Valve Body and Transfer Plate Assembly .....	529	89
Torque Converter Reaction Shaft.	518	68	<b>SERVICING VALVE BODY AND TRANSFER PLATE ASSEMBLY ..</b>		
Removal of Manual Control Valve Lever Shaft Oil Seal.....	519	69	Disassembly and Inspection of Valve Body and Transfer Plate Assembly .....	530	—
Removal of Kickdown Band Ad- justing Screw .....	519	70	Cleaning and Inspection of Valve Body and Transfer Plate Assem- bly .....	533	91
Inspection of Transmission Case..	519	71	Assembly of Valve Body and Transfer Plate Assemblies.....	534	92
Installation of Kickdown Band Ad- justing Screw .....	519	72			

## SECTION XII—UNIVERSAL JOINTS AND PROPELLER SHAFT

	<i>Page</i>	<i>Para- graph</i>		<i>Page</i>	<i>Para- graph</i>
<b>SECTION XII—UNIVERSAL JOINTS AND PROPELLER SHAFT</b> .....	536	—	Servicing Internal Type Universal Joint Dust Cover .....	542	5
Data and Specifications.....	537	—			
<b>CROSS TYPE</b> .....	539	—	<b>CROSS AND YOKE TYPE PRO- PELLER SHAFT</b> .....	543	—
Servicing Cross Type Universal Joints .....	539	1	Servicing Cross and Yoke Type Propeller Shaft .....	543	6
<b>BALL AND TRUNNION TYPE</b> .....	540	—	Servicing Propeller Shaft Center Bearing .....	544	7
Servicing Ball and Trunnion Type Universal Joints .....	540	2			
Universal Joint Maintenance (Ball and Trunnion) .....	540	3	<b>SERVICE DIAGNOSIS</b> .....	546	—
Servicing External Type Univer- sal Joint Dust Cover.....	540	4	Propeller Shaft Vibrates.....	546	8
			Universal Joints Noisy .....	546	9

## SECTION XIII—WHEELS AND TIRES

<b>SECTION XIII—WHEELS AND TIRES</b> .....	547	—	Mounting Tires .....	551	10
Data and Specifications .....	548	—	Testing the Tire and Wheel As- sembly for Leakage (Tubeless Tires) .....	552	11
<b>WHEELS</b> .....	549	—	Leakage Causes and Corrective Methods .....	553	12
Safety-Rim Wheels.....	549	1	Repairing Punctures (Tubeless Tires) .....	554	13
Tightening Wheel Hub Bolts.....	549	2	Repairing the Tread and Carcass.	556	14
Care of Wire Wheels (Car so Equipped) .....	549	3	Retreading Tires .....	556	15
Static Electricity .....	549	4	Checking Tires and Wheels for Lat- eral and Radial Runout .....	556	16
Checking Wheels for Eccentricity.	550	5	Cleaning White Sidewall Tires ...	558	17
Checking Wheel for Wobble (Lat- eral Runout) .....	550	6	Recommended Tire Pressures....	558	18
Balancing Wheel and Tire Assem- blies .....	550	7	Tire Rotation .....	559	19
<b>TUBELESS TIRES</b> .....	551	—	Tire Thump .....	559	20
Dismounting Tires .....	551	8	<b>SERVICE DIAGNOSIS</b> .....	559	—
Tubeless Tires .....	551	9	Tire Wear .....	559	21

SECTION XIV—BODY, BODY WIRING AND SHEET METAL  
INCLUDING TOWN AND COUNTRY WAGON

<b>SECTION XIV—BODY, BODY WIR- ING AND SHEET METAL INCLUD- ING TOWN AND COUNTRY WAGON</b> .....	563	—	<b>SERVICE PROCEDURES</b> .....	569	—
Description .....	563	1	Removal, Installation, and Adjust- ment of Hood .....	569	6
Body Maintenance .....	563	2	Adjusting Front Doors.....	571	7
Testing Car for Water or Dust Leaks .....	563	3	Adjusting Rear Doors.....	572	8
Sealing Compounds .....	565	4	Front Door Hinge Adjustments ..	573	9
Body Sealing Procedures.....	566	5	Rear Door Hinge Adjustments...	573	10
			Servicing the Deck Lid, Hinges, and Lock .....	574	11
			Body Alignment .....	575	12

**SECTION XIV—BODY, BODY WIRING AND SHEET METAL  
INCLUDING TOWN AND COUNTRY WAGON (Cont'd)**

	<i>Page</i>	<i>Para- graph</i>		<i>Page</i>	<i>Para- graph</i>
Body Panel Replacement.....	575	13	<b>CONVERTIBLE COUPE TOP.....</b>	589	—
Mouldings and Methods of Attach- ment .....	576	14	Operating the Convertible Coupe Top .....	589	31
Removal and Installation of Door Garnish Mouldings .....	577	15	Adjusting the Top .....	591	32
Removal and Installation of Inside Door and Window Regulator Handles .....	577	16	Servicing the Top Folding Mecha- nism .....	592	33
Removal and Installation of Door Trim Panel .....	578	17	Checking Fluid Level in Reservoir	592	34
Removal and Installation of Front Door Window Lift Regulator...	578	18	Top Will Not Raise or Lower....	593	35
Replacing Glass Run Channel....	578	19	Testing the Top Control Switch...	593	36
Removal and Installation of Door Ventilator Assembly .....	579	20	Testing Wires Between Control Switch and Pump Motor.....	593	37
Removal and Installation of Door Glass .....	579	21	Rear Window (Convertible Coupe)	593	38
Removal and Installation of Door Latch and Remote Control....	580	22	Care of the Top .....	593	39
Removal and Installation of Rear Quarter Window Glass (Special Club Coupe and Convertible Coupe Models) .....	580	23	<b>SERVICING THE TOWN AND COUNTRY WAGON.....</b>	595	—
Removal and Installation of Out- side Door Handle.....	581	24	<b>SERVICE PROCEDURES.....</b>	595	—
Removal and Installation of Door Lock Cylinder .....	582	25	Tail Gate .....	595	40
Removal and Installation of Wind- shield Glass .....	582	26	Removal of Tail Gate Regulator Handle .....	595	41
Removal and Installation of Rear Window (All Models Except Convertible Coupe and Town and Country Wagon) .....	584	27	Removal of Tail Gate Glass Run Channels .....	595	42
Front Fenders (All Models)....	586	28	Installation of Tail Gate Lower Glass Run Channel, Rear Win- dow Regulator, and Rear Win- dow Glass .....	596	43
Removal and Installation of Fender Splash Shield (All Models) ....	587	29	Removal and Installation of Rear Quarter Window .....	596	44
Removal and Installation of Radiator Grille (All Models).....	589	30	Removal and Installation of Tail Gate Regulator .....	598	45
			Rear Compartment Adjustments..	598	46
			<b>MAINTENANCE.....</b>	598	—
			Headlining .....	598	47
			Cleaning of Interior Upholstery..	602	48
			Paint Finish Conditions.....	603	49

**SECTION XV—LUBRICATION**

<b>SECTION XV—LUBRICATION.....</b>	605	—	<b>GENERAL RECOMMENDATIONS ..</b>	607	—
Engine Oil Recommendations....	605	1	Engine Oil Level Indicator.....	607	6
A.P.I. Engine Oil Classifications..	605	2	Carburetor Air Cleaner.....	607	7
Multi-Viscosity Oils .....	606	3	Front Wheel Bearings.....	607	8
Engine Oil Change Periods.....	606	4	Oilite Bearings .....	607	9
Unusual Conditions .....	606	5			

## SECTION XV—LUBRICATION (Cont'd)

	<i>Page</i>	<i>Para- graph</i>		<i>Page</i>	<i>Para- graph</i>
LUBRICATION RECOMMEN- DATIONS EVERY 1,000 MILES.....	608	—	EVERY 20,000 MILES.....	611	—
EVERY 5,000 MILES.....	610	—	POINTS REQUIRING NO LUBRICATION.....	613	—
EVERY 10,000 MILES.....	611	—			

## SECTION XVI—RADIO AND HEATER

SECTION XVI—RADIO AND HEATER.....	615	—	Station Push-Button Adjustment.....	620	8
RADIO.....	617	—	Station Push-Button Adjustment. Removal and Installation.....	620 624	9 10
Description.....	617	1	HEATER.....	624	—
SERVICE PROCEDURES.....	617	—	Description and Operation.....	624	11
Operating Radio.....	617	2	OPERATION.....	626	—
Radio Operation.....	618	3	Removing Core.....	626	12
Conelrad Plan.....	619	4	Removing Defroster Motor.....	626	13
Interference Elimination.....	619	5	Removing Blower Motor.....	627	14
Tire Static.....	619	6	Adjusting Summer Doors.....	627	15
Radio Antenna Circuit Capacitance Balancing.....	620	7			

## SECTION XVII—AIR CONDITIONING SYSTEM

SECTION XVII—AIR CONDITION- ING SYSTEM.....	628	—	Thermal Switch.....	635	17
Specifications.....	628	—	Expansion Valve.....	635	18
Special Tools.....	629	—	Air Conditioning System Cycle....	635	19
Tightening Reference.....	629	—	Operating the Air Conditioning System.....	635	20
AIR CONDITIONING SYSTEM.....	631	—	SERVICE PROCEDURES.....	636	—
General Information.....	631	1	Precautions in Handling Freon 12.....	636	21
AIR CONDITIONING SYSTEM COMPONENTS.....	631	—	Installing Manifold Gauge Set....	636	22
Compressor.....	631	2	Inspection and Testing of Complete Air Conditioning System.....	637	23
Compressor Lubrication.....	631	3	Testing for Leaks with Leak De- tector.....	639	24
Compressor Valves.....	631	4	Discharging Freon.....	640	25
Crankshaft.....	633	5	Evacuating and Sweeping the Sys- tem.....	640	26
Connecting Rods.....	633	6	Charging System with Freon 12... ..	641	27
Crankshaft Seal (Early Type)....	633	7	Adding Freon 12 by Sight Glass Method.....	642	28
Crankshaft Seal (Late Type)....	633	8	Precautions in Handling Tubing... ..	642	29
Crankcase Oil Check Valve.....	633	9	Servicing the Compressor.....	644	30
Pistons and Pins.....	633	10	Replacing Compressor (Oil Level Precaution).....	644	31
Oil Level.....	634	11	Measuring Compressor Oil Level..	644	32
Service Valves.....	634	12	Replacing Damaged Compressor..	645	33
Magnetic Clutch.....	634	13			
Evaporator.....	634	14			
Blower System.....	634	15			
Solenoid Valve.....	634	16			

SECTION XVII—AIR CONDITIONING SYSTEM (Cont'd)

	<i>Page</i>	<i>Para- graph</i>		<i>Page</i>	<i>Para- graph</i>
Removal and Installation of Com- pressor for Engine or Com- pressor Service . . . . .	647	34	Fast Idle Device . . . . .	659	47
Replacing Compressor Valve Plate Assembly . . . . .	648	35	Replacing Evaporator Filter . . . . .	659	48
Compressor Shaft Seal Replacement	649	36	Electrical System Circuits (De- Luxe) . . . . .	659	49
Magnetic Clutch . . . . .	651	37	Road Testing Car . . . . .	660	50
Replacing Brush Assembly . . . . .	653	38	<b>SERVICE DIAGNOSIS</b> . . . . .	662	—
Expansion Valve Removal and In- stallation . . . . .	653	39	Blowers Not Operating . . . . .	662	51
Testing Expansion Valve Opera- tion for Proper Super Heat . . . . .	654	40	Blowers and Compressor Operat- ing—No Cooling . . . . .	662	52
<b>TEMPERATURE, PRESSURE RELA- TION CHART FOR FREON 12</b> . . . . .	655	—	Blowers Operating—Partial Cool- ing . . . . .	662	53
Blower and Motor . . . . .	656	41	Low Suction Pressure and Low Head Pressure . . . . .	663	54
Blower Fans . . . . .	657	42	Low Suction Pressure and High Head Pressure . . . . .	663	55
Condenser Removal and Installation	657	43	High Head Pressure . . . . .	663	56
Receiver Fusible Plug Replacement	657	44	Suction Pressure O.K. and High Head Pressure . . . . .	663	57
Receiver Strainer-Drier Replace- ment . . . . .	658	45	Low Suction Pressure—Head Pres- sure O.K. . . . .	663	58
Evaporator Removal and Installa- tion . . . . .	658	46	Testing for Leaks with Leak De- tector . . . . .	664	59

