

Section XII


UNIVERSAL JOINTS AND PROPELLER SHAFT

CONTENTS

	Page
Servicing Cross Type Universal Joints.....	342
Servicing Ball and Trunnion Type Universal Joints.....	342
Servicing Cross and Yoke Type Propeller Shaft.....	344
Servicing Propeller Shaft Center Bearing.....	345
Rear Axle Control Strut.....	345
Checking Propeller Shaft Angles.....	347
Service Diagnosis	347


DATA AND SPECIFICATIONS

Models	C-75	C-76	IM-1, 2 and 4	Town & Country	
				C-75	C-76
Propeller Shaft Number Used.....	1	1	2	1	1
Diameter					
With Standard Transmission....	3.5 in.	—	—	3.5 in.	—
With TorqueFlite Transmission..	3.0 in.	3.0 in.	2.75 in.	3.25 in.	3.25 in.
Diameter with Air Conditioning					
And Standard Transmission.....	—	—	—	3.5 in.	3.50 in.
And TorqueFlite Transmission...	3.25 in.	3.25 in.	2.75 in.	3.25 in.	3.25 in.
Length					
Centerline to Centerline of “U” Joints					
With Standard Transmission....	59.02	—	—	59.02	—
With TorqueFlite Transmission..	58.96	58.96	63.64	58.96	58.96

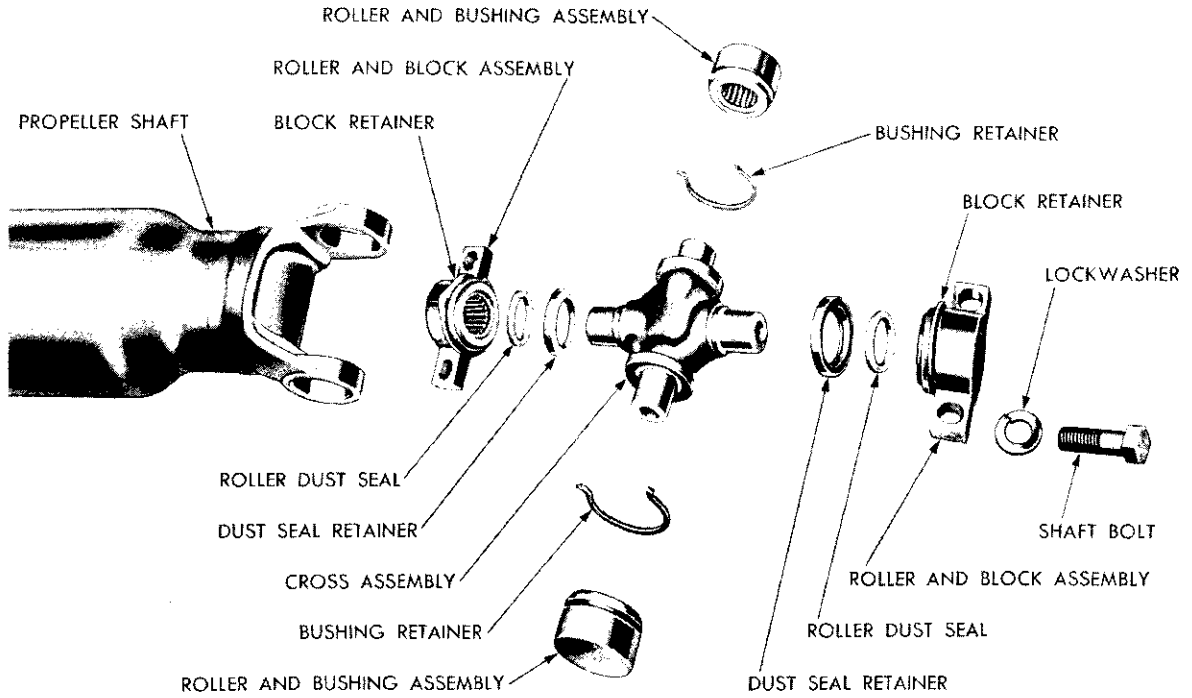

55x767

Fig. 1—Rear Universal Joint—Cross Type (Disassembled View)

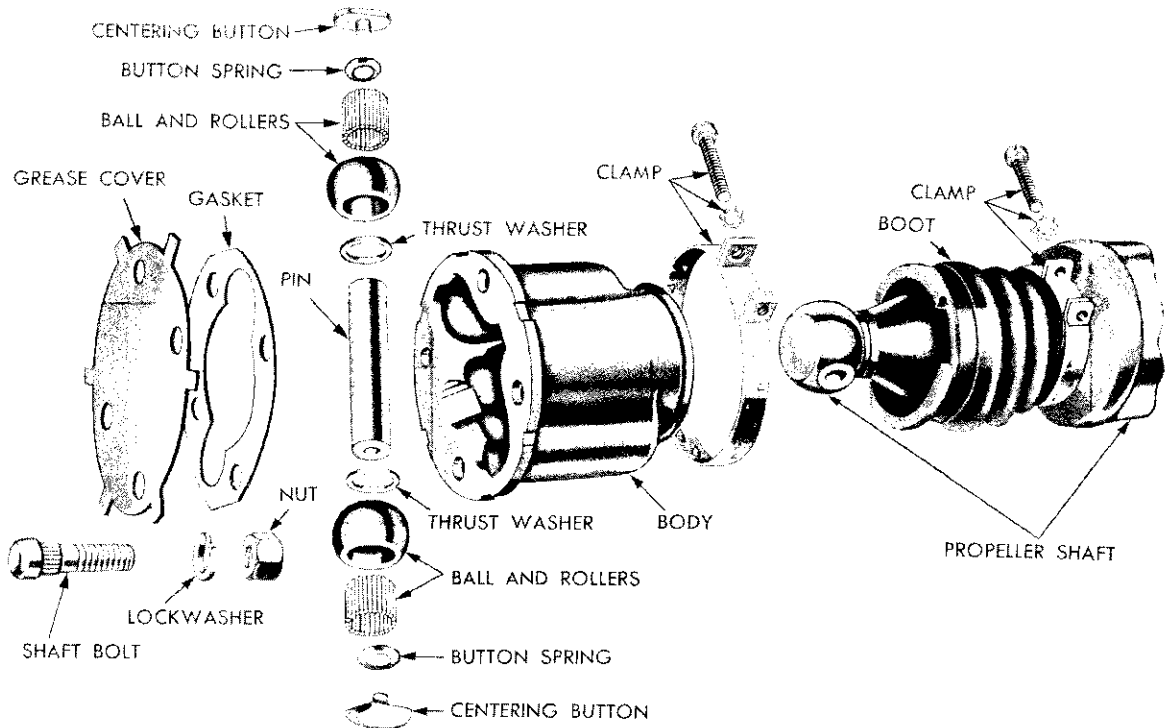

54x49

Fig. 2—Front Universal Joint—Ball and Trunnion Type (Disassembled View)

DATA AND SPECIFICATIONS (Cont'd)

Models	C-75		C-76		Town & Country	
	C-75	C-76	IM-1, 2 & 4		C-75	C-76
Flange to Flange Length						
With Standard Transmission	61.16	—	—		61.16	—
With TorqueFlite Transmission	61.10	61.10	64.14		61.10	61.10
Lubrication			*PRE-PACK			
Universal Joints						
Type	(Front) Ball and Trunnion (Rear) Cross Type		Cross Type (Only)		(Front) Ball and Trunnion (Rear) Cross Type	
Bearing Type		ANTI-FRICTION				

*Every 20,000 miles.
 **Package 59.41.

SECTION XII

UNIVERSAL JOINTS AND PROPELLER SHAFT

UNIVERSAL JOINTS

Two types of Universal Joints are used on 1957 Chrysler Models and are as follows: The Cross Type, as shown in Figure 1, and Ball and Trunnion Type, as shown in Figure 2.

The ball head of the Ball and Trunnion Type, is an integral part of the tubular propeller shaft and is covered by the joint body. The pin, with balls, needle bearings, thrust washers, centering button, and button spring at each end, extends through the propeller shaft ball head and rides in ball channels in the body of the joint assembly. This balanced installation is designed to absorb thrust and torque of the drive line. This type of joint is used in Models C-75, C-76 at front universal joint.

The Cross Type universal joint is used at rear joint of all models, and front and center bearing joints of Imperial Models are equipped with center bearing and two propeller shafts.

No adjustments are provided to compensate for wear in universal joint assembly. Parts that show excessive wear must be replaced.

CAUTION

When disassembling universal joints, keep parts identified as to original position. Failure to assemble parts in their original positions may cause an unbalanced condition in the propeller shaft. Retorque mounting nuts after the initial 1,000 miles of operation.

CROSS TYPE

1. SERVICING CROSS TYPE UNIVERSAL JOINTS (Fig. 1)

Remove propeller shaft from the vehicle. Remove two bushing retainers holding bushings in shaft yoke and remove bushings. Tilt cross so that it may be removed from propeller shaft

yoke. Straighten out end of retainer lock and remove two roller and block assemblies. Remove dust seals and retainers. Inspect parts and replace parts that show wear. Lubricate roller and bushings with universal joint grease (extreme pressure) and assemble joint in reverse order of disassembly.

BALL AND TRUNNION TYPE

2. SERVICING BALL AND TRUNNION TYPE UNIVERSAL JOINTS

To disassemble universal joint for repair or inspection of all component parts, refer to Fig. 2 and proceed as follows: Remove joint body metal cover and gasket by bending tabs of cover away from body; remove cover and gasket. Slide body down on propeller shaft exposing two centering buttons. Remove centering buttons and spring washers from ends of trunnion pins. Slide two balls, rollers, and thrust washers off trunnion pin. Wash all parts with solvent and blow dry with compressed air. Inspect and replace worn parts.

NOTE: Reconditioning of ball and trunnion type universal joints will only be necessary when excessive backlash exists between balls and trunnion. In some instances, it will be found that universal joint body has worn, and it will be necessary to replace all parts, including body pin, thrust washers, and centering buttons. Worn rollers should also be replaced.

3. UNIVERSAL JOINT MAINTENANCE (BALL AND TRUNNION)

The universal joints, propeller shaft, and hand brake drum are accurately balanced during process of manufacture. Care should be exercised to maintain this condition of balance by close adherence to the following: Do not use more than 2½ ounces of lubricant in a universal joint (ball and trunnion type) of the C-76 and 2 ounces in the C-75 at any time. Keep propeller shaft, hand brake drum, flanges, etc. free from undercoating, dirt and ice.

CAUTION

When installing trunnion pin in propeller shaft care should be taken to see that trunnion pin is centered in shaft. Each end of pin should protrude the same distance, with variation of no more than .003 inch. If one side of pin extends more than .003 inch farther than the other, propeller shaft will be out of balance. Tool C-3534 (C-75 models), Tool C-3211 on the C-76, as shown in Figure 3, will facilitate removal, installation, and centering of trunnion pin.

Failure to observe these recommendations may result in an out-of-balance condition causing vibration.

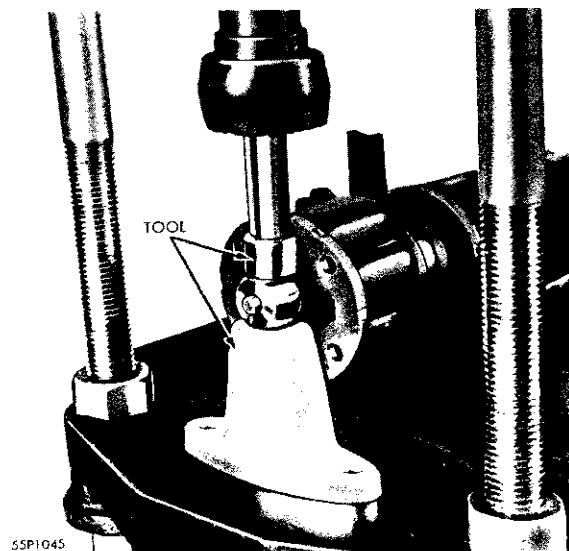


fig. 3—Installing Joint Pin

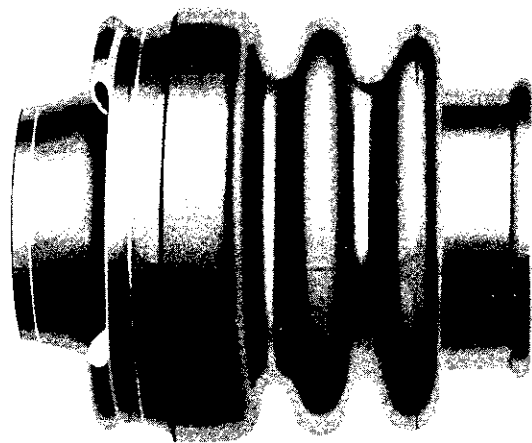


Fig. 4—External Type Dust Cover

4. SERVICING EXTERNAL TYPE UNIVERSAL JOINT DUST COVER

To replace an external type universal joint dust cover (Fig. 4) that is damaged, remove propeller shaft assembly from car and clamp lightly in vise. One end of shaft should be resting on bench in a horizontal position, disassemble joint, removing all parts except body and pin. Clean body, ball head, and pin thoroughly.

A complete coating of grease (or suitable rubber lubricant) must be smeared on outside and inside of dust cover, entire surface of ball head, pin, and inside of body. (It is very important that this instruction be followed.) Stretch grease-soaked boot or dust cover over pin and ball head, as shown in Figure 5. Work dust cover into body as far as possible.

CAUTION

USE NO TOOLS FOR THIS OPERATION.

With body in position so pin can enter ball channels, pull body sharply over pin, thereby forcing dust cover into body. With one hand, grip end of dust cover, protruding through back end of body. With other hand, pump body back and forth, as shown in Figure 6, until entire dust cover has passed through body. During operation cone may have reversed itself inside dust cover. Pull it out to its normal position.

Insert 2½ ounces of heavy fiber, universal joint grease in joint of C-76 (2 ounces in the C-75) and assemble balls to pin. Install cover.

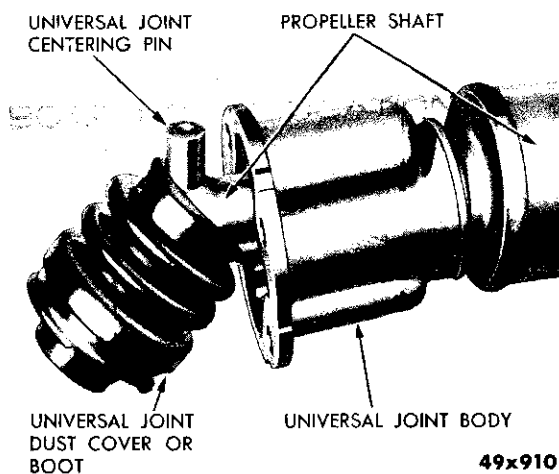


Fig. 5—Sliding Cover Over Ball Head and Fin

Install shaft, using new lockwashers. Be sure to double check flange bolts for tightness, to insure against grease leakage. Recheck after 1,000 miles of operation.

CAUTION

Never attempt to use a needle-like arrangement for forcing lubricant into boot (or dust cover) on universal joints. Excessive grease can be forced into boot and cause shaft to be thrown out of balance, burst boot, or lubricant can be lost through injection hole during high speed operation. The joints must be disassembled and packed with universal joint grease.

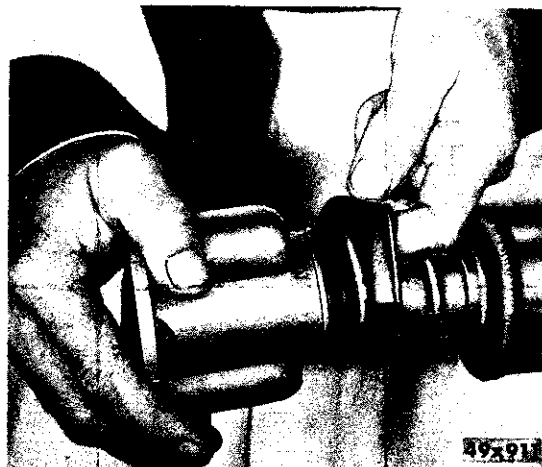


Fig. 6—Working Dust Cover Through Body

CROSS AND YOKE TYPE PROPELLER SHAFT

5. SERVICING CROSS AND YOKE TYPE PROPELLER SHAFT (Fig. 7) (Imperial Models)

a. Removal

Remove nuts, lockwashers and bolts holding universal joint and propeller shaft to differential and transmission companion flanges and center bearing to frame crossmember. Remove propeller shaft assembly.

b. Disassembly

Place assembly in bench vise and remove splined yoke cross bushing retainers. Press out bushings and remove cross from yoke. Remove bearing blocks, dust seals, and dust seal retainers. Remove retainers from cross roller bearings. Press out bearings and cross. Remove dust seals and retainers from cross. The cross roller bearing block and its component parts, also form an assembly. These parts are **not** serviced separately. After disassembly, clean

and inspect parts and replace those worn or damaged as necessary.

c. Assembly

Lubricate all parts before assembling. If splined joint at rear of front propeller shaft has been disassembled, fill cavity with one ounce (by weight) of MS 1124. The center bearing is a sealed bearing and does not require lubrication. Install dust shields and retainers on cross. Press cross roller bearing and bushing assembly into yoke with cross in proper location.

CAUTION

Make certain that all of roller bearings are correctly placed in roller bushing. Also, be sure balance arrows are in alignment (Fig. 7).

d. Installation

Place propeller shaft in its correct position under car. Make certain that slip-spline end of shaft is located toward front of car. Insert attaching screws and tighten securely.

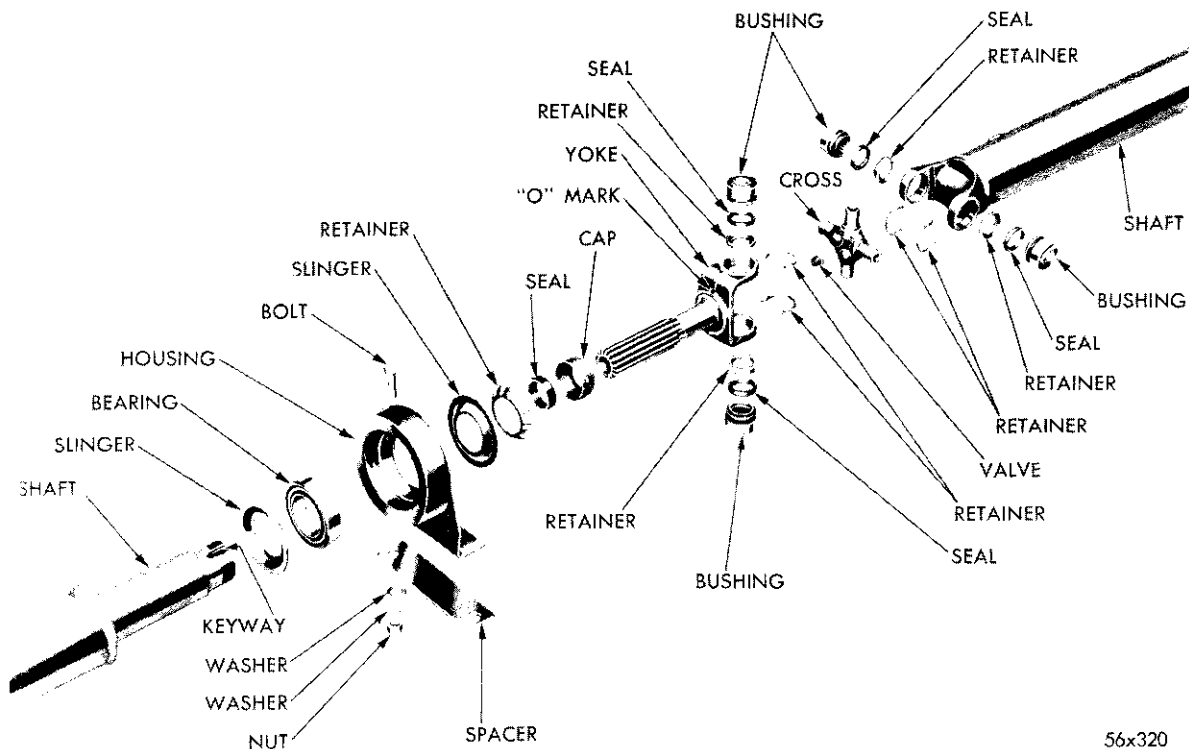


Fig. 7—Propeller Shaft and Center Bearing Assembly (Disassembled View)

6. SERVICING PROPELLER SHAFT CENTER BEARING (Figure 7)

The center bearing and housing must be removed as a unit, together with front propeller shaft, for servicing.

CAUTION

Do not extend two piece center bearing pro-

PELLER shaft to its full length. The seal may be damaged by the splines on universal joint yoke.

With yoke all the way into front propeller shaft, bend up tang on dust seal cover. Remove cover, seal, lock and dust slinger and remove center bearing assembly. Inspect bearing, bracket, seal. Replace necessary parts and reassemble.

REAR AXLE CONTROL STRUT

The 1957 Imperials are designed with two propeller shafts and a propeller shaft center bearing, as shown in Fig. 8. Conditions may arise under certain passenger loads which may create a propeller shaft shudder or vibration at speeds of 15 to 20 miles per hour.

In order to control this shudder or vibration, a rear axle control strut, as shown in Figure 9, has been incorporated in rear axle design for purpose of controlling rise of nose of rear axle carrier under varying load conditions. Corrections of propeller shaft shudder should be made as follows: Before diagnosing a shudder condition make sure engine has been tuned and is operating smoothly with no hesitation or stumble on accelerator.

NOTE: A rough engine can aggravate or produce a shudder.

With fuel tank approximately half full, determine under what speed and passenger load a shudder is present and if shudder is light,

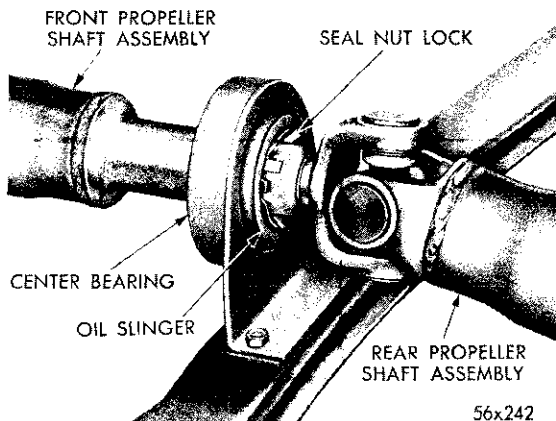


Fig. 8—Center Bearing Installed

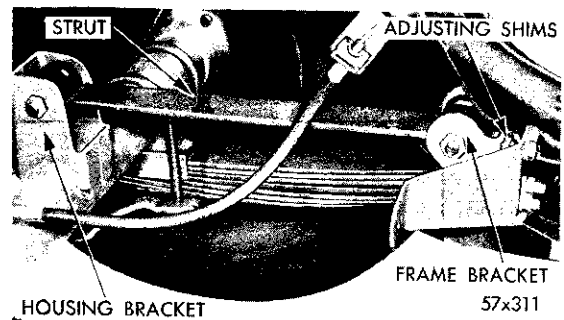


Fig. 9—Rear Axle Control Strut

moderate or heavy. Check the indexing of universal joints and propeller shaft assembly, as shown in Figure 7. The letter "O" on front face of spline should be lined up with key slot at rear of front shaft.

Place car on platform with weight of vehicle on rear wheels. Measure rear universal joint working angle. This angle should be 1 to 3 degrees at zero passenger load. Reasonable care must be exercised to obtain accuracy of this measurement.

NOTE: If car is located on a hoist that supports rear of car on axle housing, the angle of the universal joints will be influenced.

If measured angle is not 1 to 3 degrees, correction should be made by shimming axle with 2° taper shim. After rear universal joint angle has been adjusted as near to two degrees as possible, measure middle universal joint working angle. This working angle should be 2½ degrees (more or less) with the apex upward, for rear universal joint angle of two degrees at zero passenger load.

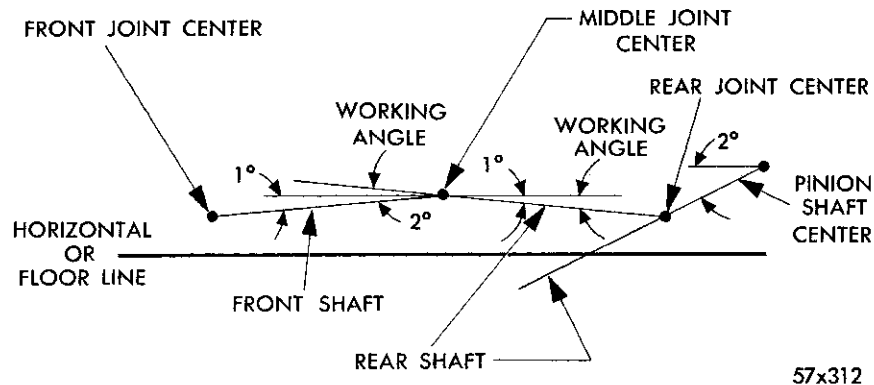


Fig. 10—Determining Working Angles—Front and Rear Propeller Shaft

For other angles, see table below:

TABLE	
Rear Joint	Middle Joint
1	3
1½	2¾
2	2½
2½	2¼
3	2

The middle universal joint angle is adjusted by adding or removing shims between center bearing insulator and crossmember. Adding ⅛ inch shim will increase middle universal joint angle about ½ degree; likewise, removing ⅛ inch shim will reduce angle about ½ degree.

In measuring the angles of front and rear propeller shafts and the pinion shaft, a spirit level protractor must be used to determine amount the shafts are below horizontal (or the

end of the shaft is pointing down.) Determine working angles, as shown in Figure 10.

Since adjacent shafts are pointing in different directions (up or down) when viewed in same direction (from front to rear of car) the working angles are obtained by adding the angles below horizontal. Therefore, the middle joint working angle as shown in Figure 10, is 2° and the rear joint working angle is 3°. If the adjacent shafts were pointing in the same direction then the angles below horizontal would be subtracted to obtain the joint working angle.

If large number of shims must be added or removed at center bearing, rear universal joint angle should be rechecked to be assured that it has not been appreciably altered from two degrees.

When these adjustments have been made, the least amount of propeller shaft shudder should occur at a loading of two passengers. If, after road testing, it is desirable to obtain the least amount of propeller shaft shudder at large passenger loading, center bearing must be raised

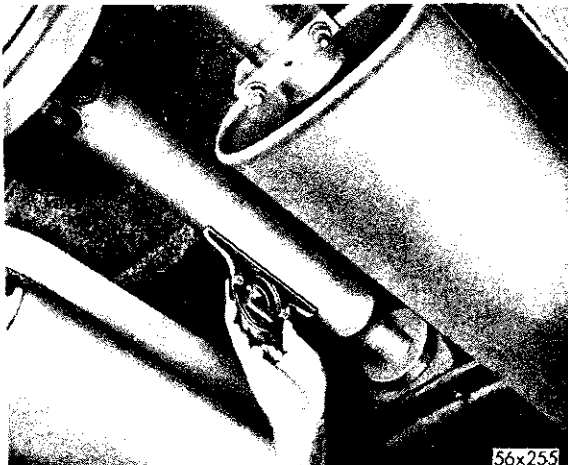


Fig. 11—Checking Front Propeller Shaft Angles



Fig. 12—Checking Rear Propeller Shaft Angles

slightly by means of shimming. Lowering center bearing will move point of least shudder to a lower passenger loading.

7. CHECKING PROPELLER SHAFT ANGLES

Locate car over pit with wheels supporting car. Check universal joint angles with a spirit level protractor, as shown in Figures 11 and 12. Measure angles of front propeller shaft, middle propeller shaft, and rear axle pinion drive shaft flange.

The rear axle drive pinion shaft flange angle should be obtained by removal of rear end of rear propeller shaft, and measuring angle of



Fig. 13—Checking Companion Flange Angle

front face of companion flange, as shown in Figure 13.

SERVICE DIAGNOSIS

8. PROPELLER SHAFT VIBRATES

a. If propeller shaft, drum, and flange are not shielded while car is being undercoated, the undercoating material may accumulate on underside of propeller shaft and cause vibration. To remedy such a condition, inspect shaft and remove undercoating material (if present) with solvent.

b. Check transmission flange nuts and rear axle differential flange nuts for looseness. Tighten to Data and Specifications.

c. Check alignment of balance arrows on both shaft and front universal joint. These arrows must be exactly in line. If not, reposition splines so that arrows are properly aligned.

9. UNIVERSAL JOINTS NOISY

a. Check universal joint for possible dam-

age and tighten propeller shaft flange bolts to Data and Specifications.

b. Disassemble universal joints and inspect all parts for wear or damage. Replace parts as required, pack bearings with universal joint grease and reassemble.

c. Inspect universal joint bearings for wear and replace as necessary.

d. Check for flange runout. In many instances, it is possible to correct a flange runout condition by repositioning universal joint 180 degrees with companion flange. Reposition only one universal joint at a time and road test car after each repositioning operation.

e. Check splines. If excessively loose, inspect splines on shaft or in flange for wear or damage. Replace shaft or flange, as necessary, to correct condition.