

PART NAME	CODE	PART NAME	CODE
-----------	------	-----------	------

ALPHABETICAL INDEX

A

Absorber, shock	17-23-3	Arm and idler arm, standard steering gear	19-27-2
	to		to
Accelerator pedal	17-23-56	Ash receiver	19-27-55
	14-01-1		23-02-1
	to		to
Accelerator pedal return spring . . .	14-01-22	Automatic choke	23-02-35
	14-06-1	Automatic choke to carburetor rod . .	14-64-2
	to	Automatic camp door switch	14-65-4
Accelerator pedal to accelerator shaft rod	14-06-10	Automatic pilot	8-12-2
	14-07-1		14-02-3
	to		to
Accelerator shaft	14-07-18	Automatic 3 speed transmission . . .	14-02-38
	14-11-1		21-02-1
	to		to
Actuator	14-11-48	Automatic 3 speed transmission band .	21-02-6
	24-29-1		21-136-5
	to		to
Adaptor, carburetor lever	24-29-8	Automatic 3 speed transmission button	21-136-236
	14-08-36		21-30-28
	to		to
Adjustor, parking brake	14-08-37	Automatic 3 speed transmission cable	21-30-402
	4-07-1		21-30-28
	to		to
Adjustor, seat	4-07-28	Automatic 3 speed transmission case .	21-30-402
	23-47-6	Automatic 3 speed transmission case extension	21-03-1
	to		21-04-1
Air Cleaner, power brake	23-47-456		to
Air conditioning	5-113-17	Automatic 3 speed transmission clutch	21-04-2
	24-01-24		21-133-3
	to		to
Air conditioning control	24-01-87	Automatic 3 speed transmission control lever	21-133-71
	24-24-5		21-142-5
	to		to
Air intake	24-24-160	Automatic 3 speed transmission gearshift lever	21-142-12
	23-61-20		21-30-28
	to		to
Air suspension	23-61-110	Automatic 3 speed transmission governor	21-30-402
	25-01-1		21-138-2
	to		to
Anchor, parking brake shoe	25-01-21	Automatic 3 speed transmission input shaft	21-138-38
	4-06-1		21-129-5
	to		to
Antenna, radio	4-06-11	Automatic 3 speed transmission intermediate shaft	21-129-33
	1-88-1		21-129-5
	to		to
Anti-squeak, body	1-88-206	Automatic 3 speed transmission kickdown planet pinion carrier and component parts	21-129-33
	23-31-33		21-134-5
	to		to
Arm, front wheel lower control . . .	23-31-205	Automatic 3 speed transmission low and reverse planet pinion carrier and component parts	21-134-51
	2-10-6		21-135-9
	to		to
Arm, front wheel upper control . . .	2-10-79	Automatic 3 speed transmission low and reverse planet pinion carrier and component parts	21-135-50
	2-08-5		
	to		
Arm, parking brake lever	2-08-75		
Arm, steering linkage knuckle	4-18-2		
Arm and idler arm, power steering .	2-05-4		
	19-27-2		
	to		
	19-27-55		

1959 PASSENGER CAR PARTS LIST

ALPHABETICAL
INDEX

PART NAME	CODE	PART NAME	CODE
Automatic 3 speed transmission neutral starter switch	21-113-24 to 21-113-29	Bar, radiator upper cross	7-33-1
Automatic 3 speed transmission oil pan	21-119-3 to 21-119-19	Bar, rear bumper face	13-66-3 to 13-66-147
Automatic 3 speed transmission oil pump	21-118-1 to 21-118-45	Bar, side sill and belt	23-51-5 to 23-51-41
Automatic 3 speed transmission oil pump strainer	21-117-1 to 21-117-10	Battery and cable	8-01-4 to 8-01-21
Automatic 3 speed transmission output shaft	21-05-1 to 21-05-35	Battery heat shield	13-35-1
Automatic 3 speed transmission package	21-01-3	Battery hold-down strap	13-34-3
Automatic 3 speed transmission regulator valve body and valves	21-131-5 to 21-131-50	Battery hold-down stud	13-36-5
Automatic 3 speed transmission servos	21-137-5 to 21-137-208	Battery support tray	13-33-61 to 13-33-64
Automatic 3 speed transmission set	21-01-3	Bearing, camshaft	9-16-6 to 9-16-17
Automatic 3 speed transmission speedometer cable, includes shaft and housing	21-84-1 to 21-84-4	Bearing, clutch bearing	6-19-2 to 6-19-3
Automatic 3 speed transmission speedometer pinion	21-85-5 to 21-85-76	Bearing, differential	3-11-1 to 3-11-14
Automatic 3 speed transmission torque converter reaction shaft	21-129-5 to 21-129-33	Bearing, drive pinion	3-22-24 to 3-22-45
Automatic 3 speed transmission valve body and valves	21-139-4 to 21-139-213	Bearing, drive shaft	3-33-1 to 3-33-4
B		Bearing, front wheel	22-06-1 to 22-06-18
Back-Up lamp	8-56-59	Bearing, propeller shaft center	16-16-1 to 16-16-47
Back-Up lamp	1-10-1	Bearing, standard transmission countershaft	21-25-2 to 21-25-6
Band, Automatic 3 speed transmission	21-136-5 to 21-136-236	Bearing, standard transmission main shaft pilot	21-17-2 to 21-17-7
Band, parking brake	4-03-1 to 4-03-11	Bearing, standard transmission main shaft rear	21-19-2 to 21-19-20
Band, powerflite transmission	21-136-5 to 21-136-52	Belt, fan and related drive	7-03-1
Bar, front bumper face	13-64-3 to 13-64-152	Bloc, rear spring silent	17-17-3 to 17-17-5
		Block, cylinder	9-02-5 to 9-02-16
		Block, terminal	8-21-1 to 8-21-11
		Board, floor	23-04-2 to 23-04-253
		Board, toe	23-04-2 to 23-04-253

PART NAME	CODE	PART NAME	CODE
Body, universal joint	16-04-1	Box, glove	23-06-4
Body and valves, automatic 3 speed transmission regulator valve	21-131-5 to 21-131-50	to	23-06-55
Body and Valves, automatic 3 speed transmission valve	21-139-4 to 21-139-213	Bracket, front fender side shield	12-07-1 to 12-07-3
Body and Valves, powerflite transmission regulator valve	21-131-1 to 21-131-50	Bracket, body	23-07-168
Body and Valves, powerflite transmission valve	21-139-4 to 21-139-193	Bracket, brake pedal	5-31-15 to 5-31-21
Body anti-squeak	23-31-33 to 23-31-205	Bracket, brake tube	5-57-2
Body bracket	23-07-168	Bracket, frame body	13-39-1
Body bumper	23-32-14 to 23-32-98	Bracket, front fender	12-06-3
Body door bumper	23-08-12 to 23-08-75	Bracket, shock absorber	17-24-28
Body insulator	23-31-33 to 23-31-205	Bracket, standard steering column	19-31-1 to 19-31-24
Body liner	23-31-33 to 23-31-205	Brake, power	1-42-1
Body pad	23-31-33 to 23-31-205	Brake, parking (foot operated)	4-25-1 to 4-25-15
Body pan	23-32-14 to 23-32-98	Brake drum	22-04-11
Body panel	23-34-20 to 23-34-345	Brake flexible hose	5-62-1 to 5-62-20
Body plug	23-32-14 to 23-32-98	Brake fluid	5-01-2
Body pillar	23-36-5 to 23-36-126	Brake hose clip	5-56-2
Body reinforcement	23-07-168	Brake pedal and bushing	5-27-1 to 5-27-35
Body seal	23-31-33 to 23-31-205	Brake pedal bracket	5-31-15 to 5-31-21
Body side stone deflector	12-23-4 to 12-23-5	Brake pedal pad	5-28-8
Body striker	23-08-12 to 23-08-75	Brake pedal pull-back spring	5-34-1
Bolt, drive gear	3-20-1 to 3-20-2	Brake pedal shaft	5-29-1
Bolt, rear spring center	17-14-10	Brake shoe guide adjusting spring	5-25-1 to 5-25-8
Boot, master cylinder	5-40-1 to 5-40-3	Brake tube bracket	5-57-2
Boot, wheel cylinder	5-69-1	Brake tube clip	5-56-2
		Brake tube tee	5-58-1
		Bulb	8-44-1
		Bumper, body	23-32-14 to 23-32-98
		Bumper, body door	23-08-12 to 23-08-75
		Bumper, hood	15-09-4 to 15-09-22
		Bumper, rear spring	17-19-3 to 17-19-10
		Bumper guard	13-68-6 to 13-68-18
		Bushing and Pedal, brake	5-28-8
		Bushing and Roller, universal joint cross	16-10-3
		Button, automatic 3 speed transmission	21-30-28 to 21-30-402
		Button, universal joint centering	16-06-1 to 16-06-3

1959 PASSENGER CAR PARTS LIST

PART NAME	CODE	PART NAME	CODE
C			
Cable, automatic 3 speed transmission	21-30-28 to 21-30-402	Carrier and component parts, Automatic 3 speed transmission low and reverse planet pinion	21-135-9 to 21-135-50
Cable, parking brake control	4-23-1 to 4-23-51	Carrier and component parts, powerflite transmission kickdown planet pinion	21-134-5 to 21-134-40
Cable, speedometer, automatic 3 speed transmission, includes shaft and housing	21-84-1 to 21-84-4	Carrier and component parts, powerflite transmission reverse planet pinion	21-135-5 to 21-135-35
Cable, speedometer, powerflite transmission, includes shaft and housing	21-84-1 to 21-84-4	Carrier and differential, rear axle	3-03-1 to 3-03-31
Cable, speedometer, standard transmission, includes shaft and housing	21-84-1 to 21-84-4	Case, automatic 3 speed transmission	21-03-1
Cable and battery	8-01-4 to 8-01-21	Case, differential	3-04-6 to 3-04-10
Cable and connection	8-16-1 to 8-16-4	Case, powerflite transmission	21-03-1 to 21-03-45
Camshaft	9-15-1 to 9-15-10	Case, standard transmission	21-03-1 to 21-03-24
Camshaft bearing	9-16-6 to 9-16-17	Chain, timing	9-20-1 to 9-20-8
Camshaft sprocket	9-17-5 to 9-17-20	Chain case cover	9-23-5 to 9-23-40
Camshaft sprocket oil seal	9-19-3	Chain case cover plate	9-24-5 to 9-24-7
Cap, crankshaft bearing	9-10-2 to 9-10-22	Channel, glass	23-09-2 to 23-09-82
Cap, fuel tank locking	1-39-2 to 1-39-7	Chassis and body wiring	8-15-2 to 8-15-3
Cap, hub	22-08-5 to 22-08-57	Check, door	23-10-1 to 23-10-17
Cap, radiator filler	7-12-1	Choke, automatic	14-64-2
Carburetor	14-30-1	Cigar lighter	8-20-3 to 8-20-16
Carburetor air cleaner	14-29-2 to 14-29-33	Cigar lighter package	1-12-1
Carburetor heat shield	14-59-1	Clamp, power brake hose	5-112-1
Carburetor lever adapter	14-08-36 to 14-08-37	Cleaner, carburetor air	14-29-2 to 14-29-33
Carrier, space wheel	22-20-29 to 22-20-89	Clip, brake tube	5-56-2
Carrier and component parts, Automatic 3 speed transmission kickdown planet pinion	21-134-5 to 21-134-51	Clip, rear spring	17-15-1 to 17-15-30
		Clock	1-21-1 to 1-21-22
		Clutch	6-01-3
		Clutch, automatic 3 speed transmission	21-133-3 to 21-133-71

PART NAME	CODE	PART NAME	CODE
Clutch, powerflite transmission direct	21-133-5 to 21-133-43	Compressor	24-25-5 to 24-25-261
Clutch cover and pressure plate . . .	6-14-1 to 6-14-10	Condenser	24-27-5 to 24-27-15
Clutch disc	6-13-1 to 6-13-8	Conditioning, Air.	24-01-24 to 24-01-87
Clutch housing	6-09-1	Connecting rod	9-31-4 to 9-31-10
Clutch housing pan	6-10-2	Connecting rod bearing package . . .	9-32-2
Clutch parts, rear axle differential .	3-09-1 to 3-09-2	Connection and cable	8-16-1 to 8-16-4
Clutch pedal	6-38-1 to 6-38-26	Connector, power brake vacuum line .	5-110-18
Clutch pedal pad	6-39-2	Control, air conditioning	24-24-5 to 24-24-160
Clutch pedal rod	6-50-1 to 6-50-12	Control, door lock and remote. . . .	23-18-5 to 23-18-120
Clutch pressure plate	6-15-1	Control, hood lock	15-14-1 to 15-14-13
Clutch pressure spring	6-16-1	Control, horn	8-33-4 to 8-33-165
Clutch release bearing	6-19-2 to 6-19-3	Control, standard transmission overdrive	21-52-5 to 21-52-8
Clutch release bearing pull-back spring	6-20-14	Converter, torque	9-46-4 to 9-46-229
Clutch release fork	6-22-1 to 6-22-19	Core, radiator	7-11-3
Clutch release fork pull-back spring	6-27-5	Countershaft standard transmission .	21-24-2 to 21-24-22
Clutch release fork rod	6-24-1 to 6-24-6	Courtesy lamp	8-11-6 to 8-11-21
Clutch release fork seal	6-23-3	Courtesy lamp rear pocket switch . .	8-11-6
Clutch release lever	6-17-3	Courtesy light	1-14-4 to 1-14-40
Clutch release overcenter spring . .	6-35-1 to 6-35-17	Cover, chain case	9-23-5 to 9-23-40
Clutch torque shaft	6-52-1 to 6-52-19	Cover, standard steering gear housing	19-04-1 to 19-04-13
Coil, ignition	8-35-4 to 8-35-122	Cover, tire	1-116-2
Component parts and carrier, Auto- matic 3 speed transmission low and reverse planet pinion	21-135-1 to 21-135-50	Cover, universal joint dust.	16-07-3 to 16-07-4
Component parts and carrier, Auto- matic 3 speed transmission kickdown planet pinion	21-134-5 to 21-134-51	Cover, valve spring	9-40-1 to 9-40-18
Component parts and carrier, Power- flite transmission kickdown planet	21-134-5 to 21-134-40	Cover, valve tappet	9-40-1 to 9-40-18
Component parts and hot water heater	1-48-1 to 1-48-999	Cowl vent	23-61-20 to 23-61-110

1959 PASSENGER CAR PARTS LIST

ALPHABETICAL
INDEX

PART NAME	CODE	PART NAME	CODE
Crank, throttle control bell.	14-14-1 to 14-14-20	Differential and carrier, rear axle. . .	3-03-1 to 3-03-31
Crankcase breather pipe	10-01-9 to 10-01-21	Differential bearing	3-11-1 to 3-11-14
Crankcase ventilator	10-02-8 to 10-02-17	Differential case	3-04-6 to 3-04-10
Crankshaft	9-07-5 to 9-07-22	Differential pinion.	3-07-1 to 3-07-2
Crankshaft bearing cap	9-10-2 to 9-10-22	Differential pinion set	3-08-1 to 3-08-2
Crankshaft bearing package	9-09-2	Differential side gear	3-06-5 to 3-06-8
Crankshaft rear bearing oil seal . . .	9-11-1 to 9-11-7	Directional lamp.	8-50-82 to 8-50-351
Crankshaft sprocket.	9-08-5	Directional signal actuating switch . .	8-50-98
Crossmember, frame engine rear support	9-69-4 to 9-69-6	Directional signal cancelling switch. .	8-50-125
Crossmember, frame front.	13-11-5	Directional switch	8-50-82
Crossmember, frame rear	13-18-4 to 13-18-32	Disc, clutch	6-13-1 to 6-13-8
Cup, master cylinder piston	5-45-1 to 5-45-8	Distributor	8-27-1 to 8-27-320
Cup, wheel cylinder piston	5-71-1 to 5-71-2	Dome lamp and switch.	8-05-3 to 8-05-33
Cylinder, power steering gear	19-55-1	Door	23-11-1 to 23-11-23
Cylinder, wheel brake.	5-64-1	Door check	23-10-1 to 23-10-17
Cylinder and keys, lock.	23-17-2 to 23-17-72	Door hinge	23-15-1 to 23-15-22
Cylinder block.	9-02-5 to 9-02-16	Door lock and remote control	23-18-5 to 23-18-120
Cylinder head	9-03-4 to 9-03-37	Door regulator	23-14-10 to 23-14-155
Cylinder head water outlet elbow . .	9-05-5 to 9-05-18	Door remote control handle.	23-14-10 to 23-14-155
D		Drain cock, radiator	7-13-2
Damper, virbration	9-13-5 to 9-13-23	Drain trough.	23-59-25 to 23-59-61
Deck Lid	23-19-8 to 23-19-185	Drain trough moulding	23-59-25 to 23-59-61
Deck lid tire cover package	1-02-1	Drive gear and pinion set	3-19-1
Deflector, body side stone	12-23-4 to 12-23-5	Drive gear bolt	3-20-1 to 3-20-2
Deflector, fuel tank stone	14-87-2	Drive pinion bearing.	3-22-24 to 3-22-45
Deflector, radiator stone	7-35-2 to 7-35-16		

1959 PASSENGER CAR PARTS LIST

PART NAME	CODE	PART NAME	CODE	
Front door switch	8-12-2	G		
Front fender	12-01-5			
	to			
	12-01-105		Garnish, moulding	23-22-7
Front fender bracket	12-06-3			to
Front fender liner	12-02-11			23-22-161
	to		Gasket, manifold	9-50-1
	12-02-25			to
Front fender moulding	12-15-2			9-50-6
	to		Gasket, water pump	7-44-3
	12-15-27			to
Front fender name plate	12-15-2			7-44-4
	to		Gasket and stud, exhaust pipe flange .	11-06-2
	12-15-27			to
Front fender plate	12-04-4			11-06-8
	to		Gauge, fuel tank	14-72-1
	12-04-33			to
Front fender shield	12-04-4			14-72-47
	to		Gear, differential side	3-06-5
	12-04-33			to
Front fender side shield brace . . .	12-07-1			3-06-8
	to		Gear, oil pump and distributor drive .	10-10-1
	12-07-3			to
Front seat	23-45-10			10-10-3
	to		Gear, power steering	19-01-8
	23-45-60			to
Front suspension repair package . .	2-15-4			19-01-62
Front suspension torsion parts . . .	2-14-3		Gear, standard steering	19-01-3
	to			to
	2-14-15			19-01-24
Front wheel bearing	22-06-1		Gear, standard transmission	21-10-4
	to			to
	22-06-18			21-10-16
Front wheel tower control arm . . .	2-10-6		Gear, standard transmission clutch .	21-14-1
	to			to
	2-10-79			21-14-20
Front wheel upper control arm . . .	2-08-5		Gear, standard transmission counter-	
	to		shaft	21-15-2
	2-08-75			to
Fuel filter	14-67-1			21-15-33
	to	Gear, standard transmission over-		
	14-67-28	drive	21-54-6	
Fuel line tube	14-89-2		to	
	to		21-54-51	
	14-89-58	Gear, standard transmission over-		
Fuel line tube attaching parts	14-90-1	drive annulus	21-55-2	
Fuel pump	14-73-1		to	
Fuel pump mounting	14-74-1		21-55-16	
	to	Gear, standard transmission re-		
	14-74-2	verse idler	21-11-1	
Fuel pump push rod	14-77-17		to	
Fuel pump to carburetor tube	14-85-1		21-11-9	
Fuel pump to fuel filter tube	14-85-1	Gearshift, standard transmission		
Fuel tank	14-86-1	remote control	21-42-11	
	to		to	
	14-86-85		21-42-43	
Fuel tank dust shield	14-87-2	Gear and pinion, standard trans-		
Fuel tank gauge	14-72-1	mission speedometer	21-85-4	
	to		to	
	14-72-47		21-85-76	
Fuel tank locking cap	1-39-2	Generator	8-28-3	
	to		to	
	1-39-7		8-28-303	
Fuel tank stone deflector	14-87-2	Glass channel	23-09-2	
Fuel tank support	14-88-8		to	
	to		23-09-82	
	14-88-27			

PART NAME	CODE	PART NAME	CODE
Glove box	23-06-4 to 23-06-55	Hood bumper	15-09-4 to 15-09-22
Glove compartment lamp switch . . .	8-38-23	Hood hinge	15-19-2 to 15-19-40
Glove compartment light	1-19-1 to 8-38-23	Hood letters	15-06-3 to 15-06-17
Governor	14-68-3 to 14-68-8	Hood lock	15-11-3 to 15-11-64
Governor, automatic 3 speed trans- mission	21-138-2 to 21-138-38	Hood lock control	15-14-1 to 15-14-13
Governor, powerflite transmission . .	21-138-2 to 21-138-38	Hood lock striker	15-13-2 to 15-13-9
Governor, standard transmission overdrive	21-57-2 to 21-57-15	Hood medallion	15-06-3 to 15-06-17
Grille, radiator	7-16-1 to 7-16-97	Hood moulding	15-25-2 to 15-25-18
Grommet	8-30-1	Hood name plate	15-06-3 to 15-06-17
Guard, bumper	13-68-6 to 13-68-18	Hood top panel	15-03-3 to 15-03-60
Guide, seat	23-47-6 to 23-47-456	Hood top strainer	15-28-10 to 15-28-18
H			
Hand brake signal lamp	1-09-1 8-31-2 to 8-31-16	Horn	8-32-2 to 8-32-108
Handle, door remote control	23-14-10 to 23-14-155	Horn blowing switch	8-33-90
Handle, Jack	13-72-2	Horn control	8-33-4 to 8-33-165
Hanger, frame rear spring	13-54-4 to 13-54-15	Hose, brake flexible	5-62-1 to 5-62-20
Head, cylinder	9-03-4 to 9-03-37	Hose, power brake vacuum	5-111-17
Headlamp	8-34-1 to 8-34-362	Hose, power steering gear	19-58-7 to 19-58-31
Headlamp beam indicator light . . .	8-39-3 to 8-39-15	Hose, radiator	7-14-4 to 7-14-10
Headlamp switch	8-53-270	Hot water heater and component parts	1-48-1 to 1-48-999
Heater over heat switch	1-48-980	Housing, clutch	6-09-1
Heater switch	1-48-770	Housing, power steering gear	19-02-4 to 19-02-69
Hinge, door	23-15-1 to 23-15-22	Housing, rear axle	3-02-1 to 3-02-20
Hinge, hood	15-19-2 to 15-19-40	Housing, standard steering gear . . .	19-02-4 to 19-02-18
		Housing, standard transmission gearshift	21-29-3 to 21-29-25

1959 PASSENGER CAR PARTS LIST

PART NAME	CODE	PART NAME	CODE
Housing, water pump	7-43-1 to 7-43-14	Insulator, engine front support. . . .	9-67-4 to 9-67-23
Housing and insulator, propeller shaft center bearing	16-17-1	Insulator, engine rear support	9-71-5
Housing and shaft automatic 3 speed transmission speedometer cable, includes	21-84-1 to 21-84-4	Insulator and housing, propeller shaft center bearing	16-17-1
Housing and shaft, powerlite transmission speedometer cable includes	21-84-1 to 21-84-4	Intake, air	23-61-20 to 23-61-110
Housing and shaft, standard transmission speedometer cable, includes	21-84-1 to 21-84-4	Intake valve	9-39-1 to 9-39-5
Hub, fan pulley	7-05-1	Internal parts and housing, standard transmission overdrive unit.	21-51-4 to 21-51-20
Hub, water pump	7-05-1	J	
Hub, wheel	22-05-1 to 22-05-14	Jack	13-72-1
Hub and brake drum	22-03-1 to 22-03-2	Jack Handle	13-72-2
Hub cap	22-08-5 to 22-08-57	Jacket, power steering column.	19-31-1 to 19-31-24
I		Jacket, power steering gear column	19-14-1 to 19-14-38
Ignition coil	8-35-4 to 8-35-122	Jacket, standard steering gear column	19-14-1 to 19-14-71
Ignition switch.	8-35-59	Joint, throttle linkage rod ball.	14-13-1
Ignition switch and lock cylinder.	8-35-4 to 8-35-122	Joint, universal	16-03-1 to 16-03-20
Ignition wiring.	8-36-1 to 8-36-124	K	
Impeller and shaft, water pump	7-45-2 to 7-45-31	Keys and cylinder, lock	23-17-2 to 23-17-72
Indicator, oil level	10-03-4 to 10-03-10	Knuckle, steering	2-03-3
Instrument lamp switch.	8-53-210 to 8-53-270	L	
Instrument panel	23-33-10 to 23-33-231	Lamp, back-up.	1-101-1 8-56-59
Instrument panel instruments.	8-37-1 to 8-37-509	Lamp, courtesy	8-11-6 to 8-11-21
Instrument panel light	8-41-36	Lamp, directional	8-50-82 to 8-50-351
Instrument panel wiring	8-19-3	Lamp, hand brake signal.	1-09-1 8-31-2 to 8-31-16
Instruments, instrument panel	8-37-1 to 8-37-509	Lamp, license plate.	8-57-10 to 8-57-79
Insulator, body.	23-31-33 to 23-31-205	Lamp, map	8-42-25
		Lamp, parking.	8-50-82 to 8-50-351
		Lamp, quarter.	8-11-6 to 8-11-21
		Lamp, stop	8-58-35
		Lamp, tail and stop.	8-55-7 to 8-55-375

PART NAME	CODE	PART NAME	CODE
Lamp, trunk	8-13-1 to 8-13-19	Light, underhood	1-13-1 to 1-13-10
Lamp, trunk compartment	1-30-1	Lighter, cigar	8-20-3 to 8-20-16
Lamp and switch, dome	8-05-3 to 8-05-33	Liner, body	23-31-33 to 23-31-205
Leaf, rear spring	17-12-4 to 17-12-12	Liner, front fender	12-02-11 to 12-02-25
Letters, hood	15-06-3 to 15-06-17	Lining, wheel brake	5-03-1 to 5-03-23
Lever, automatic 3 speed transmission control	21-142-5 to 21-142-12	Lock, hood	15-11-3 to 15-11-64
Lever, automatic 3 speed transmission gearshift	21-30-28 to 21-30-402	Lock cylinder and keys	23-17-2 to 23-17-72
Lever, clutch release	6-17-3	Lock cylinder and switch, ignition . .	8-35-4 to 8-35-122
Lever, parking brake	4-08-1 to 4-08-36	Low oil pressure switch	8-53-327
Lever, parking brake operating . . .	4-26-1 to 4-26-23	M	
Lever, powerflite transmission control	21-142-12 to 21-142-21	Manifold	9-48-6 to 9-48-138
Lever, powerflite transmission gearshift	21-30-28 to 21-30-394	Manifold gasket	9-50-1 to 9-50-6
Lever, standard transmission gearshift	21-30-2 to 21-30-107	Manifold heat control valve	9-59-5 to 9-59-15
Lever, standard transmission over- drive control	21-60-3 to 21-60-5	Manifold heat control valve stop . . .	9-62-1 to 9-62-6
License mounting parts	8-47-8 to 8-47-126	Manifold heat control valve thermostat	9-58-1 to 9-58-14
License plate lamp	8-57-10 to 8-57-79	Map lamp	8-42-25
Lid, deck	23-19-8 to 23-19-185	Map lamp socket and cable switch . .	8-42-25
Lift, window (electric)	23-41-4 to 23-41-280	Map light	1-14-4 to 1-14-40
Lift, window (manual)	23-39-2 to 23-39-53	Master cylinder boot	5-40-1 to 5-40-3
Light, courtesy	1-14-4 to 1-14-40	Master cylinder brake tube	5-52-3 to 5-52-62
Light, glove compartment	1-19-1	Master cylinder piston	5-44-3 to 5-44-8
Light, headlamp beam indicator . . .	8-38-23 to 8-39-3	Master cylinder piston cup	5-45-1 to 5-45-8
Light, instrument panel	8-39-15	Master cylinder piston push rod . . .	5-47-2 to 5-47-10
Light, map	8-41-36 to 1-14-4	Master cylinder piston return spring	5-46-1
	1-14-40	Master cylinder reinforcement	5-42-1
		Master cylinder valve	5-43-1 to 5-43-5

1959 PASSENGER CAR PARTS LIST

PART NAME	CODE	PART NAME	CODE
Mat, floor	23-20-8 to 23-20-41	Oil level indicator	10-03-4 to 10-03-10
Medallion, hood	15-06-3 to 15-06-17	Oil pan	10-24-1 to 10-24-37
Medallion, radiator grille	7-17-1 to 7-17-5	Oil pressure relief valve	10-22-8 to 10-22-41
Mirror	1-76-1 to 1-76-22	Oil pump	10-07-3 to 10-07-12
Motor, starting	23-28-8 to 23-28-47	Oil pump and distributor drive gear	10-10-1 to 10-10-3
Motor driven radio antenna switch	8-52-4 to 8-52-409	Oil pump drive shaft	10-09-1 to 10-09-7
Moulding, drain trough	1-88-205 23-59-25 to 23-59-61	Oil pump outlet pipe	10-16-4
Moulding, front fender	12-15-2 to 12-15-27	Oil pump rotor	10-14-18 to 10-14-19
Moulding, garnish	23-22-7 to 23-22-161	Oil strainer	10-23-7
Moulding, hood	15-25-2 to 15-25-18	Outside finish moulding	23-23-2 to 23-23-85
Moulding, outside finish	23-23-2 to 23-23-85	P	
Mounting, fuel pump	14-74-1 to 14-74-2	Package, automatic 3 speed trans- mission	21-01-3
Mounting parts, license	8-47-8 to 8-47-126	Package, cigar lighter	1-12-1
Muffler	11-01-1 to 11-01-17	Package, connecting rod bearing	9-32-2
Muffler support	11-02-1 to 11-02-17	Package, crankshaft bearing	9-09-2
N		Package, deck lid tire cover	1-02-1
Nipple, water pump	7-48-22	Package, front suspension repair	2-15-4
O		Package, powerflite transmission	21-01-3
Oil filter	10-26-1 to 10-26-65	Package, standard transmission	21-01-3
Oil filter tube	10-27-1	Package, wheel cylinder	5-63-1 to 5-63-3
Oil gauge hose	10-05-7 to 10-05-19	Pad, body	23-31-33 to 23-31-205
Oil gauge tube	10-05-7 to 10-05-19	Pad, brake pedal	5-28-8
Oil gauge tube or hose	10-05-7 to 10-05-19	Pad, clutch pedal	6-39-2
		Pan, automatic 3 speed transmission oil	21-119-3 to 21-119-19
		Pan, body	23-32-14 to 23-32-98
		Pan, clutch housing	6-10-2
		Pan, oil	10-24-1 to 10-24-37
		Pan, powerflite transmission oil	21-119-3 to 21-119-19
		Panel, body	23-34-20 to 23-34-345
		Panel, hood top	15-03-3 to 15-03-60

PART NAME	CODE	PART NAME	CODE
Parking brake (foot operated)	4-25-1 to 4-25-15	Pinion, powerlite transmission speedometer	21-85-5 to 21-85-76
Parking brake adjuster	4-07-1 to 4-07-28	Pinion, standard transmission main drive	21-09-2 to 21-09-33
Parking brake band	4-03-1 to 4-03-11	Pipe, crankcase breather	10-01-9 to 10-01-21
Parking brake control cable	4-23-1 to 4-23-51	Pipe, exhaust	11-05-1 to 11-05-4
Parking brake drum	4-01-1	Pipe, oil pump outlet	10-16-4
Parking brake lever	4-08-1 to 4-08-36	Pipe, tail	11-09-1 to 11-09-9
Parking brake lever arm	4-18-2	Piston, master cylinder	5-44-3 to 5-44-8
Parking brake lever pawl	4-13-6 to 4-13-10	Piston, power steering gear	19-56-6 to 19-56-90
Parking brake lever return spring	4-19-1 to 4-19-4	Piston, wheel cylinder	5-70-1
Parking brake operating lever	4-26-1 to 4-26-23	Piston pin	9-36-5 to 9-36-7
Parking brake shoe	4-03-1 to 4-03-11	Piston w/pin	9-34-5 to 9-34-6
Parking brake shoe anchor	4-06-1 to 4-06-11	Piston ring set	9-35-1
Parking brake support	4-29-1 to 4-29-16	Plate, chain case cover	9-24-5 to 9-24-7
Parking lamp	8-50-82 to 8-50-351	Plate, clutch cover and pressure	6-14-1 to 6-14-10
Parts, fuel line tube attaching	14-90-1	Plate, clutch pressure	6-15-1
Pawl, parking brake lever	4-13-6 to 4-13-10	Plate, front fender	12-04-4 to 12-04-33
Pedal, accelerator	14-01-1 to 14-01-22	Plate, front fender name	12-15-2 to 12-15-27
Pedal, clutch	6-38-1 to 6-38-26	Plate, hood name	15-06-3 to 15-06-17
Pedal and bushing, brake	5-27-1 to 5-27-35	Plug, body	23-32-14 to 23-32-98
Pillar, body	23-36-5 to 23-36-126	Plug, spark	8-36-1 to 8-36-124
Pilot, automatic	14-02-3 to 14-02-38	Power brake	1-42-1
Pin, piston	9-36-5 to 9-36-7	Power brake air cleaner	5-113-17
Pinion, automatic 3 speed trans- mission speedometer	21-85-5 to 21-85-76	Power brake hose clamp	5-112-1
Pinion, differential	3-07-1 to 3-07-2	Power brake power unit	5-100-1 to 5-100-210
		Power brake tube	5-107-21
		Power brake vacuum hose	5-111-17
		Power brake vacuum line connector	5-110-18
		Power brake vacuum tank	5-102-2 to 5-102-10
		Power brake vacuum tank check valve	5-105-1

1959 PASSENGER CAR PARTS LIST

ALPHABETICAL
INDEX

PART NAME	CODE	PART NAME	CODE
Powerflite transmission	21-02-1 to 21-02-6	Powerflite transmission speedometer cable includes shaft and housing . .	21-84-1 to 21-84-4
Powerflite transmission band	2-136-5 to 21-136-52	Powerflite transmission speedometer pinion	21-85-5 to 21-85-7
Powerflite transmission case	21-03-1 to 21-03-45	Powerflite transmission valve body and valves	21-139-4 to 21-139-193
Powerflite transmission case extension	21-04-1 to 21-04-2	Power steering column jacket	19-31-1 to 19-31-24
Powerflite transmission control lever	21-142-12 to 21-142-21	Power steering gear	19-01-8 to 19-01-62
Powerflite transmission direct clutch	21-133-5 to 21-133-43	Power steering gear arm and idler arm	19-27-2 to 19-27-55
Powerflite transmission gearshift lever	21-30-28 to 21-30-394	Power steering gear column jacket .	19-14-1 to 19-14-38
Powerflite transmission governor . .	21-138-2 to 21-138-38	Power steering gear cylinder	19-55-1
Powerflite transmission input shaft and torque convertor reaction shaft .	21-129-5 to 21-129-23	Power steering gear hose	19-58-7 to 19-58-31
Powerflite transmission kickdown planet pinion carrier and component parts	21-134-5 to 21-134-40	Power steering gear housing	19-02-4 to 19-02-69
Powerflite transmission neutral starter switch	21-113-24 to 21-113-29	Power steering gear piston	19-56-6 to 19-56-90
Powerflite transmission oil pan . . .	21-119-3 to 21-119-19	Power steering gear shaft and roller tooth	19-19-4 to 19-19-72
Powerflite transmission oil pump . .	21-118-6 to 21-118-50	Power steering gear tube and worm.	19-15-2 to 19-15-69
Powerflite transmission oil pump strainer	21-117-1 to 21-117-24	Power steering gear valve	19-57-3 to 19-57-64
Powerflite transmission output shaft.	21-05-1 to 21-05-26	Power steering gearshift control rod	19-48-1
Powerflite transmission package . . .	21-01-3	Power steering oil pump	19-54-2 to 19-54-248
Powerflite transmission regulator valve body and valves	21-131-1 to 21-131-50	Power steering wheel	19-30-4 to 19-30-18
Powerflite transmission reverse planet pinion carrier and component parts	21-135-5 to 21-135-35	Quarter lamp	8-11-6 to 8-11-21
Powerflite transmission servo	21-137-5 to 21-137-59	Propeller shaft	16-02-1 to 16-02-5
Powerflite transmission set	21-01-3	Propeller shaft center bearing	16-16-1 to 16-16-47
		Propeller shaft center bearing housing and insulator	16-17-1
		Propeller shaft flange	16-20-1 to 16-20-3

1959 PASSENGER CAR PARTS LIST

ALPHABETICAL
INDEX

PART NAME	CODE	PART NAME	CODE
Rocker, valve	9-43-1 to 9-43-26	Seal, crankshaft rear bearing oil . . .	9-11-1 to 9-11-7
Rod, accelerator pedal to accelerator shaft	14-07-1 to 14-07-18	Seal, drive shaft oil	3-35-14
Rod, automatic choke to carburetor .	14-65-4	Seal, standard transmission main shaft rear bearing oil	21-22-2
Rod, clutch release fork	6-24-1 to 6-24-6	Seal, water pump	7-46-1 to 7-46-10
Rod, clutch pedal	6-50-1 to 6-50-12	Seal, wheel brake adjusting cam dust shield	5-22-8
Rod, fuel pump push	14-77-17	Seat adjuster	23-47-6 to 23-47-456
Rod, master cylinder piston push . .	5-47-2 to 5-47-10	Seat, front	23-45-10 to 23-45-60
Rod, power steering gearshift control	19-48-1	Seat guide	23-47-6 to 23-47-456
Rod, standard gearshift.	19-48-1 to 19-48-23	Seat, second	23-48-6 to 23-48-188
Rod, standard steering	19-46-3 to 19-46-55	Seat, third	23-48-6 to 23-48-188
Rod, steering knuckle tie.	2-07-1 to 2-07-28	Second seat	23-48-6 to 23-48-188
Rod, throttle lever interconnecting. .	14-15-3 to 14-15-10	Servos, automatic 3 speed transmission	21-137-5 to 21-137-208
Rod, valve push	9-42-1	Servos, powerflite transmission . . .	21-137-5 to 21-137-59
Rod, wheel cylinder piston push . . .	5-12-1	Set, automatic 3 speed transmission .	21-01-3
Roller, transmission countershaft free wheeling cam.	21-49-3 to 21-49-21	Set, differential pinion	3-08-1 to 3-08-2
Roller and bushing, universal joint cross	16-10-3	Set, drive gear and pinion	3-19-1
Roller tooth and shaft, power steering gear.	19-19-4 to 19-19-72	Set, piston ring	9-35-1
Roller tooth and shaft, standard steering gear.	19-19-4 to 19-19-40	Set, powerflite transmission	21-01-3
Roof rail and luggage rack.	23-40-85 to 23-40-194	Set, standard transmission	21-01-3
Roof rail dome lamp switch	8-05-14	Shackle, rear spring	17-16-1
Rotor, oil pump	10-14-18 to 10-14-19	Shaft, accelerator	14-11-1 to 14-11-48
Run, window glass	23-42-6 to 23-42-57	Shaft, automatic 3 speed transmission input	21-129-5 to 21-129-33
S		Shaft, automatic 3 speed transmission intermediate	21-129-5 to 21-129-33
Screw, wheel cylinder bleeder	5-67-1	Shaft, automatic 3 speed transmission output	21-05-1 to 21-05-35
Seal, body	23-31-33 to 23-31-205	Shaft, automatic 3 speed transmission torque converter reaction	21-129-5 to 21-129-33
Seal, camshaft sprocket oil	9-19-3	Shaft, brake pedal	5-29-1
Seal, clutch release	6-23-3	Shaft, clutch torque	6-52-1 to 6-52-19

PART NAME	CODE	PART NAME	CODE
Shaft, drive	3-32-1 to 3-32-9	Shroud, fan	7-08-2 to 7-08-16
Shaft, oil pump drive	10-09-1 to 10-09-7	Side sill and belt bar	23-51-5 to 23-51-41
Shaft, powerlite transmission input shaft and torque converter reaction	21-129-5 to 21-129-23	Solenoid, standard transmission overdrive kickdown	21-68-2 to 21-68-41
Shaft, powerlite transmission output	21-05-1 to 21-05-26	Solenoid switch	8-52-330
Shaft, propeller	16-02-1 to 16-02-5	Space wheel carrier	22-20-29 to 22-20-89
Shaft, standard transmission overdrive control	21-59-1 to 21-59-10	Spark plug	8-36-1 to 8-36-124
Shaft, standard transmission main . .	21-16-3	Spline, propeller shaft	16-14-1 to 16-14-9
Shaft, standard transmission overdrive main	21-53-4 to 21-53-61	Spotlight	1-108-1 to 1-108-49
Shaft, standard transmission reverse idler	21-12-1 to 21-12-2	Spring, accelerator pedal return . . .	14-06-1 to 14-06-10
Shaft, sway eliminator	17-29-5 to 17-29-21	Spring, brake pedal pull-back	5-34-1
Shaft and impeller, water pump . . .	7-45-2 to 7-45-31	Spring, brake shoe guide adjusting . .	5-25-1 to 5-25-8
Shaft and roller tooth, power steering gear	19-19-4 to 19-19-72	Spring, clutch pressure	6-16-1
Shaft and roller tooth, standard steering gear	19-19-4 to 19-19-40	Spring, clutch release bearing pull-back	6-20-14
Shield, battery heat	13-35-1	Spring, clutch release fork pull-back.	6-27-5
Shield, carburetor heat	14-59-1	Spring, clutch release overcenter spring	6-35-1 to 6-35-17
Shield, front fender	12-04-4 to 12-04-33	Spring, master cylinder piston return	5-46-1
Shield, fuel tank dust	14-87-2	Spring, parking brake lever return . .	4-19-1 to 4-19-4
Shield, radiator	7-31-10 to 7-31-43	Spring, rear	17-11-1 to 17-11-10
Shield, rear fender stone	12-23-4 to 12-23-5	Sprocket, camshaft	9-17-5 to 9-17-20
Shield, wheel brake dust	5-16-1	Sprocket, crankshaft	9-08-5
Shock absorber	17-23-3 to 17-23-56	Standard gearshift control rod	19-48-1 to 19-48-23
Shock absorber bracket	17-24-28	Standard gearshift rod	19-46-3 to 19-46-55
Shoe, parking brake	4-03-1 to 4-03-11	Standard gearshift tube	19-46-3 to 19-46-55
Shoe, wheel brake	5-03-1 to 5-03-23	Standard steering column bracket . .	19-31-1 to 19-31-24
		Standard steering gear	19-01-3 to 19-01-24
		Standard steering gear arm and idler arm	19-27-2 to 19-27-55

1959 PASSENGER CAR PARTS LIST

ALPHABETICAL
INDEX

PART NAME	CODE	PART NAME	CODE
Standard steering gear column jacket	19-14-1 to 19-14-71	Standard transmission main drive pinion	21-09-2 to 21-09-33
Standard steering gear grease retaining tube	19-13-4 to 19-13-6	Standard transmission main shaft	21-16-3
Standard steering gear housing	19-02-4 to 19-02-18	Standard transmission main shaft pilot bearing	21-17-2 to 21-17-7
Standard steering gear housing cover	19-04-1 to 19-04-13	Standard transmission main shaft rear bearing	21-19-2 to 21-19-20
Standard steering gear shaft and roller tooth	19-19-4 to 19-19-40	Standard transmission main shaft rear bearing oil seal	21-22-2
Standard steering gear tube and worm	19-15-3 to 19-15-63	Standard transmission overdrive annulus gear	21-55-16
Standard steering wheel	19-30-4 to 19-30-18	Standard transmission overdrive control	21-52-5 to 21-52-8
Standard transmission	21-02-1	Standard transmission overdrive control lever	21-60-3 to 21-60-5
Standard transmission case	21-03-1 to 21-03-24	Standard transmission overdrive control shaft	21-59-1 to 21-59-10
Standard transmission case extension	21-04-1 to 21-04-12	Standard transmission overdrive gear	21-54-6 to 21-54-51
Standard transmission clutch gear	21-14-1 to 21-14-20	Standard transmission overdrive governor	21-57-2 to 21-57-15
Standard transmission countershaft	21-24-2 to 21-24-22	Standard transmission overdrive kickdown solenoid	21-68-2 to 21-68-41
Standard transmission countershaft bearing	21-25-2 to 21-25-6	Standard Transmission overdrive kickdown solenoid relay	21-69-2 to 21-69-5
Standard transmission countershaft gear	21-15-2 to 21-15-33	Standard transmission overdrive main shaft	21-53-4 to 21-53-61
Standard transmission free wheeling	21-48-1 to 21-48-11	Standard transmission overdrive shifting fork and rail	21-66-2 to 21-66-45
Standard transmission gear	21-10-4	Standard transmission overdrive switch	21-68-18
Standard transmission gearshift fork	21-39-3 to 21-10-16	Standard transmission overdrive unit housing and internal parts	21-51-4 to 21-51-20
Standard transmission gearshift housing	21-29-3 to 21-29-25	Standard transmission package	21-01-3
Standard transmission gearshift lever	21-30-2 to 21-30-107	Standard transmission remote control gearshift	21-42-11 to 21-42-43
Standard transmission gearshift rail	21-34-42 to 21-34-47	Standard transmission reverse idler gear	21-11-1 to 21-11-9

PART NAME	CODE	PART NAME	CODE
Standard transmission reverse idler shaft	21-12-1 to 21-12-2	Support and clamp, exhaust pipe.	11-08-1 to 11-08-23
Standard transmission set	21-01-3	Suspension, air.	25-01-1 to 25-01-21
Standard transmission speedometer cable, includes shaft and housing	21-84-1 to 21-84-4	Sway eliminator shaft.	17-29-5 to 17-29-21
Standard transmission speedometer gear and pinion	21-85-4 to 21-85-76	Switch, automatic lamp door	8-12-2
Starter switch	8-35-59	Switch, automatic 3 speed transmission neutral starter	21-113-24 to 21-113-29
Starting motor	8-52-4 to 8-52-409	Switch, courtesy lamp rear pocket	8-11-6
Steering knuckle	2-03-3	Switch, directional	8-50-82
Steering knuckle tie rod	2-07-1 to 2-07-28	Switch, directional signal actuating	8-50-98
Steering linkage knuckle arm	2-05-4	Switch, directional signal cancelling	8-50-125
Stop, manifold heat control valve	9-62-1 to 9-62-6	Switch, foot dimmer.	8-53-150
Stop lamp	8-58-35	Switch, front door	8-12-2
Strainer, automatic 3 speed transmission oil pump	21-117-1 to 21-117-10	Switch, glove compartment lamp.	8-38-23
Strainer, hood top	15-28-10 to 15-28-18	Switch, headlamp	8-53-270
Strainer, oil	10-23-7	Switch, heater	1-48-770
Strainer, powerflite transmission oil pump	21-117-1 to 21-117-24	Switch, heater over heat	1-48-980
Strap, battery hold-down	13-34-3	Switch, horn blowing	8-33-90
Striker, body	23-08-12 to 23-08-75	Switch, ignition	8-35-59
Striker, hood lock	15-13-2 to 15-13-9	Switch, instrument lamp	8-53-210 to 8-53-270
Strut, rear axle control	3-01-25 to 3-01-35	Switch, low oil pressure	8-53-327
Stud, battery hold-down	13-36-5	Switch, map lamp socket and cable	8-42-25
Stud and gasket, exhaust pipe flange.	11-06-2 to 11-06-8	Switch, motor driven radio antenna	1-88-205
Support, engine front	9-64-24	Switch, powerflite transmission neutral starter.	21-113-24 to 21-113-29
Support, frame front bumper.	13-03-21	Switch, radio foot selector	1-87-5
Support, fuel tank	14-88-8 to 14-88-27	Switch, rear door	8-12-2
Support, muffler	11-02-1 to 11-02-17	Switch, rear pocket panel.	8-11-6
Support, parking brake	4-29-1 to 4-29-16	Switch, rear shelf radio speaker fader	1-87-289
Support, tail pipe	11-10-1 to 11-10-42	Switch, rear window defroster	1-48-300
Support, wheel brake	5-13-1 to 5-13-10	Switch, roof rail dome lamp.	8-05-14
		Switch, solenoid	8-52-330
		Switch, standard transmission overdrive	21-68-18
		Switch, starter.	8-35-59
		Switch, trunk lamp	8-13-2
		Switch, windshield washer wiper.	1-82-14
		Switch and lamp, dome	8-05-3 to 8-05-33
		Switch and lock cylinder, ignition	8-35-4 to 8-35-122
		Switch and plate, directional signal contact	8-50-135
		Switches	8-53-150 to 8-53-327
		System, exhaust	1-31-5

1959 PASSENGER CAR PARTS LIST

ALPHABETICAL
INDEX

PART NAME	CODE	PART NAME	CODE
T			
Tail and stop lamp	8-55-7 to 8-55-375	Transmission, standard	21-02-1
Tail pipe	11-09-1 to 11-09-9	Tray, battery support	13-33-61 to 13-33-64
Tail pipe support	11-10-1 11-10-42	Trim finish	23-26-2 to 23-26-81
Tailgate	23-54-1 to 23-54-212	Trough, drain	23-59-25 to 23-59-61
Tank, fuel	14-86-1 to 14-86-85	Trunk compartment lamp	1-30-1
Tank, power brake vacuum	5-102-2 to 5-102-10	Trunk lamp	8-13-1 to 8-13-19
Tank, receiver	24-26-5 to 24-26-100	Trunk lamp switch	8-13-2
Tappet, valve	9-41-1 to 9-41-12	Tube, oil filter	10-27-1
Tee, brake tube	5-58-1	Tube, frame brake	5-53-3 to 5-53-34
Terminal block	8-21-1 to 8-21-11	Tube, fuel line	14-89-2 to 14-89-58
Thermostat	7-41-4	Tube, fuel pump to carburetor	14-85-1
Thermostat, manifold heat control valve	9-58-1 to 9-58-14	Tube, fuel pump to fuel filter	14-85-1
Throttle control bell crank	14-14-1 to 14-14-20	Tube, master cylinder brake	5-52-3 to 5-52-62
Throttle lever interconnecting rod	14-15-3 to 14-15-10	Tube, power brake	5-107-21
Throttle linkage rod ball joint	14-13-1	Tube, rear axle brake	5-54-1
Third seat	23-48-6 to 23-48-188	Tube, standard gearshift	19-46-3 to 19-46-55
Timing chain	9-20-1 to 9-20-8	Tube, standard steering gear grease retaining	19-13-4 to 19-13-6
Tire cover	1-116-2	Tube, wheel cylinder connecting	5-55-1
Toe board	23-04-2 23-04-253	Tube and worm, power steering gear	19-15-2 to 19-15-69
Top, folding	23-58-3 to 23-58-607	Tube and worm, standard steering gear	19-15-3 to 19-15-63
Torque converter	9-46-4 to 9-46-229	Tubing, refrigerant	24-26-5 to 24-26-100
Torsion parts, front suspension	2-14-3 to 2-14-15	U	
Transmission, automatic 3 speed	21-02-1 to 21-02-6	Underhood light	1-13-1 to 1-13-10
Transmission countershaft free wheeling cam roller	21-49-3 to 21-49-21	Unit, evaporator	24-28-3 to 24-28-367
Transmission, powerflite	21-02-1 to 21-02-6	Unit, fan drive	7-07-1
		Unit, power brake power	5-100-1 to 5-100-210
		Universal joint	16-03-1 to 16-03-20
		Universal joint body	16-04-1
		Universal joint centering button	16-06-1 to 16-06-3
		Universal joint cross roller and bushing	16-10-3
		Universal joint dust cover	16-07-3 to 16-07-4

PART NAME	CODE	PART NAME	CODE
V			
Valve, exhaust	9-39-6 to 9-39-21	Water pump shaft and impeller	7-45-2 to 7-45-31
Valve, intake	9-39-1 to 9-39-5	Weatherstrip	23-63-14 to 23-63-181
Valve, manifold heat control valve	9-59-5 to 9-59-15	Weight, wheel balance	22-09-1
Valve, master cylinder	5-43-1 to 5-43-5	Wheel	22-01-5 to 22-01-52
Valve, oil pressure relief	10-22-8 to 10-22-41	Wheel, power steering	19-30-4 to 19-30-18
Valve, power brake vacuum tank check	5-105-1	Wheel, standard steering	19-30-4 to 19-30-18
Valve, power steering gear	19-57-3 to 19-57-64	Wheel balance weight	22-09-1
Valve push rod	9-42-1	Wheel brake adjusting cam dust shield seal	5-22-8 5-64-1
Valve rocker	9-43-1 to 9-43-26	Wheel brake cylinder	5-16-1
Valve spring cover	9-40-1 to 9-40-18	Wheel brake dust shield	5-03-1 to 5-03-23
Valve tappet	9-41-1 to 9-41-12	Wheel brake lining	5-03-1 to 5-03-23
Valve tappet cover	9-40-1 to 9-40-18	Wheel brake shoe	5-03-1 to 5-03-23
Vent, cowl	23-61-20 to 23-61-110	Wheel brake support	5-13-1 to 5-13-10
Vent wing	23-64-4 to 23-64-314	Wheel cylinder bleeder screw	5-67-1
Ventilator crankcase	10-02-8 to 10-02-17	Wheel cylinder boot	5-69-1
Vibration damper	9-13-5 to 9-13-23	Wheel cylinder connecting tube	5-55-1
Visor	1-32-2	Wheel cylinder package	5-63-1 to 5-63-3
W			
Washer, windshield	1-82-2 to 1-82-38	Wheel cylinder piston	5-70-1
Water pump	7-42-1 to 7-42-4	Wheel cylinder piston cup	5-71-1 to 5-71-2
Water pump elbow	7-48-22	Wheel cylinder piston cup expander	5-72-1
Water pump gasket	7-44-3 to 7-44-4	Wheel cylinder piston push rod	5-12-1
Water pump housing	7-43-1 to 7-43-14	Wheel hub	22-05-1 to 22-05-14
Water pump hub	7-05-1	Wheeling, standard transmission free	21-48-1 to 21-48-11
Water pump nipple	7-48-22	Window	23-64-4 to 23-64-314
Water pump seal	7-46-1 to 7-46-10	Window glass run	23-42-6 to 23-42-57
		Window lift (electric)	23-41-4 to 23-41-280
		Window lift (manual)	23-39-2 to 23-39-53
		Windshield	23-66-74 to 23-66-235
		Windshield washer	1-82-2 to 1-82-38
		Windshield washer wiper switch	1-82-14

