

PART NAME	CODE	PART NAME	CODE
-----------	------	-----------	------

ALPHABETICAL INDEX

A

Absorber, shock	17-23-3 to 17-23-57	Ash receiver	23-02-1 to 23-02-150
Accelerator pedal	14-01-1 to 14-01-22	Automatic choke to carburetor rod . .	14-65-4
Accelerator pedal return spring . . .	14-06-1 to 14-06-10	Automatic head lamp dimmer	1-04-4 to 1-04-19
Accelerator pedal to accelerator shaft rod	14-07-1 to 14-07-18	Automatic lamp door switch	8-12-2 to 8-12-3
Accelerator shaft	14-11-1 to 14-11-48	Automatic 3 speed transmission	14-02-2 to 14-02-39
Actuator	24-29-1	Automatic 3 speed transmission	21-02-1 to 21-02-6
Actuator, switch	1-82-41	Automatic 3 speed transmission band .	21-136-5 to 21-136-23C
Adjustor, parking brake	4-07-1 to 4-07-28	Automatic 3 speed transmission button	21-30-28 to 21-30-394
Adjustor, front seat	23-47-6 to 23-47-457	Automatic 3 speed transmission cable	21-30-28 to 21-30-394
Air Cleaner, carburetor	14-29-2 to 14-29-33	Automatic 3 speed transmission case .	21-05-1
Air Cleaner, power brake	5-113-17	Automatic 3 speed transmission case extension	21-04-1 to 21-04-11
Air conditioning	24-01-24 to 24-01-37	Automatic 3 speed transmission	21-142-12 to 21-142-21
Air conditioning control	24-24-5 to 24-24-166	Automatic 3 speed transmission clutch	21-133-3 to 21-133-71
Air intake	23-61-39 to 23-61-119	Automatic 3 speed transmission governor	21-138-2 to 21-138-38
Anchor, parking brake shoe	4-06-1 to 4-06-11	Automatic 3 speed transmission input shaft	21-129-5 to 21-129-33
Antenna, radio	1-88-1 to 1-88-230	Automatic 3 speed transmission intermediate shaft	21-129-5 to 21-129-33
Anti-squeak, body	23-31-33 to 23-31-205	Automatic 3 speed transmission low kickdown planet pinion carrier and component parts	21-134-5 to 21-134-51
Arm, front wheel lower control	2-10-6 to 2-10-76	Automatic 3 speed transmission low and reverse planet pinion carrier and component parts	21-135-9 to 21-135-50
Arm, front wheel upper control	2-08-5 to 2-08-75	Automatic 3 speed transmission neutral starter switch	21-113-24 to 21-113-29
Arm, steering linkage knuckle	2-05-4		
Arm and idler arm, power steering . .	19-27-2 to 19-27-55		
Arm and idler arm, standard steering gear	19-27-2 to 19-27-55		

1960 PASSENGER CAR PARTS CATALOG

PART NAME	CODE	PART NAME	CODE
Automatic 3 speed transmission oil pan	21-119-3 to 21-119-19	Bar, side sill and belt	23-51-5 to 23-51-41
Automatic 3 speed transmission oil pump	21-118-1 to 21-118-45	Battery and cable	8-01-4 to 8-01-21
Automatic 3 speed transmission oil pump strainer	21-117-1 to 21-117-10	Battery hold-down strap	13-34-3
Automatic 3 speed transmission output shaft	21-05-1 to 21-05-35	Battery hold-down stud	13-36-5 to 13-33-64
Automatic 3 speed transmission package	21-01-3	Bearing, camshaft	9-16-6 to 9-16-17
Automatic 3 speed transmission regulator valve body and valves	21-131-5 to 21-131-50	Bearing, clutch release	6-19-2 to 6-19-3
Automatic 3 speed transmission servos	21-137-5 to 21-137-205	Bearing, differential	3-11-1 to 3-11-14
Automatic 3 speed transmission set	21-01-3	Bearing, drive pinion	3-22-24 to 3-22-45
Automatic 3 speed transmission speedometer cable, includes shaft and housing	21-84-1 to 21-84-4	Bearing, drive shaft	3-33-1 to 3-33-4
Automatic 3 speed transmission speedometer pinion	21-85-5 to 21-85-70	Bearing, front wheel	22-06-1 to 22-06-18
Automatic 3 speed transmission torque converter reaction shaft	21-129-5 to 21-129-33	Bearing, propeller shaft center to	16-16-1 to 16-16-47
Automatic 3 speed transmission valve body and valves	21-139-4 to 21-139-213	Bearing, standard transmission countershaft	21-25-2 to 21-25-0
B		Bearing, standard transmission main shaft pilot	21-17-2 to 21-17-7
Back-Up lamp	8-56-1 to 8-56-66	Bearing, standard transmission main shaft rear	21-19-2
Back-Up lamp	1-10-1	Belt, fan and related drive	7-03-1
Band, Automatic 3 speed transmission	21-136-5 to 21-136-236	Bloc, rear spring silent	17-17-3 to 17-17-5
Band, parking brake	4-03-1 to 4-03-11	Block, cylinder	9-02-5 to 9-02-19
Band, powerflite transmission	21-136-5 to 21-136-52	Block, terminal	8-21-1 to 8-21-11
Bar, front bumper face	13-64-3 to 13-64-152	Block, universal joint cross roller and bearing	16-09-1 to 16-09-2
Bar, radiator upper cross	7-33-1 to 7-33-4	Body, universal joint	16-04-1
Bar, rear bumper face	13-66-3 to 13-66-147	Body, water pump	7-43-1 to 7-43-5
		Body, universal joint	16-04-1
		Body and valves, automatic 3 speed transmission regulator valve	21-131-5 to 21-131-50

PART NAME	CODE	PART NAME	CODE
Body and Valves, automatic 3 speed transmission valve	21-139-4 to 21-139-213	Bracket, body	23-07-168 to 23-07-169
Body and Valves, powerflite transmission regulator valve	21-131-1 to 21-131-50	Bracket, brake pedal	5-31-15
Body and Valves, powerflite transmission valve	21-139-4 to 21-139-193	Bracket, brake tube	5-57-2
Body anti-squeak	23-31-33 to 23-31-205	Bracket, frame engine rear support crossmember	9-70-9 12-06-3
Body bracket	23-07-168 to 23-07-169	Bracket, front fender	17-24-28
Body bumper	23-32-14 to 23-32-82	Bracket, shock absorber	19-31-1 to 19-31-24
Body door bumper	23-08-12 to 23-08-60	Bracket, standard steering column	19-31-24 to 5-53-3
Body insulator	23-31-33 to 23-31-205	Brake frame tube	5-53-4 to 5-53-4
Body liner	23-31-33 to 23-31-205	Brake, power	1-42-1
Body pad	23-31-33 to 23-31-205	Brake, parking (foot operated)	4-25-1 to 4-25-6
Body pan	23-32-14 to 23-32-82	Brake drum	22-04-11
Body panel	23-34-16 to 23-34-354	Brake flexible hose	5-62-1 to 5-62-20
Body plug	23-32-14 to 23-32-82	Brake fluid	5-01-2
Body pillar	23-36-5 to 23-36-128	Brake hose clip	5-56-2
Body reinforcement	23-07-168 to 23-07-169	Brake pedal	5-27-1 to 5-27-35
Body seal	23-31-33 to 23-31-205	Brake pedal bracket	5-31-15
Body striker	23-08-12 to 23-08-60	Brake pedal pad	5-28-8
Bolt, drive gear	3-20-1 to 3-20-2	Brake pedal return spring	5-34-1
Bolt, rear spring center	17-14-10	Brake pedal shaft	5-29-1
Boot, master cylinder	5-40-1 to 5-40-3	Brake tube bracket	5-57-2
Boot, wheel cylinder	5-69-1	Brake tube clip	5-56-2
Box, glove	23-06-4 to 23-06-102	Brake tube tee	5-58-1
Brace, front fender side shield	12-07-1 to 12-07-3	Bulb	8-44-1
		Bumper, body	23-32-14 to 23-32-82
		Bumper, body door	23-08-12 to 23-08-60
		Bumper, hood	15-09-4 to 15-09-22
		Bumper, rear spring	17-19-3 to 17-19-20
		Bumper guard	13-68-6 to 13-68-18
		Bumper jack and handle	13-72-1 to 13-72-2
		Bushing and Roller, universal joint cross	16-10-1 to 16-10-3
		Button, automatic 3 speed transmission	21-30-28 to 21-30-394
		Button, universal joint centering	16-06-1 to 16-06-3
		Button and Cable, powerflite transmission gearshift	21-30-28 to 21-30-394

PART NAME	CODE	PART NAME	CODE
C			
Cable, automatic 3 speed transmission	21-30-28 to 21-30-394	Carrier and component parts, Automatic 3 speed transmission low and reverse planet pinion	21-135-9 to 21-135-50
Cable, parking brake control	4-23-1 to 4-23-51	Carrier and component parts, powerflite transmission kickdown planet pinion	21-134-5 to 21-134-40
Cable, speedometer, automatic 3 speed transmission, includes shaft and housing	21-84-1 to 21-84-4	Carrier and component parts, powerflite transmission reverse planet pinion	21-135-5 to 21-135-35
Cable, speedometer, powerflite transmission, includes shaft and housing	21-84-1 to 21-84-4	Carrier and differential, rear axle	3-03-1 to 3-03-31
Cable, speedometer, standard transmission, includes shaft and housing	21-84-1 to 21-84-4	Case, automatic 3 speed transmission	21-03-1
Cable and battery	8-01-4 to 8-01-21	Case, differential	3-04-6 to 3-04-10
Cable and Button, powerflite transmission gearshift	21-30-28 to 21-30-394	Case, powerflite transmission	21-03-1 to 21-03-45
Cable and connection	8-16-1 to 8-16-8	Case, standard transmission	21-03-1 to 21-03-2
Camshaft	9-15-1 to 9-15-10	Chain, timing	9-20-1
Camshaft bearing	9-16-6 to 9-16-17	Chain case cover	9-23-5 to 9-23-40
Camshaft sprocket	9-17-5 to 9-17-13	Chain case cover plate	9-24-5 to 9-24-7
Cap, crankshaft bearing	9-10-2 to 9-10-22	Channel, glass	23-09-2 to 23-09-67
Cap, fuel tank locking	1-39-2 to 1-39-7	Chassis and body wiring	8-15-2 to 8-15-6
Cap, hub	22-08-5 to 22-08-57	Check, door	23-10-1 to 23-10-17
Cap, radiator filler	7-12-1	Cigar lighter	8-20-3 to 8-20-20
Carburetor	14-30-1	Cigar lighter package	1-12-1
Carburetor air cleaner	14-29-2 to 14-29-33	Clamp, power brake hose	5-112-1
Carrier, space wheel	22-20-80 to 22-20-89	Cleaner, carburetor air	14-29-2 to 14-29-33
Carrier and component parts, Automatic 3 speed transmission kickdown planet pinion	21-134-5 to 21-134-51	Clip, brake tube	5-56-2
		Clip, rear spring	17-15-1 to 17-15-28
		Clock	1-21-1 to 1-21-25
		Clutch	6-01-3
		Clutch, automatic 3 speed transmission	21-133-3 to 21-133-71

PART NAME	CODE	PART NAME	CODE
Clutch, powerflite transmission direct.	21-133-5	Component parts and hot water heater	1-48-1
	to		to
	21-133-43	Compressor	1-48-707
Clutch cover and pressure plate. . .	6-14-1		24-25-2
	to		to
	6-14-10	Condenser	24-25-260
Clutch disc	6-13-1	Conditioning, Air.	24-27-5
	to		24-01-24
	6-13-8		to
Clutch housing.	6-09-1	Connecting rod	24-01-87
	to		9-31-4
	6-09-11		to
Clutch housing pan	6-10-2	Connecting rod bearing package . . .	9-31-10
	to	Connection and cable	9-32-2
	6-10-10		8-16-1
Clutch parts, rear axle differential .	3-09-1		to
	to	Connector, power brake tube	8-16-8
	3-09-2	Console, floor tunnel	5-110-18
Clutch pedal	6-38-1		23-38-5
	to		to
	6-38-26	Control, air conditioning	23-38-15
Clutch pedal pad	6-39-2		24-24-5
Clutch pedal rod.	6-50-1		to
	to	Control, door lock and remote. . . .	24-24-166
	6-50-12		23-18-5
Clutch pressure plate.	6-15-1		to
Clutch pressure spring.	6-16-1	Control, hood lock	23-18-120
Clutch release bearing	6-19-2		15-14-1
	to		to
	6-19-3	Control, horn	15-14-20
Clutch release bearing pull-back spring	6-20-14		8-33-4
Clutch release fork	6-22-1		to
	to	Converter, torque	8-33-164
	6-22-19		9-46-4
Clutch release fork pull-back spring	6-27-5		to
Clutch release fork rod	6-24-1	Core, radiator	9-46-229
	to	Countershaft, standard transmission .	7-11-3
	6-24-6		21-24-2
Clutch release fork seal	6-23-3		to
Clutch release lever.	6-17-3	Courtesy lamp.	21-24-22
Clutch release overcenter spring . .	6-35-1		8-11-6
	to		to
	6-35-19	Courtesy lamp rear pocket switch . .	8-11-12
Clutch torque shaft	6-52-1	Cover, chain case	8-11-6
	to		9-23-5
	6-52-15		to
Coil, ignition.	8-35-4	Cover, standard steering gear housing	9-23-40
	to		19-04-1
	8-35-122		to
Component Parts, generator	8-29-1	Cover, tire	19-04-13
	to	Cover, universal joint dust.	1-116-2
	8-29-327		16-07-3
			to
Component parts and carrier, Auto- matic 3 speed transmission low and reverse planet pinion	21-135-9	Cover, valve spring.	16-07-4
	to		9-40-1
	21-135-50		to
		Cover, valve tappet.	9-40-18
Component parts and carrier, Auto- matic 3 speed transmission kickdown planet pinion	21-134-5		9-40-1
	to	Cowl vent	to
	21-134-51		23-61-39
Component parts and carrier, Power- flite transmission kickdown planet	21-134-5	Crankcase breather pipe	to
	to	Crankcase ventilator	23-6-119
	21-134-40		10-01-21
			10-02-8
			to
			10-02-15

1960 PASSENGER CAR PARTS CATALOG

PART NAME	CODE	PART NAME	CODE
Crankshaft	9-07-5	Differential pinion	3-07-1
	to		to
	9-07-22		3-07-2
Crankshaft bearing cap	9-10-2	Differential pinion shaft	3-08-1
	to		to
	9-10-19		3-08-2
Crankshaft bearing package	9-09-2	Differential side gear	3-06-5
Crankshaft rear bearing oil seal	9-11-1		to
	to		3-06-8
	9-11-7	Dimmer, automatic head lamp	1-04-4
Crankshaft sprocket	9-08-5		to
Crankshaft vibration damper	9-13-5		1-04-19
Cross, universal joint	16-08-6	Directional lamp	8-50-82
	to		to
	16-08-7		8-50-351
Crossmember, frame engine rear		Directional signal cancelling switch	8-50-125
support	9-69-4	Directional signal lamp	8-55-1
	to		to
	9-69-6		8-55-230
Crossmember, frame front	13-11-5	Directional switch	8-50-82
Crossmember, frame rear	13-18-4	Disc, clutch	6-13-1
	to		to
	13-18-32		6-13-8
Cup, master cylinder piston	5-45-8	Distributor	8-27-1
Cup, wheel cylinder piston	5-71-1		to
	to		8-27-316
	5-71-2	Dome lamp	8-05-2
Cylinder, master	5-39-1		to
	to		8-05-32
	5-39-24	Door	23-11-1
Cylinder, power steering gear	19-55-1		to
Cylinder, wheel brake	5-64-1		23-11-23
	to	Door check	23-10-1
	5-64-2		to
Cylinder and keys, lock	23-17-2		23-10-17
	23-17-72	Door hinge	23-15-1
Cylinder block	9-02-7		to
	to		23-15-22
	9-02-16	Door lock and remote control	23-18-5
Cylinder head	9-03-4		to
	to		23-18-120
	9-03-29	Door regulator	23-14-10
Cylinder head water outlet elbow	9-05-5		to
	to	Door remote control handle	23-14-153
	9-05-6		23-14-10
			to
			23-14-150
		Drain cock, radiator	7-13-2
		Drain trough	23-59-25
			to
			23-59-61
		Drain trough moulding	23-59-37
			to
			23-59-61
		Drier, receiver	24-26-20
			to
			24-26-100
		Drive gear and pinion set	3-19-1
		Drive gear bolt	3-20-1
			to
			3-20-2
		Drive pinion bearing	3-22-24
			to
			3-22-45

D

Damper crankshaft vibration	9-13-5
Deck Lid	23-19-8
	to
	23-19-185
Deck lid tire cover package	1-02-1
Deflector, fuel tank stone	14-87-2
Deflector, radiator stone	7-35-2
	to
	7-35-21
Differential and carrier, rear axle	3-03-1
	to
	3-03-31
Differential bearing	3-11-1
	to
	3-11-14
Differential case	3-04-6
	to
	3-04-10

PART NAME	CODE	PART NAME	CODE
Drive shaft	3-32-1 to 3-32-9	Fender, front	12-01-5 to 12-01-105
Drive shaft bearing	3-33-1 to 3-33-4	Filter, fuel	14-67-1 to 14-67-26
Drive shaft oil seal	3-35-14		10-26-5 to 10-26-65
Drum, brake	22-04-11		16-20-1 to 16-20-3
Drum, hub and brake	22-03-1 to 22-03-2	Flange, propeller shaft	23-04-4 to 23-04-250
Drum, parking brake	4-01-1		23-20-8 to 23-20-65
E			
Elbow, cylinder head water outlet . .	9-05-5 to 9-05-6	Floor board	23-38-5 to 23-38-15
Engine	9-01-5 to 9-01-24	Floor mat	5-01-2 9-45-1 to 9-45-7
Engine front support	9-64-5	Floor tunnel console	23-58-3 to 23-58-607
Engine front support insulator	9-67-4		8-53-150 6-22-1 to 6-22-19
Engine rear support insulator	9-71-5 to 9-71-19	Fluid, brake	21-39-3 21-66-2 to 21-66-45
Evaporator unit	24-28-3 to 24-28-382	Flywheel	13-01-1 9-69-4 to 9-69-6
Exhaust pipe	11-05-1 to 11-05-12	Folding top	9-70-9 13-11-5 13-18-4 to 13-18-32
Exhaust pipe flange, gasket and stud .	11-06-2 to 11-06-8	Foot dimmer switch	13-54-4 to 13-54-15
Exhaust pipe support and clamp	11-08-1 to 11-08-24	Fork, clutch release	13-64-3 to 13-64-152
Exhaust valve	9-39-6 to 9-39-17	Fork, standard transmission gearshift Fork and rail, standard transmission overdrive shifting	8-12-2 12-01-5 to 12-01-105
Expander, wheel cylinder piston cup .	5-72-1		12-06-3 12-02-5 12-15-2 to 12-15-27
Extension, automatic 3 speed trans- mission case	21-04-1 to 21-04-11	Frame	12-04-4 to 12-04-33
Extension, powerflite transmission case	21-04-1 to 21-04-2	Frame engine rear support crossmember	
Extension, standard transmission	21-04-1 to 21-04-12		
F			
Fan	7-02-1 to 7-02-16	Frame engine rear support crossmember bracket	
Fan and related drive belt	7-03-1	Frame front crossmember	
Fan belt idler pulley	7-04-1 to 7-04-16	Frame rear crossmember	
Fan drive and driven pulley	7-06-1 to 7-06-14		
Fan fluid drive unit	7-07-1	Frame rear spring hanger	
Fan pulley hub	7-05-1		

1960 PASSENGER CAR PARTS CATALOG

PART NAME	CODE	PART NAME	CODE
Front fender shield	12-04-4 to 12-04-33	Gear, power steering	19-01-8 to 19-01-62
Front fender side shield brace . . .	12-07-1 to 12-07-3	Gear, standard steering	19-01-3 to 19-01-24
Front seat	23-45-55	Gear, standard transmission	21-10-4 to 21-10-16
Front suspension repair package . .	2-15-4	Gear, standard transmission clutch .	21-14-1 to 21-14-20
Front suspension torsion parts . . .	2-14-3 to 2-14-15	Gear, standard transmission counter- shaft	21-15-2 to 21-15-33
Front wheel bearing	22-06-1 to 22-06-18	Gear, standard transmission over- Gear, standard transmission re- verse idler	21-11-1 to 21-11-9
Front wheel lower control arm . . .	2-10-6 to 2-10-76	Gearshift, standard transmission remote control	21-42-11 to 21-42-43
Front wheel upper control arm . . .	2-08-5 to 2-08-75	Gear and pinion, standard trans- mission speedometer	21-85-4 to 21-85-76
Fuel filter	14-67-1 to 14-67-26	Generator	8-28-3 to 8-28-302
Fuel line tube	14-89-2 to 14-89-57	Generator component parts	8-29-1 to 8-29-327
Fuel line tube clip	14-90-1	Glass channel	23-09-2 to 23-09-69
Fuel pump	14-73-1	Glove box	23-06-4 to 23-06-102
Fuel pump mounting	14-74-1 to 14-74-2	Glove compartment light	1-19-1 to 8-38-4
Fuel pump push rod	14-77-17	Governor	14-68-3 to 14-68-8
Fuel tank	14-86-1 to 14-86-85	Governor, automatic 3 speed trans- mission	21-138-2 to 21-138-38
Fuel tank dust shield	14-87-2	Governor, powerflite transmission . .	21-138-2 to 21-138-38
Fuel tank gauge	14-72-1 to 14-72-47	Grille, radiator	7-16-1 to 7-16-84
Fuel tank locking cap	1-39-2 to 1-39-7	Grommet	8-30-1
Fuel tank stone deflector	14-87-2	Guard, bumper	13-68-6 to 13-68-18
Fuel tank support	14-88-21 to 14-88-27	Guide, seat	23-47-6 to 23-47-456
G		Guide, wheel brake shoe	5-26-1 to 5-26-4
Garnish, moulding	23-22-7 to 23-22-160		
Gasket, manifold	9-50-1 to 9-50-6		
Gasket, water pump	7-44-3 to 7-44-4		
Gasket and stud, exhaust pipe flange .	11-06-2 to 11-06-8		
Gauge, fuel tank	14-72-1 to 14-72-47		
Gear, differential side	3-06-5 to 3-06-8		
Gear, oil pump and distributor drive .	10-10-1		

PART NAME	CODE	PART NAME	CODE
H			
Hand brake signal lamp	1-09-1 8-31-2 to 8-31-23	Horn control	8-33-4 to 8-33-164
Handle, door remote control	23-14-10 to 23-14-153	Hose, brake flexible	5-62-1 to 5-62-20
Handle, Jack	13-72-2	Hose, power brake vacuum	5-111-17
Hanger, frame rear spring	13-54-4 to 13-54-15	Hose, power steering gear	19-58-7 to 19-58-31
Head, cylinder	9-03-4 to 9-03-37	Hose, radiator	7-14-4 to 7-14-10
Head rest	1-16-1	Hot water heater and component parts	1-48-1 to 1-48-707
Headlamp	8-34-1 to 8-34-320	Housing, clutch	6-09-1 to 6-09-11
Headlamp beam indicator light	8-39-3 to 8-39-15	Housing, power steering gear	19-02-4 to 19-02-69
Headlamp switch	8-53-270	Housing, propeller shaft center bearing	16-17-1
Hinge, door	23-15-1 to 23-15-22	Housing, rear axle	3-02-1 to 3-02-20
Hinge, hood	15-19-2	Housing, standard steering gear	19-02-4 to 19-02-21
Hood bumper	15-09-4 to 15-09-22	Housing, standard transmission gearshift	21-29-3 to 21-29-37
Hood hinge	15-19-2 to 15-19-21	Housing, water pump	7-43-1 to 7-43-5
Hood letters	15-06-3 to 15-06-17	Housing and shaft automatic 3 speed transmission speedometer cable, includes	21-84-1 to 21-84-4
Hood lock	15-11-3 to 15-11-64	Housing and shaft, powerflite trans- mission speedometer cable includes	21-84-1 to 21-84-4
Hood lock control	15-14-1 to 15-14-20	Housing and shaft, standard trans- mission speedometer cable, in- cludes	21-84-1 to 21-84-4
Hood lock striker	15-13-2 to 15-13-9	Hub, fan pulley	7-05-1
Hood medallion	15-06-3 to 15-06-17	Hub, wheel	22-05-14 to 22-05-24
Hood moulding	15-25-2	Hub and brake drum	22-03-1 to 22-03-2
Hood name plate	15-06-3 to 15-06-17	Hub cap	22-08-5 to 22-08-57
Hood top panel	15-03-3 to 15-03-30		
Horn	15-28-1 to 15-28-18		
Horn blowing switch	8-32-2 to 8-32-108 8-33-90		

PART NAME	CODE	PART NAME	CODE
I			
Ignition	8-36-1 to 8-36-137	Joint, throttle linkage ball	14-13-1 to 14-13-5
Ignition coil	8-35-4 to 8-35-122	Joint, universal	16-03-1 to 16-03-20
Ignition lamp	8-40-8 to 8-40-16	K	
Ignition switch	8-35-59	Keys and cylinder, lock	23-17-2 to 23-17-72
Ignition switch and lock cylinder	8-35-4 to 8-35-122	Knuckle, steering	2-03-3
Ignition wiring	8-36-1 to 8-36-127	L	
Impeller and shaft, water pump	7-45-2 to 7-45-31	Lamp, back-up	8-56-1 to 8-56-66
Indicator, oil level	10-03-4 to 10-03-7	Lamp, courtesy	8-11-6 to 8-11-12
Instrument panel	23-33-10 to 23-33-227	Lamp, directional	8-50-82 to 8-50-351
Instrument panel instruments	8-37-1 to 8-37-517	Lamp, dome	8-05-2 to 8-95-32
Instrument panel light	8-41-36	Lamp, hand brake signal	1-09-1 8-31-2 to 8-31-23
Instrument panel wiring	8-19-64	Lamp, ignition	8-40-8 to 8-40-16
Instruments, instrument panel	8-37-1 to 8-37-517	Lamp, license plate	8-57-10 to 8-57-79
Insulator, body	23-31-33 to 23-31-205	Lamp, map	8-42-2 to 8-42-31
Insulator, engine front support	9-67-4	Lamp, parking	8-50-82 to 8-50-351
Insulator, engine rear support	9-71-5 to 9-71-19	Lamp, quarter	8-11-6 to 8-11-12
Intake, air	23-61-39 to 23-61-119	Lamp, quarter panel ornament	8-06-1 to 8-06-2
Intake valve	9-39-1 to 9-39-5	Lamp, stop	8-58-60
Internal parts and housing, standard transmission overdrive unit	21-51-4 to 21-51-20	Lamp, tail and stop	8-55-1 to 8-55-230
J		Lamp, trunk	8-13-1 to 8-13-19
Jack	13-72-1	Leaf, rear spring	17-12-4 to 17-12-12
Jack Handle	13-72-2	Letters, hood	15-06-3 to 15-06-17
Jacket, power steering column	19-31-1 to 19-31-24	Lever, automatic 3 speed transmission control	21-142-12 to 21-142-21
Jacket, power steering gear column	19-14-1 to 19-14-72		
Jacket, standard steering gear column	19-14-1 to 19-14-77		

PART NAME	CODE	PART NAME	CODE	
Lever, automatic 3 speed transmission gearshift	21-30-28 to 21-30-394	M	Manifold	
Lever, clutch release	6-17-3		9-48-6 to 9-48-152	
Lever, parking brake operating	4-26-1 to 4-26-23		Manifold gasket	9-50-1 to 9-50-6
Lever, powerflite transmission control	21-142-12 to 21-142-21		Manifold heat control valve	9-59-13 to 9-59-15
Lever, powerflite transmission gearshift	21-30-28 to 21-30-394		Manifold heat control valve stop	9-62-1
Lever, standard transmission gearshift	21-30-2 to 21-30-107		Manifold heat control valve thermostat	9-58-1 to 9-58-14
License mounting parts	8-47-8 to 8-47-131		Map lamp	8-42-25
License plate lamp	8-57-10 to 8-57-79		Map lamp switch	8-42-25
Lid, deck	23-19-8 to 23-19-185		Master cylinder	5-39-1 to 5-39-24
Lift, window (electric)	23-41-4 to 23-41-261		Master cylinder boot	5-40-1 to 5-40-3
Lift, window (manual)	23-39-2 to 23-39-53		Master cylinder brake tube	5-52-3 to 5-52-62
Light, glove compartment	1-19-1		Master cylinder piston	5-44-3 to 5-44-8
Light, headlamp beam indicator	8-39-3 to 8-39-15		Master cylinder piston cup	5-45-8
Light, instrument panel	8-41-36		Master cylinder piston push rod	5-47-2 to 5-47-10
Light, trunk compartment	1-30-1		Master cylinder piston return spring	5-46-1
Light, underhood	1-13-1 to 1-13-10		Master cylinder reinforcement	5-42-1
Light, warning	1-06-1 to 1-06-2		Master cylinder valve	5-43-1 to 5-43-5
Lighter, cigar	8-20-3 to 8-20-20		Mat, floor	23-20-8 to 23-20-65
Liner, body	23-31-33 to 23-31-205		Medallion, hood	15-06-3 to 15-06-17
Liner, front fender	12-02-5		Medallion, radiator	7-17-1 to 7-17-11
Lining, wheel brake	5-03-1 to 5-03-23	Mirror	1-76-1 to 1-76-24	
Lock, hood	15-11-3 to 15-11-64	Motor, starting	8-52-4 to 8-52-387	
Lock cylinder and keys	23-17-2 to 23-17-72	Motor driven radio antenna switch	1-88-205	
Lock cylinder and switch, ignition	8-35-4 to 8-35-122	Moulding, drain trough	23-59-37 to 23-59-61	
Low oil pressure switch	8-53-327	Moulding, garnish	23-22-7 to 23-22-160	
		Moulding, hood	15-25-2	

1960 PASSENGER CAR PARTS CATALOG

PART NAME	CODE	PART NAME	CODE
Moulding, outside finish	23-23-2	Package, standard transmission . . .	21-01-3
	to	Package, wheel cylinder	5-63-1
	23-23-86		to
Moulding, trim finish	23-26-2		5-63-3
	to	Pad, body	23-31-33
	23-26-89		to
Mounting, fuel pump	14-74-1		23-31-205
	to	Pad, brake pedal	5-28-8
	14-74-2	Pad, clutch pedal	6-39-2
Mounting parts, license	8-47-8	Pan, automatic 3 speed transmission	
	to	oil	21-119-3
	8-47-131		to
Muffler	11-01-1		21-119-19
Muffler support	11-02-1	Pan, body	23-32-14
	to		to
	11-02-4		23-32-82
		Pan, clutch housing	6-10-2
			to
			6-10-10
		Pan, oil	10-24-1
			to
			10-24-38
		Pan, powerflite transmission oil . . .	21-119-3
			to
			21-119-19
		Panel, body	23-34-20
			to
			23-34-354
		Panel, hood top	15-03-3
			to
			15-03-30
		Panel, instrument	23-33-10
			to
			23-33-227
		Parking brake (foot operated)	4-25-1
			to
			4-25-6
		Parking brake adjuster	4-07-1
			to
			4-07-28
		Parking brake band	4-03-1
			to
			4-03-11
		Parking brake control cable	4-23-1
			to
			4-23-51
		Parking brake drum	4-01-1
		Parking brake operating lever	4-26-1
			to
			4-26-23
		Parking brake shoe anchor	4-06-1
			to
			4-06-11
		Parking brake support	4-29-1
			to
			4-29-16
		Parking lamp	8-50-82
			to
			8-50-351
		Parts, front suspension torsion	2-14-3
			to
			2-14-15
		Parts, fuel line tube attaching	14-90-1
		Pedal, accelerator	14-01-1
			to
			14-01-22

N

Nipple, water pump by-pass 7-48-22

O

Oil filter 10-26-5
to
10-26-65
Oil level indicator 10-03-4
to
10-03-7
Oil pan 10-24-1
to
10-24-38
10-22-11
to
10-22-41
10-07-2
to
10-07-12
Oil pump and distributor drive gear. 10-10-1
Oil pump drive shaft 10-09-1
to
10-09-7
Oil pump outlet pipe 10-16-4
Oil pump rotor 10-14-18
to
10-14-19
Oil strainer 10-23-7
Outside finish moulding 23-23-2
to
23-23-86

P

Package, automatic 3 speed trans-
mission 21-01-3
Package, cigar lighter 1-12-1
Package, connecting rod bearing 9-32-2
Package, crankshaft bearing 9-09-2
Package, deck lid tire cover 1-02-1
Package, Front Fender moulding 12-15-2
to
12-15-27
Package, front fender name plate . . . 12-15-2
to
12-15-27
Package, front suspension repair . . . 2-15-4
Package, powerflite transmission . . . 21-01-3

PART NAME	CODE	PART NAME	CODE
Pedal, brake	5-27-1 to 5-27-35	Power brake	1-42-1
Pedal, clutch	6-38-1 to 6-38-26	Power brake air cleaner	5-113-17
Pillar, body	23-36-5 to 23-36-128	Power brake hose clamp	5-112-1
Pilot, automatic	14-02-2 to 14-02-39	Power brake power unit	5-100-1 to 5-100-210
Pin, piston	9-36-5 to 9-36-7	Power brake vacuum check valve	5-105-1
Pinion, automatic 3 speed trans- mission speedometer	21-85-5 to 21-85-76	Power brake vacuum hose	5-111-17
Pinion, differential	3-07-1 to 3-07-2	Power brake tube connector	5-110-18
Pinion, powerlite transmission speedometer	21-85-5 to 21-85-76	Power brake vacuum tank	5-102-2 to 5-102-11
Pinion, standard transmission main drive	21-09-2 to 21-09-33	Power steering column jacket	19-31-1 to 19-31-24
Pipe, crankcase breather	10-01-21	Power steering gear	19-01-8 to 19-01-62
Pipe, exhaust	11-05-1 to 11-05-12	Power steering gear arm and idler arm	19-27-2 to 19-27-55
Pipe, oil pump outlet	10-16-4	Power steering gear column jacket	19-14-1 to 19-14-72
Pipe, tail	11-09-3	Power steering gear cylinder	19-55-1
Piston, master cylinder	5-44-3 to 5-44-8	Power steering gear hose	19-58-7 to 19-58-31
Piston, power steering gear	19-56-6 to 19-56-90	Power steering gear housing	19-02-4 to 19-02-69
Piston, wheel cylinder	5-70-1	Power steering gear piston	19-56-6 to 19-56-90
Piston pin	9-36-5 to 9-36-7	Power steering gear shaft and roller tooth	19-19-4 to 19-19-72
Piston w/pin	9-34-5	Power steering gear tube and worm. to	19-15-2 to 19-15-69
Piston ring set	9-35-1	Power steering gear valve	19-57-2 to 19-57-64
Plate, chain case cover	9-24-5 to 9-24-7	Power steering gearshift control rod	19-48-1
Plate, clutch cover and pressure	6-14-1 to 6-14-10	Power steering gearshift rod	19-46-3 to 19-46-35
Plate, clutch pressure	6-15-1	Power steering gearshift tube	19-46-3 to 19-46-35
Plate, front fender	12-04-4 to 12-04-33	Power steering oil pump	19-54-2 to 19-54-248
Plate, hood name	15-06-3 to 15-06-17	Power steering wheel	19-30-4 to 19-30-18
Plug, body	23-32-14 to 23-32-82	Powerlite transmission	21-02-1 to 21-02-6
Plug, spark	8-36-1 to 8-36-124	Powerlite transmission band	2-136-5 to 2-136-52
		Powerlite transmission case	21-03-1 to 21-03-45

1960 PASSENGER CAR PARTS CATALOG

PART NAME	CODE	PART NAME	CODE
Powerflite transmission case extension	21-04-1 to 21-04-2	Powerflite transmission valve body and valves	21-139-4 to 21-139-193
Powerflite transmission control lever	21-142-12 to 21-142-21	Propeller shaft	16-02-5 to 16-02-5
Powerflite transmission direct clutch	21-133-5 to 21-133-43	Propeller shaft center bearing	16-16-1 to 16-16-47
Powerflite transmission gearshift button and cable	21-30-28 to 21-30-394	Propeller shaft center bearing housing	16-17-1 to 16-20-1
Powerflite transmission gearshift lever	21-30-28 to 21-30-394	Propeller shaft flange	16-20-3 to 16-14-1
Powerflite transmission governor	21-138-2 to 21-138-38	Propeller shaft sliding yoke	16-14-9 to 16-14-1
Powerflite transmission input shaft and torque convertor reaction shaft	21-129-5 to 21-129-23	Propeller shaft spline	16-14-9 to 16-14-9
Powerflite transmission kickdown planet pinion carrier and component parts	21-134-5 to 21-134-40	Propeller shaft yoke	16-20-1 to 16-20-3
Powerflite transmission neutral starter switch	21-113-24 to 21-113-29	Pulley, fan belt idler	7-04-1 to 7-04-16
Powerflite transmission oil pan	21-119-3 to 21-119-19	Pulley, fan drive and driven	7-06-1 to 7-06-14
Powerflite transmission oil pump	21-118-6 to 21-118-45	Pump, automatic 3 speed transmission oil	21-118-1 to 21-118-45
Powerflite transmission oil pump strainer	21-117-1 to 21-117-24	Pump, fuel	14-73-1
Powerflite transmission output shaft.	21-05-1 to 21-05-26	Pump, oil	10-07-2 to 10-07-12
Powerflite transmission package	21-01-3	Pump, powerflite transmission oil	21-118-6 to 21-118-45
Powerflite transmission regulator valve body and valves	21-131-1 to 21-131-50	Pump, power steering oil	19-54-2 to 19-54-248
Powerflite transmission reverse planet pinion carrier and component parts	21-135-5 to 21-135-35	Pump, water	7-42-1 to 7-42-4
Powerflite transmission servo	21-137-5 to 21-137-59	Quarter lamp	8-11-6 to 8-11-12
Powerflite transmission set	21-01-3	Quarter panel ornament lamp	8-06-1 to 8-06-2
Powerflite transmission speedometer cable includes shaft and housing	21-84-1 to 21-84-4		
Powerflite transmission speedometer pinion	21-85-5 to 21-85-76		
		R	
		Rack, roof rail and luggage	23-40-82 to 23-40-190
		Radiator core	7-11-3
		Radiator drain cock	7-13-2
		Radiator filler cap	7-12-1
		Radiator grille	7-16-1 to 7-16-84
			8-11-12

PART NAME	CODE	PART NAME	CODE
Radiator fan shroud	7-08-2 to 7-08-16	Rear window defroster switch	1-48-300
Radiator hose	7-14-4 to 7-14-10	Receiver, ash	23-02-1 to 23-02-150
Radiator medallion	7-17-1 to 7-17-11	Receiver drier	24-26-20 to 24-26-100
Radiator shield	7-31-7 to 7-31-45	Regulator, door	23-14-10 to 23-14-153
Radiator stone deflector	7-35-2 to 7-35-21	Reinforcement, body.	23-07-108 to 23-07-169
Radiator upper cross bar.	7-33-1 to 7-33-4	Reinforcement, master cylinder	5-42-1
Radiator yoke	7-26-2 to 7-26-28	Relay, standard transmission over- drive kickdown solenoid.	21-69-2 to 21-69-5
Radio	1-87-2 to 1-87-464	Rest, head	1-16-1
Radio antenna	1-88-1 to 1-88-230	Rocker, valve	9-43-1 to 9-43-26
Radio foot selector switch	1-87-5	Rod, accelerator pedal to accelerator shaft	14-07-1 to 14-07-18
Rail, standard transmission gearshift	21-34-42 to 21-34-47	Rod, clutch release fork	6-24-1 to 6-24-6
Rail and fork, standard transmission		Rod, clutch pedal	6-50-1 to 6-50-12
Rear axle control strut.	3-01-25 to 3-01-35	Rod, fuel pump push	14-77-17
Rear axle differential and carrier.	3-03-1 to 3-03-31	Rod, master cylinder piston push	5-47-2 to 5-47-10
Rear axle differential clutch parts.	3-09-1 to 3-09-2	Rod, power steering gearshift	19-46-3 to 19-46-35
Rear axle housing.	3-02-1 to 3-02-20	Rod, power steering gearshift control	19-48-1
Rear bumper face bar	13-66-3 to 13-66-147	Rod, standard gearshift control	19-48-1 to 19-48-23
Rear fender stone shield.	12-23-4 to 12-23-5	Rod, standard steering gearshift	19-46-3 to 19-46-55
Rear pocket panel switch.	8-11-6	Rod, steering knuckle tie.	2-07-1 to 2-07-28
Rear shelf radio speaker fader switch	1-87-289	Rod, valve push	9-42-1
Rear spring	17-11-1 to 17-11-7	Rod, wheel cylinder piston push	5-12-1
Rear spring bumper.	17-19-3 to 17-19-20	Roller and bushing, universal joint cross	16-10-1 to 16-10-3
Rear spring center bolt	17-14-10	Roller tooth and shaft, power steering gear.	19-19-4 to 19-19-72
Rear spring clip.	17-15-1 to 17-15-28	Roller tooth and shaft, standard steering gear.	19-19-4 to 19-19-35
Rear spring leaf.	17-12-4 to 17-12-12	Roof rail and luggage rack	23-40-82 to 23-40-190
Rear spring shackle	17-16-1		
Rear spring silent bloc.	17-17-3 to 17-17-5		

PART NAME	CODE	PART NAME	CODE
Roof rail dome lamp switch	8-05-14	Shaft, automatic 3 speed transmission output	21-05-1
Rotor, oil pump	10-14-18	to	to
	10-14-19		21-05-35
Run, Window glass	23-42-13	Shaft, automatic 3 speed transmission torque converter reaction	21-129-5
	23-42-57	to	to
			21-129-33
S			
Screen, tailgate window	1-08-1	Shaft, brake pedal	5-29-1
Screw, wheel cylinder bleeder	5-67-1	Shaft, clutch torque	6-52-1
Seal, body	23-31-33	to	to
	23-31-205		6-52-15
Seal, clutch release fork	6-23-3	Shaft, differential pinion	3-08-1
Seal, crankshaft rear bearing oil	9-11-1	to	to
	9-11-7		3-08-2
	3-35-14	Shaft, drive	3-32-1
Seal, drive shaft oil	4-35-14	to	to
Seal, standard transmission main shaft rear bearing oil	21-22-2		3-32-9
Seal, water pump	7-46-1	Shaft, oil pump drive	10-09-1
	7-46-10	to	to
			10-09-7
Seal, wheel brake adjusting cam dust shield	5-22-8	Shaft, powerflite transmission input shaft and torque converter reaction	21-129-5
Seat adjuster, front	23-47-6	to	to
	23-47-457		21-129-23
Seat, front	23-45-12	Shaft, powerflite transmission output	21-05-1
	23-45-55	to	to
	23-48-6		21-05-26
	23-48-188	Shaft, propeller	16-02-1
	23-48-6	to	to
	23-48-188		16-02-5
	23-48-188	Shaft, standard transmission main	21-16-3
	23-47-6	Shaft, standard transmission reverse idler	21-12-1
Seat guide	23-47-6	to	to
	23-47-456		21-12-2
Seat spring	23-52-1	Shaft, sway eliminator	17-29-5
Second seat	23-48-6	to	to
Servos, automatic 3 speed transmission	21-137-5		17-29-21
	21-137-5	Shaft and impeller, water pump	7-45-2
	21-137-59	to	to
	21-01-3		7-45-31
Set, automatic 3 speed transmission	3-19-1	Shaft and roller tooth, power steering gear	19-19-4
Set, drive gear and pinion	9-35-1	to	to
Set, piston ring	21-01-3		19-19-72
Set, powerflite transmission	21-01-3	Shaft and roller tooth, standard steering gear	19-19-4
Set, standard transmission	17-16-1	to	to
Shackle, rear spring	14-11-1		19-19-35
Shaft, accelerator	14-11-48	Shield, carburetor heat	14-59-1
		Shield, front fender	12-04-4
Shaft, automatic 3 speed transmission input	21-129-5	to	to
to	21-129-33		12-04-33
		Shield, fuel tank dust	14-87-2
Shaft, automatic 3 speed transmission intermediate	21-129-5	Shield, radiator	7-31-7
	21-129-33	to	to
			7-31-45
		Shield, wheel brake dust	5-16-1
		Shock absorber	17-23-3
		to	to
			17-23-57
		Shock absorber bracket	17-24-28
		Shoe, wheel brake	5-03-1
		to	to
			5-03-23
		Shroud, radiator fan	7-08-2
		to	to
			7-08-16

PART NAME	CODE	PART NAME	CODE
Side sill and belt bar	23-51-3 to 23-51-41	Standard steering gear shaft and roller tooth	19-19-4 to 19-19-35
Solenoid switch	8-52-330	Standard steering gear tube and worm	19-15-3 to 19-15-63
Spare wheel carrier	22-20-29 to 22-20-89	Standard steering wheel	19-30-4 to 19-30-18
Spark plug	8-36-1 to 8-36-124	Standard transmission	21-02-1
Spline, propeller shaft	16-14-1 to 16-14-9	Standard transmission case	21-03-1 to 21-03-2
Spring, accelerator pedal return . . .	14-06-1 to 14-06-10	Standard transmission case ex- tension	21-04-1 to 21-04-12
Spring, brake pedal return	5-34-1	Standard transmission clutch gear . .	21-14-1 to 21-14-20
Spring, clutch pressure	6-16-1	Standard transmission countershaft .	21-24-2 to 21-24-22
Spring, clutch release bearing pull-back	6-20-14	Standard transmission countershaft bearing	21-25-2 to 21-25-6
Spring, clutch release fork pull-back.	6-27-5	Standard transmission countershaft gear	21-15-2 to 21-15-33
Spring, clutch release overcenter spring	6-35-1 to 6-35-19	Standard transmission gear	21-10-4 to 21-10-16
Spring, master cylinder piston return	5-46-1	Standard transmission gearshift fork Standard transmission gearshift housing	21-29-3 to 21-29-37
Spring, rear	17-11-1 to 17-11-7	Standard transmission gearshift lever	21-30-2 to 21-30-107
Spring, seat	23-52-1	Standard transmission gearshift rail .	21-34-2 to 21-34-47
Sprocket, camshaft	9-17-5 to 9-17-13	Standard transmission main drive pinion	21-09-2 to 21-09-33
Sprocket, crankshaft	9-08-5	Standard transmission main shaft . .	21-16-3
Standard gearshift control rod	19-48-1 to 19-48-23	Standard transmission main shaft pilot bearing	21-17-2 to 21-17-7
Standard gearshift rod	19-46-3 to 19-46-55	Standard transmission main shaft rear bearing	21-19-2
Standard gearshift tube	19-46-3 to 19-46-55	Standard transmission main shaft rear bearing oil seal	21-22-2
Standard steering column bracket . .	19-31-1 to 19-31-24	Standard transmission package	21-01-3
Standard steering gear	19-01-3 to 19-01-24	Standard transmission remote con- trol gearshift	21-42-11 to 21-42-43
Standard steering gear arm and idler arm	19-27-2 to 19-27-55	Standard transmission reverse idler gear	21-11-1 to 21-11-9
Standard steering gear column jacket	19-14-1 to 19-14-77		
Standard steering gear grease re- taining tube	19-13-4 to 19-13-6		
Standard steering gear housing. . . .	19-02-4 to 19-02-21		
Standard steering gear housing cover	19-04-1 to 19-04-13		

1960 PASSENGER CAR PARTS CATALOG

PART NAME	CODE	PART NAME	CODE
Standard transmission reverse idler shaft	21-12-1 to 21-12-2	Support and clamp, exhaust pipe . . .	11-08-1 to 11-08-24
Standard transmission set	21-01-3	Suspension, air	25-01-1 to 25-01-21
Standard transmission speedometer cable, includes shaft and housing .	21-84-1 to 21-84-4	Sway eliminator shaft	17-29-5 to 17-29-21
Standard transmission speedometer gear and pinion	21-85-4 to 21-85-76	Switch, actuator	1-82-41
Starter switch	8-35-59	Switch, automatic lamp door	8-12-2 to 8-12-3
Starting motor	8-52-4 to 8-52-387	Switch, automatic 3 speed transmission neutral starter	21-113-24 to 21-113-29
Steering knuckle	2-03-3	Switch, back-up lamp	8-56-2
Steering knuckle tie rod	2-07-1 to 2-07-28	Switch, courtesy	8-11-6
Steering linkage knuckle arm	2-05-4	Switch, directional	8-50-82
Stop, manifold heat control valve . .	9-62-1	Switch, directional signal cancelling.	8-50-125
Stop lamp	8-58-60	Switch, foot dimmer	8-53-150
Stop lamp switch	8-58-60	Switch, front door	8-12-2
Strainer, automatic 3 speed transmission oil pump	21-117-1 to 21-117-10	Switch, headlamp	8-53-270
Strainer, hood	15-28-1 to 15-28-18	Switch, horn blowing	8-33-90
Strainer, oil	10-23-7	Switch, ignition	8-35-59
Strainer, powerflite transmission oil pump	21-117-1 to 21-117-24	Switch, low oil pressure	8-53-327
Strap, battery hold-down	13-34-3	Switch, map lamp	8-42-25
Striker, body	23-08-12 to 23-08-60	Switch, motor driven radio antenna .	1-88-205
Striker, hood lock	15-13-2 to 15-13-9	Switch, powerflite transmission neutral starter	21-113-24 to 21-113-29
Strut, rear axle control	3-01-25 to 3-01-35	Switch, radio foot selector	1-87-5
Stud, battery hold-down	13-36-5	Switch, rear pocket panel	8-11-6
Stud, throttle linkage ball	14-13-1 to 14-13-5	Switch, rear shelf radio speaker fader	1-87-289
Stud and gasket, exhaust pipe flange.	11-06-2 to 11-06-8	Switch, rear window defroster	1-48-300
Support, engine front	9-64-5	Switch, roof rail dome lamp	8-05-14
Support, frame front bumper	13-03-21	Switch, solenoid	8-52-330
Support, fuel tank	14-88-21 to 14-88-27	Switch, starter	8-35-59
Support, muffler	11-02-1 to 11-02-4	Switch stop lamp	8-58-60
Support, parking brake	4-29-1 to 4-29-16	Switch, trunk lamp	8-13-2
Support, tail pipe	11-10-1 to 11-10-42	Switch, windshield washer wiper . . .	1-82-14
Support, wheel brake	5-13-1 to 5-13-9	Switch and lamp, dome	8-05-3 to 8-05-32
		Switch and lock cylinder, ignition . .	8-35-4 to 8-35-122
		Switches	8-53-150 to 8-53-327
		T	
		Tail and stop lamp	8-55-1 to 8-55-200
		Tail pipe	11-09-3
		Tail pipe support	11-10-1 to 11-10-42
		Tailgate	23-54-1 to 23-54-212
		Tailgate window screen	1-08-1
		Tank, fuel	14-86-1 to 14-86-85

PART NAME	CODE	PART NAME	CODE
Tank, power brake vacuum	5-102-2 to 5-102-11	Tube, standard gearshift	19-46-3 to 19-46-55
Tappet, valve	9-41-1 to 9-41-12	Tube, standard steering gear grease retaining	19-13-4 to 19-13-6
Tee, brake tube	5-58-1	Tube, wheel cylinder connecting . . .	5-55-1
Terminal block	8-21-1 to 8-21-11	Tube and worm, power steering gear to	19-15-2 to 19-15-69
Thermostat	7-41-4	Tube and worm, standard steering gear	19-15-3 to 19-15-63
Thermostat, manifold heat control valve	9-58-1 to 9-58-14		
Throttle linkage ball joint	14-13-1 to 14-13-5	U	
Throttle linkage ball stud	14-13-1 to 14-13-5	Underhood light	1-13-1 to 1-13-9
Third seat	23-48-6 to 23-48-188	Unit, evaporator	24-28-3 to 24-28-382
Timing chain	9-20-1	Unit, fluid fan drive	7-07-1
Tire cover	1-116-2	Unit, power brake power	5-100-1 to 5-100-210
Toe board	23-04-2 to 23-04-253	Universal joint	16-03-1 to 16-03-20
Top, folding	23-58-3 to 23-58-607	Universal joint body	16-04-1
Torque converter	9-46-4 to 9-46-229	Universal joint centering button . . .	16-06-1 to 16-06-3
Torsion parts, front suspension . . .	2-14-3 to 2-14-15	Universal joint cross	16-08-6 to 16-08-7
Transmission, automatic 3 speed . .	21-02-1 to 21-02-6	Universal joint cross roller and bushing	16-10-1 to 16-10-3
Transmission countershaft free		Universal joint cross roller and bearing block	16-09-1 to 16-09-2
Transmission, powerlite	21-02-1 to 21-02-6	Universal joint dust cover	16-07-3 to 16-07-4
Transmission, standard	21-02-1	V	
Trim finish moulding	23-26-2 to 23-26-89	Valve, exhaust	9-39-6 to 9-39-17
Trough, drain	23-59-37 to 23-59-61	Valve, intake	9-39-1 to 9-39-5
Trunk compartment light	1-30-1	Valve, manifold heat control	9-59-13 to 9-59-15
Trunk lamp	8-13-1 to 8-13-19	Valve, master cylinder	5-43-1 to 5-43-5
Trunk lamp switch	8-13-2	Valve, oil pressure relief	10-22-11 to 10-22-41
Tube, oil filter	10-27-1	Valve, power brake vacuum check . .	5-105-1
Tube, brake frame	5-53-3 to 5-53-34	Valve, power steering gear	19-57-3 to 19-57-64
Tube, fuel line	14-89-2 to 14-89-57		
Tube, fuel pump to carburetor	14-85-1		
Tube, fuel pump to fuel filter	14-85-1		
Tube, master cylinder brake	5-52-3 to 5-52-62		
Tube, Power Steering gearshift . . .	19-46-3 to 19-46-35		

PART NAME	CODE	PART NAME	CODE
Valve push rod	9-42-1	Wheel balance weight	22-09-1
Valve rocker	9-43-1	Wheel brake adjusting cam dust shield seal	5-22-8
	9-43-26	Wheel brake cylinder	5-64-1
Valve spring cover	9-40-1	to	5-64-2
	9-40-18	Wheel brake dust shield	5-16-1
Valve tappet	9-41-1	Wheel brake lining	5-03-1
	9-41-12	to	5-03-23
Valve tappet cover	9-40-1	Wheel brake shoe guide	5-26-1
	9-40-18	to	5-26-4
Vent, cowl	23-61-39	Wheel brake shoe	5-03-1
	23-61-119	to	5-03-23
Vent wing	23-64-4	Wheel brake support	5-13-1
	23-64-314	to	5-13-9
Ventilator crankcase	10-02-8	Wheel cylinder bleeder screw	5-67-1
	10-02-15	Wheel cylinder boot	5-69-1
Vibration damper crankshaft	9-13-5	Wheel cylinder connecting tube	5-55-1
Visor	1-32-2	Wheel cylinder package	5-63-1
	1-32-3	to	5-63-3
		Wheel cylinder piston	5-70-1
		Wheel cylinder piston cup	5-71-1
		to	5-71-2
		Wheel cylinder piston cup expander	5-72-1
		Wheel cylinder piston push rod	5-12-1
		Wheel hub	22-05-14
		to	22-05-24
		Window	23-64-4
		to	23-64-314
		Window glass run	23-42-13
		to	23-42-57
		Window lift (electric)	23-41-4
		to	23-41-261
		Window lift (manual)	23-39-2
		to	23-39-53
		Windshield	23-66-135
		to	23-66-235
		Windshield washer	1-82-2
		to	1-82-45
		Windshield washer wiper switch	1-82-14
		Windshield wiper	23-67-5
		to	23-67-204
		Wing, vent	23-64-4
		to	23-64-314
		Wiper, windshield	23-67-5
		to	23-67-204
		Wiring, chasis and body	8-15-2
		to	8-15-6

W

Warning light	1-06-1
to	1-06-2
Washer, windshield	1-82-2
to	1-82-45
Water pump	7-42-1
to	7-42-4
Water pump body	7-43-1
to	7-43-5
Water pump by-pass nipple	7-48-22
Water pump gasket	7-44-3
to	7-44-4
Water pump housing	7-43-1
to	7-43-5
Water pump seal	7-46-1
to	7-46-10
Water pump shaft and impeller	7-45-2
to	7-45-31
Weatherstrip	23-63-14
to	23-63-181
Weight, wheel balance	22-09-1
Wheel	22-01-5
to	22-01-53
Wheel, power steering	19-30-4
to	19-30-18
Wheel, standard steering	19-30-4
to	19-30-18

