

PART NAME	CODE	PART NAME	CODE
<b>ALPHABETICAL INDEX</b>			
<b>A</b>			
Absorber, shock . . . . .	17-23-3 to 17-23-57	Arm, front wheel upper control . . . . .	2-08-5 to 2-08-75
Accelerator pedal . . . . .	14-01-1 to 14-01-31	Arm, power steering gear arm and idler . .	19-27-2 to 19-27-55
Accelerator pedal return spring . . . . .	14-06-1 to 14-06-10	Arm, steering linkage knuckle . . . . .	2-05-4
Accelerator pedal to accelerator shaft rod.	14-07-1 to 14-07-15	Arm and idler arm, standard steering gear.	19-27-2 to 19-27-55
Accelerator shaft . . . . .	14-11-1 to 14-11-48	Ash receiver . . . . .	23-02-1 to 23-02-150
Actuator . . . . .	24-29-1 to 24-29-7	Automatic choke to carburetor rod clip. . .	14-65-4
Adjuster, front seat . . . . .	23-47-6 to 23-47-458	Automatic headlamp dimmer . . . . .	1-04-4 to 1-04-12
Adjuster, parking brake . . . . .	4-07-1 to 4-07-28	Automatic lamp door switch . . . . .	8-12-1 to 8-12-3
Adjuster, wheel brake . . . . .	5-20-1 to 5-20-17	Automatic pilot . . . . .	14-02-1 to 14-02-70
Air cleaner, carburetor . . . . .	14-29-2 to 14-29-44	Automatic 3 speed transmission . . . . .	21-02-1 to 21-02-6
Air cleaner, power brake . . . . .	5-113-17	Automatic 3 speed transmission band. . . .	21-136-5 to 21-136-237
Air conditioning . . . . .	24-01-1 to 24-01-87	Automatic 3 speed transmission case. . . .	21-03-1 to 21-03-28
Air conditioning control . . . . .	24-24-5 to 24-24-170	Automatic 3 speed transmission case extension. . . . .	21-04-1 to 21-04-11
Air intake . . . . .	23-61-39 to 23-61-119	Automatic 3 speed transmission clutch . . .	21-133-3 to 21-133-71
Alternator . . . . .	8-28-3 to 8-28-289	Automatic 3 speed transmission control lever . . . . .	21-142-12 to 21-142-21
Alternator component parts . . . . .	8-29-17 to 8-29-208	Automatic 3 speed transmission front and rear planet pinion carrier and components	21-134-5 to 21-134-51
Anchor, parking brake shoe . . . . .	4-06-1 to 4-06-11	Automatic 3 speed transmission gearshift button and cable. . . . .	21-30-28 to 21-30-394
Antenna, radio. . . . .	1-88-1 to 1-88-206	Automatic 3 speed transmission governor . .	21-138-2 to 21-138-38
Anti-squeak, body . . . . .	23-31-33 to 23-31-205	Automatic 3 speed transmission input shaft	21-129-5 to 21-129-33
Anti-stall diaphragm . . . . .	14-50-25 to 14-50-39	Automatic 3 speed transmission inter- mediate shaft . . . . .	21-129-5 to 21-129-33
Arm, front wheel lower control . . . . .	2-10-6 to 2-10-77	Automatic 3 speed transmission kickdown planet carrier and components. . . . .	21-134-5 to 21-134-51

# 1961 PASSENGER CAR PARTS CATALOG

PART NAME	CODE	PART NAME	CODE
Automatic 3 speed transmission neutral starter switch . . . . .	21-113-24 to 21-113-29	Bar, front bumper face . . . . .	13-64-3 to 13-64-151
Automatic 3 speed transmission oil pan . .	21-119-3 to 21-119-25	Bar, radiator cross. . . . .	7-33-1 to 7-33-4
Automatic 3 speed transmission oil pump .	21-118-1 to 21-118-55	Bar, rear bumper face. . . . .	13-66-3 to 13-66-147
Automatic 3 speed transmission oil pump strainer and filter . . . . .	21-117-1 to 21-117-10	Bar, side sill and belt . . . . .	23-51-3 to 23-51-45
Automatic 3 speed transmission output shaft . . . . .	21-05-1 to 21-05-35	Battery and cable. . . . .	8-01-4 to 8-01-21
Automatic 3 speed transmission package . .	21-01-3	Battery heat shield . . . . .	13-35-1
Automatic 3 speed transmission regulator valve body and parts . . . . .	21-131-5 to 21-131-50	Battery hold-down strap . . . . .	13-34-3
Automatic 3 speed transmission reverse planet pinion carrier and component parts . . . . .	21-135-9 to 21-135-50	Battery hold-down stud. . . . .	13-36-5
Automatic 3 speed transmission servos . .	21-137-5 to 21-137-205	Battery support tray . . . . .	13-33-59 to 13-33-68
Automatic 3 speed transmission set . . . .	21-01-3	Bearing, camshaft . . . . .	9-16-6 to 9-16-17
Automatic 3 speed transmission speedometer cable, includes shaft and housing . .	21-84-1 to 21-84-28	Bearing, clutch release . . . . .	6-19-2 to 6-19-3
Automatic 3 speed transmission speedometer pinion. . . . .	21-85-5 to 21-85-76	Bearing, differential . . . . .	3-11-1 to 3-11-14
Automatic 3 speed transmission torque converter reaction shaft . . . . .	21-129-5 to 21-129-33	Bearing, drive pinion. . . . .	3-22-24 to 3-22-45
Automatic 3 speed transmission valve body and valves . . . . .	21-139-4 to 21-139-213	Bearing, drive shaft . . . . .	3-33-1 to 3-33-9
Auxiliary seat. . . . .	23-107-12 to 23-107-44	Bearing, front wheel . . . . .	22-06-1 to 22-06-18
<b>B</b>		Bearing, propeller shaft center . . . . .	16-16-1 to 16-16-47
Back-up lamp . . . . .	1-10-1 8-56-1 to 8-56-63	Bearing, standard transmission countershaft . . . . .	21-25-2 to 21-25-6
Back-up lamp switch . . . . .	8-56-2	Bearing, standard transmission main shaft . . . . .	21-19-2 to 21-19-15
Band, automatic 3 speed transmission. . . .	21-136-5 to 21-136-237	Bearing, standard transmission main shaft pilot . . . . .	21-17-2 to 21-17-7
Band, parking brake . . . . .	4-03-1 to 4-03-11	Belt, fan and related drive. . . . .	7-03-1
Band, powerflite transmission . . . . .	21-136-5 to 21-136-52	Belt, safety . . . . .	1-67-1
		Block, cylinder . . . . .	9-02-5 to 9-02-16
		Block, rear spring silent . . . . .	17-17-3 to 17-17-5
		Block, terminal . . . . .	8-21-1 to 8-21-16
		Block, universal joint cross roller and bearing. . . . .	16-09-2
		Blower motor toggle switch . . . . .	24-24-5
		Blower motor switch . . . . .	24-24-5

PART NAME	CODE	PART NAME	CODE
Board, floor . . . . .	23-04-2 to 23-04-250	Boot, wheel cylinder . . . . .	5-69-1
Body, bracket . . . . .	23-07-168 to 23-07-169	Box, glove . . . . .	23-06-4 to 23-06-102
Body, universal joint . . . . .	16-04-1	Brace, front fender . . . . .	12-07-1 to 12-07-2
Body and parts, automatic 3 speed transmission regulator valve . . . . .	21-131-5 to 21-131-50	Bracket, body . . . . .	23-07-168 to 23-07-169
Body and valves, automatic 3 speed transmission valve . . . . .	21-139-4 to 21-139-213	Bracket, brake pedal . . . . .	5-31-11 to 5-31-18
Body and valves, powerflite transmission regulator valve . . . . .	21-131-1 to 21-131-50	Bracket, brake tube . . . . .	5-57-2
Body and valves, powerflite transmission valve . . . . .	21-139-4 to 21-139-193	Bracket, fender pillar support and cowl . . . . .	12-05-2
Body anti-squeak . . . . .	23-31-33 to 23-31-205	Bracket, frame engine rear support crossmember. . . . .	9-70-9
Body bumper . . . . .	23-08-12 to 23-08-76	Bracket, front fender . . . . .	12-06-3
Body insulator. . . . .	23-32-8 to 23-32-115	Bracket, power steering column . . . . .	19-31-1 to 19-31-24
Body liner . . . . .	23-31-33 to 23-31-205	Bracket, shock absorber . . . . .	17-24-28
Body pad . . . . .	23-31-33 to 23-31-205	Bracket, standard steering column . . . . .	19-31-1 to 19-31-24
Body pan . . . . .	23-32-8 to 23-32-115	Brake drum . . . . .	22-04-2 to 22-04-11
Body panel . . . . .	23-32-13 to 23-34-354	Brake flexible hose . . . . .	5-62-1 to 5-62-20
Body pillar . . . . .	23-36-5 to 23-36-131	Brake fluid . . . . .	5-01-2
Body plug . . . . .	23-32-8 to 23-32-115	Brake hose clip . . . . .	5-56-2
Body reinforcement . . . . .	23-07-168 to 23-07-169	Brake pedal and bushing . . . . .	7-27-1 to 7-27-35
Body seal . . . . .	23-31-33 to 23-31-205	Brake pedal bracket . . . . .	5-31-11 to 5-31-18
Body striker . . . . .	23-08-12 to 23-08-76	Brake pedal pad . . . . .	5-28-8
Bolt, drive gear . . . . .	3-20-1 to 3-20-2	Brake pedal return spring . . . . .	5-34-1 to 5-34-6
Bolt, rear spring center . . . . .	17-14-10	Brake pedal shaft . . . . .	5-29-1
Boot, master cylinder . . . . .	5-40-1 to 5-40-3	Brake self adjusting package . . . . .	1-44-1
		Brake shoe guide . . . . .	5-26-1 to 5-26-5
		Brake tube bracket . . . . .	5-57-2
		Brake tube clip . . . . .	5-56-2
		Brake tube tee . . . . .	5-58-1
		Brake tubing and cover. . . . .	5-53-3 to 5-53-4
		Bulb . . . . .	8-44-1
		Bumper, body . . . . .	23-08-12 to 23-08-76
			23-32-12 to 23-32-115
		Bumper, hood . . . . .	15-09-4 to 15-09-22
		Bumper, rear spring . . . . .	17-19-3 to 17-19-20

# 1961 PASSENGER CAR PARTS CATALOG

ALPHABETICAL  
INDEX

PART NAME	CODE	PART NAME	CODE
Bumper guard . . . . .	1-01-1 13-68-6 to 13-68-18	Carburetor air cleaner . . . . .	14-29-2 to 14-29-44
Bumper jack . . . . .	13-72-1 to 13-72-4	Carburetor assemblies and service parts . .	14-30-1 to 14-30-28
Bushing and pedal, brake . . . . .	7-27-1 to 7-27-35		14-35-1 to 14-35-8
Bushing and roller, universal joint cross. .	16-10-1 to 16-10-3	Carburetor choke attaching parts . . . . .	14-39-45 14-41-3 14-43-5
Button, universal joint centering . . . . .	16-06-1 to 16-06-3	Carrier, spare wheel . . . . .	14-39-46 to 14-39-49
Button and cable, automatic 3 speed trans- mission gearshift . . . . .	21-30-28 to 21-30-394	Carrier and component parts . . . . .	22-20-29 to 22-20-89
Button and cable, powerflite transmission gearshift . . . . .	21-30-320 to 21-30-394	Carrier and component parts, automatic 3 speed transmission reverse pilot pinion .	21-135-9 to 21-135-50
<b>C</b>			
Cable, parking brake . . . . .	4-23-1 to 4-23-51	Carrier and component parts, powerflite transmission kickdown planet pinion . . . .	21-134-5 to 21-134-40
Cable, includes shaft and housing, automatic 3 speed transmission . . . . .	21-84-1 to 21-84-28	Carrier and component parts, powerflite transmission reverse planet pinion . . . . .	21-135-5 to 21-135-35
Cable, speedometer powerflite transmission, includes shaft and housing . . . . .	21-84-1 to 21-84-4	Carrier and components, automatic 3 speed transmission front and rear planet pinion . .	21-134-5 to 21-134-51
Cable, speedometer standard transmission, includes shaft and housing . . . . .	21-84-1 to 21-84-28	Carrier and differential, rear axle . . . . .	3-03-1 to 3-03-36
Cable and battery . . . . .	8-01-4 to 8-01-21	Case, automatic 3 speed transmission . . .	21-03-1 to 21-03-28
Cable and button, powerflite transmission gearshift . . . . .	21-30-320 to 21-30-394	Case, differential . . . . .	3-04-6 to 3-04-10
Cable and connection . . . . .	8-16-1 to 8-16-10	Case, powerflite transmission . . . . .	21-03-1 to 21-03-45
Camshaft . . . . .	9-15-1 to 9-15-10	Case, standard transmission . . . . .	21-03-1 to 21-03-25
Camshaft bearing . . . . .	9-16-6 to 9-16-17	Chain, timing . . . . .	9-20-1
Camshaft sprocket . . . . .	9-17-5 to 9-17-13	Chain case cover . . . . .	9-23-5 to 9-23-40
Cap, crankshaft bearing . . . . .	9-10-2 to 9-10-19	Channel, glass . . . . .	23-09-2 to 23-09-75
Cap, fuel tank locking . . . . .	1-39-2	Chassis and body wiring . . . . .	8-15-2 to 8-15-52
Cap, hub . . . . .	22-08-5 to 22-08-57	Check, door . . . . .	23-10-1 to 23-10-17
Cap, radiator filler . . . . .	7-12-1	Cigar lighter . . . . .	1-12-1 8-20-3 to 8-20-20
Carburetor . . . . .	14-30-1	Clamp, power brake hose . . . . .	5-112-1
		Clamp and support, exhaust pipe . . . . .	11-08-1 to 11-08-3

PART NAME	CODE	PART NAME	CODE
Clip, automatic choke to carburetor rod . .	14-65-4	Component parts, shock absorber . . . . .	17-26-11
Clip, brake hose . . . . .	5-56-2	to	17-26-38
Clip, brake tube . . . . .	5-56-2	Component parts and carrier, automatic 3	21-135-9
Clip, fuel line . . . . .	14-90-1	speed transmission reverse planet pinion .	to
Clip, rear spring . . . . .	17-15-1	to	21-135-50
	17-15-30	Component parts and carrier, powerflite	21-134-5
Clock . . . . .	1-21-1	transmission kickdown planet pinion . . . .	to
	to	to	21-134-40
	1-21-32	Component parts and carrier, powerflite	21-135-5
Clutch . . . . .	6-01-1	transmission reverse planet pinion . . . . .	to
Clutch, automatic 3 speed transmission. . .	21-133-3	to	21-135-35
	to	Component parts and hot water heater . . .	1-48-1
	21-133-71	to	1-48-942
Clutch, powerflite transmission direct . . .	21-133-5	Component parts for power brake power	5-100-5
	to	unit . . . . .	to
	21-133-43	to	5-100-210
Clutch cover and pressure plate . . . . .	6-14-1	Components and carrier, automatic 3	21-134-5
	to	speed transmission front and rear planet	to
	6-14-10	pinion . . . . .	21-134-51
Clutch disc . . . . .	6-13-1	to	21-134-5
	to	Components and carrier, automatic 3	21-134-5
	6-13-19	speed transmission kickdown planet . . . . .	to
Clutch housing . . . . .	6-09-1	to	21-134-51
	to	Component parts, rear axle differential . . . . .	3-09-1
	6-09-11	to	3-09-3
Clutch housing pan . . . . .	6-10-2	to	6-38-1
	to	Clutch pedal . . . . .	to
	6-10-31	to	6-38-26
Clutch parts, rear axle differential . . . . .	3-09-1	Clutch pedal pad . . . . .	6-39-2
	to	Clutch pedal rod . . . . .	6-50-1
	3-09-3	to	6-50-12
Clutch pedal . . . . .	6-38-1	Clutch pedal shaft . . . . .	6-43-7
	to	to	6-43-13
	6-38-26	Clutch pressure plate . . . . .	6-15-1
Clutch pedal pad . . . . .	6-39-2	Clutch pressure spring . . . . .	6-16-1
Clutch pedal rod . . . . .	6-50-1	Clutch release bearing . . . . .	6-19-2
	to	to	6-19-3
	6-50-12	Clutch release bearing return spring . . . .	6-20-14
Clutch pedal shaft . . . . .	6-43-7	Clutch release center spring . . . . .	6-35-1
	to	to	6-35-19
	6-43-13	Clutch release fork . . . . .	6-22-1
Clutch pressure plate . . . . .	6-15-1	to	6-22-19
Clutch pressure spring . . . . .	6-16-1	Clutch release fork return spring . . . . .	6-27-5
Clutch release bearing . . . . .	6-19-2	Clutch release lever . . . . .	6-17-3
	to	Clutch release rod . . . . .	6-24-1
	6-19-3	to	6-24-6
Clutch release bearing return spring . . . .	6-20-14	Clutch torque shaft . . . . .	6-52-1
Clutch release center spring . . . . .	6-35-1	to	6-52-15
	to	Coil, ignition . . . . .	8-35-4
	6-35-19	to	8-35-115
Clutch release fork . . . . .	6-22-1	Component parts, alternator . . . . .	8-29-17
	to	to	8-29-208
	6-22-19	Component parts, generator . . . . .	8-29-17
Clutch release fork return spring . . . . .	6-27-5	to	8-29-208
Clutch release lever . . . . .	6-17-3	Component parts, shock absorber . . . . .	17-26-11
Clutch release rod . . . . .	6-24-1	to	17-26-38
	to	Component parts and carrier, automatic 3	21-135-9
	6-24-6	speed transmission reverse planet pinion .	to
Clutch torque shaft . . . . .	6-52-1	to	21-135-50
	to	Component parts and carrier, powerflite	21-134-5
	6-52-15	transmission kickdown planet pinion . . . .	to
Coil, ignition . . . . .	8-35-4	to	21-134-40
	to	Component parts and carrier, powerflite	21-135-5
	8-35-115	transmission reverse planet pinion . . . . .	to
Component parts, alternator . . . . .	8-29-17	to	21-135-35
	to	Component parts and hot water heater . . .	1-48-1
	8-29-208	to	1-48-942
Component parts, generator . . . . .	8-29-17	Component parts for power brake power	5-100-5
	to	unit . . . . .	to
	8-29-208	to	5-100-210
		Components and carrier, automatic 3	21-134-5
		speed transmission front and rear planet	to
		pinion . . . . .	21-134-51
		to	21-134-5
		Components and carrier, automatic 3	21-134-5
		speed transmission kickdown planet . . . . .	to
		to	21-134-51
		Compressor . . . . .	24-25-2
		to	24-25-260
		Condenser . . . . .	24-27-5
		Conditioning, air . . . . .	24-01-1
		to	24-01-87
		Connecting rod . . . . .	9-31-4
		to	9-31-10
		Connecting rod bearing package . . . . .	9-32-2
		Connection and cable . . . . .	8-16-1
		to	8-16-10
		Connector, power brake tube . . . . .	5-110-18
		Console floor tunnel . . . . .	23-38-5
		to	23-38-24
		Control, air conditioning . . . . .	24-24-5
		to	24-24-170
		Control, door lock and remote . . . . .	23-18-5
		to	23-18-40
		Control, hood lock . . . . .	15-14-1
		to	15-14-21
		Control, horn . . . . .	8-33-4
		to	8-33-164
		Converter, torque . . . . .	9-46-4
		to	9-46-229
		Coordinator switch . . . . .	1-82-14
		Core, radiator . . . . .	7-11-3
		Countershaft, standard transmission . . . .	21-24-2
		to	21-24-22

# 1961 PASSENGER CAR PARTS CATALOG

PART NAME	CODE	PART NAME	CODE
Coupling and tube, power steering gear. . .	19-15-4 to 19-15-121	Cylinder, master . . . . .	5-39-1 to 5-39-27
Coupling and tube, standard steering gear .	19-15-4 to 19-15-121	Cylinder, wheel brake . . . . .	5-64-1 to 5-64-2
Courtesy lamp. . . . .	8-11-6 to 8-11-12	Cylinder and keys, lock . . . . .	23-17-2 to 23-17-72
Courtesy lamp switch . . . . .	8-11-6	Cylinder block . . . . .	9-02-5 to 9-02-16
Courtesy light. . . . .	1-14-4 to 1-14-40	Cylinder head . . . . .	9-03-4 to 9-03-34
Cover, chain case . . . . .	9-23-5 to 9-23-40	Cylinder head water outlet elbow . . . . .	9-05-5 to 9-05-6
Cover, standard steering gear housing . . .	19-04-1 to 19-04-13	<b>D</b>	
Cover, standard transmission case . . . . .	21-29-3 to 21-29-25	Damper, crankshaft vibration . . . . .	9-13-5
Cover, universal joint . . . . .	16-07-3 to 16-07-4	Deck lid . . . . .	23-19-8 to 23-19-185
Cover and tubing, brake . . . . .	5-53-3 to 5-53-4	Deck lid tire cover . . . . .	1-02-1
Cowl vent . . . . .	23-61-39 to 23-61-119	Deflector, fuel tank stone . . . . .	14-87-2
Crank, throttle control bell . . . . .	14-14-1 to 14-14-57	Deflector, radiator stone . . . . .	7-35-2 to 7-35-12
Crankcase breather pipe inlet . . . . .	10-01-21	Diaphragm, anti-stall . . . . .	14-50-25 to 14-50-39
Crankcase ventilator outlet. . . . .	10-02-8 to 10-02-67	Differential and carrier, rear axle . . . . .	3-03-1 to 3-03-36
Crankshaft . . . . .	9-07-5 to 9-07-22	Differential bearing . . . . .	3-11-1 to 3-11-14
Crankshaft bearing cap. . . . .	9-10-2 to 9-10-19	Differential case . . . . .	3-04-6 to 3-04-10
Crankshaft bearing package . . . . .	9-09-2	Differential pinion . . . . .	3-07-1 to 3-07-2
Crankshaft rear bearing oil seal . . . . .	9-11-1 to 9-11-8	Differential pinion shaft . . . . .	3-08-1 to 3-08-2
Crankshaft sprocket. . . . .	9-08-5 to 9-08-6	Differential side gear. . . . .	3-06-5 to 3-06-8
Crankshaft vibration damper. . . . .	9-13-5	Dimmer, automatic headlamp . . . . .	1-04-4 to 1-04-12
Cross, universal joint . . . . .	16-08-6 to 16-08-7	Directional signal lamp. . . . .	8-55-1 to 8-55-332
Crossmember, frame engine rear support . .	9-69-4 to 9-69-28	Disc, clutch . . . . .	6-13-1 to 6-13-19
Crossmember, frame front. . . . .	13-11-5	Distributor, ignition . . . . .	8-27-1 to 8-27-352
Crossmember, frame rear . . . . .	13-18-4	Dome lamp and switch . . . . .	5-05-6 to 5-05-32
Crossmember, frame transmission mounting	13-16-5	Dome lamp switch . . . . .	8-05-14
Cup, master cylinder piston . . . . .	5-45-8		
Cup, wheel cylinder piston . . . . .	5-71-1 to 5-71-2		
Cylinder, ignition lock . . . . .	8-35-4 to 8-35-122		

PART NAME	CODE	PART NAME	CODE
Door . . . . .	23-11-1 to 23-11-24	Evaporator unit . . . . .	24-28-3 to 24-28-392
Door check . . . . .	23-10-1 to 23-10-17	Exhaust pipe . . . . .	11-05-1 to 11-05-12
Door edge protector . . . . .	1-135-1	Exhaust pipe flange gasket and stud . . . . .	11-06-8
Door hinge . . . . .	23-15-1 to 23-15-22	Exhaust pipe support and clamp . . . . .	11-08-1 to 11-08-3
Door lock and remote control . . . . .	23-18-5 to 23-18-120	Exhaust valve . . . . .	9-39-6
Door regulator . . . . .	23-14-7 to 23-14-153	Expander, wheel cylinder piston . . . . .	5-72-1
Door remote control handle . . . . .	23-14-7 to 23-14-153	Extension, automatic 3 speed transmission case . . . . .	21-04-1 to 21-04-11
Drain cock, radiator . . . . .	7-13-2	Extension, powerlite transmission case . . . . .	21-04-1 to 21-04-2
Drain trough . . . . .	23-59-37 to 23-59-61	Extension, standard transmission case . . . . .	21-04-1 to 21-04-11
Drain trough moulding . . . . .	23-59-37 to 23-59-61	<b>F</b>	
Drier, receiver . . . . .	24-26-20 to 24-26-100	Fan . . . . .	7-02-1 to 7-02-16
Drive gear and pinion set . . . . .	3-19-1	Fan and related drive belt . . . . .	7-03-1
Drive gear bolt . . . . .	3-20-1 to 3-20-2	Fan belt idler pulley . . . . .	7-04-1 to 7-04-10
Drive pinion bearing . . . . .	3-22-24 to 3-22-45	Fan drive and driven pulley . . . . .	7-06-1 to 7-06-14
Drive shaft . . . . .	3-32-1 to 3-32-9	Fan fluid drive unit . . . . .	7-07-1
Drive shaft bearing . . . . .	3-33-1 to 3-33-9	Fan pulley hub . . . . .	7-05-1
Drive shaft oil seal . . . . .	3-35-14	Fender, front . . . . .	12-01-5 to 12-01-105
Drum, brake . . . . .	22-04-2 to 22-04-11	Fender pillar support and cowl bracket . . . . .	12-05-2
Drum, hub and brake . . . . .	22-03-1 to 22-03-2	Fender skirt . . . . .	1-45-1
Drum, parking brake . . . . .	4-01-1	Filter, fuel . . . . .	14-67-1 to 14-67-10
<b>E</b>		Filter, oil . . . . .	10-26-5 to 10-26-65
Elbow, cylinder head water outlet . . . . .	9-05-5 to 9-05-6	Filter and strainer automatic 3 speed transmission oil pump . . . . .	21-117-1 to 21-117-10
Elbow, water pump . . . . .	7-48-22	Filter and strainer, powerlite transmission oil pump . . . . .	21-117-1 to 21-117-24
Electric seat adjuster switch . . . . .	23-47-446	Flange, propeller shaft . . . . .	16-20-1 to 16-20-3
Electric window lift switch . . . . .	23-41-170	Floor board . . . . .	23-04-2 to 23-04-250
Engine . . . . .	9-01-5 to 9-01-24	Floor mat . . . . .	23-20-8 to 23-20-65
Engine front support . . . . .	9-64-5 to 9-64-24	Floor tunnel console . . . . .	23-38-5 to 23-38-24
Engine front support insulator . . . . .	9-67-4	Fluid, brake . . . . .	5-01-2
Engine rear support insulator . . . . .	9-71-5 to 9-71-19	Flywheel . . . . .	9-45-1 to 9-45-7

## 1961 PASSENGER CAR PARTS CATALOG

ALPHABETICAL  
INDEX

PART NAME	CODE	PART NAME	CODE
Folding top . . . . .	23-58-3 to 23-58-608	Front wheel lower control arm . . . . .	2-10-6 to 2-10-77
Folding top lift switch . . . . .	23-58-532	Front wheel upper control arm . . . . .	2-08-5 to 2-08-75
Foot dimmer switch . . . . .	8-53-150	Fuel filter . . . . .	14-67-1 to 14-67-10
Fork, clutch release . . . . .	6-22-1 to 6-22-19	Fuel line clip . . . . .	14-90-1
Fork, standard transmission gearshift . . .	21-39-3	Fuel line tube . . . . .	14-89-2 to 14-89-57
Frame . . . . .	13-01-1 to 13-01-6	Fuel pump . . . . .	14-73-1
Frame engine rear support crossmember . .	9-69-4 to 9-69-28	Fuel pump mounting . . . . .	14-74-1 to 14-74-2
Frame engine rear support crossmember bracket . . . . .	9-70-9	Fuel pump push rod . . . . .	14-77-17
Frame front crossmember . . . . .	13-11-5 to 13-11-14	Fuel tank . . . . .	14-86-1 to 14-86-85
Frame rear crossmember . . . . .	13-18-4	Fuel tank gauge . . . . .	14-72-1 to 14-72-47
Frame rear spring hanger . . . . .	13-54-4 to 13-54-15	Fuel tank locking cap . . . . .	1-39-2
Frame sub-sidemember . . . . .	13-04-20 to 13-04-21	Fuel tank stone deflector . . . . .	14-87-2
Frame transmission mounting crossmember	13-16-5	Fuel tank support . . . . .	14-88-21 to 14-88-27
Front bumper face bar . . . . .	13-64-3 to 13-64-151	<b>G</b>	
Front door automatic lamp switch . . . . .	8-12-2	Garnish moulding . . . . .	23-22-7 to 23-22-160
Front fender . . . . .	12-01-5 to 12-01-105	Gasket, manifold . . . . .	9-50-1 to 9-50-16
Front fender brace . . . . .	12-07-1 to 12-07-2	Gasket, water pump . . . . .	7-44-3 to 7-44-4
Front fender bracket . . . . .	12-06-3	Gasket and stud, exhaust pipe flange . . . .	11-06-8
Front fender moulding package . . . . .	12-15-2 to 12-15-21	Gauge, fuel tank . . . . .	14-72-1 to 14-72-47
Front fender name plate package . . . . .	12-15-2 to 12-15-21	Gear, differential side . . . . .	3-06-5 to 3-06-8
Front fender plate . . . . .	12-04-4 to 12-04-33	Gear, oil pump drive . . . . .	10-10-1
Front fender seal . . . . .	12-02-5 to 12-02-12	Gear, power steering . . . . .	19-01-4 to 19-01-62
Front fender shield . . . . .	12-04-4 to 12-04-33	Gear, standard steering . . . . .	19-01-3 to 19-01-24
Front fender shim . . . . .	12-02-5 to 12-02-12	Gear, standard transmission . . . . .	21-10-4 to 21-10-16
Front fender support . . . . .	12-07-1	Gear, standard transmission clutch . . . . .	21-14-1 to 21-14-20
Front seat . . . . .	23-45-10 to 23-45-112	Gear, standard transmission countershaft . .	21-15-2 to 21-15-33
Front seat adjuster . . . . .	23-47-6 to 23-47-458	Gear, standard transmission reverse idler .	21-11-1 to 21-11-9
Front suspension torsion parts . . . . .	2-14-1 to 2-14-25		
Front wheel bearing . . . . .	22-06-1 to 22-06-18		



PART NAME	CODE	PART NAME	CODE
Gearshift, standard transmission remote control . . . . .	21-42-11 to 21-42-43	Hood bumper . . . . .	15-09-4 to 15-09-22
Generator . . . . .	8-28-3 to 8-28-289	Hood hinge . . . . .	15-19-2 to 15-19-40
Generator component parts . . . . .	8-29-17 to 8-29-208	Hood letters . . . . .	15-06-3 to 15-06-17
Glass channel . . . . .	23-09-2 to 23-09-75	Hood lock . . . . .	15-11-3 to 15-11-73
Glove box . . . . .	23-06-4 to 23-06-102	Hood lock control . . . . .	15-14-1 to 15-14-21
Glove compartment light . . . . .	1-19-1 8-38-4 to 8-38-23	Hood lock striker . . . . .	15-13-2 to 15-13-6
Governor . . . . .	14-68-3 to 14-68-8	Hood medallion . . . . .	15-06-3 to 15-06-17
Governor, automatic 3 speed transmission . . . . .	21-138-2 to 21-138-38	Hood moulding . . . . .	15-25-2
Governor, powerflite transmission . . . . .	21-138-2 to 21-138-38	Hood name plate . . . . .	15-06-3 to 15-06-17
Grille, radiator . . . . .	7-16-11 to 7-16-73	Hood top panel . . . . .	15-03-3 to 15-03-61
Grille guard . . . . .	1-01-1	Horn . . . . .	8-32-2 to 8-32-18
Grommet . . . . .	8-30-1	Horn control . . . . .	8-33-4 to 8-33-164
Guard, bumper . . . . .	13-68-6 to 13-68-18	Horn switch . . . . .	8-33-90
Guide, brake shoe . . . . .	5-26-1 to 5-26-5	Hose, brake flexible . . . . .	5-62-1 to 5-62-20
<b>H</b>		Hose, power brake vacuum . . . . .	5-111-17
Hand brake signal lamp . . . . .	1-09-1 8-31-2 to 8-31-16	Hose, power steering gear . . . . .	19-58-7 to 19-58-31
Handle, door remote control . . . . .	23-14-7 to 23-14-153	Hose, radiator . . . . .	7-14-1 to 7-14-31
Hanger, frame rear spring . . . . .	13-54-4 to 13-54-15	Hot water heater and component parts . . . . .	1-48-1 to 1-48-942
Head, cylinder . . . . .	9-03-4 to 9-03-34	Housing, clutch . . . . .	6-09-1 to 6-09-11
Headlamp . . . . .	8-34-1 to 8-34-374	Housing, power steering gear . . . . .	19-02-4 to 19-02-69
Headlamp and instrument lamp switch . . . . .	8-53-270	Housing, rear axle . . . . .	3-02-1 to 3-02-20
Headlamp beam indicator light . . . . .	8-39-3 to 8-39-15	Housing, standard steering gear . . . . .	19-02-4 to 19-02-18
Heater control switch . . . . .	1-48-770	Housing, water pump . . . . .	7-43-1
Hinge, door . . . . .	23-15-1 to 23-15-22	Hub, fan pulley . . . . .	7-05-1
Hinge, hood . . . . .	15-19-2 to 15-19-40	Hub, wheel . . . . .	22-05-14 to 22-05-24
		Hub and brake drum . . . . .	22-03-1 to 22-03-2

# 1961 PASSENGER CAR PARTS CATALOG

ALPHABETICAL INDEX

PART NAME	CODE	PART NAME	CODE
Hub cap . . . . .	22-08-5 to 22-08-57	Joint, universal . . . . .	16-03-1 to 16-03-20
Hydraulic brake switch . . . . .	14-02-32	<b>K</b>	
<b>I</b>		Keys and cylinder, lock . . . . .	23-17-2 to 23-17-72
Ignition . . . . .	8-36-1 to 8-36-137	Knuckle, steering . . . . .	2-03-3
Ignition coil . . . . .	8-35-4 to 8-35-115	<b>L</b>	
Ignition distributor . . . . .	8-27-1 to 8-27-352	Lamp, back-up . . . . .	1-10-1 8-56-1 to 8-56-63
Ignition lamp . . . . .	8-40-8 to 8-40-16	Lamp, courtesy . . . . .	8-11-6 to 8-11-12
Ignition switch and lock cylinder . . . . .	8-35-4 to 8-35-115	Lamp, directional signal . . . . .	8-55-1 to 8-55-332
Impeller, water pump . . . . .	7-45-31	Lamp, hand brake signal . . . . .	1-09-1 8-31-1 to 8-31-16
Indicator, oil level . . . . .	10-03-4 to 10-03-7	Lamp, ignition . . . . .	8-40-8 to 8-40-16
Inlet, crankcase breather pipe . . . . .	10-01-21	Lamp, license plate . . . . .	8-57-10 to 8-57-89
Instrument panel . . . . .	23-33-10 to 23-33-245	Lamp, map . . . . .	8-42-5 to 8-42-31
Instrument panel instruments . . . . .	8-37-1 to 8-37-517	Lamp, parking . . . . .	8-50-82 to 8-50-349
Instrument panel light . . . . .	8-41-36	Lamp, parking brake signal . . . . .	8-31-2 to 8-31-16
Instrument panel wiring . . . . .	8-19-25 to 8-19-83	Lamp, quarter . . . . .	8-11-6 to 8-11-12
Instruments, instrument panel . . . . .	8-37-1 to 8-37-517	Lamp, stop . . . . .	8-58-60
Insulator, body . . . . .	23-31-33 to 23-31-205	Lamp, tail and stop . . . . .	8-55-1 to 8-55-332
Insulator, engine front support . . . . .	9-67-4	Lamp, trunk . . . . .	8-13-1 to 8-13-9
Insulator, engine rear support . . . . .	9-71-5 to 9-71-19	Lamp and switch, dome . . . . .	5-05-6 to 5-05-32
Insulator, propeller shaft center bearing housing . . . . .	16-17-1	Leaf, rear spring . . . . .	17-12-4 to 17-12-12
Intake, air . . . . .	23-61-39 to 23-61-119	Letter, hood . . . . .	15-06-3 to 15-06-17
Intake, valve . . . . .	9-39-5	Level, indicator oil . . . . .	10-03-4 to 10-03-7
<b>J</b>		Leveller, load . . . . .	1-07-1
Jack, bumper . . . . .	13-72-1 to 13-72-4	Lever, automatic 3 speed transmission control . . . . .	21-142-12 to 21-142-21
Jacket, power steering gear column . . . . .	19-14-1 to 19-14-74	Lever, clutch release . . . . .	6-17-3
Jacket, standard steering gear column . . . . .	19-14-1 to 19-14-77		
Joint, throttle linkage ball . . . . .	14-13-1 to 14-13-5		

PART NAME	CODE	PART NAME	CODE
Lever, parking brake . . . . .	4-25-1 to 4-25-21	Lock cylinder and switch, ignition . . . . .	8-35-4 to 8-35-122
Lever, parking brake operating . . . . .	4-26-1 to 4-26-28	Low oil pressure switch . . . . .	8-53-327
Lever, powerflite transmission control . . . . .	21-142-12 to 21-142-21	Luggage rack . . . . .	1-74-1
Lever, standard transmission gearshift . . . . .	21-30-2 to 21-30-438	<b>M</b>	
License mounting parts . . . . .	8-47-8 to 8-47-131	Manifold . . . . .	9-48-6 to 9-48-158
License plate lamp . . . . .	8-57-10 to 8-57-89	Manifold gasket . . . . .	9-50-1 to 9-50-16
Lid, deck . . . . .	23-19-8 to 23-19-185	Manifold heat control valve . . . . .	9-59-13 to 9-59-15
Lift, window (electric) . . . . .	23-41-4 to 23-41-281	Manifold heat control valve stop . . . . .	9-62-1
Lift, window (manual) . . . . .	23-39-2 to 23-39-53	Manifold heat control valve thermostat . . . . .	9-58-1 to 9-58-14
Light, courtesy . . . . .	1-14-4 to 1-14-40	Map lamp . . . . .	8-42-5 to 8-42-31
Light, glove compartment . . . . .	1-19-1 to 8-38-4	Map lamp switch . . . . .	8-42-25
Light, headlamp beam indicator . . . . .	8-38-23 to 8-39-3	Map light . . . . .	1-14-4 to 1-14-40
Light, instrument panel . . . . .	8-39-15 to 8-41-36	Master cylinder . . . . .	5-39-1 to 5-39-27
Light, map . . . . .	1-14-4 to 1-14-40	Master cylinder boot . . . . .	5-40-1 to 5-40-3
Light, trunk compartment . . . . .	1-30-1	Master cylinder brake tube . . . . .	5-52-3 to 5-52-62
Light, underhood . . . . .	1-13-1 to 1-13-10	Master cylinder piston . . . . .	5-44-3 to 5-44-8
Light, warning . . . . .	1-06-1 to 1-06-2	Master cylinder piston cup . . . . .	5-45-8
Lighter, cigar . . . . .	1-12-1 to 8-20-3	Master cylinder piston push rod . . . . .	5-47-2 to 5-47-10
Liner, body . . . . .	8-20-20 to 23-31-33	Master cylinder piston return spring . . . . .	5-46-1
Lining and shoe, wheel brake . . . . .	23-31-205 to 5-03-1	Master cylinder valve . . . . .	5-43-1 to 5-43-5
Load leveller . . . . .	5-03-23 to 1-07-1	Mat, floor . . . . .	23-20-8 to 23-20-65
Lock, door Safe-T-Matic . . . . .	23-13-0	Mechanical brake switch . . . . .	14-02-32
Lock, hood . . . . .	15-11-3 to 15-11-73	Medallion, hood . . . . .	15-06-3 to 15-06-17
Lock, transmission parking . . . . .	4-10-1 to 4-10-28	Medallion, radiator grille . . . . .	7-17-1 to 7-17-2
Lock cylinder and keys . . . . .	23-17-2 to 23-17-72	Mirror . . . . .	1-76-1 to 1-76-3
		Motor, starting . . . . .	23-21-3 to 23-21-74
			8-52-4 to 8-52-375

PART NAME	CODE	PART NAME	CODE
Moulding, drain trough . . . . .	23-59-37 to 23-59-61	Package, front fender name plate . . . . .	12-15-2 to 12-15-21
Moulding, garnish . . . . .	23-22-7 to 23-22-160	Package, power brake . . . . .	1-42-1
Moulding, hood . . . . .	15-25-2	Package, powerflite transmission . . . . .	21-01-3
Moulding, outside finish . . . . .	23-23-2 to 23-23-85	Package, powerflite transmission neutral starter switch . . . . .	21-113-24
Moulding, trim finish . . . . .	23-26-2 to 23-26-89	Package, silencer . . . . .	9-41-1 to 9-41-12
Mounting, fuel pump . . . . .	14-74-1	Package, standard transmission . . . . .	21-01-3
Mounting parts, license . . . . .	8-47-8 to 8-47-131	Package, switch, automatic 3 speed transmission . . . . .	21-113-24
Muffler . . . . .	11-01-1	Package, wheel cylinder service . . . . .	5-63-1 to 5-63-3
Muffler support . . . . .	11-02-4	Pad, body . . . . .	23-31-33 to 23-31-205
<b>N</b>		Pad, brake pedal . . . . .	5-28-8
Nipple, water pump . . . . .	7-48-22	Pad, clutch pedal . . . . .	6-39-2
<b>O</b>		Pan, automatic 3 speed transmission oil . . . . .	21-119-3 to 21-119-25
Oil filter . . . . .	10-26-5 to 10-26-65	Pan, body . . . . .	23-32-8 to 23-32-115
Oil level indicator . . . . .	10-03-4 to 10-03-7	Pan, clutch housing . . . . .	6-10-2 to 6-10-10
Oil pan . . . . .	10-24-1 to 10-24-38	Pan, oil . . . . .	10-24-1 to 10-24-38
Oil pressure relief valve . . . . .	10-22-11 to 10-22-41	Pan, powerflite transmission oil . . . . .	21-119-3 to 21-119-19
Oil pump . . . . .	10-07-2 to 10-07-12	Panel, body . . . . .	23-34-13 to 23-34-354
Oil pump drive gear . . . . .	10-10-1	Panel, hood top . . . . .	15-03-3 to 15-03-61
Oil pump drive shaft . . . . .	10-09-1 to 10-09-7	Panel, instrument . . . . .	23-33-10 to 23-33-245
Oil pump rotor . . . . .	10-14-18 to 10-14-19	Parking brake adjuster . . . . .	4-07-1 to 4-07-28
Oil strainer . . . . .	10-23-7	Parking brake band . . . . .	4-03-1 to 4-03-11
Ornament, radiator grille . . . . .	7-17-1 to 7-17-2	Parking brake cable . . . . .	4-23-1 to 4-23-51
Outlet, crankcase ventilator . . . . .	10-02-8 to 10-02-67	Parking brake drum . . . . .	4-01-1
Outside finish moulding . . . . .	23-23-2 to 23-23-85	Parking brake lever . . . . .	4-25-1 to 4-25-21
<b>P</b>		Parking brake operating lever . . . . .	4-26-1 to 4-26-28
Package, brake self adjusting . . . . .	1-44-1	Parking brake shoe . . . . .	4-03-1 to 4-03-11
Package, connecting rod bearing . . . . .	9-32-2	Parking brake shoe anchor . . . . .	4-06-1 to 4-06-11
Package, crankshaft bearing . . . . .	9-09-2		
Package, front fender moulding . . . . .	12-15-2 to 12-15-21		

PART NAME	CODE	PART NAME	CODE
Parking brake signal lamp . . . . .	8-31-2 to 8-31-16	Plate, clutch cover and pressure . . . . .	6-14-1 to 6-14-10
Parking brake signal lamp switch . . . . .	8-31-10	Plate, clutch pressure . . . . .	6-15-1
Parking brake support . . . . .	4-29-1 to 4-29-16	Plate, front fender . . . . .	12-04-4 to 12-04-33
Parking lamp . . . . .	8-50-82 to 8-50-349	Plate, hood name . . . . .	15-06-3 to 15-06-17
Parts, carburetor choke attaching . . . . .	14-39-46 to 14-39-49	Plug, body . . . . .	23-32-8 to 23-32-115
Parts, component for power brake power unit . . . . .	5-100-5 to 5-100-210	Power brake . . . . .	1-42-1
Pedal, accelerator . . . . .	14-01-1 to 14-01-31	Power brake air cleaner . . . . .	5-113-17
Pedal, clutch . . . . .	6-38-1 to 6-38-26	Power brake hose clamp . . . . .	5-112-1
Pedal and bushing, brake . . . . .	7-27-1 to 7-27-35	Power brake power unit . . . . .	5-100-1 to 5-100-157
Pillar, body . . . . .	23-36-5 to 23-36-131	Power brake tube connector . . . . .	5-110-18
Pilot, automatic . . . . .	14-02-1 to 14-02-70	Power brake vacuum check valve . . . . .	5-105-1
Pin, piston . . . . .	9-36-5 to 9-36-7	Power brake vacuum hose . . . . .	5-111-17
Pinion, automatic 3 speed transmission speedometer . . . . .	21-85-5 to 21-85-76	Power brake vacuum tank . . . . .	5-102-2 to 5-102-11
Pinion, differential . . . . .	3-07-1 to 3-07-2	Power steering column bracket . . . . .	19-31-1 to 19-31-24
Pinion, powerflite transmission speedometer	21-85-7	Power steering gear . . . . .	19-01-4 to 19-01-62
Pinion, standard transmission main drive . .	21-09-2 to 21-09-33	Power steering gear arm and idler arm . . .	19-27-2 to 19-27-55
Pinion, standard transmission speedometer .	21-85-5 to 21-85-61	Power steering gear column jacket . . . . .	19-14-1 to 19-14-74
Pipe, exhaust . . . . .	11-05-1 to 11-05-12	Power steering gear hose . . . . .	19-58-7 to 19-58-31
Pipe, tail . . . . .	11-09-3	Power steering gear housing . . . . .	19-02-4 to 19-02-69
Piston, master cylinder . . . . .	5-44-3 to 5-44-8	Power steering gear piston . . . . .	19-56-6 to 19-56-90
Piston, power steering gear . . . . .	19-56-6 to 19-56-90	Power steering gear shaft and roller tooth .	19-19-1 to 19-19-72
Piston, wheel cylinder . . . . .	5-70-1	Power steering gear tube and coupling . . .	19-15-4 to 19-15-121
Piston pin . . . . .	9-36-5 to 9-36-7	Power steering gear valve . . . . .	19-57-1 to 19-57-64
Piston w/pin . . . . .	9-34-5	Power steering gearshift control rod . . . .	19-48-1 to 19-48-23
Piston ring set . . . . .	9-35-1	Power steering gearshift rod . . . . .	19-46-2 to 19-46-35
		Power steering gearshift tube . . . . .	19-46-2 to 19-46-35
		Power steering oil pump . . . . .	19-54-2 to 19-54-258

PART NAME	CODE	PART NAME	CODE
Power steering wheel . . . . .	19-30-4 to 19-30-18	Powerflite transmission speedometer pinion	21-85-7 to 21-85-76
Powerflite transmission . . . . .	21-02-1 to 21-02-6	Powerflite transmission switch package . . .	21-113-24
Powerflite transmission band . . . . .	21-136-5 to 21-136-52	Powerflite transmission torque converter reaction shaft . . . . .	21-129-5 to 21-129-23
Powerflite transmission case . . . . .	21-03-1 to 21-03-45	Powerflite transmission valve body and valves . . . . .	21-139-4 to 21-139-193
Powerflite transmission case extension . . .	21-04-1 to 21-04-2	Propeller shaft . . . . .	16-02-1 to 16-02-5
Powerflite transmission control lever . . . .	21-142-12 to 21-142-21	Propeller shaft center bearing . . . . .	16-16-1 to 16-16-47
Powerflite transmission direct clutch . . . .	21-133-5 to 21-133-43	Propeller shaft center bearing housing insulator . . . . .	16-17-1 16-20-1
Powerflite transmission gearshift button and cable . . . . .	21-30-320 to 21-30-394	Propeller shaft flange . . . . .	16-20-1 to 16-20-3
Powerflite transmission governor . . . . .	21-138-2 to 21-138-38	Propeller shaft sliding yoke . . . . .	16-14-1 to 16-14-9
Powerflite transmission input shaft . . . . .	21-129-5 to 21-129-23	Propeller shaft spline . . . . .	16-14-1 to 16-14-9
Powerflite transmission kickdown planet pinion carrier and component parts . . . .	21-134-5 to 21-134-40	Protector, door edge . . . . .	1-135-1
Powerflite transmission neutral starter switch . . . . .	21-113-24 to 21-113-29	Pulley, fan belt idler . . . . .	7-04-1 to 7-04-10
Powerflite transmission oil pan . . . . .	21-119-3 to 21-119-19	Pulley, fan drive and driven . . . . .	7-06-1 to 7-06-14
Powerflite transmission oil pump . . . . .	21-118-6 to 21-118-45	Pump, automatic 3 speed transmission oil .	21-118-1 to 21-118-55
Powerflite transmission oil pump strainer and filter . . . . .	21-117-1 to 21-117-24	Pump, fuel . . . . .	14-73-1
Powerflite transmission output shaft . . . . .	21-05-1 to 21-05-26	Pump, oil . . . . .	10-07-2 to 10-07-12
Powerflite transmission package . . . . .	21-01-3	Pump, power steering oil . . . . .	19-54-2 to 19-54-258
Powerflite transmission regulator valve body and valves . . . . .	21-131-1 to 21-131-50	Pump, powerflite transmission oil . . . . .	21-118-6 to 21-118-45
Powerflite transmission reverse planet pinion carrier and component parts . . . .	21-135-5 to 21-135-35	Pump, water . . . . .	7-42-1 to 7-42-4
Powerflite transmission servos . . . . .	21-137-5 to 21-137-59	<b>Q</b>	
Powerflite transmission set . . . . .	21-01-3	Quarter, lamp . . . . .	8-11-6 to 8-11-12
Powerflite transmission speedometer cable includes shaft and housing . . . . .	21-84-1 to 21-84-4	<b>R</b>	
		Rack, luggage . . . . .	1-74-1
		Rack, roof rail and luggage . . . . .	23-40-82 to 23-40-185
		Radiator core . . . . .	7-11-3 to 7-11-4

PART NAME	CODE	PART NAME	CODE
Radiator cross bar . . . . .	7-33-1 to 7-33-4	Rear spring silent block . . . . .	17-17-3 to 17-17-5
Radiator drain cock . . . . .	7-13-2	Rear window defroster switch . . . . .	1-48-300
Radiator dust shield . . . . .	7-31-2 to 7-31-45	Rear window defroster switch package . . . . .	1-48-299
Radiator fan shroud . . . . .	7-08-2 to 7-08-16	Receiver, ash . . . . .	23-02-1 to 23-02-150
Radiator filler cap . . . . .	7-12-1	Receiver drier . . . . .	24-26-20 to 24-26-100
Radiator grille . . . . .	7-16-11 to 7-16-73	Record player, Hi Fi . . . . .	1-49-1 to 1-49-10
Radiator grille medallion . . . . .	7-17-1 to 7-17-2	Reinforcement, body . . . . .	23-07-168 to 23-07-169
Radiator grille ornament . . . . .	7-17-1 to 7-17-2	Rocker, valve . . . . .	9-43-1 to 9-43-26
Radiator hose . . . . .	7-14-1 to 7-14-31	Rod, accelerator pedal to accelerator shaft . . . . .	14-07-1 to 14-07-15
Radiator stone deflector . . . . .	7-35-2 to 7-35-12	Rod, clutch pedal . . . . .	6-50-1 to 6-50-12
Radiator yoke . . . . .	7-26-2 to 7-26-37	Rod, clutch release . . . . .	6-24-1 to 6-24-6
Radio . . . . .	1-87-2 to 1-87-464	Rod, connecting . . . . .	9-31-4 to 9-31-10
Radio antenna . . . . .	1-88-1 to 1-88-206	Rod, fuel pump push . . . . .	14-77-17
Rail, standard transmission gearshift . . . . .	21-34-42 to 21-34-47	Rod, master cylinder piston push . . . . .	5-47-2 to 5-47-10
Rear axle control strut . . . . .	3-01-25 to 3-01-35	Rod, power steering gearshift . . . . .	19-46-2 to 19-46-41
Rear axle differential and carrier . . . . .	3-03-1 to 3-03-36	Rod, power steering gearshift control . . . . .	19-48-1 to 19-48-23
Rear axle differential clutch parts . . . . .	3-09-1 to 3-09-3	Rod, standard gearshift control . . . . .	19-48-1 to 19-48-23
Rear axle housing . . . . .	3-02-1 to 3-02-20	Rod, standard steering gearshift . . . . .	19-46-2 to 19-46-35
Rear bumper face bar . . . . .	13-66-3 to 13-66-147	Rod, standard transmission gearshift . . . . .	21-30-2 to 21-30-438
Rear spring . . . . .	17-11-1 to 17-11-10	Rod, steering knuckle tie . . . . .	2-07-1 to 2-07-28
Rear spring bumper . . . . .	17-19-3 to 17-19-20	Rod, valve push . . . . .	9-42-1
Rear spring center bolt . . . . .	17-14-10	Rod, wheel cylinder piston push . . . . .	5-12-1
Rear spring clip . . . . .	17-15-1 to 17-15-30	Roller and bushing, universal joint cross . . . . .	16-10-1 to 16-10-3
Rear spring leaf . . . . .	17-12-4 to 17-12-12	Roof rail and luggage rack . . . . .	23-40-82 to 23-40-97
Rear spring shackle . . . . .	17-16-1 to 17-16-8	Rotor, oil pump . . . . .	10-14-19
		Run, window glass . . . . .	23-42-6 to 23-42-57.

PART NAME	CODE	PART NAME	CODE
<b>S</b>			
Safe-T-Matic door lock . . . . .	23-13-0	Shaft, automatic 3 speed transmission output . . . . .	21-05-1 to 21-05-35
Safety belt . . . . .	1-67-1	Shaft, automatic 3 speed transmission torque converter reaction . . . . .	21-129-5 to 21-129-33
Screen, tailgate window . . . . .	1-08-1	Shaft, brake pedal . . . . .	5-29-1
Screw, wheel cylinder bleeder . . . . .	5-67-1	Shaft, clutch pedal . . . . .	6-43-7 to 6-43-19
Seal, body . . . . .	23-31-33 to 23-31-205	Shaft, clutch torque . . . . .	6-52-1 to 6-52-15
Seal, crankshaft rear bearing oil . . . . .	9-11-1 to 9-11-8	Shaft, differential pinion . . . . .	3-08-1 to 3-08-2
Seal, drive shaft oil . . . . .	3-35-14	Shaft, drive . . . . .	3-32-1 to 3-32-9
Seal, front fender . . . . .	12-02-5 to 12-02-12	Shaft, oil pump drive . . . . .	10-09-1 to 10-09-7
Seal, standard transmission main shaft bearing oil . . . . .	21-22-2	Shaft, powerflite transmission input . . . . .	21-129-5 to 21-129-23
Seal, water pump . . . . .	7-46-1	Shaft, powerflite transmission output . . . . .	21-05-1 to 21-05-26
Seal, wheel brake adjusting cam dust shield	5-22-8	Shaft, powerflite transmission torque converter reaction shaft . . . . .	21-129-5 to 21-129-23
Seat, front . . . . .	23-45-10 to 23-45-112	Shaft, propeller . . . . .	16-02-1 to 16-02-5
Seat, second . . . . .	23-48-6 to 23-48-188	Shaft, standard transmission main . . . . .	21-16-3
Seat, third . . . . .	23-48-6 to 23-48-188	Shaft, standard transmission reverse idler gear . . . . .	21-12-1 to 21-12-2
Seat spring . . . . .	23-52-1	Shaft, sway eliminator . . . . .	17-29-5 to 17-29-21
Second seat . . . . .	23-48-6 to 23-48-188	Shield, battery heat . . . . .	13-35-1
Service parts and carburetor assemblies . .	14-30-1 to 14-30-28	Shield, front fender . . . . .	12-04-4 to 12-04-33
	14-35-1 to 14-35-8	Shield, radiator dust . . . . .	7-31-2 to 7-31-45
	14-39-45	Shield, wheel brake dust . . . . .	5-16-1
	14-41-3	Shim, front fender . . . . .	12-02-5 to 12-02-12
Servos, automatic 3 speed transmission . . .	14-43-5	Shock absorber . . . . .	17-23-3 to 17-23-57
	21-137-5 to 21-137-205	Shock absorber bracket . . . . .	17-24-28
Servos, powerflite transmission . . . . .	21-137-5 to 21-137-59	Shock absorber component parts . . . . .	17-26-11 to 17-26-38
Set, drive gear and pinion . . . . .	3-19-1	Shoe, parking brake . . . . .	4-03-1 to 4-03-11
Set, piston ring . . . . .	9-35-1	Shoe and lining, wheel brake . . . . .	5-03-1 to 5-03-23
Set, powerflite transmission . . . . .	21-01-3		
Set, 3 speed automatic transmission . . . . .	21-01-3		
Set, standard transmission . . . . .	21-01-3		
Shackle, rear spring . . . . .	17-16-1 to 17-16-8		
Shaft, accelerator . . . . .	14-11-1 to 14-11-48		
Shaft, automatic 3 speed transmission input	21-129-5 to 21-129-33		
Shaft, automatic 3 speed transmission intermediate . . . . .	21-129-5 to 21-129-33		



PART NAME	CODE	PART NAME	CODE
Shroud, radiator fan . . . . .	7-08-2 to 7-08-16	Standard steering gear tube and coupling . .	19-15-4 to 19-15-121
Side sill and belt bar . . . . .	23-51-3 to 23-51-45	Standard steering gearshift rod . . . . .	19-46-2 to 19-46-35
Silencer package . . . . .	9-41-1 to 9-41-12	Standard steering gearshift tube . . . . .	19-46-2 to 19-46-35
Skirt, fender . . . . .	1-45-1	Standard steering wheel . . . . .	19-30-4 to 19-30-18
Spare wheel carrier . . . . .	22-20-29 to 22-20-89	Standard transmission . . . . .	21-02-1 to 21-02-6
Spline, propeller shaft . . . . .	16-14-1 to 16-14-9	Standard transmission case . . . . .	21-03-1 to 21-03-25
Spotlight . . . . .	1-108-1 to 1-108-49	Standard transmission case cover . . . . .	21-29-3 to 21-29-25
Spotlight switch . . . . .	1-108-28	Standard transmission case extension . . . .	21-04-1 to 21-04-11
Spring, accelerator pedal return . . . . .	14-06-1 to 14-06-10	Standard transmission clutch gear . . . . .	21-14-1 to 21-14-20
Spring, brake pedal return . . . . .	5-34-1 to 5-34-6	Standard transmission countershaft . . . . .	21-24-2 to 21-24-22
Spring, clutch pressure . . . . .	6-16-1	Standard transmission countershaft bearing .	21-25-2 to 21-25-6
Spring, clutch release bearing return . . . .	6-20-14	Standard transmission countershaft gear . .	21-15-2 to 21-15-33
Spring, clutch release center spring . . . .	6-35-1 to 6-35-18	Standard transmission gear . . . . .	21-10-4 to 21-10-16
Spring, clutch release fork return . . . . .	6-27-5	Standard transmission gearshift fork . . . .	21-39-3
Spring, master cylinder piston return . . . .	5-46-1	Standard transmission gearshift lever . . . .	21-30-2 to 21-30-438
Spring, rear . . . . .	17-11-1 to 17-11-10	Standard transmission gearshift rail . . . .	21-34-42 to 21-34-47
Spring, seat . . . . .	23-52-1	Standard transmission gearshift rod . . . . .	21-30-2 to 21-30-438
Sprocket, camshaft . . . . .	9-17-5 to 9-17-13	Standard transmission main drive pinion . . .	21-09-2 to 21-09-33
Sprocket, crankshaft . . . . .	9-08-5 to 9-08-6	Standard transmission main shaft . . . . .	21-16-3
Standard gearshift control rod . . . . .	19-48-1 to 19-48-23	Standard transmission main shaft bearing . .	21-19-2 to 21-19-15
Standard steering column bracket . . . . .	19-31-1 to 19-31-24	Standard transmission main shaft bearing oil seal . . . . .	21-22-2
Standard steering gear . . . . .	19-01-3 to 19-01-24	Standard transmission main shaft pilot bearing . . . . .	21-17-2 to 21-17-7
Standard steering gear arm and idler arm . .	19-27-2 to 19-27-55	Standard transmission package . . . . .	21-01-3
Standard steering gear column jacket . . . .	19-14-1 to 19-14-77	Standard transmission remote control gearshift . . . . .	21-42-11 to 21-42-43
Standard steering gear housing . . . . .	19-02-4 to 19-02-18		
Standard steering gear housing cover . . . .	19-04-1 to 19-04-13		
Standard steering gear shaft and roller tooth . . . . .	19-19-4 to 19-19-70		

# 1961 PASSENGER CAR PARTS CATALOG

ALPHABETICAL INDEX

PART NAME	CODE	PART NAME	CODE
Standard transmission reverse idler gear . .	21-11-1	Support, wheel brake . . . . .	5-13-1
	to		to
	21-11-9		5-13-35
Standard transmission reverse idler gear shaft . . . . .	21-12-1	Support and clamp, exhaust pipe . . . . .	11-08-1
	to		to
	21-12-2		11-08-3
Standard transmission set . . . . .	21-01-3	Sway eliminator shaft . . . . .	17-29-5
Standard transmission speedometer cable includes shaft and housing . . . . .	21-84-1		to
	to		17-29-21
	21-84-28	Switch, automatic lamp door . . . . .	8-12-1
Standard transmission speedometer pinion . . . . .	21-85-5		to
	to		8-12-3
	21-85-61	Switch, automatic 3 speed transmission neutral starter . . . . .	21-113-24
Starter and ignition switch . . . . .	8-35-59		to
Starter switch . . . . .	8-52-330		21-113-29
Starting motor . . . . .	8-52-4	Switch, back-up lamp . . . . .	8-56-2
	to	Switch, blower motor . . . . .	24-24-5
	8-52-375	Switch, blower motor toggle . . . . .	24-24-5
Steering knuckle . . . . .	2-03-3	Switch, coordinator . . . . .	1-82-14
Steering knuckle tie rod . . . . .	2-07-1	Switch, courtesy lamp . . . . .	8-11-6
	to	Switch, dome lamp . . . . .	8-05-14
	2-07-28	Switch, electric seat adjuster . . . . .	23-47-446
Steering linkage knuckle arm . . . . .	2-05-4	Switch, electric window lift . . . . .	23-41-170
Stop, manifold heat control valve . . . . .	9-62-1	Switch, folding top lift . . . . .	23-58-532
Stop lamp . . . . .	8-58-60	Switch, foot dimmer . . . . .	8-53-150
Stop lamp switch . . . . .	8-58-60	Switch, front door automatic lamp . . . . .	8-12-2
Strainer, oil . . . . .	10-23-7	Switch, headlamp and instrument lamp . . . . .	8-53-270
Strainer and filter, automatic 3 speed transmission oil pump . . . . .	21-117-1	Switch, heater control . . . . .	1-48-770
	to	Switch, horn . . . . .	8-33-90
	21-117-10	Switch, hydraulic brake . . . . .	14-02-32
Strainer and filter, powerflite transmission oil pump . . . . .	21-117-1	Switch, ignition . . . . .	8-35-4
	to		to
	21-117-24	Switch, low oil pressure . . . . .	8-35-122
Strap, battery hold-down . . . . .	13-34-3	Switch, map lamp . . . . .	8-53-327
Striker, body . . . . .	23-08-12	Switch, mechanical brake . . . . .	8-42-25
	to	Switch, parking brake signal lamp . . . . .	14-02-32
	23-08-76	Switch, powerflite transmission neutral starter . . . . .	8-31-10
Striker, hood lock . . . . .	15-13-2		21-113-24
	to		to
	15-13-6	Switch, rear window defroster . . . . .	21-113-29
Strut, rear axle control . . . . .	3-01-25	Switch, socket and cable, trunk lamp . . . . .	1-48-300
	to	Switch, spotlight . . . . .	8-13-1
	3-01-35	Switch, starter . . . . .	1-108-28
Stud, battery hold-down . . . . .	13-36-5	Switch, starter and ignition . . . . .	8-52-330
Stud, throttle linkage ball . . . . .	14-13-1	Switch, stop lamp . . . . .	8-35-59
	to	Switch, tailgate electric window lift . . . . .	8-58-60
	14-13-5	Switch, trunk lamp . . . . .	23-54-167
Stud and gasket, exhaust pipe flange . . . . .	11-06-8	Switch, turn signal . . . . .	8-13-2
Sub-sidemember, frame . . . . .	13-04-20	Switch, vacuum push botton . . . . .	8-50-82
	to	Switch, window safety . . . . .	24-24-150
	13-04-21	Switch, windshield wiper . . . . .	1-50-1
Support, engine front . . . . .	9-64-5	Switch, window safety . . . . .	23-67-160
	to	Switch and lamp, dome . . . . .	5-05-6
	9-64-24		to
Support, front fender . . . . .	12-07-1		5-05-32
Support, fuel tank . . . . .	14-88-21	Switch and lock cylinder, ignition . . . . .	8-35-4
	to		to
	14-88-27		8-35-115
Support, muffler . . . . .	11-02-4	Switch and wire, glove compartment lamp socket . . . . .	8-38-23
Support, parking brake . . . . .	4-29-1	Switch package, automatic 3 speed transmission . . . . .	21-113-24
	to	Switch package, neutral starter automatic 3 speed transmission . . . . .	21-113-24
	4-29-16	Switch package, powerflite . . . . .	21-113-24
Support, tail pipe . . . . .	11-10-3	Switch package, rear window defroster . . . . .	1-48-299
	to		
	11-10-42		

PART NAME	CODE	PART NAME	CODE
Switches . . . . .	8-53-150 to 8-53-327	Transmission package, automatic 3 speed . . . . .	21-01-3
<b>T</b>			
Tail and stop lamp . . . . .	8-55-1 to 8-55-232	Transmission parking lock . . . . .	4-10-1 to 4-10-28
Tail pipe . . . . .	11-09-3	Tray, battery support . . . . .	13-33-61 to 13-33-68
Tail pipe support . . . . .	11-10-1 to 11-10-42	Trim finish moulding . . . . .	23-26-2 to 23-26-89
Tailgate . . . . .	23-54-1 to 23-54-199	Trough, drain . . . . .	23-59-37 to 23-59-61
Tailgate electric window lift switch . . . . .	23-54-167	Trunk compartment light . . . . .	1-30-1
Tailgate window screen . . . . .	1-08-1	Trunk lamp . . . . .	8-13-1 to 8-13-9
Tank, fuel . . . . .	14-86-1 to 14-86-85	Trunk lamp switch . . . . .	8-13-1
Tank, power brake vacuum . . . . .	5-102-2 to 5-102-7	Tube, fuel line . . . . .	14-89-2 to 14-89-57
Tappet, valve . . . . .	9-41-1 to 9-41-12	Tube, master cylinder brake . . . . .	5-52-3 to 5-52-62
Tee, brake tube . . . . .	5-58-1	Tube, power steering gearshift . . . . .	19-46-2 to 19-46-41
Terminal block . . . . .	8-21-1 to 8-21-16	Tube, standard steering gearshift . . . . .	19-46-2 to 19-46-35
Thermostat . . . . .	7-41-4	Tube, wheel cylinder connecting . . . . .	5-55-1
Thermostat, manifold heat control valve . . . . .	9-58-1 to 9-58-14	Tube and coupling, power steering gear . . . . .	19-15-4 to 19-15-121
Third seat . . . . .	23-48-6 to 23-48-188	Tube and coupling, standard steering gear . . . . .	19-15-4 to 19-15-121
Throttle control bell crank . . . . .	14-14-1 to 14-14-57	Tubing and cover, brake . . . . .	5-53-3 to 5-53-4
Throttle linkage ball joint . . . . .	14-13-1 to 14-13-5	Turn signal switch . . . . .	8-50-82
Throttle linkage ball stud . . . . .	14-13-1 to 14-13-5	<b>U</b>	
Timing chain . . . . .	9-20-1	Underhood light . . . . .	1-13-1 to 1-13-10
Tooth, power steering gear shaft and roller . . . . .	19-19-1 to 19-19-72	Unit, evaporator . . . . .	24-28-3 to 24-28-384
Tooth, standard steering gear shaft and roller . . . . .	19-19-4 to 19-19-70	Unit, fan fluid drive . . . . .	7-07-1
Top, folding . . . . .	23-58-3 to 23-58-608	Unit, power brake power . . . . .	5-100-1 to 5-100-157
Torque converter . . . . .	9-46-4 to 9-46-229	Universal joint . . . . .	16-03-1 to 16-03-20
Torsion parts, front suspension . . . . .	2-14-1 to 2-14-25	Universal joint body . . . . .	16-04-1
Transmission, automatic 3 speed . . . . .	21-02-1 to 21-02-6	Universal joint centering button . . . . .	16-06-1 to 16-06-3
Transmission, powerflite . . . . .	21-02-1 to 21-02-6	Universal joint cover . . . . .	16-07-3 to 16-07-4
Transmission, standard . . . . .	21-02-1 to 21-02-6	Universal joint cross . . . . .	16-08-6 to 16-08-7

# 1961 PASSENGER CAR PARTS CATALOG

ALPHABETICAL INDEX

PART NAME	CODE	PART NAME	CODE
Universal joint cross roller and bearing block . . . . .	16-09-2	Weight, wheel balance . . . . .	22-09-1
Universal joint cross roller and bushing . . . . .	16-10-1	Wheel . . . . .	22-01-5
	to		to
	16-10-3	Wheel, power steering . . . . .	22-01-51
			19-30-4
			to
			19-30-18
Vacuum push botton switch . . . . .	24-24-150	Wheel, standard steering . . . . .	19-30-4
Valve . . . . .	9-39-1		to
	to		19-30-18
	9-39-21	Wheel balance weight . . . . .	22-09-1
Valve, exhaust . . . . .	9-39-6	Wheel brake adjuster . . . . .	5-20-1
Valve, intake . . . . .	9-39-5		to
Valve, manifold heat control . . . . .	9-59-13		5-20-17
	to	Wheel brake adjusting cam dust shield seal . . . . .	5-22-8
	9-59-15	Wheel brake cylinder . . . . .	5-64-1
	5-43-1		to
Valve, master cylinder . . . . .	to		5-64-2
	5-43-5	Wheel brake dust shield . . . . .	5-16-1
	10-22-11	Wheel brake shoe and lining . . . . .	5-03-1
Valve, oil pressure relief . . . . .	to		to
	10-22-41		5-03-23
	5-105-1	Wheel brake support . . . . .	5-13-1
Valve, power brake vacuum check . . . . .	19-57-2		to
Valve, power steering gear . . . . .	to		5-13-35
	19-57-64	Wheel cylinder bleeder screw . . . . .	5-67-1
	9-42-1	Wheel cylinder boot . . . . .	5-69-1
Valve push rod . . . . .	9-43-1	Wheel cylinder connecting tube . . . . .	5-55-1
Valve rocker . . . . .	to	Wheel cylinder piston . . . . .	5-70-1
	9-43-26	Wheel cylinder piston cup . . . . .	5-71-1
	21-139-4		to
Valves and body powerflite transmission . . . . .	to		5-71-2
	21-139-193	Wheel cylinder piston cup expander . . . . .	5-72-1
	21-139-4	Wheel cylinder piston push rod . . . . .	5-12-1
Valves and valve body, automatic 3 speed transmission . . . . .	to	Wheel cylinder service package . . . . .	5-63-1
	21-139-213		to
	23-61-39	Wheel hub . . . . .	5-63-3
Vent, cowl . . . . .	to		22-05-14
	23-61-119		to
Vent wing . . . . .	23-64-4	Window . . . . .	22-05-24
	to		23-64-4
	23-64-314		to
		Window glass run . . . . .	23-64-314
			23-42-6
			to
			23-42-57
Warning light . . . . .	1-06-1	Window lift (electric) . . . . .	23-41-4
	to		to
	1-06-2		23-41-281
Washer, windshield . . . . .	1-82-2	Window lift (manual) . . . . .	23-39-2
	to		to
	1-82-49		23-39-53
Water pump . . . . .	7-42-1	Window safety switch . . . . .	1-50-1
	to	Windshield . . . . .	23-66-65
	7-42-4		to
Water pump elbow . . . . .	7-48-22		23-66-239
Water pump gasket . . . . .	7-44-3	Windshield washer . . . . .	1-82-2
	to		to
	7-44-4		1-82-49
Water pump housing . . . . .	7-43-1	Windshield wiper . . . . .	23-67-5
	to		to
	7-43-5		23-67-204
Water pump impeller . . . . .	7-45-31	Windshield wiper switch . . . . .	23-67-160
Water pump nipple . . . . .	7-48-22	Wing, vent . . . . .	23-64-4
Water pump seal . . . . .	7-46-1		to
Weatherstrip . . . . .	23-63-14		23-64-314
	to		
	23-63-181		

PART NAME	CODE	PART NAME	CODE
Wiper, windshield . . . . .	23-67-5		
	to		
	23-67-204		
Wiring, chassis and body . . . . .	8-15-2		
	to		
	8-15-52		
Wiring, instrument panel . . . . .	8-19-3		
	to		
	8-19-83		
<b>Y</b>			
Yoke, propeller shaft sliding . . . . .	16-14-1		
	to		
	16-14-9		
Yoke, radiator . . . . .	7-26-2		
	to		
	7-26-37		

# 1961 PASSENGER CAR PARTS CATALOG

PART NAME	PAGE NO.	CODE	PART NAME	PAGE NO.	CODE