ī

8 A.

INDEX TO INFORMATION PAGES

	Page No.
Abbreviations	INF-10
Engine Identification	INF-13
Engine Numbers	INF-13
Interfiling Revision Pages	INF- 9
Locating Parts	INF-10
Model Designation	INF-4
Model Specifications	INF- 6
Ordering Information	INF-15
Part Type Code System	INF-12
Revision Service to Parts List	INF- 9
Serial Number Designation	INF- 5
Specifying Information	INF-10
Standard Parts	INF-10
Symbols Used In Parts List	INF- 9
Vehicle Serial Numbers	INF-12

1961 PASSENGER CAR MODEL DESIGNATION

The following information will acquaint you with the model code system being used with the 1961 series vehicles.

The year is identified by the letter "R" for 1961.

Each car make is identified by the letters P for Plymouth, V - Valiant, S - DeSoto, C - Chrysler, and Y for the Imperial.

The various chassis for each make are identified by the numbers 1, 2 and 3. In the Plymouth No. 1 represents a 6 cylinder chassis and No. 2 an 8 cylinder chassis. On DeSoto, Chrysler, and Imperial, the numbers 1, 2, and 3 indicate one of the various 8 cylinder chassis built.


The last letter in the model code indicates the price class in which the particular model falls, as shown below.

L - Low price class (Savoy, Valiant V100, DeSoto, Windsor, Imperial Custom)

M - Medium price class (Belvedere, Saratoga, Imperial Crown)

H - High price class (Fury, Valiant V200, New Yorker, Imperial LeBaron)

Example:

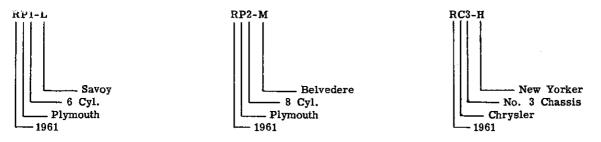

A glance at the model designation will enable you to identify a model by year, make of car, number of cylinders and price class.

1961 PASSENGER CAR SERIAL NUMBER DESIGNATION

The new serial number coding system will be uniform for all car assembly plants. The code breakdown is as follows:

The serial number will consist of a ten (10) digit numeric sequence number.

The 1st digit is the numeric identification for car line used in the uniform body codes.

- 2. Plymouth 6 Cyl.
- 3. Plymouth 8 Cyl.
- 6. DeSoto
- 8. Chrysler
- 9. Imperial

The 2nd digit is the model series identification.

- 1. Savoy, Valiant V100, DeSoto, Windsor, Imperial Custom
- 2. Belvedere, Saratoga, Imperial Crown
- 3. Fury, Valiant V200, New Yorker, Imperial LeBaron
- 4. 300G
- 5. Station Wagon, Savoy, Valiant V100, Windsor
- 6. Station Wagon, Belvedere
- 7. Station Wagon, Fury, New Yorker
- 8. Taxi
- 9. Police
- 0. Fleet

The third digit (1 - indicates 1961 models)

The fourth digit will be a numeric designation for producing plant.

- 1. Plymouth Plant Detroit
- 3. Jefferson Plant Detroit
- 4. Imperial Plant Detroit
- 5. Los Angeles Plant Calif.
- 6. Newark Plant Del.
- 7. St. Louis Plant Valley Park, Mo.

The last six digits will consist of a six digit sequence number. The sequence numbers will begin with 100001 except Valiant (Detroit Built) which will begin with 300001. Each model series for each car line will begin with sequence number 100001 or 300001.

1961 PLYMOUTH

Model Specifications

	1961 MODEL	1960 CODE	NO. CYL.	CAR SERIAL	NO. FIRST
RP1-L	SAVOY	PP1-L	6	DETROIT ST. LOUIS NEWARK LOS ANGELES	2111-100001 2117-100001 2116-100001 2115-100001
RP1-L	SAVOY SUBURBAN	PP1-L	6	DETROIT ST. LOUIS NEWARK LOS ANGELES	2511-100001 2517-100001 2516-100001 2515-100001
RP1-M	BELVEDERE	PP1-M	6	DETROIT ST. LOUIS NEWARK LOS ANGELES	2211-100001 2217-100001 2216-100001 2215-100001
RP1-M	BELVEDERE SUBURBAN	PP1-M	6	DETROIT ST. LOUIS NEWARK LOS ANGELES	2611-100001 2617-100001 2616-100001 2615-100001
RP1-H	FURY	РР1-Н	6	DETROIT ST. LOUIS NEWARK LOS ANGELES	2311-100001 2317-100001 2316-100001 2315-100001
RP2-L	SAVOY	PP2-L	8	DETROIT ST. LOUIS NEWARK LOS ANGELES	3111-100001 3117-100001 3116-100001 3115-100001
RP2-L	SAVOY SUBURBAN	PP2-L	8	DETROIT ST. LOUIS NEWARK LOS ANGELES	3511-100001 3517-100001 3516-100001 3515-100001
RP2-M	BELVEDERE	PP2-M	8	DETROIT ST. LOUIS NEWARK LOS ANGELES	3211-100001 3217-100001 3216-100001 3215-100001
RP2-M	BELVEDERE SUBURBAN	РР2-М	8	DETROIT ST. LOUIS NEWARK LOS ANGELES	3611-100001 3617-100001 3616-100001 3615-100001
RP2-H	FURY	РР2-Н	8	DETROIT ST. LOUIS NEWARK LOS ANGELES	3311-100001 3317-100001 3316-100001 3315-100001
RP2-H	FURY SUBURBAN	РР2-Н	8	DETROIT ST. LOUIS NEWARK	3711-100001 3717-100001 3716-100001

1961 VALIANT

Model Specifications

	1961 MODEL	1960 CODE	NO. CYL.	CAR SERIAL	NO. FIRST
RV1-L	VALIANT V100	QX1-L	6	DETROIT ST. LOUIS NEWARK LOS ANGELES	1112-300001 1117-100001 1116-100001 1115-100001
RV1-L	VALIANT SUBURBAN V100	QX1-L	6	DETROIT ST. LOUIS NEWARK LOS ANGELES	1512-300001 1517-100001 1516-100001 1515-100001
RV1-H	VALIANT V200	QX1-H	6	DETROIT ST. LOUIS NEWARK LOS ANGELES	1312-300001 1317-100001 1316-100001 1315-100001
RV1-H	VALIANT SUBURBAN V200	QX1-H	6	DETROIT ST. LOUIS NEWARK LOS ANGELES	1712-300001 1717-100001 1716-100001 1715-100001

1961 DESOTO

Model Specifications

	1961 MODEL	1960 CODE	NO. CYL.	CAR SERIA	AL NO. FIRST	
RS1-L	DESOTO	PS1	8	DETROIT	6113-100001	

1961 CHRYSLER

Model Specifications

	1961 MODEL	1960 CODE	NO. CYL.	CAR SERIA	L NO. FIRST
RC1-L	NEWPORT	PC1	8	DETROIT	8113-100001
RC1-L	NEWPORT SUBURBAN	PC1	8	DETROIT	8513-100001
RC2-M	WINDSOR	PC2	8	DETROIT	8213-100001
RC3-H	NEW YORKER	PC3	8	DETROIT	8313-100001
RC3-H	NEW YORKER-SUBURBAN	PC3	8	DETROIT	8713-100001
RC4-P	300		8	DETROIT	8413-100001

1961 IMPERIAL

Model Specifications

	1961 MODEL	1960 CODE	NO. CYL.	CAR SERIA	L NO. FIRST
RY1-L	IMPERIAL CUSTOM	PY1-L	8	DETROIT	9114-100001
RY1-M	IMPERIAL CROWN	РҮ1-М	8	DETROIT	9214-100001
RY1-H	IMPERIAL LE BARON	РҮ1-Н		DETROIT	9314-100001

SYMBOLS USED IN THIS PARTS CATALOG

The following symbols are used in the Parts Catalog and revisions thereto:

- * An asterisk preceding a part number indicates a change or addition.
- B A double box preceding a part number indicates parts which have been added and not previously published.
- ★ A star symbol in the "Per Car" column means "use as required."
- () The numerals within parenthesis in the model column refer to notes at the bottom of the page. These notes have been used wherever necessary to further explain model application, serial number breaks, etc. Such notes are numbered and cross referenced to the item to which they apply.

PARTS CATALOG REVISION SERVICE

GENERAL

Subscribers to the MoPar Passenger Car Parts Catalog Revision Service will be provided with revision pages incorporating latest information. Proper interfiling of the revision pages will insure the subscriber a complete and upto-date Parts Book.

Accompanying each mailing of a set of revision pages is a covering letter which outlines the contents of the particular revision: Group Name, Group Number, and Page Numbers being eliminated, replaced, or added to each revised group. It is advised that the letter be read carefully to avoid elimination of pages which are still current.

INTERFILING REVISION PAGES

The importance of prompt interfiling of revision pages upon receipt cannot be stressed too greatly.

The following method for interfiling revised and new pages has been found to be efficient and time saving and is recommended for your use:

- 1. Insert the revised pages loosely in their proper location in the catalog.
- 2. Pull the locking trigger and lift the transfer bar with all pages down to the first loose revision sheet which has been inserted in its proper location.
- 3. Compare the revised (loose) page with the superseded page, noting changes and date.

NOTE: If you use the revised pages as part of your parts record-keeping system, note the changes in the revised (loose) page and post accordingly.

- 4. Remove superseded page.
- 5. Place revised page on post of transfer bar.
- 6. Replace transfer bar with all pages in place on bottom post.
- 7. Re-lock cover and your catalog is current and accurate.

Page INF-10 1961 PASSENGER CAR PARTS CATALOG GENERAL INFORMATION

SPECIFYING INFORMATION

The following information is included in this Parts Catalog:

- 1. Part Type Code
- 2. Part Name
- 3. Part Number
- 4. Model Application
- 5. Quantity used per vehicle
- 6. Effective points of changes by vehicle serial number, engine number and body number.
- 7. Description and dimensions necessary for proper identification of parts.
- 8. Parts not previously listed in the Parts Catalog are designated by a double box (E) symbol preceding the part number.
- 9. Under the column No. Cyl. where no. of cylinders are not shown indicates part is for 6 and 8 cylinder. In the model column 3 conditions appear:
 - A. Part Number
 - B. Dashes
 - C. Blank

Part number applies only where it appears in the column of the model.

HOW TO LOCATE PARTS

The Parts Catalog is divided into Groups. A tab index is provided to separate the Groups. To locate a part by name, see Alphabetical Index. To locate a part by number, see Numerical Index.

In cases where only the location of the part on the vehicle is known, refer to Tab Index to locate the Group in which the part is located. Then refer to the illustrations which appear at the beginning of that Group for identification of the part by name and Part Type Code. Parts are listed in Part Type Code sequence within the Group and reference to the proper code will determine the part number.

STANDARD PARTS

Standard Parts such as bolts, nuts, etc., are listed under the major parts which they attach and are not coded. Standard Parts listed as Major Parts, such as fuses, bulbs, and bearings in the 100,000 part number series are assigned a Part Type Code and coded within the group in which they are listed.

A comprehensive listing of the most commonly used Standard Parts available in carton quantities will be found under Group 18.

ABBREVIATIONS

Abbreviations as used throughout this list are interpreted as follows:

abs	carb
accel	C. I
acc	ctr
adj adjusting-or-able-ment	C/L
alum	chamf chamfered
amp ampere	chr
approx	c/breaker circuit breaker
arm	c/nut clinch nut
assyassembly	comb.
as req	compt
att.	comp complete or component
AL	con
auto automatic	cont
aux	cop
bal	ck
brg	cu
B. E	cust custom
brkt	cyl
br	defl
bzbronze	Det
bltbuilt	diag diagonal
bushbushing	dia
ca	diaph
Cal	diff
canc	dir
cp	dist
-	· · · · · · · · · · · · · · · · · · ·

ABBREVIATIONS - CONT'D

div	O.D
dom	O/S
d/r shaft	pkg
elec	pkd
elim eliminator	park
eng	p/lampparking lamp
equip	part partial or partition
etc	P. or Pass passenger
Evans	Penna Pennsylvania
exh	pil
Exp	pln
ext	p/washer, plainwasher
F	pltd
fast	pt
fil. hd	pos
······································	
fin	lbs
fl. hd	prop
ft	qtr
freq	rad
frt	rr
gen	rec
gov	refl
Gm Gyromatic Transmission	reg
h/brakehand brake	reinf
hd	rem remote
h/lamp	
	repl replacement
hdls	req
h/lining	ret
htr	R. P. M revolutions per minute
hex	rt right
hsg	RHD Right Hand Drive
hydrhydraulic	R. H. thd
ign.	
0	rd round
in	S. L
incl inclusive or includes	sec
incl inclusive or includes	sec
ind	s-fin
ind	s-fin
ind	s-fin
ind.	s-fin.
ind.	s-fin
ind.	s-fin.
ind.	s-fin
ind.	s-fin
ind.	s-fin
ind.	s-fin.
ind.	s-fin
ind.	s-fin.
ind. . indicator I. D. . inside diameter inst. . instrument or instruction ins. . instrument or instruction ins. . instrument or instruction ins. . insulating-tion-or inter. . insulating-tion-or inter. . insulating-tion-or inter. . insulating-tion-or inter. . instrument or instruction inter. . junction block kilo. . junction block kilo. . leather It. . leather It. . leather It. . left HD. . left LHD. . left Ith. . left Igh. . length lic. . lockwasher L. A. . low compression lwr. . lower M.I. . manifold man. . manual	s-fin.
ind. . indicator I. D. . inside diameter inst. . instrument or instruction ins. . instrument or instruction ins. . instrument or instruction ins. . insulating-tion-or inter. . insulating-tion-or inter. . insulating-tion-or inter. . insulating-tion-or inter. . junction block kilo. . junction block kilo. . leather lt. . leather lt. . leather lt. . left Hand Drive L L. H. thd. . Left Hand Thread lgh. . length lic. . lockwasher L. A. . low compression lwr. . lower M. I. . malleable iron manif. . manual m/cyl. . master cylinder	s-fin.
ind. . indicator I. D. . inside diameter inst. . instrument or instruction ins. . instrument or instruction ins. . insulating-tion-or inter. . intermittently-mediate j/block . junction block kilo. . junction block kilo. . leather lt. . left LHD. . left LHD. . left H. thd. . left lgh. . length lic. . lockwasher L. A. . low compression lwr. . lower M. I. . manifold man. . manual m/cyl. . matter cylinder	s-fin.
ind. . indicator I. D. . inside diameter inst. . instrument or instruction ins. . insulating-tion-or inter. . intermittently-mediate j/block . junction block kilo. . junction block kilo. . junction block kilo. . left LHD. . left Hand Drive . left LHD. . left Hand Thread lgh. lgh. . lockwasher L. A. . lockwasher L. C. . low compression lwr. . lower M.I. . maileable iron manif. . manual m/yil. . matter cylinder medium . medium	s-fin.
ind. . indicator I. D. . inside diameter inst. . instrument or instruction ins. . insulating-tion-or inter. . intermittently-mediate j/block . junction block kilo. . junction block kilo. . junction block kilo. . left LHD. . left Hand Drive . left LHD. . left Hand Thread lgh. lgh. . lockwasher L. A. . lockwasher L. C. . low compression lwr. . lower M.I. . maileable iron manif. . manual m/yil. . matter cylinder medium . medium	s-fin.
ind. . indicator I. D. . inside diameter inst. . instrument or instruction ins. . insulating-tion-or inter. . intermittently-mediate j/block . junction block kilo. . junction block kilo. . leather lt. . leather lt. . left LHD. . left LHD. . left LHD. . left LHD. . left L. H. thd. . left lc. . left lko. . length lic. . lockwasher L. A. . Los Angeles L. C. . low compression lwr. . lower M.I. . manual manif. . manual m/cyl. . master cylinder med. . medium M. P.H. . moulding	s-fin.
ind. . indicator I. D. . inside diameter inst. . instrument or instruction ins. . insulating-tion-or inter. . intermittently-mediate j/block . junction block kilo. . junction block kilo. . junction block kilo. . leather lt. . left LHD. . left Hand Drive L. H. thd. . left Hand Thread lgh. . length lic. . lockwasher L. A. . Los Angeles L. C. . low compression lwr. . lower M.I. . manifold man. . manual m/cyl. . master cylinder med. . medium M. P.H. . moulding mtg. . moulding	s-fin.
ind. . indicator I. D. . inside diameter inst. . instrument or instruction ins. . insulating-tion-or inter. . intermittently-mediate j/block . junction block kilo. . junction block kilo. . leather lt. . leather lt. . left LHD. . left LHD. . left LHD. . left Hand Drive L L. H. thd. . left Hand Thread lgh. lgh. . length lic. . lockwasher L. A. Los Angeles L. C. . low compression lwr. . lower M.I. . manifold man. . manual m/cyl. . matter cylinder med. . medium M. P.H. . mounting neg. . mounting	s-fin.
ind. . indicator I. D. . inside diameter inst. . instrument or instruction ins. . insulating-tion-or inter. . intermittently-mediate j/block . junction block kilo. . junction block kilo. . junction block kilo. . leather lt. . left LHD. . left Hand Drive L. H. thd. . left Hand Thread lgh. . length lic. . lockwasher L. A. . Los Angeles L. C. . low compression lwr. . lower M.I. . manifold man. . manual m/cyl. . master cylinder med. . medium M. P.H. . moulding mtg. . moulding	s-fin.
ind. . indicator I. D. . inside diameter inst. . instrument or instruction ins. . insulating-tion-or inter. . intermittently-mediate j/block . junction block kilo. . junction block kilo. . junction block kilo. . leather lt. . left LHD. . left Hand Drive L. H. thd. . left Hand Thread lgh. . length lic. . lockwasher L. A. . Los Angeles L. C. . low compression lwr. . lower M.I. . manifold man. . manual m/cyl. . master cylinder med. . medium M. P.H. . mouting meg. . mouting neg. . megative	s-fin.
ind. . indicator I. D. . inside diameter inst. . instrument or instruction ins. . insulating-tion-or inter. . intermittently-mediate j/block . junction block kilo . junction block kilo . leather lt. . leather lt. . left LHD. . left LHD. . left Ic. . left lgh. . left lc. . leagth lc. . leagth lk. . left lk. . left Hand Drive . left LHD. . left lkc. . leagth lkc. . lockwasher L. A. . look Angeles L. C. . low compression lwr. . lower M.I. . manifold man. . manual m/cyl. . master cylinder medium . moulding mtg. . moulding mtg. .	s-fin.
ind. . indicator I. D. . inside diameter inst. . instrument or instruction ins. . instrument or instruction intermittently-mediate . junction block kilo. . junction block kilo. . leather It. . leather It. . left LHD. . left LHD. . left Igh. . length lic. . lockwasher L. A. . low compression lwr. . lower M.I. . manifold man. . manifold man. . manual m/cyl. . matter cylinder medium . mounting	s-fin.
ind. . indicator I. D. . inside diameter inst. . instrument or instruction ins. . instrument or instruction ins. . insulating-tion-or inter. . insulating-tion-or inter. . insulating-tion-or inter. . insulating-tion-or inter. . junction block kilo. . junction block kilo. . leather It. . low M.I. . manifeld man. . manifold <t< td=""><td>s-fin. </td></t<>	s-fin.
ind. . indicator I. D. . inside diameter inst. . instrument or instruction ins. . instrument or instruction intermittently-mediate . junction block kilo. . junction block kilo. . leather It. . leather It. . left LHD. . left LHD. . left Igh. . length lic. . lockwasher L. A. . low compression lwr. . lower M.I. . manifold man. . manifold man. . manual m/cyl. . matter cylinder medium . mounting	s-fin.
ind. . indicator I. D. . inside diameter inst. . instrument or instruction ins. . instrument or instruction ins. . insulating-tion-or inter. . insulating-tion-or inter. . insulating-tion-or inter. . insulating-tion-or inter. . junction block kilo. . junction block kilo. . leather It. . low M.I. . manifeld man. . manifold <t< td=""><td>s-fin. </td></t<>	s-fin.

ABBREVIATIONS - CONT'D

vol. cont volume control	w/lift
w/stripweatherstrip	w/shield windshield
whl	w/
W.B wheelbase	w/o
w/house	

PASSENGER CAR MODELS AND BODY STYLES

2 D. Cl. Sed 2 Door Club Sedan	Est. Wgn Estate Wagon
3 Cp	Imp
4 D	Limo
7 Sed 7 Passenger Sedan	Ply
8 Sed 8 Passenger Sedan	Sed
De	Sp
Cp	Sp. Cl. Cp Special Club Coupe
Cv. Cp	Sp. 4 D.Sed Special 4 Door Sedan
Cl. Cp	Sta. Wgn
Chry	Sub
CustCustom	

PART TYPE CODE SYSTEM


To simplify the listing and locating of individual parts, a system of Part Type Codes is used in this Parts Catalog.

- To illustrate, a Type of Part will be indicated as:
 - 2-03-3 KNUCKLE, w/BUSHING

This code is broken down as follows:

- 2- Indicates the Major Group: "Group 2 -- Front Suspension"
- -03 Indicates the Sub Group: "02 -- Steering Knackle"
 - -3 Indicates the Code for the specific name of the part: "Knuckle, w/Bushing"

Part Type Code 2-03-3 will always appear as "KNUCKLE, w/BUSHING."

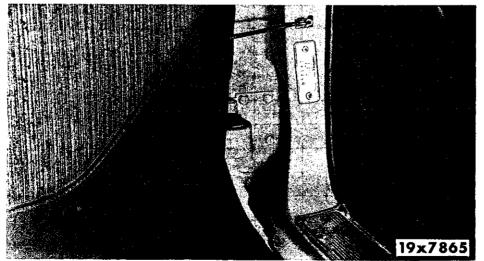

VEHICLE SERIAL NUMBER PLATE

The Vehicle Serial Number Plate is located on the left front door hinge pillar.

If you are not certain of the correct part number when ordering parts for a specific vehicle, always specify the Vehicle Serial Number.

GENERAL INFORMATION 1961 PASSENGER CAR PARTS CATALOG


ENGINE IDENTIFICATION

A method of Engine Serial Numbering is now in effect.

The 1st letter designates the Series

The two numbers following the letter will be Displacement

The last numerals designate Month and Date built

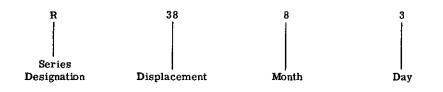

The example above is an engine No. as it would appear on Engine built August 3.

Listed below are Engine Numbers as they will appear assuming the production date is August 3.

Type of Engine 6 Cyl. Pass. Car "G" (170 cu. in.) - R-17-8-3 6 Cyl. Pass. Car R "G" (225 cu. in.) - R-22-8-3 8 Cyl. Pass. Car "B" (361 cu. in.) - R-36-8-3 8 Cyl. Pass. Car "B" (383 cu. in.) - R-38-8-3 8 Cyl. Pass. Car R "B" (383 cu. in.) - RR-38-8-3 8 Cyl. Pass. Car R "B" (413 cu. in.) - R-41-8-3 8 Cyl. Pass. Car (318 cu. in.) Not Affected.

ENGINE NUMBER

LOCATING ENGINE NUMBER

A boss is provided on all cylinder blocks upon which the Engine Number is stamped. For 6-cylinder engines, this is located on the left side of the block at the front and below the cylinder head. For 8-cylinder engines, it will be found on the top of the cylinder block behind the water pump, except on the Plymouth RP2, where it is located on the front of the block beneath the left-hand (driver's side) cylinder head.

IMPORTANT

MoPar Engines are supplied with blank engine number bosses only. Dealers are governed by state law on the application of engine numbers. In states where license fees are based on displacement or taxable horsepower, it will be necessary to change Vehicle Registration if the new MoPar Engine differs from the one which it replaces.

ILLUSTRATIONS

Illustrations are located at the beginning of each group. Parts are identified on the illustration by Noun Name and Part Type Code. The Part Type Code designation will serve as an index to locate the listing of the Group.

Page INF-14 1961 PASSENGER CAR PARTS CATALOG GENERAL INFORMATION

PAGE NUMBERING

Two-part page numbers are used throughout this catalog. The first part of the page designation indicates the major group or section. The second part indicates the actual page number in the group. For example:

- 1-1 indicates Group 1, Accessories, Page 1
- 2-1 indicates Group 2, Front Suspension, Page 1

In the maintenance of the Loose Leaf Parts Catalog Revision Service, it may become necessary to add information beyond the capacity of the page. In this event, an "A" page will be used. For example: If it becomes necessary, because of change, to add several part numbers to page 2-1 and space does not permit the addition, you will be given Page 2-1A. Page 2-1A should be filed immediately following page 2-1.

PARTS PACKAGES

Service Parts Packages, containing all parts needed for a specific service operation, are listed in their respective groups with related parts. The listing will show adaptability and model application. Often it becomes necessary to know just what parts are contained in a Service Package. To determine this, refer to the Service Package Section. This section contains a secondary listing of all Service Packages in this Parts Catalog together with a list of every component part of each package. Service Packages in this section are listed numerically by Part Type Code.

ALPHABETICAL INDEX

Reference to any part by sub-group name is provided in the Alphabetical Index. This index indicates the Part Type Code, by means of which the listing can be quickly located.

NUMERICAL INDEX

Reference to any part by part number is provided in the Numerical Index. This index indicates the Part Type Code.

Ŋ,

Page INF-15

ORDERING INFORMATION

NOTE: For Information On "How To Order MoPar Parts" See General Information Section In MoPar Parts Price List.

- ---

i (

~

NOTES	
·	
· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·
	· ·
	· · · · · · · · · · · · · · · · · · ·
· · · · · · · · · · · · · · · · · · ·	
	<u> </u>
<u> </u>	· · · · · · · · · · · · · · · · · · ·
	······································