

PART NAME	CODE	PART NAME	CODE
-----------	------	-----------	------

ALPHABETICAL INDEX

A

Absorber, shock	17-23-3 to 17-23-57	Arm, power steering gear idler . . .	19-27-2 to 19-27-55
Accelerator pedal	14-01-1	Arm, standard steering gear	19-27-2 to 19-27-55
Accelerator pedal return spring . . .	14-06-1 to 14-06-10	Arm, standard steering gear idler . .	19-27-2 to 19-27-55
Accelerator pedal to accelerator shaft rod	14-07-1 to 14-07-15	Arm, steering linkage knuckle	2-05-4
Accelerator shaft	14-11-1 to 14-11-48	Arm rest, front door	23-76-3 to 23-76-107
Actuator	24-29-1 to 24-29-14	Ash receiver	23-02-1 to 23-02-150
Adjuster, front seat	23-47-6 to 23-47-458	Assist strap	23-77-3 to 23-77-17
Adjuster, parking brake	4-07-1 to 4-07-28	Automatic choke to carburetor rod clip	14-65-4
Adjuster, wheel brake	5-20-1 to 5-20-20	Automatic door lamp switch	8-12-1 to 8-12-17
Air cleaner, carburetor	14-29-2 to 14-29-44	Automatic headlamp dimmer	1-04-4 to 1-04-18
Air cleaner, power brake	5-113-17	Automatic pilot	14-02-1 to 14-02-72
Air conditioning	24-01-1 to 24-01-65	Automatic 3 speed transmission . . .	21-02-1
Air conditioning control	24-24-5 to 24-24-170	Automatic 3 speed transmission band	21-136-237
Air intake	23-61-39 to 23-61-116	Automatic 3 speed transmission case	21-03-1 to 21-03-28
Alternator	8-28-3 to 8-28-292	Automatic 3 speed transmission case extension	21-04-1 to 21-04-12
Alternator component parts	8-29-17 to 8-29-208	Automatic 3 speed transmission clutch	21-133-5 to 21-133-65
Anchor, parking brake shoe	4-06-1 to 4-06-11	Automatic 3 speed transmission control lever	21-142-12 to 21-142-21
Antenna, radio	1-88-1 to 1-88-206	Automatic 3 speed transmission front and rear planet pinion carrier and components	21-134-5 to 21-134-45
Anti-squeak, body	23-31-33 to 23-31-205	Automatic 3 speed transmission gearshift button and cable	21-30-28 to 21-30-394
Arm, front wheel lower control . . .	2-10-6 to 2-10-76	Automatic 3 speed transmission governor	21-138-2 to 21-138-38
Arm, front wheel upper control . . .	2-08-5 to 2-08-72	Automatic 3 speed transmission input shaft	21-129-5 to 21-129-24
Arm, power steering gear	19-27-2 to 19-27-55		

1962 PASSENGER CAR PARTS CATALOG

ALPHABETICAL
INDEX

PART NAME	CODE	PART NAME	CODE
Automatic 3 speed transmission neutral starter switch	21-113-24	Bar, rear bumper face	13-66-3
	to		to
	21-113-29	Bar, side sill and belt	13-66-147
Automatic 3 speed transmission oil pan	21-119-3		23-51-3
	to		to
	21-119-25	Battery and cable	23-51-45
Automatic 3 speed transmission oil pump	21-118-6		8-01-4
	to		to
	21-118-57	Battery heat shield	8-01-25
Automatic 3 speed transmission oil pump strainer	21-117-1	Battery hold-down strap	13-35-1
	to	Battery hold-down stud	13-34-3
	21-117-3	Battery support tray	13-36-5
Automatic 3 speed transmission output shaft	21-05-1		13-33-61
	to		to
	21-05-35	Bearing, camshaft	13-33-68
Automatic 3 speed transmission package	21-01-3		9-16-6
Automatic 3 speed transmission servos	21-137-5	Bearing, clutch release	to
	to		9-16-17
	21-137-205	Bearing, differential	6-19-2
Automatic 3 speed transmission set	21-01-3		to
Automatic 3 speed transmission speedometer cable, includes shaft and housing	21-84-1	Bearing, drive pinion	6-19-3
	to		3-11-1
	21-84-28	Bearing, drive shaft	to
Automatic 3 speed transmission speedometer pinion	21-85-5		3-11-14
	to	Bearing, drive pinion	3-22-24
	21-85-61		to
Automatic 3 speed transmission switch package	21-113-24	Bearing, front wheel	3-22-45
Automatic 3 speed transmission torque converter reaction shaft	21-129-5		3-33-1
	to		to
	21-129-24	Bearing, propeller shaft center	3-33-9
Automatic 3 speed transmission valve body and valves	21-139-4		22-06-1
	to		to
	21-139-193	Bearing, standard transmission main shaft	22-06-18
			16-16-1
		Bearing, standard transmission main shaft pilot	to
			16-16-47
			9-32-2
			9-09-2
		Bearing, standard transmission countershaft	21-25-2
			to
			21-25-6
		Bearing, standard transmission main shaft	21-19-2
			to
			21-19-15
			21-17-2
			to
			21-17-7
		Belt, fan and related drive	7-03-1
		Belt, seat	1-67-1
			to
			1-67-9
		Belt package, seat	1-67-1
		Block, cylinder	9-02-7
			to
			9-02-16
		Block, rear spring silent	17-17-3
			to
			17-17-5
		Block, terminal	8-21-1
		Blower switch	24-24-5
		Board, floor	23-04-2
			to
			23-04-250
		Body, universal joint	16-04-1
		Body anti-squeak	23-31-33
			to
			23-31-205

B

PART NAME	CODE	PART NAME	CODE
Body bracket	23-07-168	Bracket, shock absorber	17-24-3
	to	to	17-24-28
Body bumper	23-07-169	Bracket, standard steering column . .	19-31-1
	23-08-12	to	19-31-24
	to		
	23-08-76	Bracket, throttle control cable	
	23-32-8	mounting	14-26-2
	to		to
Body insulator	23-32-115		14-26-6
	23-31-33	Bracket and switch, turn signal	
	to	cancelling	8-50-125
Body liner	23-31-205	Brake, power	1-42-1
	23-31-33	Brake drum	22-04-2
	to	to	22-04-14
Body pad	23-31-205	Brake flexible hose	5-62-1
	23-31-33	to	5-62-20
	to	to	5-01-2
Body pan	23-32-3	Brake fluid	5-27-1
	to	Brake pedal and bushing	to
	23-32-115		5-27-21
Body panel	23-34-10	Brake pedal bracket	5-31-11
	to	to	5-31-18
Body pillar	23-34-354	Brake pedal pad	5-28-8
	23-36-5	Brake pedal return spring	5-34-1
	to	to	5-34-6
Body plug	23-36-134	Brake pedal shaft	5-29-1
	23-32-8	Brake pedal stop	5-30-12
	to	Brake shoe guide	5-25-9
	23-32-115	Brake switch, mechanical	14-02-32
Body reinforcement	23-07-168	Brake tube bracket	5-57-2
	to	Brake tube clip	5-56-2
	23-07-169	Brake tube tee	5-58-1
Body seal	23-31-33	to	5-58-2
	to	Brake tubing and cover	5-53-3
	23-31-205	to	5-53-4
Body striker	23-08-13	Bulb	8-44-1
	to	Bumper, body	23-08-12
	23-08-76	to	23-08-76
Bolt, drive gear	3-20-1		23-32-8
Bolt, rear spring center	17-14-10	Bumper, hood	to
Boot, folding top dust	23-112-12	Bumper, rear spring	15-09-4
	to	to	17-19-3
	23-112-153	to	17-19-20
Boot, master cylinder	5-40-1	Bumper guard	1-01-1
Boot, wheel cylinder	5-69-1		13-68-6
Box, glove	23-06-4	to	13-68-18
	to	Bumper jack	13-72-1
	23-06-53	to	13-72-4
Brace, front fender	12-07-1	Bushing and pedal, brake	5-27-1
	to	to	5-27-21
	12-07-3	Bushing and roller, universal cross	16-10-1
Bracket, body	23-07-168	to	16-10-3
	to	Button, universal joint centering . . .	16-06-1
	23-07-169	to	16-06-3
Bracket, brake pedal	5-31-11		
	to		
	5-31-18		
Bracket, brake tube	5-57-2		
Bracket, fender pillar support and cowl	12-05-2		
Bracket, frame engine rear support			
crossmember	9-70-9		
Bracket, front fender	12-06-3		
	to		
	12-06-6		
Bracket, power steering column . . .	19-31-1		
	to		
	19-31-38		

1962 PASSENGER CAR PARTS CATALOG

ALPHABETICAL
INDEX

PART NAME	CODE	PART NAME	CODE
Button and cable, automatic 3 speed transmission gearshift	21-30-28 to 21-30-394	Carrier, spare wheel	22-20-29 to 22-20-89
Buttons, tufting	23-78-2	Carrier and components, automatic 3 speed transmission front and rear planet pinion	21-134-5 to 21-134-45
C			
Cable, fast idle	14-24-1 to 14-24-11	Carrier and differential, rear axle	3-03-1 to 3-03-36
Cable, includes shaft and housing, automatic 3 speed transmission	21-84-1 to 21-84-28	Case, automatic 3 speed transmission	21-03-1 to 21-03-28
Cable, parking brake	4-23-1 to 4-23-51	Case, differential	3-04-6 to 3-04-10
Cable, speedometer, standard transmission, includes shaft and housing	21-84-1 to 21-84-28	Case, standard transmission	21-03-1 to 21-03-25
Cable and battery	8-01-4 to 8-01-25	Center pillar trim cover	23-99-4 to 23-99-41
Cable and connection	8-16-1 to 8-16-10	Center seat cushion	23-70-1 to 23-70-22
Cable and switch, turn signal electric Camshaft	8-50-82 9-15-1 to 9-15-10	Chain, timing	9-20-1
Camshaft bearing	9-16-6 9-16-17	Chain case cover	9-23-5 to 9-23-40
Camshaft sprocket	9-17-5 to 9-17-13	Channel, glass	23-09-2 to 23-09-75
Cap, crankshaft bearing	9-10-2 to 9-10-19	Chassis and body wiring	8-15-2 to 8-15-53
Cap, fuel tank locking	1-39-2	Check, door	23-10-1 to 23-10-17
Cap, hub	22-08-5 to 22-08-57	Child guard rear door safety lock	1-72-5
Cap, radiator filler	7-12-1	Cigar lighter	1-12-0 8-20-3 to 8-20-16
Carburetor	14-30-1	Clamp, power brake hose	5-112-1
Carburetor air cleaner	14-29-2 to 14-29-44	Clip, automatic choke to carburetor rod	14-65-4
Carburetor assemblies and service parts	14-30-1 14-30-2 14-30-4 14-30-7 14-30-8 14-30-27 14-30-28 14-35-1 14-35-6 14-35-8 14-39-45 14-41-3 14-43-5	Clip, brake tube	5-56-2
Carburetor lever return spring	14-08-36 to 14-08-37	Clip, fuel line tube	14-90-1
Carpet, front floor	23-79-3 to 23-79-79	Clip, rear spring	17-15-1 to 17-15-30
		Clock	1-12-1
		Clutch	6-01-3
		Clutch, automatic 3 speed transmission	21-133-5 to 21-133-65
		Clutch cover and pressure plate	6-14-1 to 6-14-10
		Clutch disc	6-13-1 to 6-13-8
		Clutch housing	6-09-1 to 6-09-11
		Clutch housing pan	6-10-2 to 6-10-31

PART NAME	CODE	PART NAME	CODE
Clutch parts, differential	3-09-1 to 3-09-3	Control, hood lock	15-14-1 to 15-14-21
Clutch pedal	6-38-1 to 6-38-26	Control, horn	8-33-4 to 8-33-164
Clutch pedal pad	6-39-2	Control, throttle	14-25-5 to 14-25-13
Clutch pedal rod	6-50-1 to 6-50-34	Convertor, torque	9-46-4 to 9-46-228
Clutch pedal shaft	6-43-7 to 6-43-13	Core, radiator	7-11-3 to 7-11-4
Clutch pressure plate	6-15-1	Countershaft, standard transmission	21-24-2 to 21-24-22
Clutch pressure spring	6-16-1	Courtesy lamp	8-11-6 to 8-11-12
Clutch release bearing	6-19-2 to 6-19-3	Courtesy lamp switch	8-11-6
Clutch release bearing return spring	6-20-14	Courtesy light	1-14-40
Clutch release center spring	6-35-1 to 6-35-17	Cover, center pillar trim	23-99-4 to 23-99-41
Clutch release fork	6-22-1 to 6-22-19	Cover, chain case	9-23-5 to 9-23-40
Clutch release fork return spring . . .	6-27-5	Cover, front console	23-71-1
Clutch release lever	6-17-3	Cover, standard steering gear housing	19-04-1 to 19-04-13
Clutch release rod	6-24-1 to 6-24-10	Cover, standard transmission case . .	21-29-3 to 21-29-25
Clutch torque shaft	6-52-1 to 6-52-17	Cover, universal joint	16-07-3 to 16-07-4
Coat hanger hook	23-82-3 to 23-82-39	Cover, wheelhouse second seat back hinge bracket	23-70-5 to 23-70-19
Coil, ignition	8-35-4 to 8-35-115	Cover and tubing, brake	5-53-3 to 5-53-4
Component parts, alternator	8-29-17 to 8-29-208	Cowl trim panel	23-91-6 to 23-91-20
Component parts, generator	8-29-17 to 8-29-208	Cowl vent	23-61-39 to 23-61-116
Component parts and hot water heater	1-48-1 to 1-48-942	Crank, throttle control bell	14-14-7 to 14-14-57
Compressor	24-25-2 to 24-25-260	Crankcase breather pipe inlet	10-01-21
Condenser	24-27-5	Crankcase ventilator outlet	10-02-8 to 10-02-67
Conditioning, air	24-01-1 to 24-01-65	Crankshaft	9-07-5 to 9-07-22
Connecting rod	9-31-4 to 9-31-10	Crankshaft bearing cap	9-10-2 to 9-10-19
Connecting rod bearing package	9-32-2	Crankshaft bearing package	9-09-2
Connection and cable	8-16-1 to 8-16-10	Crankshaft rear bearing oil seal . . .	9-11-1 to 9-11-8
Connector, power brake tube	5-110-18		
Control, air conditioning	24-24-5 to 24-24-170		
Control, door lock and remote	23-18-5 to 23-18-116		

1962 PASSENGER CAR PARTS CATALOG

ALPHABETICAL INDEX

PART NAME	CODE	PART NAME	CODE
Crankshaft sprocket	9-08-5	Differential pinion	3-07-1
	to	to	to
	9-08-6	Differential pinion shaft	3-07-2
Crankshaft vibration damper	9-13-5		3-08-1
Cross, universal joint	16-08-6		to
	to		3-08-2
	16-08-7	Differential side gear	3-06-5
Crossmember, frame front	13-11-5		to
Crossmember, frame engine rear			3-06-8
support	9-69-4	Dimmer, automatic headlamp	1-04-4
	to		to
	9-69-6		1-04-18
Crossmember frame rear	13-18-4	Directional signal lamp	8-55-1
	to		to
	13-18-32		8-55-380
Cup, master cylinder piston	5-45-8	Disc, clutch	6-13-1
Cup, wheel cylinder piston	5-71-1		to
	to		6-13-8
	5-71-2	Distributor, ignition	8-27-1
Cushion, center seat	23-70-1		to
	to		8-27-352
	23-70-22	Dome lamp and switch	8-05-6
Cushion, front seat	23-108-4		to
	to		8-05-32
	23-108-144	Dome lamp switch	8-05-14
Cylinder, ignition lock	8-35-4	Door	23-11-1
	to		to
	8-35-115		23-11-21
Cylinder, master	5-39-1	Door check	23-10-1
	to		to
	5-39-24		23-10-17
Cylinder, wheel brake	5-64-1	Door edge protector	1-135-1
	to	Door hinge	23-15-1
	5-64-2		to
Cylinder and keys, lock	23-17-2		23-15-32
	to	Door lock and remote control	23-18-5
	23-17-72		to
Cylinder block	9-02-5		23-18-116
	to	Door regulator	23-14-10
	9-02-16		to
Cylinder head	9-03-4		23-14-153
	to	Door remote control handle	23-14-10
	9-03-29		to
Cylinder head water outlet elbow	9-05-5		23-14-153
	to	Door trim panel	23-92-5
	9-05-6		to
			23-92-25
		Drain cock, radiator	7-13-2
		Drain trough	23-59-35
			to
			23-59-61
		Drier, receiver	24-26-20
			to
			24-26-100
		Drive gear and pinion set	3-19-1
		Drive gear bolt	3-20-1
		Drive pinion bearing	3-22-24
			to
			3-22-45
		Drive shaft	3-32-1
			to
			3-32-9
		Drive shaft bearing	3-33-1
			to
			3-33-8
		Drive shaft oil seal	3-35-14
		Drum, brake	22-04-2
			to
			22-04-14

D

Damper, crankshaft vibration	9-13-5
Deck lid	23-19-8
	to
	23-19-185
Deflector, fuel tank stone	14-87-2
Deflector, radiator stone	7-35-2
	to
	7-35-20
Differential and carrier rear axle	3-03-1
	to
	3-03-36
Differential bearing	3-11-1
	to
	3-11-14
Differential case	3-04-6
	to
	3-04-10
Differential clutch parts	3-09-1
	to
	3-09-3

PART NAME	CODE	PART NAME	CODE
Drum, hub and brake	22-03-1 to 22-03-2	Filter, oil	10-26-5 to 10-26-65
Drum, parking brake	4-01-1 to 4-01-2	Flange, propeller shaft	16-20-1 to 16-20-20
E		Floor board	23-04-2 to 23-04-250
Elbow, cylinder head water outlet . .	9-05-5 to 9-05-6	Floor mat	23-20-8 to 23-20-65
Elbow, water pump	7-48-22	Floor tunnel console	23-38-1 to 23-38-23
Electric door lock switch	23-18-103	Fluid, brake	5-01-2
Electric window regulator	23-41-4 to 23-41-286	Flywheel	9-45-1 to 9-45-2
Engine	9-01-5 to 9-01-24	Folding top	23-58-3 to 23-58-607
Engine front support	9-64-5 to 9-64-25	Folding top bow tacking strip	23-11-37
Engine front support insulator	9-67-4	Folding top dust boot	23-112-12 to 23-112-153
Engine rear support insulator	9-71-5 to 9-71-19	Folding top header outer panel tacking strip retainer	23-111-31 to 23-111-37
Evaporator	24-28-3 to 24-28-397	Folding top lift switch	23-58-532
Exhaust pipe	11-05-1 to 11-05-12	Foot, dimmer switch	8-53-150
Exhaust pipe flange gasket and stud .	11-06-2 to 11-06-8	Fork, clutch release	6-22-1 to 6-22-19
Exhaust valve	9-39-6	Fork, standard transmission gearshift	21-39-3
Expander, wheel cylinder piston cup	5-72-1	Frame	13-01-1 to 13-01-6
Extension, automatic 3 speed transmission case	21-04-1 to 21-04-12	Frame engine rear support crossmember	9-69-4 to 9-69-6
Extension, standard transmission case	21-04-1 to 21-04-12	Frame engine rear support cross- member bracket	9-70-9
F		Frame front crossmember	13-11-5
Fan	7-02-1 to 7-02-16	Frame rear crossmember	13-18-4 to 13-18-32
Fan and alternator idler pulley . . .	7-04-1 to 7-04-16	Frame rear spring hanger	13-54-4 to 13-54-15
Fan and related drive belts	7-03-1	Fresh air heater control push button switch	1-48-770
Fan drive and driven pulley	7-06-1 to 7-06-14	Front bumper face bar	13-64-3 to 13-64-150
Fan fluid drive unit	7-07-1	Front console cover	23-71-1
Fan pulley hub	7-05-1	Front door arm rest	23-76-3 to 23-76-86
Fast idle cable	14-24-1 to 14-24-11	Front door automatic lamp switch . .	8-12-2
Fender, front	12-01-7 to 12-01-106	Front fender	12-01-7 to 12-01-105
Fender pillar support and cowl bracket	12-05-2	Front fender brace	12-07-1 to 12-07-3
Fender skirt	1-45-1	Front fender bracket	12-06-3 to 12-06-6
Filter, fuel	14-67-1 to 14-67-2		

PART NAME	CODE	PART NAME	CODE
Guard, bumper.	1-01-1 13-68-6 to 13-68-18	Horn control.	8-33-4 to 8-33-164
Guard, grille	1-01-1	Horn switch	8-33-90
Guide, brake shoe	5-25-9	Hose, brake flexible.	5-62-1 to 5-62-20
H			
Hand brake signal lamp	1-09-1	Hose, power brake vacuum.	5-111-17
Handle, door remote control	23-14-10 to 23-14-153	Hose, power steering gear	19-58-7 to 19-58-31
Handle, rear door pull-to	23-81-3 to 23-81-8	Hose, radiator.	7-14-4 to 7-14-31
Hanger, frame rear spring.	13-54-4 to 13-54-15	Hot water heater and component parts	1-48-1 to 1-48-942
Head, cylinder.	9-03-4 to 9-03-29	Housing, clutch	6-09-1 to 6-09-11
Headlamp	8-34-1 to 8-34-374	Housing, power steering gear	19-02-4 to 19-02-69
Headlamp and instrument lamp switch	8-53-270	Housing, rear axle	3-02-1 to 3-02-20
Headlamp beam indicator light.	8-39-15	Housing, standard steering gear	19-02-4 to 19-02-18
Headlining and listing.	23-86-3 to 23-86-36	Housing, water pump	7-43-1 to 7-43-8
Heater and component parts, hot water	1-48-1 to 1-48-942	Hub, fan pulley	7-05-1
Hinge, door	23-15-1 to 23-15-32	Hub, wheel	22-05-14 to 22-05-24
Hinge, hood	15-19-2 to 15-19-40	Hub and brake drum	22-03-1 to 22-03-2
Hood bumper.	15-09-4 to 15-09-22	Hub cap	22-08-5 to 22-08-57
Hood hinge.	15-19-2 to 15-19-40	I	
Hood letters	15-06-0	Ignition	8-36-1 to 8-36-137
Hood lock	15-11-3 to 15-11-58	Ignition coil	8-35-4 to 8-35-115
Hood lock control	15-14-1 to 15-14-21	Ignition distributor	8-27-1 to 8-27-352
Hood lock striker	15-13-2 to 15-13-6	Ignition lamp	8-40-8
Hood medallion	15-06-0	Ignition lock cylinder	8-35-4 to 8-35-115
Hood moulding	15-25-6	Impeller, water pump	7-45-3 to 7-45-31
Hood name plate	15-06-0	Indicator, oil level	10-03-4 to 10-03-7
Hood top panel.	15-03-3 to 15-03-60	Inlet, crankcase breather pipe	10-01-21
Hook, coat hanger.	23-82-3 to 23-82-39	Instrument panel	23-33-10 to 23-33-247
Horn	8-32-2 to 8-32-18	Instrument panel instruments	8-37-1 to 8-37-517

PART NAME	CODE	PART NAME	CODE
Instrument panel light	8-41-35 to 8-41-65	Lamp, parking and directional	8-50-82 to 8-50-349
Instrument panel wiring	8-19-2 to 8-19-87	Lamp, parking brake signal	8-31-2 to 8-31-16
Instrument trim pad	23-84-3 to 23-84-31	Lamp, quarter	8-11-6 to 8-11-12
Instruments, instrument panel	8-37-1 to 8-37-459	Lamp, stop	8-58-60 to 8-58-61
Insulator, body	23-31-33 to 23-31-205	Lamp, tail and stop	8-55-1 to 8-55-335
Insulator, engine front support	9-67-4	Lamp, trunk	8-13-1 to 8-13-6
Insulator, engine rear support	9-71-5 to 9-71-19	Lamp, Trunk compartment	1-30-3
Insulator, propellor shaft center bearing housing	16-17-1	Lamp and switch, dome	8-05-6 to 8-05-32
Intake, air	23-61-39 to 23-61-116	Leaf, rear spring	17-12-4 to 17-12-12
Intake valve	9-39-5	Letters, hood	15-06-0
J		Leveler, load	1-07-1
Jack, bumper	13-72-1 to 13-72-4	Lever, automatic 3 speed transmission control	21-142-12 to 21-142-21
Jacket, power steering gear column	19-14-1 to 19-14-72	Lever, clutch release	6-17-3
Jacket, standard steering gear column	19-14-1 to 19-14-72	Lever, parking brake	4-25-1 to 4-25-21
Joint, universal	16-03-1 to 16-03-20	Lever, parking brake (hand operated)	4-08-1 to 4-08-36
K		Lever, parking brake operating	4-26-1 to 4-26-28
Keys and cylinder, lock	23-17-2 to 23-17-72	Lever, standard transmission gearshift	21-30-2 to 21-30-438
Knuckle, steering	2-03-3	License mounting parts	8-47-8 to 8-47-131
L		License plate lamp	8-57-7 to 8-57-109
Lamp, back-up	1-10-1 8-56-1 to 8-56-75	Lid, deck	23-19-8 to 23-19-185
Lamp, courtesy	8-11-6 to 8-11-12	Lift, window (electric)	23-41-4 to 23-41-286
Lamp, directional signal	8-55-1 to 8-55-380	Lift, window (manual)	23-39-2 to 23-39-53
Lamp, hand brake signal	1-09-1	Light, courtesy	1-14-40
Lamp, ignition	8-40-8	Light, glove compartment	8-38-4 to 8-38-23
Lamp, license plate	8-57-7 to 8-57-109	Light, headlamp beam indicator	8-39-15
Lamp, map	8-42-2 to 8-42-31	Light, instrument panel	8-41-35 to 8-41-65
		Light, map	1-14-40

PART NAME	CODE	PART NAME	CODE
Light, underhood	1-13-1 to 1-13-13	Master cylinder piston cup	5-45-8
Light, warning	1-06-1 to 1-06-14	Master cylinder piston push rod	5-47-4
Lighter, cigar	1-12-0 8-20-3 to 8-20-16	Master cylinder piston return spring	5-46-1
Liner, body	23-31-33 to 23-31-205	Master cylinder valve	5-43-1 to 5-43-5
Lining, luggage compartment front	23-96-3 to 23-96-41	Mat, floor	23-20-8 to 23-20-65
Lining and shoe, wheel brake	5-03-1 to 5-03-23	Material, seat cloth trim	23-114-2 to 23-114-15
Listing and headlining	23-86-3 to 23-86-36	Medallion, hood	15-06-0
Load Leveler	1-07-1	Medallion radiator grille	7-17-2 to 7-17-21
Lock, child guard rear door safety	1-72-5	Mirror	1-76-1 to 1-76-3
Lock, hood	5-11-3 to 5-11-58	Motor, starting	23-21-3 to 23-21-74
Lock, safe-T-matic door	23-13-0	Moulding, front fender	8-52-4 to 8-52-375
Lock, transmission parking	4-10-1 to 4-10-28	Moulding, garnish	12-15-0 23-22-7 to 23-22-160
Lock cylinder and keys	23-17-2 to 23-17-72	Moulding, hood	15-25-6
Low oil pressure switch	8-53-327	Moulding, outside finish	23-23-41 to 23-23-80
Luggage compartment from lining	23-96-3 to 23-96-41	Moulding, trim finish	23-26-2 to 23-26-80
M		Mounting, fuel pump	14-74-1
Manifold	9-48-6 to 9-46-138	Mounting parts, license	8-47-8 to 8-47-131
Manifold gasket	9-50-1 to 9-50-6	Muffler	11-01-1
Manifold heat control valve	9-59-13 to 9-59-15	Muffler support	11-02-1 to 11-02-4
Manifold heat control valve stop	9-62-1	N	
Manifold heat control valve thermostat	9-58-1 to 9-58-14	Name Plate, front fender	12-15-0
Map lamp	8-42-2 to 8-42-31	Nipple, water pump	7-48-22
Map lamp switch	8-42-25	Nut, front seat cushion to back mounting	23-115-4 to 23-115-10
Map light	1-14-40	O	
Master cylinder	5-39-1 to 5-39-24	Oil filter	10-26-5 to 10-26-65
Master cylinder boot	5-40-1	Oil pump	10-07-2 to 10-07-14
Master cylinder brake tube	5-52-3 to 5-52-62	Oil level indicator	10-03-4 to 10-03-7
Master cylinder piston	5-44-8 to 5-44-9	Oil pan	10-24-1 to 10-24-38

1962 PASSENGER CAR PARTS CATALOG

ALPHABETICAL INDEX

PART NAME	CODE	PART NAME	CODE
Oil pressure relief valve	10-22-11 to 10-22-41	Panel, rear upper pillar reinforcement trim	23-99-4 to 23-99-41
Oil pump drive gear	10-10-1	Panel, shelf trim	23-102-3
Oil pump drive shaft	10-09-1 to 10-09-7	Panel, visor trim	23-103-3 to 23-103-48
Oil pump rotor	10-14-18	Parking and directional lamp	8-50-82 to 8-50-349
Oil strainer	10-23-7	Parking brake adjuster	4-07-1 to 4-07-28
Ornament radiator grille	7-17-2 to 7-17-21	Parking brake band	4-03-1 to 4-03-11
Outlet, crankcase ventilator	10-02-8 to 10-02-67	Parking brake cable	4-23-1 to 4-23-51
Outside finish moulding	23-23-2 to 23-23-80	Parking brake drum	4-01-1 to 4-01-2
P		Parking brake indicator lamp switch	3-31-10
Package, automatic 3 speed transmission	21-01-3	Parking brake lever (hand operated)	4-08-1 to 4-08-36
Package, propeller shaft yoke	16-20-1 to 16-20-20	Parking brake lever (foot operated)	4-25-1 to 4-25-21
Package, standard transmission	21-01-3	Parking brake lever pawl	4-13-6 to 4-13-10
Package, wheel cylinder service	5-63-1 to 5-63-3	Parking brake lever return spring	4-19-1
Pad, body	23-31-33 to 23-31-205	Parking brake operating lever	4-26-1 to 4-26-28
Pad, brake pedal	5-28-8	Parking brake shoe	4-03-1 to 4-03-11
Pad, clutch pedal	6-39-2	Parking brake shoe anchor	4-06-1 to 4-06-11
Pad, instrument trim	23-84-3 to 23-84-31	Parking brake signal lamp	8-31-2 to 8-31-18
Pan, automatic 3 speed transmission oil	21-119-3 to 21-119-25	Parking brake support	4-29-1 to 4-29-16
Pan, body	23-32-8 to 23-32-115	Parts, differential clutch	3-09-1 to 3-09-3
Pan, clutch housing	6-10-2 to 6-10-31	Pawl, parking brake lever	4-13-6 to 4-13-10
Pan, oil	10-24-1 to 10-24-38	Pedal, accelerator	14-01-1 to 14-01-31
Panel, body	23-34-13 to 23-34-354	Pedal, clutch	6-38-1 to 6-38-26
Panel, cowl trim	23-91-6 to 23-91-20	Pedal and bushing, brake	5-27-1 to 5-27-21
Panel, door trim	23-92-5 to 23-92-25	Pillar, body	23-36-5 to 23-36-134
Panel, hood top	15-03-3 to 15-03-60		
Panel, instrument	23-33-10 to 23-33-247		
Panel, rear quarter trim	23-101-3 to 23-101-32		
Panel, rear seat shelf	23-102-3		

PART NAME	CODE	PART NAME	CODE
Pilot, automatic	14-02-1	Power steering gear housing	19-02-4
	to	to	to
	14-02-68	Power steering gear idler arm	19-02-69
Pin, piston	9-36-5	to	19-27-2
	to	to	19-27-55
	9-36-7	Power steering gear piston	19-56-6
Pinion, automatic 3 speed transmission		to	19-56-90
speedometer	21-85-5	Power steering gear shaft and roller tooth.	19-19-1
	to	to	19-19-72
	21-85-61	Power steering gear tube and coupling . . .	19-15-4
Pinion, differential	3-07-1	to	19-15-69
	to	Power steering gear valve	19-57-1
	3-07-2	to	19-57-64
Pinion, standard transmission main drive . .	21-09-2	Power steering gearshift control rod	19-48-1
	to	to	19-48-52
	21-09-33	Power steering gearshift rod	19-46-3
Pinion, standard transmission speedometer .	21-85-5	to	19-46-55
	to	Power steering gearshift tube	19-46-3
	21-85-61	to	19-46-55
Pipe, exhaust	11-05-1	Power steering oil pump	19-54-2
	to	to	19-54-258
	11-05-12	Power steering wheel	19-30-4
Pipe, tail	11-09-3	to	19-30-18
Piston, master cylinder	5-44-8	Propeller shaft	16-02-1
	to	to	16-02-5
	5-44-9	Propeller shaft center bearing	16-16-1
Piston, power steering gear	19-56-6	to	16-16-47
	to	Propeller shaft center bearing housing	
	19-56-90	insulator	16-17-1
Piston, wheel cylinder	5-70-1	Propeller shaft flange	16-20-1
Piston, w/pin	9-34-5	to	16-20-8
Piston pin	9-36-5	Propeller shaft sliding yoke	16-14-1
	to	to	16-14-9
	9-36-7	Propeller shaft spline	16-14-1
Piston ring set	9-35-1	to	16-14-9
Plate, clutch cover and pressure	6-14-1	Protector, door edge	1-135-1
	to	Pulley, fan and alternator idler	7-04-1
	6-14-10	to	7-04-16
Plate, clutch pressure	6-15-1	Pulley, fan drive and driven	7-06-1
Plate, hood name	15-06-0	to	7-06-14
Plug, body	23-32-8	Pump, automatic 3 speed transmission oil .	21-118-6
	to	to	21-118-57
	23-32-115	Pump, fuel	14-73-1
Power brake	1-42-1	Pump, oil	10-07-2
Power brake air cleaner	5-113-17	to	10-07-14
Power brake hose clamp	5-112-1	Pump, power steering oil	19-54-2
Power brake power unit	5-100-1	to	19-54-258
	to		
	5-100-210		
Power brake tube connector	5-110-18		
Power brake vacuum check valve	5-105-1		
Power brake vacuum hose	5-111-17		
Power brake vacuum tank	5-102-2		
	to		
	5-102-11		
Power steering gear	19-01-4		
	to		
	19-01-62		
Power steering column bracket	19-31-1		
	to		
	19-31-38		
Power steering gear arm	19-27-2		
	to		
	19-27-55		
Power steering gear column jacket	19-14-1		
	to		
	19-14-72		
Power steering gear hose	19-58-7		
	to		
	19-58-31		

1962 PASSENGER CAR PARTS CATALOG

ALPHABETICAL
INDEX

PART NAME	CODE	PART NAME	CODE
Pump, water	7-42-1 to 7-42-4	Rear axle housing	3-02-1 to 3-02-20
Push button vacuum switch	24-24-150	Rear bumper face bar	13-66-3 to 13-66-147
Q		Rear door pull-to handle	23-81-3 to 23-81-8
Quarter lamp	8-11-6 to 8-11-12	Rear quarter trim panel	23-101-3 to 23-101-32
Quarter lamp switch	8-11-6	Rear seat back	23-109-3 to 23-109-40
Quarter window opening weathercord	23-113-2 to 23-113-87	Rear seat shelf panel	23-102-3
R		Rear shelf radio switch	1-87-289
Rack, roof luggage	1-74-1	Rear spring	17-11-1 to 17-11-10
Rack, roof rail and luggage	23-40-82 to 23-40-190	Rear spring bumper	17-19-3 to 17-19-20
Radiator core	7-11-3 to 7-11-4	Rear spring center bolt	17-14-10
Radiator core fan shroud	7-08-2 to 7-08-16	Rear spring clip	17-15-1 to 17-15-30
Radiator cross bar	7-33-1 to 7-33-12	Rear spring leaf	17-12-4 to 17-12-12
Radiator drain cock	7-13-2	Rear spring shackle	17-16-1 to 17-16-8
Radiator dust shield	7-31-2 to 7-31-45	Rear spring silent block	17-17-3 to 17-17-5
Radiator filler cap	7-12-1	Rear upper pillar reinforcement trim panel	23-99-4 to 23-99-41
Radiator grille	7-16-11 to 7-16-73	Rear window defogger switch	1-48-300
Radiator grille medallion	7-17-2 to 7-17-21	Rear window defogger switch package	1-48-299
Radiator hose	7-14-4 to 7-14-31	Receiver, ash	23-02-1 to 23-02-150
Radiator grille ornament	7-17-2 to 7-17-21	Receiver drier	24-26-20 to 24-26-100
Radiator stone deflector	7-35-2 to 7-35-20	Regulator, door	23-14-10 to 23-14-153
Radiator yoke	7-26-2 to 7-26-37	Regulator, electric window	23-41-4 to 23-41-286
Radio	1-87-2 to 1-87-464	Reinforcement, body	23-07-168 to 23-07-169
Radio antenna	1-88-1 to 1-88-206	Retainer, folding top header outer panel tacking strip	23-111-37 to 23-111-37
Radio power antenna switch	1-88-205	Rocker, valve	9-43-1 to 9-43-26
Rail standard transmission gearshift	21-34-42 to 21-34-47	Rod, accelerator pedal to accelerator shaft	14-07-1 to 14-07-15
Rear axle control strut	3-01-25 to 3-01-35	Rod, clutch pedal	6-50-1 to 6-50-34
Rear axle differential and carrier	3-03-1 to 3-03-36		

PART NAME	CODE	PART NAME	CODE
Shaft, oil pump drive	10-09-1 to 10-09-7	Spring, clutch pressure	6-16-1
Shaft, propeller	16-02-1 to 16-02-5	Spring, clutch release bearing return . . .	6-20-14
Shaft, standard transmission main	21-16-3	Spring, clutch release center	6-35-1 to 6-35-17
Shaft, standard transmission reverse idler .	21-12-1 to 21-12-2	Spring, clutch release fork return	6-27-5
Shaft, sway eliminator	17-29-5 to 17-29-21	Spring, master cylinder piston return . . .	5-46-1
Shaft, water pump	7-45-3 to 7-45-31	Spring, parking brake lever return	4-19-1
Shelf trim panel	23-102-3	Spring, rear	17-11-1 to 17-11-10
Shield, battery heat	13-35-1	Spring, seat	23-52-1 to 23-52-15
Shield, front fender	12-04-4 to 12-04-33	Sprocket, camshaft	9-17-5 to 9-17-13
Shield, radiator dust	7-31-2 to 7-31-45	Sprocket, crankshaft	9-08-5
Shield, wheel brake dust	5-16-1	Standard steering column bracket	19-31-1 to 19-31-24
Shim, front fender	12-02-5 to 12-02-12	Standard steering gear	19-01-3 to 19-01-24
Shock absorber	17-23-3 to 17-23-57	Standard steering gear arm	19-27-2 to 19-27-55
Shock absorber bracket	17-24-3 to 17-24-28	Standard steering gear column jacket	19-14-1 to 19-14-72
Shoe, parking brake	4-03-1 to 4-03-11	Standard steering gear housing	19-02-4 to 19-02-18
Shoe and lining, wheel brake	5-03-1 to 5-03-23	Standard steering gear housing cover	19-04-1 to 19-04-13
Shroud, radiator core fan	7-08-2 to 7-08-16	Standard steering gear idler arm	19-27-2 to 19-27-55
Side sill and belt bar	23-51-3 to 23-51-45	Standard steering gear shaft and roller tooth	19-19-4 to 19-19-70
Skirt, fender	1-45-1	Standard steering gear tube and coupling . .	19-15-4 to 19-15-111
Spacer, rear door pull-to handle	23-81-3 to 23-81-8	Standard steering gearshift control rod . . .	19-48-1 to 19-48-52
Spare wheel carrier	22-20-29 to 22-20-89	Standard steering gearshift rod	19-46-3 to 19-46-55
Spline, propeller shaft	16-14-1 to 16-14-9	Standard steering gearshift tube	19-46-3 to 19-46-55
Spotlight	1-108-1 to 1-108-49	Standard steering wheel	19-30-4 to 19-30-18
Spring, accelerator pedal return	14-06-1 to 14-06-10	Standard transmission	21-02-1 to 21-02-6
Spring, brake pedal return	5-34-1 to 5-34-6	Standard transmission case	21-03-1 to 21-03-25
Spring, carburetor lever return	14-08-36 to 14-08-37	Standard transmission case extension	21-29-3 to 21-29-25
			21-04-1 to 21-04-12

PART NAME	CODE	PART NAME	CODE
Standard transmission clutch gear	21-14-1	Stop lamp	8-58-60
	to	to	8-58-61
Standard transmission countershaft	21-14-20	Stop lamp switch	8-58-60
	21-24-2	Strainer, automatic 3 speed transmission	
	to	oil pump	21-117-1
Standard transmission countershaft bearing .	21-24-22	to	21-117-3
	21-25-2	Strainer, oil	10-23-7
	to	Strap, assist	23-77-3
Standard transmission countershaft gear . .	21-25-6	to	23-77-17
	21-15-2	Strap, battery hold-down	13-34-3
	to	Striker, body	23-08-13
Standard transmission gear	21-15-33	to	23-08-76
	21-10-4	Striker, hood lock	15-13-2
	to	to	15-13-6
Standard transmission gearshift fork	21-10-16	Strip, folding top bow tacking	23-111-37
Standard transmission gearshift lever	21-39-3	Strut, rear axle control	3-01-25
and rod	21-30-2	to	3-01-35
	to	Stud, battery hold-down	13-36-5
Standard transmission gearshift rail	21-30-438	Stud, throttle linkage ball	14-13-1
	21-34-42	to	14-13-5
	to	Stud and gasket, exhaust pipe flange	11-06-2
Standard transmission main drive pinion . .	21-34-47	to	11-06-8
	21-09-2	Support, engine front	9-64-5
	to	to	9-64-25
Standard transmission main shaft	21-09-33	Support, front fender	12-07-1
Standard transmission main shaft bearing . .	21-16-3	to	12-07-3
	21-19-2	Support, fuel tank	14-88-8
	to	to	14-88-36
Standard transmission main shaft bearing	21-19-15	Support, muffler	11-02-1
oil seal	21-22-2	to	11-02-4
Standard transmission main shaft pilot		Support, parking brake	4-29-1
bearing	21-17-2	to	4-29-16
	to	Support, tail pipe	11-10-3
Standard transmission package	21-17-9	to	11-10-42
Standard transmission remote control	21-01-3	Support, wheel brake	5-13-1
	21-42-11	to	5-13-35
	to	Sway eliminator shaft	17-29-5
Standard transmission reverse idler gear . .	21-42-43	to	17-29-21
	21-11-1	Switch, automatic door lamp	8-12-1
	to	to	8-12-3
Standard transmission reverse idler gear	21-11-9	Switch, automatic 3 speed transmission	
shaft	21-12-1	neutral starter switch	21-113-24
	to	to	21-113-29
	21-12-2	Switch, back-up lamp	8-56-2
Standard transmission set	21-01-3	Switch, blower	24-24-5
Standard transmission speedometer cable,		Switch, brake, mechanical	14-02-32
shaft and housing	21-84-1	Switch, courtesy lamp	8-11-6
	to	Switch, dome lamp	8-05-14
Standard transmission speedometer pinion .	21-84-28	Switch, electric door lock	23-18-103
	21-85-4	Switch, folding top lift	23-58-532
	to	Switch, foot dimmer	8-53-150
Starter and ignition switch	21-85-61		
Starting motor	8-35-59		
	8-52-4		
	to		
Steering knuckle	8-52-389		
Steering knuckle tie rod	2-03-3		
	to		
	2-07-1		
	to		
Steering linkage knuckle arm	2-07-41		
Stop, brake pedal	2-05-4		
Stop, manifold heat control valve	5-30-12		
Stop and tail lamp	9-62-1		
	8-55-1		
	to		
	8-55-380		

1962 PASSENGER CAR PARTS CATALOG

ALPHABETICAL INDEX

PART NAME	CODE	PART NAME	CODE
Switch, fresh air heater control push button	1-48-770	Throttle control	14-25-5 to 14-25-13
Switch, front door automatic lamp	8-12-2	Throttle control bell crank	14-14-1 to 14-14-57
Switch, headlamp and instrument lamp	8-53-270	Throttle control cable mounting bracket	14-26-2 to 14-26-9
Switch, horn	8-33-90	Throttle lever rod	14-15-3 to 14-15-10
Switch, low oil pressure	8-53-327	Throttle linkage ball stud	14-13-1 to 14-13-5
Switch, map lamp	8-42-25	Timing chain	9-20-1
Switch, parking brake indicator lamp	8-31-10	Tooth, power steering gear shaft and roller	19-19-1 to 19-19-72
Switch, push button vacuum	24-24-150	Tooth, standard steering gear shaft and roller	19-19-4 to 19-19-70
Switch, quarter lamp	8-11-6	Top, folding	23-58-3 to 23-58-607
Switch, radio power antenna	1-88-205	Torque converter	9-46-4 to 9-46-228
Switch, rear shelf radio	1-87-289	Torsion parts, front suspension	2-14-1 to 2-14-25
Switch, rear window defogger	1-48-300	Transmission, automatic 3 speed	21-02-1
Switch, starter and ignition	8-35-59	Transmission, standard	21-02-1 to 21-02-6
Switch, stop lamp	8-58-60	Transmission parking lock	4-10-1 to 4-10-28
Switch, tailgate electric window lift	23-54-167	Tray, battery support	13-33-61 to 13-33-68
Switch, trunk compartment trunk	1-30-3	Trim finish moulding	23-26-2 to 23-26-89
Switch, trunk lamp	8-13-2	Trough, drain	23-59-35 to 23-59-61
Switch, turn signal	8-50-82	Trunk compartment lamp	1-30-3
Switch, turn signal actuating	8-50-98	Trunk compartment lamp switch	1-30-3
Switch, underhood light	1-13-10	Trunk lamp	8-13-1 to 8-13-6
Switch, windshield washer	1-82-14	Trunk lamp switch	8-13-2
Switch, windshield wiper	23-67-160	Tube, fuel line	14-89-2 to 14-89-57
Switch and bracket, turn signal cancelling	8-50-125	Tube, master cylinder brake tube	5-52-3 to 5-52-62
Switch and cable, turn signal electric	8-50-82	Tube, power steering gearshift	19-46-3 to 19-46-55
Switch and wire glove compartment lamp socket	8-38-23	Tube, standard steering gearshift	19-46-3 to 19-46-55
Switch package, automatic 3 speed transmission	21-113-24	Tube, wheel cylinder connecting	5-55-1
Switch package, rear window defogger	1-48-299		
Switch package, window safety	1-50-1		
Switches	8-53-150 to 8-53-327		
T			
Tail and stop lamp	8-55-1 to 8-55-380		
Tail pipe	11-09-3		
Tail pipe support	11-10-3 to 11-10-42		
Tailgate	23-54-1 to 23-54-207		
Tailgate electric window lift switch	23-54-167		
Tailgate window screen	1-08-1		
Tank, fuel	14-86-1 to 14-86-85		
Tank, power brake vacuum	5-102-2 to 5-102-11		
Tappet, valve	9-41-1 to 9-41-4		
Tee, brake tube	5-58-1 to 5-58-2		
Terminal block	8-21-1		
Thermostat	7-41-4		
Thermostat manifold heat control valve	9-58-1 to 9-58-14		
Third seat	23-48-6 to 23-48-189		

PART NAME	CODE	PART NAME	CODE
Tube and coupling, power steering gear . .	19-15-4 to 19-15-69	Valve rocker	9-43-1 to 9-43-26
Tube and coupling, standard steering gear .	19-15-4 to 19-15-111	Valve tappet	9-41-1 to 9-41-4
Tubing and cover, brake	5-53-3 to 5-53-4	Vent, cowl	23-61-39 to 23-61-116
Tufting buttons	23-78-2	Vent wing	23-64-4 to 23-64-314
Turn signal actuating switch	8-50-98	Visor	1-32-2
Turn signal cancelling switch and bracket .	8-50-125	Visot trim panel	23-103-3 to 23-103-48
Turn signal electric switch and cable . . .	8-50-82		
Turn signal switch	8-50-82		
U		W	
Underhood light	1-13-1 to 1-13-13	Warning light	1-06-1 to 1-06-14
Underhood light switch	1-13-10	Washer, windshield	1-82-2 to 1-82-49
Unit, fan fluid drive	7-07-1	Water pump	7-42-1 to 7-42-4
Unit, power brake power	5-100-1 to 5-100-209	Water pump elbow	7-48-22
Universal cross roller and bushing	16-10-1 to 16-10-3	Water pump gasket	7-44-3 to 7-44-4
Universal joint	16-03-1 to 16-03-20	Water pump housing	7-43-1 to 7-43-8
Universal joint body	16-04-1	Water pump impeller	7-45-3 to 7-45-31
Universal joint centering button	16-06-1 to 16-06-3	Water pump nipple	7-48-22
Universal joint cover	16-07-3 to 16-07-4	Water pump seal	7-46-1
Universal joint cross	16-08-6 to 16-08-7	Water pump shaft	7-45-3 to 7-45-31
V		Weathercord, quarter window opening . . .	23-113-2 to 23-113-87
Valve	9-39-1 to 9-39-21	Weatherstrip	23-63-14 to 23-63-181
Valve, exhaust	9-39-6	Weight, wheel balance	22-09-1
Valve, intake	9-39-5	Wheel	22-01-5 to 22-01-51
Valve, manifold heat control	9-59-13 to 9-59-15	Wheel, power steering	19-30-4 to 19-30-18
Valve, master cylinder	5-43-1 to 5-43-5	Wheel, standard steering	19-30-4 to 19-30-18
Valve, oil pressure relief	10-22-11 to 10-22-41	Wheel balance weight	22-09-1
Valve, power brake vacuum check	5-105-1	Wheel brake adjuster	5-20-1 to 5-20-20
Valve, power steering gear	19-57-1 to 19-57-64	Wheel brake adjusting cam dust shield seal . .	5-22-8
Valve body and valves, automatic 3 speed transmission	21-139-4 to 21-139-193	Wheel brake cylinder	5-64-1 to 5-64-2
Valve push rod	9-42-1	Wheel brake dust shield	5-16-1

