

PART NAME	CODE	PART NAME	CODE
-----------	------	-----------	------

ALPHABETICAL INDEX

**A**

Absorber, shock . . . . .	17-23-3 to 17-23-57	Arm, standard steering gear idler . .	19-27-2 to 19-27-55
Absorber, shock (load leveler) . . . .	1-07-1	Arm, steering linkage knuckle . . . .	2-05-4
Accelerator pedal . . . . .	14-01-1 to 14-01-31	Arm and bracket, visor . . . . .	23-103-10 to 23-103-48
Accelerator pedal return spring . . . .	14-06-1 to 14-06-10	Arm rest, front door . . . . .	23-76-3 to 23-76-86
Accelerator pedal to accelerator shaft rod . . . . .	14-07-1 to 14-07-15	Ash receiver . . . . .	23-02-1 to 23-02-150
Accelerator shaft . . . . .	14-11-1 to 14-11-48	Assist strap . . . . .	23-77-3 to 23-77-17
Actuator . . . . .	24-29-1 to 24-29-15	Automatic choke to carburetor rod clip	14-65-4
Adjuster, front seat . . . . .	23-47-6 to 23-47-462	Automatic door lamp switch . . . . .	8-12-2 to 8-12-17
Adjuster, wheel brake . . . . .	5-20-1 to 5-20-20	Automatic headlamp dimmer . . . . .	1-04-4 to 1-04-18
Air cleaner, carburetor . . . . .	14-29-2 to 14-29-44	Automatic pilot . . . . .	1-26-1 14-02-1 to 14-02-79
Air cleaner, crankcase vent inlet . . .	10-01-21	Automatic 3 speed transmission . . .	21-02-1 to 21-02-8
Air cleaner, power brake . . . . .	5-113-17	Automatic 3 speed transmission band	21-136-5 to 21-136-237
Air conditioning . . . . .	24-01-1 to 24-01-87	Automatic 3 speed transmission case	21-03-1 to 21-03-40
Air conditioning control . . . . .	24-24-5 to 24-24-173	Automatic 3 speed transmission case extension . . . . .	21-04-1 to 21-04-12
Air intake . . . . .	23-61-39 to 23-61-116	Automatic 3 speed transmission clutch	21-133-5 to 21-133-65
Alternator . . . . .	8-28-3 to 8-28-292	Automatic 3 speed transmission control lever . . . . .	21-142-12 to 21-142-21
Alternator component parts . . . . .	8-29-17 to 8-29-208	Automatic 3 speed transmission front and rear planet pinion carrier and components . . . . .	21-134-5 to 21-134-45
Antenna, radio . . . . .	1-88-1 to 1-88-205	Automatic 3 speed transmission gear- shift button and cable . . . . .	21-30-28 to 21-30-394
Anti-squeak, body . . . . .	23-31-33 to 23-31-205	Automatic 3 speed transmission governor . . . . .	21-138-2 to 21-138-38
Arm, front wheel lower control . . . .	2-10-6 to 2-10-76	Automatic 3 speed transmission input shaft . . . . .	21-129-5 to 21-129-24
Arm, power steering gear . . . . .	19-27-2 to 19-27-55		
Arm, power steering gear idler . . . .	19-27-2 to 19-27-55		
Arm, standard steering gear . . . . .	19-27-2 to 19-27-55		

# 1963 PASSENGER CAR PARTS CATALOG

ALPHABETICAL  
INDEX

PART NAME	CODE	PART NAME	CODE
Automatic 3 speed transmission neutral starter switch . . . . .	21-113-24 to 21-113-29	Bar, rear bumper face . . . . .	13-66-3 to 13-66-153
Automatic 3 speed transmission neutral starter switch package . . .	21-113-24	Battery and cable . . . . .	8-01-4 to 8-01-23
Automatic 3 speed transmission oil pan . . . . .	21-119-3 to 21-119-25	Battery heat shield . . . . .	13-35-1
Automatic 3 speed transmission oil pump . . . . .	21-118-6 to 21-118-57	Battery hold-down strap . . . . .	13-34-3
Automatic 3 speed transmission oil pump strainer . . . . .	21-117-1 to 21-117-3	Battery hold-down stud . . . . .	13-36-5
Automatic 3 speed transmission output shaft . . . . .	21-05-1 to 21-05-35	Battery support tray . . . . .	13-33-61 to 13-33-68
Automatic 3 speed transmission package . . . . .	21-01-3	Bearing, camshaft . . . . .	9-16-6 to 9-16-17
Automatic 3 speed transmission servos . . . . .	21-137-5 to 21-137-205	Bearing, clutch release . . . . .	6-19-2 to 6-19-3
Automatic 3 speed transmission set . . . . .	21-01-3	Bearing, differential . . . . .	3-11-1 to 3-11-14
Automatic 3 speed transmission speedometer cable shaft and housing . . . . .	21-84-1 to 21-84-28	Bearing, drive pinion . . . . .	3-22-24 to 3-22-45
Automatic 3 speed transmission speedometer pinion . . . . .	21-55-5 to 21-85-61	Bearing, drive shaft . . . . .	3-33-1 to 3-33-8
Automatic 3 speed transmission torque converter reaction shaft . . . . .	21-129-5 to 21-129-24	Bearing, front wheel . . . . .	22-06-1 to 22-06-18
Automatic 3 speed transmission valve body and valves . . . . .	21-139-4 to 21-139-193	Bearing, propeller shaft center . . . . .	16-16-1 to 16-16-47
Auxiliary vacuum switch . . . . .	24-24-150	Bearing, standard transmission countershaft . . . . .	21-25-2 to 21-25-6
<b>B</b>		Bearing, Standard transmission main shaft . . . . .	21-19-2 to 21-19-16
Back, rear seat . . . . .	23-109-3 to 23-109-40	Bearing, Standard transmission main shaft pilot . . . . .	21-17-2 to 21-17-9
Back-up lamp . . . . .	1-10-1 8-56-1 to 8-56-74	Bearing package, connecting rod . . . . .	9-32-2
Back-up lamp switch . . . . .	8-56-2	Bearing package, crankshaft . . . . .	9-09-2
Band, automatic 3 speed transmission . . . . .	21-136-5 to 21-136-237	Belt, fan and related drive . . . . .	7-03-1
Bar, belt . . . . .	23-51-3 to 23-51-45	Belt, safety . . . . .	1-67-1 to 1-67-6
Bar, front bumper face . . . . .	13-64-3 to 13-64-149	Belt bar . . . . .	23-51-3 to 23-51-45
Bar, radiator cross . . . . .	7-33-1 to 7-33-12	Belt package . . . . .	1-67-1 to 1-67-9
		Block, cylinder . . . . .	9-02-5 to 9-02-17
		Block, rear spring silent . . . . .	17-17-3 to 17-17-5
		Blower motor switch . . . . .	24-24-5
		Blower motor switch w/cable . . . . .	24-24-5
		Board, floor . . . . .	23-04-117 to 23-04-250
		Body, universal joint . . . . .	16-04-1

PART NAME	CODE	PART NAME	CODE
Body anti-squeak . . . . .	23-31-33	Bracket, frame engine rear support crossmember . . . . .	9-70-9
	to		
	23-31-205	Bracket, power unit mounting . . . . .	5-101-1
Body bracket . . . . .	23-07-168		to
	to		5-101-6
	23-07-169	Bracket, shock absorber . . . . .	17-24-3
Body bumper . . . . .	23-08-12		to
	to		17-24-28
	23-08-76	Bracket, throttle control mounting . .	14-26-2
	23-32-15		to
	to		14-26-6
	23-32-115	Bracket and arm, visor . . . . .	23-103-10
Body insulator . . . . .	23-31-33		to
	to		23-103-48
	23-31-205	Brake, power . . . . .	1-42-1
Body liner . . . . .	23-31-33	Brake drum . . . . .	22-04-2
	to		to
	23-31-205		22-04-14
Body pad . . . . .	23-31-33	Brake flexible hose . . . . .	5-62-1
	to		to
	23-31-205		5-62-20
Body pan . . . . .	23-32-15	Brake fluid . . . . .	5-01-1
	to	Brake pedal and bushing . . . . .	5-27-1
	23-32-115		to
Body panel . . . . .	23-34-10		5-27-21
	to	Brake pedal bracket . . . . .	5-31-11
	23-34-356		to
Body pillar . . . . .	23-36-5		5-31-15
	to	Brake pedal pad . . . . .	5-28-8
	23-36-138	Brake pedal return spring . . . . .	5-34-1
Body plug . . . . .	23-32-15		to
	to		5-34-6
	23-32-115	Brake pedal shaft . . . . .	5-29-1
Body reinforcement . . . . .	23-07-168	Brake pedal stop . . . . .	5-30-12
	to	Brake shoe guide . . . . .	5-25-9
	23-07-169	Brake switch . . . . .	14-02-32
Body seal . . . . .	23-31-33	Brake tube bracket . . . . .	5-57-2
	to	Brake tube clip . . . . .	5-56-2
	23-31-205	Brake tube tee . . . . .	5-58-1
Body side sill . . . . .	23-51-3		to
	to		5-58-2
	23-51-45	Brake tubing and cover . . . . .	5-53-3
Body striker . . . . .	23-08-12		to
	to		5-53-6
	23-08-76	Bulb . . . . .	8-44-1
Bolt, drive gear . . . . .	3-20-1	Bumper, body . . . . .	23-08-12
Bolt, rear spring center . . . . .	17-14-10		to
Boot, folding top dust . . . . .	23-112-12		23-08-76
	to		23-32-15
	23-112-160		to
Boot, master cylinder . . . . .	5-40-1		23-32-115
Boot, wheel cylinder . . . . .	5-69-1	Bumper, hood . . . . .	15-09-4
Box, glove . . . . .	23-06-4	Bumper, rear spring . . . . .	17-19-3
	to		to
	23-06-53		17-19-20
Brace, fender . . . . .	12-07-1	Bumper guard . . . . .	1-01-1
	to		13-68-6
	12-07-3		to
Bracket, body . . . . .	23-07-168	Bumper jack . . . . .	13-68-18
	to		13-72-1
	23-07-169		to
Bracket, brake pedal . . . . .	5-31-11		13-72-4
	to	Bushing and pedal, brake . . . . .	5-27-1
	5-31-15		to
Bracket, brake tube . . . . .	5-57-2		5-27-21
Bracket, fender . . . . .	12-06-3	Bushing and roller, universal cross .	16-10-1
	to		to
	12-06-6		16-10-3
Bracket, fender pillar support and cowl . . . . .	12-05-2	Button, tufting . . . . .	23-78-2

PART NAME	CODE	PART NAME	CODE
Button, universal joint centering . . .	16-06-1 to 16-06-3	Carpet and foundation floor console side Carrier, spare wheel . . . . .	23-71-1 22-20-29 to 22-20-89
Button and cable, automatic 3 speed transmission gearshift . . . . .	21-30-28 to 21-30-394	Carrier and components, automatic 3 speed transmission front and rear planet pinion . . . . .	21-134-5 to 21-134-45
<b>C</b>		Case, automatic 3 speed transmission	21-03-1 to 21-03-40
Cable, choke control . . . . .	14-63-1 to 14-63-24	Case, differential . . . . .	3-04-6 to 3-04-10
Cable, fast idle . . . . .	14-24-1 to 14-24-11	Case, standard transmission . . . . .	21-03-1 to 21-03-25
Cable, parking brake . . . . .	4-23-1 to 4-23-46	Center pillar trim cover . . . . .	23-99-4 to 23-99-41
Cable, throttle control . . . . .	14-25-5 to 14-25-13	Chain, timing . . . . .	9-20-1
Cable and button automatic 3 speed transmission gearshift. . . . .	21-30-28 to 21-30-394	Chain case cover . . . . .	9-23-5 to 9-23-40
Cable and connection . . . . .	8-16-1 to 8-16-10	Channel, glass . . . . .	23-09-2 to 23-09-75
Camshaft . . . . .	9-15-1 to 9-15-10	Chassis and body wiring compartment	8-15-2 to 8-15-53
Camshaft bearing . . . . .	9-16-6 to 9-16-17	Check, door . . . . .	23-10-1 to 23-10-18
Camshaft sprocket . . . . .	9-17-5	Choke control cable . . . . .	14-63-1 to 14-63-24
Cap, crankshaft bearing . . . . .	9-10-2 to 9-10-19	Cigar lighter . . . . .	8-20-3 to 8-20-16
Cap, fuel tank locking: . . . . .	1-39-2	Clamp, power brake hose . . . . .	5-112-1
Cap, hub . . . . .	22-08-5 to 22-08-57	Clamp and support, exhaust pipe. . .	11-08-5
Cap, radiator filler . . . . .	7-12-1	Clip, automatic choke to carburetor rod . . . . .	14-65-4
Carburetor . . . . .	14-30-1	Clip, fuel line tube . . . . .	14-90-1
Carburetor air cleaner . . . . .	14-29-2 to 14-29-44	Clip, rear spring . . . . .	17-15-1 to 17-15-30
Carburetor anti-stall diaphragm . . .	14-50-25	Clock . . . . .	1-21-1 to 1-21-24
Carburetor assemblies and service parts . . . . .	14-30-2 14-30-4 14-30-7 14-30-8 14-30-27 14-30-28 14-35-1 14-35-6 14-35-8 14-35-33 14-35-39 14-39-45 14-41-3 14-43-5 14-85-31	Clutch . . . . .	6-01-3
Carburetor fuel line tee . . . . .	23-79-3	Clutch, automatic 3 speed transmission	21-133-5 to 21-133-65
Carpet, front floor . . . . .	23-79-33	Clutch cover and pressure plate . . .	6-14-1 to 6-14-10
Carpet, rear floor . . . . .	23-79-33 to 23-79-79	Clutch disc . . . . .	6-13-1 to 6-13-8
		Clutch housing . . . . .	6-09-1 to 6-09-11
		Clutch housing pan . . . . .	6-10-2 to 6-10-31

PART NAME	CODE	PART NAME	CODE
Clutch parts, differential . . . . .	3-09-1 to 3-09-3	Control, door lock and remote . . . . .	23-18-5 to 23-18-116
Clutch pedal . . . . .	6-38-1 to 6-38-23	Control, hood lock . . . . .	15-14-1 to 15-14-21
Clutch pedal pad . . . . .	6-39-2	Control, manifold heat . . . . .	9-59-13 to 9-59-15
Clutch pedal shaft . . . . .	6-43-7 to 6-43-13	Converter, torque . . . . .	9-46-4 to 9-46-228
Clutch pedal rod . . . . .	6-50-1 to 6-50-10	Core, radiator . . . . .	7-11-3 to 7-11-4
Clutch pressure spring . . . . .	6-16-1	Countershaft, Standard transmission . . . . .	21-24-2 to 21-24-22
Clutch release bearing . . . . .	6-19-2 to 6-19-3	Courtesy lamp . . . . .	1-14-4 to 1-14-6
Clutch release bearing return spring . . . . .	6-20-14		8-11-6 to 8-11-19
Clutch release center spring . . . . .	6-35-1 to 6-35-17	Cover, center pillar trim . . . . .	23-99-4 to 23-99-41
Clutch release fork . . . . .	6-22-1 to 6-22-19	Cover, chain case . . . . .	9-23-5 to 9-23-40
Clutch release fork return spring . . . . .	6-27-5	Cover, front console . . . . .	23-71-1
Clutch release lever . . . . .	6-17-3	Cover, second seat back hinge . . . . .	23-70-5 to 23-70-6
Clutch release rod . . . . .	6-24-1 to 6-24-14	Cover, standard transmission case . . . . .	21-29-3 to 21-29-25
Clutch torque shaft . . . . .	6-52-1 to 6-52-17	Cover, universal joint . . . . .	16-07-3 to 16-07-4
Coat hanger hook . . . . .	23-82-30 to 23-82-39	Cover, wheelhouse second seat back hinge bracket . . . . .	23-70-5 to 23-70-6
Compartment, chassis and body wiring . . . . .	8-15-2 to 8-15-53	Cover and tubing, brake . . . . .	5-53-6
Components and carrier, automatic 3 speed transmission front and rear planet pinion . . . . .	21-134-5 to 21-134-45	Cowl trim panel . . . . .	23-91-6
Components and heater . . . . .	1-48-1 to 1-48-942	Cowl vent . . . . .	23-61-39 to 23-61-116
Compressor . . . . .	24-25-2 to 24-25-260	Crank, throttle control bell . . . . .	14-14-1 to 14-14-57
Condenser . . . . .	24-27-5 to 24-27-15	Crankcase vent inlet air cleaner . . . . .	10-02-40 to 10-02-67
Conditioning, air . . . . .	24-01-1 to 24-01-87	Crankshaft . . . . .	9-07-5 to 9-07-22
Connecting rod . . . . .	9-31-4 to 9-31-10	Crankshaft bearing cap . . . . .	9-10-2 to 9-10-19
Connecting rod bearing package . . . . .	9-32-2	Crankshaft bearing package . . . . .	9-09-2
Connection and cable . . . . .	8-16-1 to 8-16-10	Crankshaft rear bearing oil seal . . . . .	9-11-1 to 9-11-7
Connector, power brake tube . . . . .	5-110-18	Crankshaft sprocket . . . . .	9-08-5
Console, floor tunnel . . . . .	23-38-1 to 23-38-28	Crankshaft vibration damper . . . . .	9-13-5
Control, air conditioning . . . . .	24-24-5 to 24-24-173		

# 1963 PASSENGER CAR PARTS CATALOG

PART NAME	CODE	PART NAME	CODE
Cross, universal joint . . . . .	16-08-6	Differential pinion shaft. . . . .	3-08-1
	to	to	to
	16-08-7	Differential side gear. . . . .	3-08-2
Crossmember, frame engine rear			3-06-5
support . . . . .	9-69-4		to
	to		3-06-8
	9-69-21	Dimmer, automatic headlamp. . . . .	1-04-4
Crossmember, frame front. . . . .	13-11-5	to	to
Crossmember, frame rear . . . . .	13-18-4		1-04-18
	to	Disc, clutch . . . . .	6-13-1
	13-18-32	to	to
Cup, wheel cylinder piston . . . . .	5-71-1		6-13-8
	to	Distributor, ignition. . . . .	8-27-1
	5-71-2	to	to
Cushion, front seat . . . . .	23-108-4		8-27-352
	to	Dome lamp and switch . . . . .	8-05-6
	23-108-142	to	to
Cylinder, master . . . . .	5-39-1		8-05-32
	to	Dome lamp switch . . . . .	8-05-14
	5-39-24	Door . . . . .	23-11-1
Cylinder, wheel brake. . . . .	5-64-1	to	to
	to		23-11-21
	5-64-2	Door check . . . . .	23-10-1
Cylinder and key, lock . . . . .	23-17-2	to	to
	to		23-10-18
	23-17-72	Door edge protector. . . . .	1-135-1
Cylinder block. . . . .	9-02-5	Door hinge. . . . .	23-15-1
	to	to	to
	9-02-17		23-15-32
Cylinder head . . . . .	9-03-4	Door lock and remote control . . . . .	23-18-5
	to	to	to
	9-03-29		23-18-116
Cylinder head water outlet elbow . . . . .	9-05-5	Door regulator. . . . .	23-14-10
	to	to	to
	9-05-6		23-14-153
		Door remote control handle . . . . .	23-14-10
		to	to
			23-14-153
		Door trim panel . . . . .	23-92-5
		to	to
			23-92-25
		Drain cock, radiator. . . . .	7-13-2
		Drain trough . . . . .	23-59-26
		to	to
			23-59-63
		Drier, receiver . . . . .	24-26-20
		to	to
			24-26-100
		Drive gear and pinion set . . . . .	3-19-1
		Drive gear bolt . . . . .	3-20-1
		Drive pinion bearing . . . . .	3-22-24
		to	to
			3-22-45
		Drive shaft . . . . .	3-32-1
		to	to
			3-32-9
		Drive shaft bearing. . . . .	3-33-1
		to	to
			3-33-8
		Drive shaft oil seal. . . . .	3-35-14
		Drum, brake. . . . .	22-04-2
		to	to
			22-04-14
		Drum, hub and brake . . . . .	22-03-1
		to	to
			22-03-2

**D**

Damper, crankshaft vibration . . . . .	9-13-5
Deck lid . . . . .	23-19-8
	to
	23-19-188
Deflector, fuel tank stone . . . . .	14-87-2
Deflector, radiator stone . . . . .	7-35-2
	to
	7-35-13
Defogger, rear window . . . . .	1-47-1
	to
	1-47-19
Diaphragm, carburetor anti-stall . . . . .	14-50-25
Differential and carrier, rear axle . . . . .	3-03-1
	to
	3-03-36
Differential bearing . . . . .	3-11-1
	to
	3-11-14
Differential case . . . . .	3-04-6
	to
	3-04-10
Differential clutch parts . . . . .	3-09-1
	to
	3-09-3
Differential pinion . . . . .	3-07-1
	to
	3-07-2

PART NAME	CODE	PART NAME	CODE
<b>E</b>		Fender bracket . . . . .	12-06-3 to 12-06-6
Elbow, cylinder head water outlet . .	9-05-5 to 9-05-6	Fender moulding . . . . .	12-15-21
Elbow, water pump . . . . .	7-48-22	Fender name plate . . . . .	12-15-21
Electric door lock switch . . . . .	23-18-103	Fender pillar support and cowl bracket	12-05-2
Electric seat adjuster switch. . . . .	23-47-446	Fender seal . . . . .	12-02-5 to 12-02-12
Electric window lift and vent wing switch . . . . .	23-41-170	Fender shim . . . . .	12-02-5 to 12-02-12
Electric window lift safety switch package . . . . .	1-50-1	Fender support . . . . .	12-07-1 to 12-07-3
Electric window lift switch . . . . .	23-41-170	Filter, oil . . . . .	10-26-5 to 10-26-65
Emergency flasher light . . . . .	1-06-2 to 1-06-11	Filter, fuel. . . . .	14-67-1 to 14-67-2
Emergency flasher light switch . . . .	1-06-3	Flange propeller shaft . . . . .	16-20-1 to 16-20-8
Engine . . . . .	9-01-5 to 9-01-24	Floor board . . . . .	23-04-2 to 23-04-250
Engine front support . . . . .	9-64-5 to 9-64-24	Floor console side carpet and foundation	23-71-1
Engine front support insulator . . . .	9-67-4	Floor mat . . . . .	23-20-8 to 23-20-65
Engine rear support insulator . . . .	9-71-5 to 9-71-19	Floor tunnel console . . . . .	23-38-1 to 23-38-28
Evaporator . . . . .	24-28-3 to 24-28-398	Fluid, brake . . . . .	5-01-1
Exhaust pipe. . . . .	11-05-1 to 11-05-12	Flywheel . . . . .	9-45-1 to 9-45-2
Exhaust pipe flange gasket and stud .	11-06-8 to 11-06-10	Folding top . . . . .	23-58-3 to 23-58-607
Exhaust pipe support and clamp . . .	11-08-5	Folding top bow tacking strip . . . .	23-111-10 to 23-111-37
Exhaust valve . . . . .	9-39-6 to 9-39-21	Folding top dust boot . . . . .	23-112-12 to 23-112-160
Extension, automatic 3 speed transmission case . . . . .	21-04-1 to 21-04-12	Folding top header top material retainer . . . . .	23-112-4 to 23-112-160
Extension, standard transmission case	21-04-1 to 21-04-16	Folding top lift switch . . . . .	23-58-532
<b>F</b>		Foot control switch . . . . .	1-87-5
Fan . . . . .	7-02-1 to 7-02-16	Foot dimmer switch . . . . .	8-53-150
Fan and alternator idler pulley . . .	7-04-1 to 7-04-16	Fork, clutch release . . . . .	6-22-1 to 6-22-19
Fan and related drive belts . . . . .	7-03-1	Fork, standard transmission gearshift	21-39-3
Fan drive and driven pulley . . . . .	7-06-1 to 7-06-14	Frame . . . . .	13-01-1 to 13-01-6
Fan fluid drive unit. . . . .	7-07-1	Frame engine rear support cross- member . . . . .	9-69-4 to 9-69-21
Fan pulley hub . . . . .	7-05-1	Frame engine rear support cross- member bracket . . . . .	9-70-9
Fast idle cable . . . . .	14-24-1 to 14-24-11		
Fender, front . . . . .	12-01-5 to 12-01-105		

# 1963 PASSENGER CAR PARTS CATALOG

PART NAME	CODE	PART NAME	CODE
Frame front crossmember . . . . .	13-11-5	Fuel tank support . . . . .	14-88-8
Frame rear crossmember . . . . .	13-18-4	to	14-88-36
	13-18-32	Fuses . . . . .	8-17-2
Frame rear spring hanger . . . . .	13-54-4		
	to		
	13-54-15	<b>G</b>	
Frame sub-sidemember . . . . .	13-04-20	Garnish moulding . . . . .	23-22-7
Front bumper face bar . . . . .	13-64-3	to	23-22-160
	to	Gasket, fuel pump mounting . . . . .	14-74-1
	13-64-149	Gasket, manifold . . . . .	9-50-1
Front console cover . . . . .	23-71-1	to	9-50-16
Front door arm rest . . . . .	23-76-3	Gasket, water pump . . . . .	7-44-3
	to	to	7-44-4
	23-76-86	Gasket and stud, exhaust pipe flange	11-06-8
Front fender . . . . .	12-01-5	to	11-06-10
	to	Gauge, fuel tank . . . . .	14-72-1
	12-01-105	to	14-72-47
Front fender shield . . . . .	12-04-4	Gear, differential side . . . . .	3-06-5
	to	to	3-06-8
	12-04-26	Gear, oil pump drive . . . . .	10-10-1
Front floor carpet . . . . .	23-79-3	Gear, power steering . . . . .	19-01-4
	to	to	19-01-62
	23-79-79	Gear, standard steering . . . . .	19-01-3
Front seat . . . . .	23-45-29	to	19-01-24
	to	Gear, standard transmission . . . . .	21-10-3
	23-45-199	to	21-10-41
Front seat adjuster . . . . .	23-47-6	Gear, standard transmission clutch .	21-14-1
	to	to	21-14-21
	23-47-462	Gear, standard transmission	21-15-2
Front seat back grab handle . . . . .	23-82-14	countershaft . . . . .	21-15-33
Front seat back to cushion push nut .	23-115-4		
	to	Gear, standard transmission	21-11-1
	23-115-10	reverse idler . . . . .	21-11-16
Front seat center arm screw . . . . .	23-115-10		
Front seat cushion . . . . .	23-108-4	Gear and pinion standard trans-	21-85-4
	to	mission speedometer . . . . .	21-85-61
	23-108-142		
Front suspension torsion parts . . .	2-14-1	Gearshift, standard transmission	21-42-11
	to	remote control . . . . .	21-42-43
	2-14-25		
Front wheel bearing . . . . .	22-06-1	Generator . . . . .	8-28-3
	to	to	8-28-292
	22-06-18	Glass channel . . . . .	23-09-2
Front wheel lower control arm . . .	2-10-6	to	23-09-75
	to	Glove box . . . . .	23-06-4
	2-10-76	to	23-06-53
Front wheel upper control arm . . .	2-08-5	Glove box lamp . . . . .	1-19-1
	to	Glove box lamp and switch . . . . .	8-38-23
	2-08-72	Glove compartment lamp . . . . .	8-38-4
Fuel filter . . . . .	14-67-1	to	8-38-23
	to		
	14-67-2		
Fuel line tube . . . . .	14-89-2		
	to		
	14-89-57		
Fuel line tube clip . . . . .	14-90-1		
Fuel pump . . . . .	14-73-1		
Fuel pump mounting gasket . . . . .	14-74-1		
Fuel pump push rod . . . . .	14-77-17		
Fuel tank . . . . .	14-86-1		
	to		
	14-86-85		
Fuel tank gauge . . . . .	14-72-1		
	to		
	14-72-47		
Fuel tank locking cap . . . . .	1-39-2		
Fuel tank stone deflector . . . . .	14-87-2		



PART NAME	CODE	PART NAME	CODE
Governor . . . . .	14-68-3	Hood medallion . . . . .	15-06-0
	to	Hood moulding . . . . .	15-25-0
	14-68-8	Hood name plate . . . . .	15-06-0
Governor, automatic 3 speed		Hood top panel . . . . .	15-03-3
transmission . . . . .	21-138-2		to
	to		15-03-60
	21-138-38	Hook, coat hanger . . . . .	23-82-30
Grille, radiator . . . . .	7-16-11		to
	to		23-82-39
	7-16-82	Horn . . . . .	8-32-2
Grille guard . . . . .	1-01-1		to
Guard, bumper . . . . .	1-01-1		8-32-18
	13-68-6	Horn control . . . . .	8-33-4
	to		to
	13-68-18		8-33-164
Guard, grille . . . . .	1-01-1	Hose, brake flexible . . . . .	5-62-1
Guide, brake shoe . . . . .	5-25-9		to
Guide, wheel brake shoe . . . . .	5-26-1		5-62-20
	to	Hose, power brake vacuum . . . . .	5-111-17
	5-26-5	Hose, radiator . . . . .	7-14-4
			to
			7-14-31
<b>H</b>		Housing, clutch . . . . .	6-09-1
Handle, door remote control . . . . .	23-14-10		to
	to		6-09-11
	23-14-153	Housing, rear axle . . . . .	3-02-1
Handle, front seat back grab . . . . .	23-82-14		to
Handle, rear door pull-to . . . . .	23-81-3		3-02-20
	to	Housing, standard transmission case	21-29-3
	23-81-8		to
Hanger, frame rear spring . . . . .	13-54-4		21-29-25
	to	Housing, water pump . . . . .	7-43-1
	13-54-15		to
Head, cylinder . . . . .	9-03-4		7-43-8
	to	Housing and shaft, standard trans-	
	9-03-29	mission speedometer cable . . . . .	21-84-1
Headlamp . . . . .	8-34-1		to
	to		21-84-28
	8-34-374	Hub, fan pulley . . . . .	7-05-1
Headlamp beam indicator light . . . . .	8-39-15	Hub, wheel . . . . .	22-05-14
	to		to
	8-39-17		22-05-24
Headlamp switch . . . . .	8-53-270	Hub and brake drum . . . . .	22-03-1
Headlining and listing . . . . .	23-86-2		to
	to		22-03-2
	23-86-37	Hub cap . . . . .	22-08-5
Heater and components . . . . .	1-48-1		to
	to		22-08-57
	1-48-942	<b>I</b>	
Hinge, door . . . . .	23-15-1	Ignition . . . . .	8-36-1
	to		to
	23-15-32		8-36-141
Hinge, hood . . . . .	15-19-2	Ignition coil . . . . .	8-35-4
	to		to
	15-19-47		8-35-115
Hood bumper . . . . .	15-09-4	Ignition distributor . . . . .	8-27-1
Hood hinge . . . . .	15-19-2		to
	to		8-27-352
	15-19-47	Ignition lamp . . . . .	8-40-16
Hood letters . . . . .	15-06-0	Ignition switch and lock cylinder . . . . .	8-35-4
Hood lock . . . . .	15-11-3		to
	to		8-35-115
	15-11-53	Impeller and shaft, water pump . . . . .	7-45-31
Hood lock control . . . . .	15-14-1	Indicator, oil level . . . . .	10-03-4
	to		to
	15-14-21		10-03-7
Hood lock striker . . . . .	15-13-2	Instrument lamp switch . . . . .	8-53-270
	to		
	15-13-6		

# 1963 PASSENGER CAR PARTS CATALOG

ALPHABETICAL INDEX

PART NAME	CODE	PART NAME	CODE
Instrument panel . . . . .	23-33-6 to 23-33-240	Lamp, parking brake signal . . . . .	1-09-1 8-31-2 to 8-31-18
Instrument panel instruments . . . . .	8-37-1 to 8-37-517	Lamp, trunk compartment . . . . .	1-30-1
Instrument panel lamp . . . . .	8-41-36 to 8-41-39	Lamp, underhood . . . . .	1-13-1
Instrument panel trim pad . . . . .	23-84-3 to 23-84-31	Lamp and switch, glove box . . . . .	8-38-23 1-13-10 17-12-3 to 17-12-12
Instrument panel wiring . . . . .	8-19-2 to 8-19-87	Leaf, rear spring . . . . .	15-06-0
Instruments, instrument panel . . . . .	8-37-1 to 8-37-517	Letters, hood . . . . .	21-142-21
Insulator, body. . . . .	23-31-33 to 23-31-205	Lever, automatic 3 speed trans- mission control . . . . .	6-17-3
Insulator, engine front support . . . . .	9-67-4	Lever, clutch release . . . . .	4-25-1
Insulator, engine rear support . . . . .	9-71-5 to 9-71-19	Lever, parking brake (foot operated) to 4-25-28	4-08-1
Insulator, propeller shaft center bearing housing . . . . .	16-17-1	Lever, parking brake (hand operated) to 4-08-36	4-26-1
Intake, air . . . . .	23-61-39 to 23-61-116	Lever, parking brake operating . . . . .	4-26-27
Intake valve . . . . .	9-39-1 to 9-39-5	Lever and rod, standard transmission gearshift . . . . .	21-30-2 to 21-30-438
<b>J</b>		License lamp . . . . .	8-57-7 to 8-57-89
Jack, bumper . . . . .	13-72-1 to 13-72-4	License mounting parts . . . . .	8-47-8 to 8-47-131
Joint, universal . . . . .	16-03-1 to 16-03-20	Lid, deck . . . . .	23-19-8 to 23-19-188
<b>K</b>		Lift, window . . . . .	23-39-2 to 23-39-53
Knuckle, steering . . . . .	2-03-2	Lift, window (electric window) . . . . .	23-41-4 to 23-41-286
<b>L</b>		Light, emergency flasher . . . . .	1-06-2 to 1-06-11
Lamp, back-up . . . . .	1-10-1 8-56-1 to 8-56-74	Lighter, cigar . . . . .	1-12-1
Lamp, courtesy . . . . .	1-14-4 to 1-14-6	Liner, body . . . . .	23-31-33 to 23-31-205
Lamp, glove box . . . . .	1-19-1	Listing and headlining . . . . .	23-86-3 to 23-86-37
Lamp, instrument panel . . . . .	8-41-36 to 8-41-39	Lock, hood . . . . .	15-11-3 to 15-11-53
Lamp, map . . . . .	1-14-4 to 1-14-6	Lock, rear door safety . . . . .	1-72-5
Lamp, map and courtesy . . . . .	8-42-2 to 8-42-29	Lock, safe-T-matic door . . . . .	23-13-0
		Lock, transmission parking . . . . .	4-10-1 to 4-10-28
		Lock cylinder and key . . . . .	23-17-2 to 23-17-72
		Low oil pressure switch . . . . .	8-53-327
		Luggage compartment front lining panel . . . . .	23-96-3 to 23-96-41

PART NAME	CODE	PART NAME	CODE
<b>M</b>		<b>O</b>	
Manifold . . . . .	9-48-6 to 9-48-158	Oil filter . . . . .	10-26-5 to 10-26-65
Manifold gasket . . . . .	9-50-1 to 9-50-16	Oil level indicator . . . . .	10-03-4 to 10-03-7
Manifold heat control valve . . . . .	9-59-13 to 9-59-15	Oil pan . . . . .	10-24-1 to 10-24-38
Manifold heat control valve stop . . . . .	9-62-1	Oil pressure relief valve . . . . .	10-22-11 to 10-22-41
Manifold heat control valve thermostat . . . . .	9-58-1 to 9-58-14	Oil pump . . . . .	10-07-2 to 10-07-14
Map and courtesy lamp . . . . .	8-42-2 to 8-42-29	Oil pump drive gear . . . . .	10-10-1
Map lamp . . . . .	1-14-4 to 1-14-6	Oil pump drive shaft . . . . .	10-09-1 to 10-09-7
Master cylinder . . . . .	5-39-1 to 5-39-24	Oil pump rotor . . . . .	10-14-18
Master cylinder boot	5-40-1	Oil pump suction pipe . . . . .	10-18-4
Master cylinder brake tube . . . . .	5-52-3 to 5-52-62	Oil strainer . . . . .	10-23-7
Master cylinder piston . . . . .	5-44-8 to 5-44-9	Ornament, radiator grille . . . . .	7-17-0
Master cylinder piston push rod . . . . .	5-47-4 to 5-47-8	Outside finish moulding . . . . .	23-23-2 to 23-23-85
Master cylinder piston return spring	5-46-1		
Mat, floor . . . . .	23-20-8 to 23-20-65	<b>P</b>	
Material, seat cloth trim . . . . .	23-114-2 to 23-114-15	Package, automatic 3 speed trans- mission . . . . .	21-01-3
Medallion, hood . . . . .	15-06-0	Package, bearing connecting rod . . . . .	9-32-2
Medallion, radiator grille . . . . .	7-17-0	Package, belt . . . . .	1-67-1 to 1-67-9
Mirror . . . . .	1-76-1 to 1-76-3	Package, standard transmission . . . . .	2-01-3
	23-21-3 to 23-21-74	Package, wheel cylinder service . . . . .	5-63-1 to 5-63-3
Moulding, fender . . . . .	12-15-21	Pad, body . . . . .	23-31-33 to 23-31-205
Moulding, garnish . . . . .	23-22-7 to 23-22-160	Pad, brake pedal . . . . .	5-28-8
Moulding, hood . . . . .	15-25-0	Pad, clutch pedal . . . . .	6-39-1
Moulding, outside finish . . . . .	23-23-2 to 23-23-85	Pad, instrument panel trim . . . . .	23-84-3 to 23-84-31
Moulding, trim finish . . . . .	23-26-16 to 23-26-87	Pan, automatic 3 speed transmission oil . . . . .	21-119-3 to 21-119-25
Muffler . . . . .	11-01-1	Pan, body . . . . .	23-32-15 to 23-32-115
Muffler support . . . . .	11-02-1 to 11-02-4	Pan, clutch housing . . . . .	6-10-2 to 6-10-31
		Pan, oil . . . . .	10-24-1 to 10-24-38
<b>N</b>		Panel, body . . . . .	23-34-10 to 23-34-356
Name plate, fender . . . . .	12-15-21	Panel, cowl trim . . . . .	23-91-6
Name plate, hood . . . . .	15-06-0	Panel, door trim . . . . .	23-92-5 to 23-92-25
Nipple, water pump . . . . .	7-48-22		

PART NAME	CODE	PART NAME	CODE
Panel, hood top . . . . .	15-03-3 to 15-03-60	Pinion and gear, standard transmission speedometer . . . . .	21-85-4 to 21-85-61
Panel, instrument . . . . .	23-33-6 to 23-33-240	Pipe, exhaust . . . . .	11-05-1 to 11-05-12
Panel, luggage compartment lining . . . . .	23-96-3 to 23-96-41	Pipe, oil pump suction . . . . .	10-18-4
Panel, rear quarter trim . . . . .	23-101-3 to 23-101-33	Pipe, tail . . . . .	11-09-3
Panel, rear upper pillar . . . . .	23-99-38	Piston, master cylinder . . . . .	5-44-8 to 5-44-9
Panel, shelf trim . . . . .	23-102-3	Piston, w/pin . . . . .	9-34-5
Panel, visor trim . . . . .	23-103-3 to 23-103-48	Piston, wheel cylinder . . . . .	5-70-1
Parking brake cable . . . . .	4-23-1 to 4-23-46	Piston pin . . . . .	9-36-5 to 9-36-7
Parking brake lever (foot operated) . . . . .	4-25-1 to 4-25-28	Piston ring set . . . . .	9-35-1
Parking brake lever (hand operated) . . . . .	4-08-1 to 4-08-36	Plate, clutch cover and pressure plate . . . . .	6-14-1 to 6-14-10
Parking brake lever pawl . . . . .	4-13-6	Plate, clutch pressure . . . . .	6-15-1
Parking brake lever return spring . . . . .	4-19-1	Plug, body . . . . .	23-32-15 to 23-32-115
Parking brake operating lever . . . . .	4-26-1 to 4-26-27	Power brake . . . . .	1-42-1
Parking brake signal lamp . . . . .	1-09-1 8-31-2 to 8-31-18	Power brake air cleaner . . . . .	5-113-17
Parking lamp . . . . .	8-50-82 to 8-50-354	Power brake hose clamp . . . . .	5-112-1
Pawl, parking brake lever . . . . .	4-13-6	Power brake power unit . . . . .	5-100-1 to 5-100-304
Pedal, accelerator . . . . .	14-01-1 to 14-01-31	Power brake tube connector . . . . .	5-110-18
Pedal, clutch . . . . .	6-38-1 to 6-38-23	Power brake vacuum check valve . . . . .	5-105-1 to 5-105-10
Pedal and bushing, brake . . . . .	5-27-1 to 5-27-21	Power brake vacuum hose . . . . .	5-111-17
Pillar, body . . . . .	23-36-5 to 23-36-138	Power brake vacuum tank . . . . .	5-102-2 to 5-102-11
Pilot, automatic . . . . .	1-26-1 14-02-1 to 14-02-79	Power steering column bracket . . . . .	19-31-7 to 19-31-24
Pin, piston . . . . .	9-36-5 to 9-36-7	Power steering gear . . . . .	19-01-4 to 19-01-62
Pinion, automatic 3 speed transmission speedometer . . . . .	21-85-5 to 21-85-61	Power steering gear arm . . . . .	19-27-2 to 19-27-55
Pinion, differential . . . . .	3-07-1 to 3-07-2	Power steering gear arm and idler arm . . . . .	19-27-2 to 19-27-55
Pinion, standard transmission main drive . . . . .	21-09-2 to 21-09-33	Power steering gear column jacket . . . . .	19-14-1 to 19-14-68
		Power steering gear hose . . . . .	19-58-7 to 19-58-31
		Power steering gear housing . . . . .	19-02-4 to 19-02-69
		Power steering gear idler arm . . . . .	19-27-2 to 19-27-55
		Power steering gear piston . . . . .	19-56-6 to 19-56-90

PART NAME	CODE	PART NAME	CODE
Power steering gear shaft and roller tooth . . . . .	19-19-1 to 19-19-72		
Power steering gear tube and coupling	19-15-4 to 19-15-69		
Power steering gear valve . . . . .	19-57-1 to 19-57-64		
Power steering gearshift control rod .	19-48-1 to 19-48-52		
Power steering gearshift rod . . . . .	19-46-3 to 19-46-55		
Power steering gearshift tube . . . . .	19-46-3 to 19-46-55		
Power steering oil pump . . . . .	19-54-2 to 19-54-258		
Power steering wheel . . . . .	19-30-4 to 19-30-18		
Power unit mounting bracket . . . . .	5-101-1 to 5-101-6		
Propeller shaft . . . . .	16-02-1 to 16-02-5		
Propeller shaft center bearing . . . . .	16-16-1 to 16-16-47		
Propeller shaft center bearing housing insulator . . . . .	16-17-1		
Propeller shaft flange . . . . .	16-20-1 to 16-20-8		
Propeller shaft sliding yoke . . . . .	6-14-1 to 6-14-9		
Propeller shaft spline . . . . .	6-14-1 to 6-14-9		
Protector, door edge . . . . .	1-135-1		
Pulley, fan and alternator idler . . . .	7-04-1 to 7-04-16		
Pulley, fan drive and driven . . . . .	7-06-1 to 7-06-14		
Pump, automatic 3 speed transmission oil . . . . .	21-118-6 to 21-118-57		
Pump, fuel . . . . .	14-73-1		
Pump, oil . . . . .	10-07-2 to 10-07-14		
Pump, water . . . . .	7-42-1 to 7-42-4		
Push button blower motor switch . . . .	1-48-770 to 1-48-942		
Push button vacuum switch . . . . .	24-24-150		
Push nut, front seat back to cushion .	23-115-4 to 23-115-10		
		<b>Q</b>	
		Quarter lamp . . . . .	8-11-6 to 8-11-19
		Quarter window opening weathercord .	23-113-25 to 23-113-87
		<b>R</b>	
		Rack, roof luggage . . . . .	1-74-1
		Rack, roof rail and luggage . . . . .	23-40-82 to 23-40-190
		Radiator core . . . . .	7-11-3 to 7-11-4
		Radiator core fan shroud . . . . .	7-08-2
		Radiator cross bar . . . . .	7-33-1 to 7-33-12
		Radiator drain cock . . . . .	7-13-2
		Radiator dust shield . . . . .	7-31-10 to 7-31-45
		Radiator filler cap . . . . .	7-12-1
		Radiator grille . . . . .	7-16-11 to 7-16-82
		Radiator grille medallion . . . . .	7-17-0
		Radiator grille ornament . . . . .	7-17-0
		Radiator hose . . . . .	7-14-4 to 7-14-31
		Radiator stone deflector . . . . .	7-35-2 to 7-35-13
		Radiator yoke . . . . .	7-26-2 to 7-26-37
		Radio . . . . .	1-87-1 to 1-87-406
		Radio antenna . . . . .	1-88-1 to 1-88-205
		Radio power antenna switch . . . . .	1-88-205
		Rail, standard transmission gearshift	21-34-42 to 21-34-47
		Rear axle control strut . . . . .	3-01-25 to 3-01-34
		Rear axle differential and carrier . . . .	3-03-1 to 3-03-36
		Rear axle housing . . . . .	3-02-1 to 3-02-20
		Rear bumper face bar . . . . .	13-66-3 to 13-66-153
		Rear door safety lock . . . . .	1-72-5
		Rear door pull-to handle . . . . .	23-81-3 to 23-81-8
		Rear quarter trim panel . . . . .	23-101-3 to 23-101-33

# 1963 PASSENGER CAR PARTS CATALOG

PART NAME	CODE	PART NAME	CODE
Rear seat back . . . . .	23-109-3 to 23-109-40	Rod, steering knuckle, tie . . . . .	2-07-1 to 2-07-41
Rear speaker switch . . . . .	1-87-239	Rod, valve push . . . . .	9-42-1
Rear spring . . . . .	17-11-3 to 17-11-7	Rod, wheel cylinder piston push . . . . .	5-12-1
Rear spring bumper . . . . .	17-19-3 to 17-19-20	Rod and lever, standard transmission gearshift . . . . .	21-30-2 to 21-30-438
Rear spring center bolt . . . . .	17-14-10	Roller and bushing, universal cross . . . . .	16-10-1 to 16-10-3
Rear spring clip . . . . .	17-15-1 to 17-15-30	Roof luggage rack . . . . .	1-74-1
Rear spring leaf . . . . .	17-12-3 to 17-12-12	Roof rail and luggage rack . . . . .	23-40-82 to 23-40-190
Rear spring shackle . . . . .	17-16-1 to 17-16-8	Rotor, oil pump . . . . .	10-14-18
Rear spring silent block . . . . .	17-17-3 to 17-17-5	Run, window glass . . . . .	23-42-13 to 23-42-59
Rear upper pillar panel . . . . .	23-99-38	<b>S</b>	
Rear window defogger . . . . .	1-47-1 to 1-47-19	SAFE-T-MATIC Door Lock . . . . .	23-13-0
Receiver, ash . . . . .	23-02-1 to 23-02-150	Safety belt . . . . .	1-67-1 to 1-67-6
Receiver drier . . . . .	24-26-20 to 24-26-100	Screen, tailgate window . . . . .	1-08-1
Regulator, door . . . . .	23-14-10 to 23-14-153	Screw, front seat center arm . . . . .	23-115-10
Reinforcement, body . . . . .	23-07-168 to 23-07-169	Screw, wheel cylinder bleeder . . . . .	5-67-1
Retainer, folding top header top material . . . . .	23-112-4 to 23-112-160	Seal, body . . . . .	23-31-33 to 23-31-205
Rocker, valve . . . . .	9-43-1 to 9-43-26	Seal, crankshaft rear bearing oil . . . . .	9-11-1 to 9-11-7
Rod, accelerator pedal to accelerator shaft . . . . .	14-07-1 to 14-07-15	Seal, drive shaft oil . . . . .	3-35-14
Rod, clutch pedal . . . . .	6-50-1 to 6-50-10	Seal, fender . . . . .	12-02-5 to 12-02-12
Rod, clutch release . . . . .	6-24-1 to 6-24-14	Seal, standard transmission main shaft bearing oil . . . . .	21-22-2 to 7-46-1
Rod, connecting . . . . .	9-31-4 to 9-31-10	Seal, water pump . . . . .	23-45-29
Rod, fuel pump push . . . . .	14-77-17	Seat, front . . . . .	23-45-199 to 23-45-6
Rod, master cylinder piston push . . . . .	5-47-4 to 5-47-8	Seat, second and third . . . . .	23-48-6 to 23-48-189
Rod, power steering gearshift . . . . .	19-46-3 to 19-46-55	Seat cloth trim material . . . . .	23-114-2 to 23-114-15
Rod, power steering gearshift control . . . . .	19-48-1 to 19-48-52	Second and third seat . . . . .	23-48-6 to 23-48-189
		Second seat back hinge cover . . . . .	23-70-5 to 23-70-6
		Service parts and carburetor assemblies . . . . .	14-30-2 to 14-30-4 14-30-7 14-30-8 14-30-27 14-30-28 14-35-1 14-35-6 14-35-8 14-35-33 14-35-39 14-39-45 14-41-3 14-43-5

PART NAME	CODE	PART NAME	CODE
Servos, automatic 3 speed transmission	21-137-5	Shield, front fender . . . . .	12-04-4
	to		to
	21-137-205		12-04-26
Set, automatic 3 speed transmission .	21-01-3	Shield, radiator dust . . . . .	7-31-10
Set, drive gear and pinion . . . . .	3-19-1		to
Set, piston ring . . . . .	9-35-1		7-31-45
Set, standard transmission . . . . .	21-01-3	Shim, fender . . . . .	12-02-5
Shackle, rear spring . . . . .	17-16-1		to
	to		12-02-12
	17-16-8	Shock absorber . . . . .	17-23-3
Shaft, accelerator . . . . .	14-11-1		to
	to		17-23-57
	14-11-48	Shock absorber bracket . . . . .	17-24-3
Shaft, automatic 3 speed transmission	21-05-1		to
	to		17-24-28
	21-05-35	Shock absorber (load leveler) . . . .	1-07-1
Shaft, automatic 3 speed transmission	21-129-5	Shoe and lining, wheel brake . . . .	5-03-1
input . . . . .	to		to
	21-129-24		5-03-23
Shaft, automatic 3 speed transmission	21-129-5	Shroud, radiator core fan . . . . .	7-08-2
torque converter reaction . . . . .	to	Sill, body side . . . . .	23-51-3
	21-129-24		to
	5-29-1	Solenoid switch . . . . .	23-51-45
Shaft, brake pedal . . . . .	6-43-7	Spare wheel carrier . . . . .	8-52-330
Shaft, clutch pedal . . . . .	to		22-20-29
	6-43-13		to
	6-52-1	Spline, propeller shaft . . . . .	22-20-89
Shaft, clutch torque . . . . .	to		16-14-1
	6-52-17		to
	3-08-1	Spotlight . . . . .	16-14-9
Shaft, differential pinion . . . . .	to		1-108-1
	3-08-2		to
	3-32-1	Spring, accelerator pedal return . . .	1-108-49
Shaft, drive . . . . .	to		14-06-1
	3-32-9		to
	10-09-1	Spring, brake pedal return . . . . .	14-06-10
Shaft, oil pump drive . . . . .	to		5-34-1
	10-09-7		to
	16-02-1	Spring, clutch pressure . . . . .	5-34-6
Shaft, propeller . . . . .	to	Spring, clutch release bearing return.	6-16-1
	16-02-5	Spring, clutch release center . . . . .	6-20-14
	21-16-2		6-35-1
Shaft, standard transmission . . . . .			to
Shaft, standard transmission reverse	21-12-1	Spring, clutch release fork return . .	6-35-17
idler gear . . . . .	to	Spring, master cylinder piston return	6-27-5
	21-12-2	Spring, parking brake lever return . .	5-46-1
Shaft, sway eliminator . . . . .	17-29-5	Spring, rear . . . . .	4-19-1
	to		17-11-3
	17-29-21		to
	21-84-1	Spring, wheel brake shoe hold-down .	17-11-7
Shaft and housing, automatic 3 speed	to		5-26-1
transmission speedometer cable . .	21-84-28		to
		Sprocket, camshaft . . . . .	5-26-5
		Sprocket, crankshaft . . . . .	9-17-5
Shaft and housing, standard	21-84-1	Standard steering column bracket . .	9-08-5
transmission cable . . . . .	to		19-31-1
	21-84-28		to
	7-45-31	Standard steering gear . . . . .	19-31-19
Shaft and impeller, water pump . . .			19-01-3
Shaft and roller tooth, power steering	19-19-1		to
gear . . . . .	to	Standard steering gear arm . . . . .	19-01-24
	19-19-72		19-27-2
			to
Shaft and roller tooth, standard	19-19-4	Standard steering gear arm and idler	19-27-55
steering gear . . . . .	to	arm . . . . .	19-27-2
	19-19-70		to
Shelf trim panel . . . . .	23-102-3		19-27-55
Shield, battery heat . . . . .	13-35-1		

PART NAME	CODE	PART NAME	CODE
Standard steering gear column jacket .	19-14-1 to 19-14-68	Standard transmission gearshift lever and rod . . . . .	21-30-2 to 21-30-438
Standard steering gear idler arm . . .	19-27-2 to 19-27-55	Standard transmission gearshift rail .	21-34-42 to 21-34-47
Standard steering gear housing . . . .	19-02-4 to 19-02-18	Standard transmission main drive pinion . . . . .	21-09-2 to 21-09-33
Standard steering gear housing cover .	19-04-1 to 19-04-13	Standard transmission main shaft . .	21-16-3
Standard steering gear shaft and roller tooth . . . . .	19-19-4 to 19-19-70	Standard transmission main shaft bearing . . . . .	21-19-2 to 21-19-16
Standard steering gear tube and coupling . . . . .	19-15-4 to 19-15-111	Standard transmission main shaft bearing oil seal . . . . .	21-22-2
Standard steering gearshift control rod	19-48-1 to 19-48-52	Standard transmission main shaft pilot bearing . . . . .	21-17-2 to 21-17-9
Standard steering gearshift rod . . .	19-46-3 to 19-46-55	Standard transmission package . . . .	21-01-3
Standard steering gearshift tube . . .	19-46-3 to 19-46-55	Standard transmission remote control gearshift . . . . .	21-42-11 to 21-42-43
Standard steering wheel . . . . .	19-30-4 to 19-30-18	Standard transmission reverse idler gear . . . . .	21-11-1 to 21-11-16
Standard transmission . . . . .	21-02-1 to 21-02-6	Standard transmission reverse idler gear shaft . . . . .	21-12-1 to 21-12-2
Standard transmission cable shaft and housing . . . . .	21-84-1 to 21-84-28	Standard transmission set . . . . .	21-01-3
Standard transmission case . . . . .	21-03-1 to 21-03-25	Standard transmission speedometer pinion and gear . . . . .	21-85-4 to 21-85-61
Standard transmission case cover . .	21-29-3 to 21-29-25	Starting motor . . . . .	8-52-4 to 8-52-389
Standard transmission case extension.	21-04-1 to 21-04-16	Steering knuckle . . . . .	2-03-3
Standard transmission case housing .	21-29-3 to 21-29-25	Steering knuckle tie rod . . . . .	2-07-1 to 2-07-41
Standard transmission clutch gear . .	21-14-1 to 21-14-21	Steering linkage knuckle arm . . . . .	2-05-4
Standard transmission countershaft .	21-24-2 to 21-24-22	Stop, brake pedal . . . . .	5-30-12
Standard transmission countershaft bearing . . . . .	21-25-2 to 21-25-6	Stop, manifold heat control valve . .	9-62-1
Standard transmission countershaft gear	21-15-2 to 21-15-33	Stop and turn signal lamp . . . . .	8-55-1 to 8-55-335
Standard transmission gear . . . . .	21-10-3 to 21-10-41	Stop lamp . . . . .	8-58-60
Standard transmission gearshift fork .	21-39-3	Strainer, automatic 3 speed transmission oil pump . . . . .	21-117-1 to 21-117-3
		Strainer, oil . . . . .	10-23-7
		Strap, assist . . . . .	23-77-3 to 23-77-17
		Strap, battery hold-down . . . . .	13-34-3
		Striker, body . . . . .	23-08-12 to 23-08-76
		Striker, hood lock . . . . .	15-13-2 to 15-13-6



PART NAME	CODE	PART NAME	CODE
Strip, folding top bow tacking . . . . .	23-111-10	Switch, radio power antenna . . . . .	1-88-205
	to	Switch, rear speaker . . . . .	1-87-289
	23-111-37	Switch, socket and cable, trunk lamp.	8-13-1
Strut, rear axle control . . . . .	3-01-25	Switch, solenoid . . . . .	8-52-330
	to	Switch, starter and ignition . . . . .	8-35-4
	3-01-34	Switch, stop lamp mechanical . . . . .	8-58-60
Stud, battery hold-down . . . . .	13-36-5	Switch, tailgate electric window lift . . . . .	23-54-167
Stud, throttle linkage ball . . . . .	14-13-1	Switch, thermostats . . . . .	24-28-241
	to	Switch, trunk compartment lamp . . . . .	1-30-3
	14-13-5	Switch, trunk lamp . . . . .	8-13-2
Stud and gasket, exhaust pipe flange . . . . .	11-06-8	Switch, turn signal . . . . .	8-50-82
	to	Switch, underhood lamp . . . . .	1-13-10
	11-06-10	Switch, window safety . . . . .	1-50-1
Sub-sidemember, frame . . . . .	13-04-20	Switch, windshield washer . . . . .	1-82-14
Support, engine front . . . . .	9-64-5	Switch and cable, turn signal electric.	8-50-82
	to	Switch and lamp, dome . . . . .	8-05-6
	9-64-24	to	
Support, fender . . . . .	12-07-1		8-05-32
	to	Switch and lamp, glove box . . . . .	8-38-23
	12-07-3	Switch and lock cylinder, ignition . . . . .	8-35-4
Support, fuel tank . . . . .	14-88-8	to	
	to		8-35-115
	14-88-36	Switch package, automatic 3 speed	
Support, muffler . . . . .	11-02-1	transmission . . . . .	21-113-24
	to	Switch package, automatic 3 speed	
	11-02-4	transmission neutral starter . . . . .	21-113-24
Support, tail pipe . . . . .	11-10-3	Switch package, electric window lift	
	to	safety . . . . .	1-50-1
	11-10-43	Switches . . . . .	8-53-150
Support, wheel brake . . . . .	5-13-1	to	
	to		8-53-327
	5-13-35		
Support and clamp, exhaust pipe . . . . .	11-08-5		
Sway eliminator shaft . . . . .	17-29-5	<b>T</b>	
	to		
	17-29-21	Tail lamp . . . . .	8-55-1
	8-12-2	to	
Switch, automatic door lamp . . . . .	to		8-55-335
	8-12-17	Tail pipe . . . . .	11-09-3
		Tail pipe support . . . . .	11-10-3
Switch, automatic 3 speed transmission		to	
neutral starter . . . . .	21-113-24		11-10-43
	to	Tailgate . . . . .	23-54-1
	21-113-29	to	
Switch, auxiliary vacuum . . . . .	24-24-150		23-54-208
Switch, back-up lamp . . . . .	8-56-2	Tailgate electric window lift switch . . . . .	23-54-167
Switch, blower motor . . . . .	24-24-5	Tailgate window screen . . . . .	1-08-1
Switch, blower motor, w/cable . . . . .	24-24-5	Tank, fuel . . . . .	14-86-1
Switch, brake . . . . .	14-02-32	to	
Switch, courtesy lamp . . . . .	8-11-6		14-86-85
Switch, dome lamp . . . . .	8-05-14	Tank, power brake vacuum . . . . .	5-102-2
Switch, electric door lock . . . . .	23-18-103	to	
Switch, electric seat adjuster . . . . .	23-47-446		5-102-11
Switch, electric window lift . . . . .	23-41-170	Tappet, valve . . . . .	9-41-1
Switch, electric window lift and		to	
vent wing . . . . .	23-41-170		9-41-4
Switch, electric window lift safety . . . . .	23-41-170	Tee, brake tube . . . . .	5-58-1
Switch, emergency flasher light . . . . .	1-06-3	to	
Switch, folding top lift . . . . .	23-58-532		5-58-2
Switch, foot control . . . . .	1-87-5	Tee, carburetor fuel line . . . . .	14-85-31
Switch, foot dimmer . . . . .	8-53-150	Thermostat . . . . .	7-41-4
Switch, horn . . . . .	8-33-90	Thermostat, manifold heat control	
Switch, ignition and starter . . . . .	8-35-59	valve . . . . .	9-58-1
Switch, low oil pressure . . . . .	8-53-327	to	
Switch, map lamp . . . . .	8-42-25		9-58-14
Switch, map lamp . . . . .	8-31-10	Thermostat switch . . . . .	24-28-241
Switch, parking brake indicator lamp . . . . .	1-48-770	Third and second seat . . . . .	23-48-6
Switch, push button blower motor . . . . .	to	to	
	1-48-942		23-48-189
Switch, push button vacuum . . . . .	24-24-150		

# 1963 PASSENGER CAR PARTS CATALOG

PART NAME	CODE	PART NAME	CODE
Throttle control bell crank . . . . .	14-14-1 to 14-14-57	Unit, power brake power . . . . .	5-100-1 to 5-100-304
Throttle control cable . . . . .	14-25-5 to 14-25-13	Universal cross roller and bushing . .	16-10-1 to 16-10-3
Throttle control mounting bracket . .	14-26-2 to 14-26-6	Universal joint . . . . .	16-03-1 to 16-03-20
Throttle linkage ball stud . . . . .	14-13-1 to 14-13-5	Universal joint body . . . . .	16-04-1
Timing chain . . . . .	9-20-1	Universal joint centering button . . .	16-06-1 to 16-06-3
Top, folding . . . . .	23-58-3 to 23-58-607	Universal joint cover . . . . .	16-07-3 to 16-07-4
Torque convertor . . . . .	9-46-4 to 9-46-228	Universal joint cross . . . . .	16-08-6 to 16-08-7
Torsion parts, front suspension . . .	2-14-1 to 2-14-25	<b>V</b>	
Transmission, automatic 3 speed . . .	21-02-1 to 21-02-8	Valve, exhaust . . . . .	9-39-6 to 9-39-2
Transmission, standard . . . . .	21-02-1 to 21-02-6	Valve, intake . . . . .	9-39-1 to 9-39-5
Transmission parking lock . . . . .	4-10-1 to 4-10-28	Valve, oil pressure relief . . . . .	10-22-11 to 10-22-41
Tray, battery support . . . . .	13-33-61 to 13-33-68	Valve, power brake vacuum check . .	5-105-1 to 5-105-10
Trim finish moulding . . . . .	23-26-16 to 23-26-87	Valve, power steering gear . . . . .	19-57-1 to 19-57-64
Trough, drain . . . . .	23-59-26 to 23-59-63	Valve body and valves, automatic 3 speed transmission . . . . .	21-139-4 to 21-139-193
Trunk compartment lamp . . . . .	1-30-1 to 1-30-3	Valve push rod . . . . .	9-42-1
Trunk compartment lamp switch . . .	1-30-3	Valve rocker . . . . .	9-43-1 to 9-43-26
Trunk lamp . . . . .	8-13-1 to 8-13-6	Valve tappet . . . . .	9-41-1 to 9-41-4
Tube, fuel line . . . . .	14-89-2 to 14-89-57	Valves and valve body, automatic 3 speed transmission . . . . .	21-139-4 to 21-139-193
Tube, master cylinder brake . . . . .	5-52-3 to 5-52-62	Vent, cowl . . . . .	23-61-39 to 23-61-116
Tube, power steering gearshift . . . .	19-46-2 to 19-46-55	Vent system, crankcase closed . . . .	10-02-53 to 10-02-40
Tubing and cover, brake . . . . .	5-53-3 to 5-53-6	Vent wing . . . . .	23-64-4 to 23-64-314
Tufting button . . . . .	23-78-2	Visor . . . . .	1-32-2
Turn signal lamp . . . . .	8-50-82 to 8-50-354	Visor, arm and bracket . . . . .	23-103-10 to 23-103-48
<b>U</b>		Visor, bracket and arm . . . . .	23-103-10 to 23-103-48
Underhood lamp . . . . .	1-13-1 to 1-13-10	Visor trim panel . . . . .	23-103-3 to 23-103-48
Underhood lamp switch . . . . .	1-13-10		
Unit, fan fluid drive . . . . .	7-07-1		

PART NAME	CODE	PART NAME	CODE
<b>W</b>			
Washer, windshield . . . . .	1-82-2 to 1-82-48	Wheel cylinder bleeder screw . . . . .	5-67-1
Water pump . . . . .	7-42-1 to 7-42-4	Wheel cylinder boot . . . . .	5-69-1
Water pump elbow . . . . .	7-48-22	Wheel cylinder piston . . . . .	5-70-1
Water pump gasket . . . . .	7-44-3 to 7-44-4	Wheel cylinder piston cup . . . . .	5-71-1
Water pump housing . . . . .	7-43-1 to 7-43-8	Wheel cylinder piston push rod . . . . .	5-71-2
Water pump nipple . . . . .	7-48-22	Wheel cylinder service package . . . . .	5-12-1
Water pump seal . . . . .	7-46-1	Wheel hub . . . . .	5-63-1
Water pump shaft and impeller . . . . .	7-45-31	to	5-63-3
Weathercord . . . . .	23-113-2 to 23-113-87	Wheel hub . . . . .	22-05-14
Weatherstrip . . . . .	23-63-14 to 23-63-183	to	22-05-24
Weight, wheel balance . . . . .	22-09-1	Wheelhouse second seat back hinge bracket cover . . . . .	23-70-5
Wheel . . . . .	22-01-5 to 22-01-56	Window . . . . .	23-70-6
Wheel, power steering . . . . .	19-30-4 to 19-30-18	Window glass run . . . . .	23-64-4
Wheel, standard steering . . . . .	19-30-4 to 19-30-18	Window lift (electric window) . . . . .	23-64-119
Wheel balance weight . . . . .	22-09-1	to	23-42-13
Wheel brake adjuster . . . . .	5-20-1 to 5-20-20	Window lift (manual) . . . . .	23-42-59
Wheel brake cylinder . . . . .	5-64-1 to 5-64-2	Window safety switch . . . . .	23-41-4
Wheel brake shoe and lining . . . . .	5-03-1 to 5-03-23	Windshield . . . . .	23-41-286
Wheel brake shoe guide . . . . .	5-26-1 to 5-26-5	to	23-39-2
Wheel brake shoe hold-down spring . . . . .	5-26-1 to 5-26-5	Windshield washer . . . . .	23-39-53
Wheel brake support . . . . .	5-13-1 to 5-13-35	to	1-50-1
		Windshield washer switch . . . . .	23-66-65
		Windshield wiper . . . . .	23-66-239
		to	1-82-2
		Wing, vent . . . . .	to
		Wiper, windshield . . . . .	1-82-48
			1-82-14
			23-67-2
			to
			23-67-204
			23-64-4
			to
			23-64-314
			23-67-2
			to
			23-67-204
		<b>Y</b>	
		Yoke, propeller shaft sliding yoke . . . . .	6-14-1
		to	6-14-9
		Yoke, radiator . . . . .	7-26-2
		to	7-26-2
			7-26-37

**NOTES**

---



---



---



---



---

