

**INDEX**

**GROUP 0—LUBRICATION AND MAINTENANCE**

	Page
Air Cleaner .....	0-6
Alternator .....	0-7
Battery .....	0-7
Body Maintenance .....	0-7
Brakes .....	0-8
Capacities Chart .....	0-3
Carburetor Choke Piston .....	0-6
Certified Car Care—Brake System .....	0-16
Certified Car Care—Engine Tune-up .....	0-16
Certified Car Care—Front Suspension .....	0-17
Certified Car Care—Semi-Annual Maintenance .....	0-16
Certified Car Care—Maintenance Record .....	0-18
Chassis Lubrication .....	0-8
Clutch Torque Shaft .....	0-10
Cooling System .....	0-11
Crankcase Ventilator Valve .....	0-6
Distributor .....	0-11
Engine Oil .....	0-4
Frequency of Oil Change .....	0-5
Fuel Filter .....	0-7
Gearshift Lever .....	0-12
Headlamps .....	0-12
Manifold Heat Control Valve .....	0-7
Oil Filter .....	0-7
1,000 Mile Inspection .....	0-15
Parts Requiring No Lubrication .....	0-12
Propeller Shafts and Universal Joints .....	0-12
Rear Axle and Sure-Grip .....	0-13
Selection of Lubricant .....	0-5
Speedometer Cable .....	0-13
Steering .....	0-13
Tires .....	0-14
Transmission .....	0-14
Wheel Bearings .....	0-11
Windshield Wipers .....	0-15

**GROUP 1—ACCESSORIES, (RADIOS, HEATERS, MIRRORS)**

**Radio**

Antenna Trimmer Adjustment .....	1-3
Electric Antenna .....	1-5
Fader Control Performance .....	1-4
Foot Switch for Search Tuning .....	1-3
Interference Elimination .....	1-4
Local and Distant Push Buttons .....	1-3
Manual Antenna .....	1-4
On-Off Switch and Volume Control .....	1-2
Push Button Adjustment .....	1-3
Radio Controls .....	1-2

**GROUP 1—ACCESSORIES, (RADIOS, HEATERS, MIRRORS)—Continued**

	Page
Radio-Removal and Installation .....	1-2
Service Diagnosis .....	1-25
Wiring Diagrams .....	1-7
<b>Heater</b>	
Heater Blower .....	1-11
Heater Core .....	1-11
Heater Vacuum Actuator Replacement .....	1-11
Rear Window Defroster .....	1-10
Vent Deflector-Replacement .....	1-11
Service Diagnosis .....	1-26
<b>Automatic Beam Changer</b>	
Aiming the Automatic Beam Changer .....	1-12
Aiming the Scanner .....	1-13
Driver Adjustments .....	1-12
Operation .....	1-12
Service Diagnosis .....	1-27
<b>Mirror-Matic Electronic Rear View Mirror</b>	
Driver Adjustments .....	1-14
Inspection and Trouble Shooting .....	1-14
Removal and Disassembly .....	1-14
Service Diagnosis .....	1-27
<b>Remote Control Outside Mirror</b>	
Operation .....	1-15
Removal and Installation .....	1-15
<b>Electric Clock</b>	
Removal and Installation .....	1-16
Service Diagnosis .....	1-28
<b>Windshield Washer</b>	
Operation .....	1-17
Two Gear Pump .....	1-17
Service Diagnosis .....	1-28
<b>Auto-Pilot</b>	
Control Cable Adjustment .....	1-22
Linkage Adjustment .....	1-21
Locking Arm Latch and Contact Point Adjustment .....	1-20
Servicing the Auto-Pilot .....	1-22
Tests .....	1-19
<b>GROUP 2—FRONT SUSPENSION</b>	
Front Suspension Alignment .....	2-4
Front Suspension Height Adjustment .....	2-3
Front Wheel Bearing Adjustment .....	2-3
Lower Ball Joints .....	2-6
Lower Control Arm and Shaft .....	2-8
Lower Control Arm Strut .....	2-7

## INDEX — Continued

**GROUP 2—FRONT SUSPENSION—  
(Continued)**

	Page
Preparation for Measuring Front End Alignment . . . . .	2-2
Service Diagnosis . . . . .	2-12
Steering Knuckles . . . . .	2-11
Steering Linkage . . . . .	2-12
Sway Bar . . . . .	2-12
Torsion Bars . . . . .	2-5
Upper Ball Joints . . . . .	2-7
Upper Control Arm . . . . .	2-9

**GROUP 3—REAR AXLE**

Axle Drive Shafts . . . . .	3-3
Differential Carrier Assembly—Installation . . . . .	3-15
Differential Carrier—Disassembly . . . . .	3-5
Differential Carrier—Removal . . . . .	3-5
Differential Case—Assembly . . . . .	3-8
Differential Case Assembly—Installation . . . . .	3-13
Differential—Cleaning and Inspection . . . . .	3-7
Drive Gear and Pinion Back-Lash . . . . .	3-14
Gear Tooth Contact Pattern . . . . .	3-14
Pinion Bearing Cup—Installation . . . . .	3-9
Pinion Carrier Preload—Depth of Mesh—Installation using Tool C-758 Model TC-1 . . . . .	3-9
Pinion Bearing Preload and Pinion Setting Models TC-2, TC-3, TY-1 Using Tool, C-758-D3 . . . . .	3-12
Pinion Bearing Preload and Pinion Setting Without Using Tool C-758 . . . . .	3-13
Rear Axle Housing—Welding . . . . .	3-13
Service Diagnosis . . . . .	3-20
Specifications . . . . .	3-1

**GROUP 5—BRAKES****Booster Brakes**

Booster Brake (Bendix) . . . . .	5-13
Booster Brake (Midland Ross) . . . . .	5-16
Remote Power Brake (C-300J) . . . . .	5-19
Service Diagnosis . . . . .	5-25

**Parking Brakes**

Parking Brake Adjustment . . . . .	5-10
Parking Brake Cable (Front) . . . . .	5-12
Parking Brake Cable (Rear) . . . . .	5-10
Service Diagnosis . . . . .	5-22

**Service Brake**

Adjusting the Brakes . . . . .	5-2
Bleeding the Brake System . . . . .	5-6
Brake Drums . . . . .	5-3
Brake Shoe Installation . . . . .	5-5
Brake Shoe Removal . . . . .	5-4

**GROUP 5—BRAKES—Continued**

	Page
Brake Support Plates . . . . .	5-8
Grinding Recommendations . . . . .	5-5
Master Cylinder . . . . .	5-7
Service Diagnosis . . . . .	5-23
Test for Fluid Contamination . . . . .	5-9
Testing Automatic Adjuster Operation . . . . .	5-3
Wheel Cylinders . . . . .	5-7
Wheel Stud Tightening . . . . .	5-9

**GROUP 6—CLUTCH**

Clutch Adjustment in the Vehicle . . . . .	6-3
Clutch Cover Assembly and Adjustment . . . . .	6-5
Clutch Cover Disassembly . . . . .	6-3
Clutch Housing Alignment . . . . .	6-6
Clutch Installation . . . . .	6-8
Clutch Pedal Free Play . . . . .	6-3
Clutch Release Bearing . . . . .	6-6
Clutch Removal . . . . .	6-3
Service Diagnosis . . . . .	6-8
Specifications . . . . .	6-1
Torque Shaft and Bearings . . . . .	6-6
Transmission Main Drive Pinion Pilot Bushing . . . . .	6-5

**GROUP 7—COOLING SYSTEM**

Cooling . . . . .	7-8
Engine Water Temperature Gauge . . . . .	7-8
Pressure Testing Cooling System . . . . .	7-8
Radiator . . . . .	7-5
Radiator Pressure Cap . . . . .	7-7
Reverse Flushing the Cooling System . . . . .	7-6
Service Diagnosis . . . . .	7-9
Silent Flite Fan Drive . . . . .	7-3
Specifications . . . . .	7-1
Testing Radiator Cap . . . . .	7-7
Thermostat . . . . .	7-6
Transmission Oil Cooler . . . . .	7-5
Water Pump . . . . .	7-4

**Accessory Belt Drives**

Belt Deflection Method . . . . .	7-9
Proper Belt Tension . . . . .	7-8
Service Diagnosis . . . . .	7-11
Torque Method . . . . .	7-9

**GROUP 8—ELECTRICAL****Part 1—Battery**

Adjustment of Acid Gravity . . . . .	8-10
Battery Visual Inspection . . . . .	8-7
Charging the Battery High Rate Discharge Test of Battery Capacity . . . . .	8-9

## INDEX — Continued

## GROUP 8—ELECTRICAL—Continued

	Page
Service Diagnosis .....	8-81
Specific Gravity Test .....	8-8
Specifications .....	8-3
Voltage Tests .....	8-8
<b>Part 2—Starting Motor (Direct Drive)</b>	
Circuit Tests .....	8-11
Brushes .....	8-14
Specifications .....	8-3
Drive Gear Clearance .....	8-16
Drive Unit .....	8-15
Field Coils .....	8-14
Service Diagnosis .....	8-82
Starting Motor Removal and Installation .....	8-11
<b>Part 2—Starting Motor (Reduction Gear Type)</b>	
Brushes and Springs .....	8-22
Specifications .....	8-3
Field Coils .....	8-22
Ground Circuit Test .....	8-22
Resistance and Current Draw .....	8-19
Service Diagnosis .....	8-82
Starter Clutch Unit .....	8-24
Starting Motor Removal and Installation .....	8-18
<b>Part 3—Alternator and Voltage Regulator</b>	
Alternator Servicing .....	8-31
Bench Tests .....	8-31
Construction and Operation .....	8-27
Regulator Operation .....	8-27
Regulator Operating Voltage .....	8-30
Regulator Servicing .....	8-30
Replacing Slip Rings .....	8-36
Service Diagnosis .....	8-84
Testing the Alternator .....	8-34
Voltage Regulator .....	8-27
<b>Part 4—Ignition System</b>	
Breaker and Spring Tension .....	8-46
Distributor Advance .....	8-47
Distributor Removal and Installation .....	8-41
Dwell Variation .....	8-41
Idle RPM Test .....	8-40
Ignition Coil .....	8-48
Ignition Timing .....	8-41
Resistance Test .....	8-40
Secondary Circuit Inspection .....	8-35
Service Diagnosis .....	8-85
Spark Plugs .....	8-48

## GROUP 8—ELECTRICAL—Continued

	Page
<b>Part 5—Electroluminescent Lighting—</b>	
Instrument Testing .....	8-49
Operation .....	8-48
Service Diagnosis .....	8-87
<b>Part 5—Instruments</b>	
Circuit Breakers .....	8-55
Cluster Bulb Replacement—Chrysler .....	8-51
Cluster Installation—Chrysler .....	8-54
Cluster Installation—Imperial .....	8-54
Cluster Removal—Chrysler .....	8-51
Cluster Removal—Imperial .....	8-52
Fuse Block .....	8-55
Gauge Operation .....	8-50
Instruments—Imperial .....	8-51
Service Diagnosis .....	8-87
Switches—Imperial .....	8-53
<b>Part 6—Lighting System</b>	
Adjusting the Headlamps .....	8-57
Aiming the Headlamps .....	8-56
Testing Aimer for Calibration .....	8-57
Testing Headlamp Aim .....	8-56
Compensating and Mounting the Aimers .....	8-56
Dual Headlamps .....	8-55
Readjusting Aimer Calibration .....	8-57
Service Diagnosis .....	8-88
<b>Part 6—Directional Indicator System</b>	
Installation of Switch .....	8-58
Removal of Switch .....	8-59
Service Diagnosis .....	8-88
<b>Part 7—Horns</b>	
Adjusting .....	8-59
Diagnosis .....	8-89
Testing .....	8-59
<b>Part 7—Windshield Wipers</b>	
Assembly of Link (Variable Speed) .....	8-65
Assembly of Motor .....	8-62
Bench Testing Motor .....	8-64
Disassembling of Links .....	8-63
Disassembly of Motor .....	8-62
End Play Adjustment .....	8-64
Inspection of Motor .....	8-63
Installation of Motor—Chrysler .....	8-64
Installation of Motor—Imperial .....	8-65
Refacing Commutator .....	8-63
Removal of Motor—Chrysler .....	8-62
Removal of Motor—Imperial .....	8-62

## INDEX — Continued

**GROUP 8—ELECTRICAL—(Continued)**

	Page
Service Diagnosis .....	8-89
Switch, Variable and Single Speed .....	8-63
Undercutting Bakelite .....	8-64
Wiper Blade Adjustment .....	8-61

**Part 8—Power Seats**

Drive Unit and Solenoid Assembly .....	8-68
Front Seat and Adjuster (Removal and Installation) .....	8-66
Removal and Installation of Flexible Cables .....	8-66
Removal and Installation of Motor .....	8-67
Removal and Installation of Slave Unit .....	8-69
Service Diagnosis .....	8-89

**Part 8—Electric Window Lifts**

Electric Window Lift (Removal and Installation) .....	8-70
Service Diagnosis .....	8-91

**Part 8—Electric Door Locks**

Operation .....	8-70
Solenoid (Removal and Installation) .....	8-70

**Part 9—Wiring Diagrams**

Body and Dome Lamp (Except Town and Country) (Chrysler) .....	8-72
Body and Dome Lamp (Town and Country) (Chrysler) ..	8-73
Body and Dome Lamp (Imperial) .....	8-74
Electric Window Lift (Chrysler) .....	8-71
Electric Window Lift (Imperial) .....	8-75
Engine Compartment (Chrysler) .....	8-76
Engine Compartment (Imperial) .....	8-77
Instrument Panel (Chrysler) .....	8-78
Instrument Panel (Imperial) .....	8-80
Power Vent, Door Locks and Cigar Lighter .....	8-75
Six Way Seat Adjusting .....	8-74

**GROUP 9—ENGINE**

Camshaft .....	9-19
Camshaft Bearings .....	9-20
Connecting Rods .....	9-25
Connecting Rod Bearings .....	9-25
Crankcase Ventilation System .....	9-29
Crankshaft Main Bearings .....	9-26
Crankshaft Main Journals .....	9-26
Cylinder Block .....	9-21
Cylinder Heads .....	9-10
Distributor Drive Shaft Bushings .....	9-21
Engine Assembly .....	9-9
Front Engine Mounts .....	9-28
Hydraulic Tappets .....	9-14

**GROUP 9—ENGINE—Continued**

	Page
Main Bearings .....	9-26
Measuring the Connecting Rod Bearings Clearance (Plastigage Method) .....	9-25
Mechanical Tappets (Model 300J) .....	9-16
Piston and Connecting Rod Assembly .....	9-26
Rear Main Bearing Oil Seal .....	9-27
Rear Engine Mounts .....	9-29
Rocker Arm and Shaft Assembly .....	9-9
Service Diagnosis .....	9-30
Specifications .....	9-1
Timing Chain Case Cover Seal Replacement .....	9-18
Timing Sprockets and Chain .....	9-17
Tune-Up .....	9-8
Valve Timing (All Models Except 300J) .....	9-16
Valve Timing (300J) .....	9-16
Valves and Valve Springs .....	9-12

**GROUP 10—ENGINE OILING SYSTEM**

Engine Oil Pan .....	10-1
Oil Filter .....	10-4
Oil Pump .....	10-2
Specifications .....	10-1

**GROUP 11—EXHAUST SYSTEM**

Exhaust Manifold .....	11-1
Exhaust Pipes, Mufflers and Tail Pipes .....	11-5
Intake Manifold .....	11-1
Manifold Heat Control Valve .....	11-2
Manifold Heat Control Valve Replacement .....	11-4
Service Diagnosis .....	11-5

**GROUP 13—FRAME**

Body to Frame Alignment (Chrysler) .....	13-6
Frame Alignment (Imperial) .....	13-1
Frame Alignment Measurement (Imperial) .....	13-1
Frame Alignment Measurement (Chrysler) .....	13-3
Frame Replacement (Chrysler) .....	13-4
Gauge Alignment Adapter Chart .....	13-6

**GROUP 14—FUEL SYSTEM (PUMP,  
CARBURETOR, TANK)****Part 1—WVC3 Series Carburetor**

Automatic Choke (Well Type) .....	14-12
Carburetor Adjustments .....	14-10
Cleaning Carburetor Parts .....	14-7
Disassembling the Carburetor .....	14-15
Inspection and Reassembly .....	14-7
Setting the Throttle Linkage .....	14-13

## INDEX — Continued

**GROUP 14—FUEL SYSTEM (PUMP,  
CARBURETOR, TANK)—  
(Continued)**

	Page
<b>Part 2—BBD Series Carburetor</b>	
Automatic Choke (Well Type) .....	14-19
Carburetor Adjustments .....	14-17
Cleaning Carburetor Parts .....	14-15
Disassembling the Carburetor .....	14-14
Inspection and Reassembly .....	14-15
Setting the Throttle Linkage .....	14-22
<b>Part 3—AFB Series Carburetor</b>	
Automatic Choke (Well Type) .....	14-30
Carburetor Adjustments .....	14-27
Cleaning Carburetor Parts .....	14-25
Disassembling the Carburetor .....	14-22
Inspection and Reassembly .....	14-25
Setting the Throttle Linkage .....	14-30
<b>Part 4—Fuel and Induction System</b>	
Carburetor (AFB) (300J Models) .....	14-37
Carburetor Adjustments .....	14-42
Intake Manifolds .....	14-32
Setting the Throttle Linkage .....	14-35
<b>Part 5—Fuel Pump and Tank</b>	
Fuel Tank (Removal and Disassembly) .....	14-46
Fuel Tank (Town and Country) .....	14-49
Fuel Pump (Removal and Assembly) .....	14-45
Testing Fuel Pump .....	14-44

**GROUP 16—PROPELLER SHAFT AND  
UNIVERSAL JOINTS**

Ball and Trunnion Universal Joint .....	16-4
Center Bearing (TY-1) .....	16-8
Center Bearing Height (TY-1) .....	16-7
Cross and Roller Universal Joint .....	16-4
Propeller Shaft (TC-1, TC-2, TC-3) .....	16-3
Propeller Shaft (TY-1) .....	16-7
Propeller Shaft Angularity (TC-1, TC-2, TC-3) .....	16-2
Propeller Shaft Angularity (TY-1) .....	16-6
Service Diagnosis .....	16-9
Universal Joint (TY-1) .....	16-8

**GROUP 17—SPRINGS AND  
SHOCK ABSORBERS**

Front Shock Absorber and/or Bushing .....	17-5
Measuring Rear Spring Height .....	17-2
Rear Shock Absorber Replacement .....	17-6
Rear Springs .....	17-2
Rear Spring Interliners .....	17-3
Rear Spring Front Pivot Bushing Replacement .....	17-4
Service Diagnosis .....	17-6
Specifications .....	17-1

**GROUP 19—STEERING GEAR (PUMPS,  
STEERING GEAR ARM,  
IDLER ARM)**

	Page
<b>Part 1—Manual Steering</b>	
Roller Tooth and Worm Adjustment .....	19-10
Service Diagnosis .....	19-33
Specifications .....	19-1
Steering Column .....	19-4
Steering Gear .....	19-6
Steering Knuckles .....	19-10
Steering Linkage .....	19-10
<b>Part 2—Power Steering</b>	
Final Test, Adjustment and Specifications .....	19-22
Gear Shaft Adjustment .....	19-11
Power Steering Gear .....	19-11
Power Train .....	19-19
Service Diagnosis .....	19-34
Specifications .....	19-1
Steering Gear .....	19-22
<b>Part 3—Power Steering Pump</b>	
Belt Adjustment .....	19-33
Flow Control Valve .....	19-28
Fluid Level .....	19-25
Power Steering Pump .....	19-26
Power Steering Pump Discharge Fitting Ferrule Replacement .....	19-28
Pressure Test .....	19-25
Pump Flow Test .....	19-26
Service Diagnosis .....	19-37
Slipper Spring Replacement .....	19-29
Specifications .....	19-1

**GROUP 21—TRANSMISSION (TORQUE  
CONVERTER)—(Continued)**

<b>Heavy Duty Three Speed Manual Transmission Models TC-1, TC-2</b>	
Gearshift Assembly .....	21-12
Gearshift Linkage Assembly .....	21-13
Service Diagnosis .....	21-68
Specifications .....	21-3
Transmission Assembly .....	21-8
Transmission Installation .....	21-10
Transmission Rear Oil Seal .....	21-13
Transmission Removal .....	21-5
<b>TorqueFlite Transmission</b>	
Aluminum Thread Repair .....	21-46
Flushing Torque Converter .....	21-46
Front Pump Oil Seal Replacement .....	21-47
Gearshift (Push Button) and Parking Lock Control Unit .....	21-25

## INDEX — Continued

**GROUP 21—TRANSMISSION (TORQUE CONVERTER) — (Continued)**

	Page
Back-up Lamp Switch Replacement .....	21-28
Control Unit Removal, Adjustment and Installation .....	21-25
Gearshift Cable (Transmission End) Removal and Installation .....	21-28
Parking Lock Cable (Transmission End) Removal and Installation .....	21-28
Push Button Lamp Replacement .....	21-28
Hydraulic Control System .....	21-14
Installation of Sub-Assemblies .....	21-65
Maintenance, Adjustments and Tests .....	21-25
Air Pressure Tests .....	21-37
Band Adjustments .....	21-31
Gearshift Control Cable Adjustments .....	21-30
Hydraulic Control Pressure Tests .....	21-35
Hydraulic Control Pressure Adjustments .....	21-36
Lubrication .....	21-29
Neutral Starting Switch .....	21-30
Parking Lock Cable Adjustment .....	21-31
Throttle Linkage Adjustment .....	21-34
Measuring Drive Train End Play .....	21-48
Operating Instructions .....	21-25
Recondition Sub-Assemblies .....	21-50
Accumulator Piston and Spring .....	21-54
Extension Housing Bearing and Oil Seal .....	21-54
Front Clutch .....	21-58
Front Clutch Retainer Bushing Replacement .....	21-58
Front Oil Pump and Reaction Shaft Support .....	21-55
Front Pump Bushing Replacement .....	21-55
Governor and Support .....	21-54
Input Shaft Bushing Replacement .....	21-60
Kickdown Servo and Band .....	21-63
Low and Reverse Servo and Band .....	21-64
Overrunning Clutch .....	21-63
Parking Sprag and Lever .....	21-54
Planetary Gear Train .....	21-62
Reaction Shaft Bushing Replacement .....	21-56
Rear Clutch .....	21-59
Rear Oil Pump .....	21-67
Valve Body Assembly .....	21-50
Recondition Transmission—Unit Out of Vehicle .....	21-46
Removal of Sub-Assemblies .....	21-47
Service Diagnosis .....	21-68
Servicing Operations—Transmission in Vehicle .....	21-38
Extension Housing Removal and Installation .....	21-39
Bearing Replacement .....	21-40
Governor Removal and Installation .....	21-40
Neutral Starting Switch .....	21-43
Removal and Installation .....	21-43
Output Shaft Oil Seal Replacement .....	21-39

**GROUP 21—TRANSMISSION (TORQUE CONVERTER) — (Continued)**

	Page
Parking Lock Components .....	21-42
Removal and Installation .....	21-42
Rear Oil Pump Removal and Installation .....	21-41
Speedometer Pinion Removal and Installation .....	21-38
Valve Body, Accumulator Piston .....	21-43
Removal and Installation .....	21-43
Specifications .....	21-3
Starter Ring Gear Replacement .....	21-67
Transmission and Converter .....	21-44
Removal and Installation .....	21-44

**GROUP 22—WHEELS, BEARINGS AND TIRES**

Care of Tires .....	22-2
Measuring Wheel and Tire Runout .....	22-2
Dismounting and Mounting Tires .....	22-4
Front Wheel Bearings .....	22-5
Repairing Leaks .....	22-3
Service Diagnosis .....	22-6
Specifications .....	22-1
Tire Rotation .....	22-2
Wheel Balance .....	22-3

**GROUP 23—BODY AND SHEET METAL****Part 1—Description**

Description (Chrysler) .....	23-3
Description (Imperial) .....	23-3

**Part 2—Body Maintenance**

Care and Cleaning of Top .....	23-6
Cleaning Interior Upholstering .....	23-5
Paint Finish Care .....	23-6
Rear Window (Convertible Coupe) .....	23-6

**Part 3—Body Adjustments**

Aligning Doors (All Models) .....	23-8
Aligning the Hood .....	23-6
Centering Deck Lid in Opening .....	23-10
Correcting Deck Lid Camber .....	23-10
Deck Lid Adjustment .....	23-10
Final Door Striker Plate Adjustment .....	23-9
Fitting the Front Door Flush with Adjacent Panels .....	23-9
Front Door Vent Window and Door Glass Adjustment .....	23-12
Hood Hinge .....	23-14
Hood Striker and Lock Assembly .....	23-15
Hood Lock, Hood and Hinge Removal .....	23-14
Moving the Door Forward or Back (Front Door) .....	23-9
Quarter Glass Adjustment (Imperial) .....	23-13
Quarter Glass Adjustment (Chrysler) .....	23-14
Rear Door Adjustments .....	23-10

## INDEX — Continued

**GROUP 23—BODY AND SHEET METAL—  
(Continued)**

	Page
Rear Door Glass Adjustments (Hard Top) (Imperial) . . .	23-13
Rear Door Glass Adjustments (Hard Top) (Chrysler) . . .	23-13
To Raise or Lower Doors (Front Doors) . . . . .	23-9
Vent Frame and Door Glass Adjustment . . . . .	23-12
Service Diagnosis . . . . .	23-55
<b>Part 4—Body Sealing</b>	
Deck Lid Lock Cylinder and Bezel . . . . .	23-22
Door Openings . . . . .	23-19
Exterior Moulding Attachment . . . . .	23-22
Floor Pan Leakage . . . . .	23-23
Gasoline Resistant Sealer . . . . .	23-15
General Seam Sealing Material . . . . .	23-15
Housing—Fuel Filler . . . . .	23-20
Leakage at Deck Lid . . . . .	23-20
Luggage Compartment Sealing . . . . .	23-19
Rear Quarter Panel . . . . .	23-21
Rear Window . . . . .	23-22
Roof . . . . .	23-22
Water and Dust Leakage Areas . . . . .	23-15
Windshield Rubber Cement . . . . .	23-15
Weatherstrip Adhesive . . . . .	23-15
<b>Part 5—Minor Body Servicing</b>	
Convertible Windshield Glass . . . . .	23-39
Custom Positioned Six-Way Manual Front Seat Adjustment . . . . .	23-28
Deck Lid . . . . .	23-35
Deck Lid Hinges . . . . .	23-35
Deflector (Chrysler Models) . . . . .	23-24
Deflector (Imperial Models) . . . . .	23-23
Door and Quarter Panel Trim Replacement . . . . .	23-24
Door and Quarter Panel Upholstery Removal . . . . .	23-24
Door Hinges (All Models) . . . . .	23-30
Door Inside Hardware and Trim . . . . .	23-30
Door Lock and Remote Control Assemblies . . . . .	23-30
Door Opening Weatherseal . . . . .	23-25
Electric Window Regulator Switch Removal . . . . .	23-24
Exterior Mouldings . . . . .	23-29
Fender . . . . .	23-24
Front and Rear Door Window Regulator . . . . .	23-34
Front Door . . . . .	23-29
Front Door Glass . . . . .	23-41
Front Door Glass (Four Door Sedan) . . . . .	23-42
Front Door Ventilator . . . . .	23-40
Front Seat . . . . .	23-28
Grille (Chrysler Models) . . . . .	23-23
Grille (Imperial Models) . . . . .	23-23
Headlining . . . . .	23-25
Lock Cylinder . . . . .	23-33

**GROUP 23—BODY AND SHEET METAL—  
(Continued)**

	Page
Outside Door Handle and Key Cylinder . . . . .	23-31
Radiator Core Support . . . . .	23-24
Rear Deck Lid (Convertible) . . . . .	23-35
Rear Deck Lid Hinges and Locks—Removal, Installation, Alignment . . . . .	23-35
Rear Door (Four Door Sedan) . . . . .	23-29
Rear Door Glass (Four Door Hard Top and Town and Country) . . . . .	23-44
Rear Door Glass (Four Door Sedan) . . . . .	23-43
Rear Seat . . . . .	23-28
Rear Seat Back . . . . .	23-28
Rear Window Glass . . . . .	23-39
Service Diagnosis . . . . .	
Windshield Glass (All Models) . . . . .	23-36

**Part 6—Major Body Servicing**

Application . . . . .	23-48
Paint Refinishing . . . . .	23-47
Preparation . . . . .	23-47
Refinishing . . . . .	23-48
Removing Old Finish . . . . .	23-47
Replacement of Body Panels . . . . .	23-46
Sub-Assemblies (All Models) . . . . .	23-46

**Part 7—Convertible Coupe Top**

Adjusting the Convertible Coupe Top . . . . .	23-48
Care and Cleaning of Top . . . . .	23-51
Fluid Level in Reservoir . . . . .	23-50
Operating the Convertible Coupe Top . . . . .	23-48
Rear Window (Convertible Coupe) . . . . .	23-51
Service Diagnosis . . . . .	23-58
Servicing the Top Folding Mechanism . . . . .	23-50
Testing the Top Control Switch . . . . .	23-51
Testing Wires Between the Control Switch and the Pump Motor . . . . .	23-51
Top Will Not Raise or Lower . . . . .	23-51

**Part 8—Town and Country**

Folding Third Seat . . . . .	23-53
Power Windows . . . . .	23-53
Quarter Glass . . . . .	23-53
Tail Gate . . . . .	23-51
Tail Gate Glass . . . . .	23-52
Tail Gate Glass Removal and Installation . . . . .	23-53
Tail Gate Glass Run Channel . . . . .	23-53
Tail Gate Lamps . . . . .	23-54
Tail Gate Sealing . . . . .	23-53
Tail Gate Weatherstrip . . . . .	23-53

---

**8 — INDEX**

---

**INDEX — Continued**

**GROUP 24—AIR CONDITIONING**

	Page
AntiFreeze Recommendations .....	24-22
Complete System Discharge and Recharge .....	24-34
Compressor Drive Belt Adjustment .....	24-22
Compressor Removal and Installation .....	24-26
Electrical Controls and Circuits .....	24-3
Expansion Valve, Heater Core, Evaporator, Blower Removal and Installation .....	24-31
Inspection, Test Procedure and Diagnosis .....	24-5
Magnetic Clutch .....	24-24
Operation (Air Conditioning) .....	24-2
Radiator Pressure Cap .....	24-22
Safety Precautions .....	24-21

**GROUP 24—AIR CONDITIONING—  
(Continued)**

	Page
Service Diagnosis .....	24-38
Specifications .....	24-1
Test 1—Test System Pressure .....	24-6
Test 2—Refrigerant Level and Moisture .....	24-7
Test 3—Testing the System for Leaks .....	24-8
Test 4—Correcting Low Refrigerant Level .....	24-9
Test 5—Performance Test .....	24-10
Test 6—Evaporator Pressure Regulator Valve Test .....	24-15
Test 7—Compressor Capacity Test .....	24-16
Test 8—Expansion Valve Test .....	24-19
Vacuum Control System Adjustments and Tests.....	24-22

---