

PART NAME	CODE	PART NAME	CODE
-----------	------	-----------	------

ALPHABETICAL INDEX

A

Absorber, shock	17-23-3 to 17-23-57
Absorber, shock (load leveler)	1-07-1
Accelerator pedal	14-01-1 to 14-01-31
Accelerator pedal return spring	14-06-1 to 14-06-10
Accelerator pedal to accelerator shaft rod	14-07-1 to 14-07-15
Accelerator shaft	14-11-1 to 14-11-48
Accessories	1-04-0 thru 1-108-0
Actuator	24-29-1 to 24-29-15
Adjuster, front seat	23-47-6 to 23-47-462
Adjuster, wheel brake	5-20-1 to 5-20-20
Air cleaner, carburetor	14-29-2 to 14-29-44
Air cleaner, crankcase vent inlet	10-01-40 to 10-01-21
Air cleaner, power brake	5-113-17 to 5-113-23
Air conditioning	24-01-1 to 24-01-87
Air conditioning control	24-24-5 to 24-24-167
Air intake	23-61-39 to 23-61-116
Alternator	8-28-3 to 8-28-292
Alternator component parts	8-29-17 to 8-29-208
Ammeter	8-37-1
Antenna, radio	1-88-1 to 1-88-170
Anti-squeak, body	23-31-33 to 23-31-205
Arm, front wheel lower control	2-10-6 to 2-10-76

Arm, front wheel upper control	2-08-5 to 2-08-72
Arm, steering linkage knuckle	2-05-4
Arm and bracket, visor	23-103-10 to 23-103-48
Arm and idler arm, power steering gear	19-27-2 to 19-27-55
Arm and idler arm, standard steering gear	19-27-2 to 19-27-55
Arm rest, front door	23-76-3 to 23-76-86
Ash receiver	23-02-1 to 23-02-150
Assist strap	23-77-3 to 23-77-17
Automatic choke to carburetor rod clip	14-65-4
Automatic door lamp switch	8-12-2 to 8-12-17
Automatic headlamp dimmer	1-04-4 to 1-04-18
Automatic pilot	14-02-2 to 14-02-79
Automatic transmission	21-02-1
Automatic transmission front and rear planet pinion carrier and components	21-134-5 to 21-134-45
Auxiliary vacuum switch	24-24-150
Axle, housing rear	3-02-0

B

Back, rear seat	23-109-3 to 23-109-40
Back-up lamp	1-10-1 8-56-1 to 8-56-74
Back-up lamp switch	8-56-2
Bands, automatic transmission	21-136-5 to 21-136-237
Bar, belt	23-51-3 to 23-51-48
Bar, front bumper face	13-64-3 to 13-64-150
Bar, front suspension torsion	2-14-0 to 2-14-3

PART NAME	CODE	PART NAME	CODE
Bar, radiator cross	7-33-1 to 7-33-18	Belt bar	23-51-3 to 23-51-45
Bar, rear bumper face	13-66-3 to 13-66-153	Belt package	1-67-1 to 1-67-9
Battery and Cable	8-01-4 to 8-01-21	Block, cylinder	9-02-5 to 9-02-17
Battery heat shield	13-35-1	Block, terminal	8-21-1
Battery hold-down strap	13-34-3 to 13-34-12	Blower motor switch	1-48-770 24-24-5
Battery hold-down stud	13-36-5	Blower motor switch w/cable	24-24-5
Battery support tray	13-33-61 to 13-33-69	Board, floor	23-04-205 to 23-04-249
Bearing, camshaft	9-16-6 to 9-16-17	Body, universal joint	16-04-1
Bearing, clutch release	6-19-2 to 6-19-3	Body anti-squeak	23-31-33 to 23-31-205
Bearing, differential	3-11-1 to 3-11-14	Body bracket	23-07-169
Bearing, drive pinion	3-22-24 to 3-22-45	Body bumper	23-08-12 to 23-08-75
Bearing, drive shaft	3-33-1 to 3-33-8	Body insulator	23-32-15 to 23-32-115
Bearing, front wheel	22-06-1 to 22-06-18	Body liner	23-31-33 to 23-31-205
Bearing, manual transmission countershaft	21-25-2 to 21-25-6	Body pad	23-31-33 to 23-31-205
Bearing, manual transmission main shaft	21-19-2 to 21-19-15	Body pan	23-32-15 to 23-32-115
Bearing, manual transmission main shaft pilot	21-17-2 to 21-17-9	Body panel	23-34-10 to 23-34-354
Bearing, propeller shaft center	16-16-1 to 16-16-47	Body pillar	23-36-5 to 23-36-142
Bearing, manual transmission countershaft	21-25-2 to 21-25-6	Body plug	23-32-15 to 23-32-115
Bearing, manual transmission main shaft	21-19-2 to 21-19-15	Body reinforcement	23-07-169
Bearing, manual transmission main shaft pilot	21-17-2 to 21-17-9	Body seal	23-31-33 to 23-31-205
Bearing package, connecting rod	9-32-2	Body side sill	23-51-3 to 23-51-48
Bearing package, crankshaft	9-09-2	Body striker	23-08-12 to 23-08-75
Belt, fan and related drive	7-03-1	Bolt, drive gear	3-20-1
Belt, safety seat	1-67-1 to 1-67-18	Bolt, rear spring center	17-14-10
		Boot, folding top dust	23-112-12 to 23-112-153
		Boot, master cylinder	5-40-1
		Boot, wheel cylinder	5-69-1

PART NAME	CODE	PART NAME	CODE
Box, glove	23-06-4	Bumper, hood	15-09-4
	to	Bumper, rear spring	17-19-3
	23-06-58		to
Brace, fender	12-07-1		17-19-20
Bracket, body	23-07-169	Bumper guard	1-01-1
Bracket, brake pedal	5-31-11		13-68-6
	to		to
	5-31-15		13-68-20
Bracket, brake tube	5-57-2	Bumper jack	13-72-1
Bracket, fender	12-06-3		to
	to		13-72-4
	12-06-6	Bushing and pedal, brake	5-27-1
Bracket, frame engine rear			to
support crossmember	9-70-9		5-27-21
Bracket, power steering column	19-31-1	Bushing and roller, universal cross	16-10-1
	to		to
	19-31-15		16-10-3
Bracket, power unit mounting	5-101-1	Button, tufting	23-78-2
	to	Button, universal joint centering	16-06-1
	5-101-6		to
Bracket, shock absorber	17-24-3		16-06-3
	to	Button and cable, automatic	
	17-24-28	transmission gearshift	21-30-6
Bracket, standard steering column	19-31-1		to
	to		21-30-408
	19-31-15	C	
Bracket, throttle control mounting	14-26-2	Cable, choke control	14-63-1
	to		to
	14-26-6		14-63-24
Bracket and arm, visor	23-103-10	Cable, fast idle	14-24-1
	to		to
	23-103-48		14-24-11
Brake drum	22-04-2	Cable, parking brake	4-23-1
	to		to
	22-04-14		4-23-46
Brake flexible hose	5-62-1	Cable, speedometer	21-84-1
	to		to
	5-62-20		21-84-28
Brake fluid	5-01-1	Cable, throttle control	14-25-5
Brake pedal and bushing	5-27-1		to
	to		14-25-17
	5-27-21	Cable and battery	8-01-4
Brake pedal bracket	5-31-11		to
	to		8-01-21
	5-31-15	Cable and button automatic	
Brake pedal pad	5-28-8	transmission gearshift	21-30-6
Brake pedal return spring	5-34-1		to
	to		21-30-408
	5-34-6	Cable and connection	8-16-1
Brake pedal shaft	5-29-1		to
Brake pedal stop	5-30-12		8-16-10
Brake shoe guide	5-25-9	Camshaft	9-15-1
Brake switch	14-02-32		to
Brake tube bracket	5-57-2		9-15-10
Brake tube clip	5-56-2	Camshaft bearing	9-16-6
Brake tube tee	5-58-1		to
	to		9-16-17
	5-58-5	Camshaft sprocket	9-17-5
Brake tubing and cover	5-53-3	Cap, crankshaft bearing	9-10-2
	to		to
	5-53-6		9-10-26
Bulb	8-44-1	Cap, fuel tank locking	1-39-2
Bumper, body	23-08-12	Cap, hub	22-08-5
	to		to
	23-08-75		22-08-57
	23-32-15	Cap, radiator filler	7-12-1
	to	Carburetor	14-30-1
	23-32-115		

PART NAME	CODE	PART NAME	CODE
Carburetor air cleaner	14-29-2	Clamp, power brake hose	5-112-1
	to	Clamp and support, exhaust pipe	11-08-5
	14-29-44		to
Carburetor anti-stall diaphragm	14-50-25		11-08-24
Carburetor assemblies and service parts	14-30-2	Clip, automatic choke to carburetor rod	14-65-4
	14-30-4	Clip, brake tube	5-56-2
	14-30-7	Clip, fuel line tube	14-90-1
	14-30-8	Clip, rear spring	17-15-1
	14-30-27		to
	14-30-28		17-15-30
	14-35-1	Clock	1-21-1
	14-35-6		to
	14-35-8		1-21-27
	14-35-33	Clutch	6-01-3
	14-35-39	Clutch, automatic transmission	21-133-5
	14-39-45		to
	14-41-3		21-133-65
	14-43-5	Clutch cover and pressure plate	6-14-1
Carburetor fuel line tee	14-85-3		to
	to		6-14-10
	14-85-31	Clutch disc	6-13-1
Carpet, front floor	23-79-3		to
	to		6-13-8
	23-79-79	Clutch housing	6-09-1
Carrier, spare wheel	22-20-29		to
	to		6-09-11
	22-20-89	Clutch housing pan	6-10-2
Carrier and components, automatic transmission front and rear planet pinion	21-134-5		to
	to	Clutch parts, differential	6-10-31
	21-134-45		3-09-1
Carrier and differential, rear axle	3-03-1		to
	to	Clutch pedal	3-09-3
	3-03-38		6-38-1
Case, automatic transmission	21-03-1		to
	to	Clutch pedal pad	6-38-23
	21-03-40	Clutch pedal rod	6-39-2
Case, differential	3-04-6		6-50-1
	to		to
	3-04-10	Clutch pedal shaft	6-50-10
Case, manual transmission	21-03-1		6-43-1
	to		to
	21-03-25	Clutch pressure spring	6-43-14
Center pillar trim cover	23-99-4	Clutch release bearing	6-16-1
	to		6-19-2
	23-99-38		to
Chain, timing	9-20-1	Clutch release bearing return spring	6-19-3
Chain case cover	9-23-5	Clutch release fork	6-20-14
	to		6-22-1
	9-23-40		to
Channel, glass	23-09-2	Clutch release fork return spring	6-22-19
	to		6-27-5
	23-09-75		to
Chassis and body wiring	8-15-2	Clutch release lever	6-27-10
	to	Clutch release over center spring	6-17-3
	8-15-53		6-35-1
Check, door	23-10-1		to
	to	Clutch release rod	6-35-17
	23-10-18		6-24-1
Choke control cable	14-63-1		to
	to	Clutch torque shaft	6-24-14
	14-63-24		6-52-1
Cigar lighter	1-12-1		to
	8-20-3	Coat hanger hook	6-52-17
	to		23-82-30
	8-20-16		to
		Component parts, alternator	23-82-39
			8-29-17
			to
			8-29-208

PART NAME	CODE	PART NAME	CODE
Component parts, ignition distributor . . .	8-27-4	Courtesy lamp	8-11-5
	to		to
	8-27-352		8-11-24
Components and carrier, automatic		Cover, center pillar trim	23-99-4
transmission front and rear planet			to
pinion	21-134-5		23-99-38
	to	Cover, chain case	9-23-5
	21-134-45		to
			9-23-40
Components and heater	1-48-1	Cover, front console	23-71-1
	to	Cover, manual transmission case . . .	21-29-3
	1-48-942		to
Compressor	24-25-2		21-29-33
	to	Cover, second seat back hinge	23-70-5
	24-25-260		to
Condenser	24-27-5		23-70-6
	to	Cover, universal joint	16-07-3
	24-27-15		to
Conditioning, air	24-01-1		16-07-4
	to	Cowl trim panel	23-91-6
	24-01-87	Cowl vent	23-61-39
Connecting rod	9-31-4		to
	to		23-61-116
	9-31-10	Crank, throttle control bell	14-14-1
Connecting rod bearing package	9-32-2		to
Connection and cable	8-16-1		14-14-49
	to	Crankcase closed vent system	10-02-40
	8-16-10		to
Connector, power brake hose	5-110-18		10-02-67
Console, floor tunnel	23-38-1	Crankcase vent inlet air cleaner . . .	10-01-21
	to		to
	23-38-40		10-01-40
Console tachometer	1-36-1	Crankshaft	9-07-5
Control, air conditioning	24-24-5		to
	to		9-07-22
	24-24-167	Crankshaft bearing cap	9-10-2
Control, door lock and remote	23-18-5		to
	to		9-10-26
	23-18-217	Crankshaft bearing package	9-09-2
Control, hood lock	15-14-1	Crankshaft rear bearing oil seal . . .	9-11-1
	to		to
	15-14-21		9-11-7
Control, horn	8-33-4	Crankshaft sprocket	9-08-5
	to	Crankshaft vibration damper	9-13-5
	8-33-164	Cross, universal joint	16-08-6
Control, manifold heat	9-59-13		to
	to		16-08-7
	9-59-15	Crossmember, frame engine rear	
Control valve, manifold heat	9-59-13	support	9-69-4
	to		to
	9-59-15		9-69-21
Converter, torque	9-46-4	Crossmember, frame front	13-11-5
	to	Crossmember, frame rear	13-18-4
	9-46-228		to
Core, radiator	7-11-3		13-18-5
Countershaft, manual transmission . . .	21-24-2	Cup, wheel cylinder piston	5-71-1
	to		to
	21-24-22		5-71-2
Coupling and tube, power steering gear .	19-15-4	Cushion, front seat	23-108-4
	19-15-118		to
	to		23-108-142
	19-15-4	Cylinder, master	5-39-1
Coupling and tube, standard steering gear	19-15-4		to
	to		5-39-24
	19-15-111	Cylinder, wheel brake	5-64-1
Courtesy and map lamp	1-14-4		to
	to		5-64-2
	1-14-6	Cylinder and key, lock	23-17-2
			to
			23-17-72

1964 PASSENGER CAR PARTS CATALOG

ALPHABETICAL
INDEX

PART NAME	CODE	PART NAME	CODE
Cylinder block	9-02-5 to 9-02-17	Door regulator and remote control handle	23-14-10 to 23-14-153
Cylinder head	9-03-4 to 9-03-29	Door trim panel	23-92-5 to 23-92-25
Cylinder head water outlet elbow	9-05-5 to 9-05-6	Drain cock, radiator	7-13-2
D		Drain trough	23-59-25 to 23-59-63
Damper, crankshaft vibration	9-13-5	Drier, receiver	24-26-20 to 24-26-100
Deck lid	23-19-8 to 23-19-188	Drive gear and pinion set	3-19-1
Deflector, fuel tank stone	14-87-2	Drive gear bolt	3-20-1
Deflector, radiator stone	7-35-2 to 7-35-20	Drive pinion bearing	3-22-24 to 3-22-45
Defogger, rear window	1-47-1 to 1-47-19	Drive shaft	3-32-1 to 3-32-9
Diaphragm, carburetor anti-stall	14-50-25	Drive shaft bearing	3-33-1 to 3-33-8
Differential and carrier, rear axle	3-03-1 to 3-03-36	Drive shaft oil seal	3-35-14
Differential bearing	3-11-1 to 3-11-14	Drum, brake	22-04-2 to 22-04-14
Differential case	3-04-6 to 3-04-10	Drum, hub and brake	22-03-1 to 22-03-2
Differential clutch parts	3-09-1 to 3-09-3	E	
Differential pinion	3-07-1 to 3-07-2	Elbow, cylinder head water outlet	9-05-5 to 9-05-6
Differential pinion shaft	3-08-1 to 3-08-2	Elbow, water pump	7-48-22
Differential side gear	3-06-5 to 3-06-8	Electric door lock switch	23-18-103
Dimmer, automatic headlamp	1-04-4 to 1-04-18	Electric seat adjuster switch	23-47-446
Disc, clutch	6-13-1 to 6-13-8	Electric window lift and vent wing switch	23-41-170
Distributor, ignition	8-27-1 to 8-27-352	Electric window lift switch	23-41-170
Dome lamp and switch	8-05-6 to 8-05-40	Emergency flasher light	1-06-1 to 1-06-11
Dome lamp switch	8-05-14	Emergency flasher light switch	1-06-3
Door	23-11-1 to 23-11-19	Engine	9-01-5 to 9-01-24
Door check	23-10-1 to 23-10-18	Engine front support	9-64-5 to 9-64-24
Door hinge	23-15-1 to 23-15-38	Engine front support insulator	9-67-4
Door lock and remote control	23-18-5 to 23-18-117	Engine rear support insulator	9-71-5 to 9-71-19
		Evaporator	24-28-3 to 24-28-399
		Exhaust pipe	11-05-1 to 11-05-12
		Exhaust pipe flange gasket and stud	11-06-2 to 11-06-10
		Exhaust pipe support and clamp	11-08-5 to 11-08-24

PART NAME	CODE	PART NAME	CODE
Exhaust valve	9-39-6 to 9-39-21	Floor tunnel console	23-38-1 to 23-38-40
Extension, automatic transmission case	21-04-1 to 21-04-18	Fluid, brake	5-01-1
Extension manual transmission case . .	21-04-1 to 21-04-14	Flywheel	9-45-1 to 9-45-2
F		Folding top	23-58-3 to 23-58-607
Fan	7-02-1 to 7-02-16	Folding top bow tacking strip	23-111-10 to 23-111-37
Fan and alternator idler pulley	7-04-1 to 7-04-16	Folding top dust boot	23-112-12 to 23-112-153
Fan and related drive belts	7-03-1	Folding top header top material retainer	23-112-4 to 23-112-160
Fan drive and drive pulley	7-06-1 to 7-06-14	Folding top lift switch	23-58-532
Fan fluid drive unit	7-07-1	Foot dimmer switch	8-53-150
Fan pulley hub	7-05-1	Fork, clutch release	6-22-1 to 6-22-19
Fast idle cable	14-24-1 to 14-24-11	Fork, manual transmission gearshift .	21-39-3
Fender, front	12-01-5 to 12-01-105	Frame	13-01-1 to 13-01-6
Fender brace	12-07-1	Frame engine rear support cross- member	9-69-4 to 9-69-21
Fender bracket	12-06-3 to 12-06-6	Frame engine rear support cross- member bracket	9-70-9
Fender moulding	12-15-19 to 12-15-30	Frame front crossmember	13-11-5
Fender name plate	12-15-19 to 12-15-30	Frame rear crossmember	13-18-4 to 13-18-5
Fender ornament	12-15-17 to 12-15-30	Frame rear spring hanger	13-54-4 to 13-54-15
Fender seal	12-02-5 to 12-02-12	Frame sub-sidemember	13-04-20
Fender shim	12-02-5 to 12-02-12	Front and rear planet pinion carrier and components, automatic transmission	21-134-5 to 21-134-45
Fender support	12-07-1	Front bumper face bar	13-64-3 to 13-64-150
Filter, automatic transmission oil . . .	21-117-1 to 21-117-5	Front console cover	23-71-1
Filter, oil	10-26-5 to 10-26-65	Front door arm rest	23-76-3 to 23-76-86
Filter, fuel	14-67-1 to 14-67-29	Front fender	12-01-5 to 12-01-105
Flange, propeller shaft	16-20-1 to 16-20-8	Front fender shield	12-04-4 to 12-04-25
Floor board	23-04-205 to 23-04-249	Front floor carpet	23-79-3 to 23-79-79
Floor mat	23-20-8 to 23-20-65	Front seat	23-45-29 to 23-45-199

PART NAME	CODE	PART NAME	CODE
Front seat adjuster	23-47-6	Gauge, oil	8-37-316
	to	Gauge, temperature	8-37-178
	23-47-462	Gear, automatic transmission	21-10-3
Front seat back grab handle	23-82-14	to	21-10-31
Front seat back to cushion push nut	23-115-4	Gear, differential side	3-06-5
	to	to	3-06-8
	23-115-10	Gear, manual transmission	21-10-3
Front seat center arm screw	23-115-10	to	21-10-31
Front seat cushion	23-108-4	Gear, manual transmission clutch	21-14-1
	to	to	21-14-21
	23-108-142	Gear, manual transmission countershaft	21-15-2
Front suspension torsion parts	2-14-1	to	21-15-33
	to	Gear, manual transmission reverse idler	21-11-1
	2-14-25	to	21-11-9
Front wheel bearing	22-06-1	Gear, oil pump drive	10-10-1
	to	Gear, power steering	19-01-4
	22-06-18	to	19-01-62
Front wheel lower control arm	2-10-6	Gear, standard steering	19-01-3
	to	to	19-01-24
	2-10-76	Gear and pinion, manual transmission	21-85-4
Front wheel upper control arm	2-08-5	speedometer	21-85-61
	to		
	2-08-72	Gearshift, manual transmission	21-42-11
Fuel filter	14-67-1	remote control	21-42-43
	to	Gearshift control rod, power steering	19-48-1
	14-67-29	to	19-48-52
Fuel gauge	8-37-275	Gearshift control rod, standard	19-48-1
Fuel line tube	14-89-2	to	19-48-52
	to	Gearshift rod, power steering	19-46-3
	14-89-57	to	19-46-55
Fuel line tube clip	14-90-1	Gearshift rod, standard	19-46-8
Fuel pump	14-73-1	to	19-46-55
Fuel pump mounting gasket	14-74-1	Gearshift tube, power steering	19-46-3
Fuel pump push rod	14-77-17	to	19-46-55
Fuel tank	14-86-1	Gearshift tube, standard	19-46-8
	to	to	19-46-55
	14-86-85	Generator	8-28-3
Fuel tank gauge	14-72-1	to	8-28-292
	to	Generator component parts	8-29-17
	14-72-47	to	8-29-208
Fuel tank locking cap	1-39-2	Glass channel	23-09-2
Fuel tank stone deflector	14-87-2	to	23-09-75
Fuel tank support	14-88-8	Glove box	23-06-4
	to	to	23-06-58
	14-88-36		
Fuses	8-17-2		
	to		
	8-17-30		
G			
Garnish moulding	23-22-7	Gearshift tube, standard	19-46-8
	to	to	19-46-55
	23-22-160	Generator	8-28-3
Gasket, fuel pump mounting	14-74-1	to	8-28-292
Gasket, manifold	9-50-1	Generator component parts	8-29-17
	to	to	8-29-208
	9-50-16	Glass channel	23-09-2
Gasket, water pump	7-44-3	to	23-09-75
	to	Glove box	23-06-4
	7-44-4	to	23-06-58
Gasket and stud, exhaust pipe flange	11-06-2		
	to		
	11-06-10		
Gauge, fuel	8-37-275		
Gauge, fuel tank	14-72-1		
	to		
	14-72-47		

PART NAME	CODE	PART NAME	CODE
Glove compartment lamp	8-38-4 to 8-38-23	Hood medallion	15-06-0
Glove compartment lamp and switch .	8-38-23	Hood moulding	15-25-17
Governor	14-68-3 to 14-68-8	Hood name plate	15-06-0
Governor, automatic transmission . . .	21-138-2 to 21-138-38	Hood top panel	15-03-3 to 15-03-67
Grille, radiator	7-16-11 to 7-16-118	Hook, coat hanger	23-82-30 to 23-82-39
Grille guard	1-01-1	Horn	8-32-2 to 8-32-18
Grommet	8-30-1	Horn control	8-33-4 to 8-33-164
Guard, bumper	1-01-1 13-68-6 to 13-68-20	Hose, brake flexible	5-62-1 to 5-62-20
Guard, grille	1-01-1	Hose, power brake vacuum	5-111-17
Guide, brake shoe	5-25-9	Hose, power steering gear	19-58-7 to 19-58-31
H			
Hand brake signal	1-09-1	Hose, radiator	7-14-4 to 7-14-31
Handle, door regulator and remote control	23-14-10 to 23-14-153	Housing, clutch	6-09-1
Handle, front seat back grab	23-82-14	Housing, manual transmission case . . .	21-29-3 to 21-29-33
Handle, rear door pull-to	23-81-3	Housing, power steering gear	19-02-4 to 19-02-55
Hanger, frame rear spring	13-54-4 to 13-54-15	Housing, rear axle	3-02-1 to 3-02-20
Head, cylinder	9-03-4 to 9-03-29	Housing, standard steering gear	19-04-1 to 19-04-13
Headlamp	8-34-1 to 8-34-180	Housing, water pump	7-43-1 to 7-43-8
Headlamp switch	8-53-270	Housing and shaft, automatic transmission speedometer cable	21-84-1 to 21-84-28
Headlining and listing	23-86-2 to 23-86-37	Housing and shaft, manual trans- mission speedometer cable	21-84-1 to 21-84-28
Heater and components	1-48-1 to 1-48-942	Hub, fan pulley	7-05-1
Hinge, door	23-15-1 to 23-15-38	Hub, wheel	22-05-14 to 22-05-24
Hinge, hood	15-19-2 to 15-19-48	Hub and brake drum	22-03-1 to 22-03-2
High beam indicator lamp	8-39-3 to 8-39-15	Hub cap	22-08-5 to 22-08-57
Hood bumper	15-09-4	I	
Hood hinge	15-19-2 to 15-19-48	Ignition	8-36-1 to 8-36-141
Hood letters	15-06-0	Ignition and starter switch	8-35-59
Hood lock	15-11-3 to 15-11-75	Ignition coil	8-35-4 to 8-35-115
Hood lock control	15-14-1 to 15-14-21		
Hood lock striker	15-13-2		

PART NAME	CODE	PART NAME	CODE
Ignition distributor	8-27-1 to 8-27-352	L Lamp, back-up Lamp, courtesy Lamp, glove compartment Lamp, high beam indicator Lamp, ignition Lamp, instrument panel Lamp, license Lamp, map and courtesy Lamp, parking and turn signal Lamp, parking brake signal Lamp, quarter Lamp, stop Lamp, tail, stop and directional signal Lamp, trunk Lamp and switch, dome Lamp and switch, glove compartment . Leaf, rear spring Letters, hood Lever, automatic transmission control to Lever, clutch release Lever, manual transmission gearshift to Lever, parking brake (foot operated) . to Lever, parking brake (hand operated) . to Lever, parking brake operating	1-10-1 8-56-1 to 8-56-74 8-11-5 to 8-11-24 8-38-4 to 8-38-23 8-39-3 to 8-39-15 8-41-16 8-41-35 to 8-41-39 8-57-7 to 8-57-109 1-14-4 to 1-14-6 8-42-2 to 8-42-31 8-50-82 to 8-50-354 1-09-1 8-31-2 to 8-31-18 8-11-5 to 8-11-24 8-58-60 8-55-1 to 8-55-300 8-13-3 to 8-13-4 8-05-6 to 8-05-40 8-38-23 17-12-4 to 17-12-12 15-06-0 21-142-12 to 21-142-21 6-17-3 21-30-2 to 21-30-438 4-25-1 to 4-25-34 4-08-1 to 4-08-36 4-26-1 to 4-26-27
Ignition distributor component parts .	8-27-4 to 8-27-352		
Ignition lamp	8-40-16		
Ignition lock cylinder	8-35-4 to 8-35-115		
Ignition switch and lock cylinder . . .	8-35-4 to 8-35-115		
Impeller and shaft, water pump	7-45-31		
Indicator, oil level	10-03-4 to 10-03-10		
Instrument lamp switch	8-53-270		
Instrument panel	23-33-6 to 23-33-240		
Instrument panel instruments	8-37-1 to 8-37-517		
Instrument panel lamp	8-41-35 to 8-41-39		
Instrument panel trim pad	23-84-3 to 23-84-31		
Instrument panel wiring	8-19-2 to 8-19-87		
Insulator, body	23-31-33 to 23-31-205		
Insulator, engine front support	9-67-4		
Insulator, engine rear support	9-71-5 to 9-71-19		
Insulator, propeller shaft center bearing housing	16-17-1		
Intake, air	23-61-39 to 23-61-116		
Intake valve	9-39-1 to 9-39-5		
J			
Jack, bumper	13-72-1 to 13-72-4		
Jacket, power steering gear column . .	19-14-1 to 19-14-99		
Jacket, standard steering gear column	19-14-1 to 19-14-68		
Joint, universal	16-03-1 to 16-03-20		
K			
Key and lock cylinder	23-17-2 to 23-17-72		
Knuckle, steering	2-03-2		

PART NAME	CODE	PART NAME	CODE
License lamp	8-57-7 to 8-57-109	Manual transmission	21-02-1 to 21-02-6
License mounting parts	8-47-8 to 8-47-131	Map and courtesy lamp	1-14-4 to 1-14-6
Lid, deck	23-19-8 to 23-19-188	Master cylinder	8-42-2 to 8-42-29
Lift, window, manual	23-39-2 to 23-39-53	Master cylinder boot	5-39-1 to 5-39-24
Lift, window (electric window)	23-41-4 to 23-41-286	Master cylinder brake tube	5-40-1 to 5-52-3
Light, emergency flasher	1-06-1 to 1-06-11	Master cylinder piston	5-52-62 to 5-44-8
Light, underhood	1-13-10	Master cylinder piston push rod	5-44-9 to 5-47-4
Lighter, cigar	1-12-1 to 8-20-3	Master cylinder piston return spring	5-47-8 to 5-46-1
Liner, body	8-20-16 to 23-31-33	Mat, floor	23-20-8 to 23-20-65
Lining, brake shoe	23-31-205 to 5-03-0	Material, seat cloth trim	23-114-2 to 23-114-15
Lining and shoe, wheel brake	5-03-23 to 5-03-1	Medallion, hood	15-06-0
Listing and headlining	5-03-23 to 23-86-3	Medallion, radiator grille	7-17-2 to 7-17-19
Lock, hood	23-86-37 to 15-11-3	Mirror	1-76-1 to 1-76-27
Lock, safe-T-matic door	15-11-75 to 23-13-0	Motor, starting	23-21-3 to 23-21-74
Lock, transmission parking	4-10-1 to 4-10-28	Moulding, fender	8-52-4 to 8-52-389
Lock cylinder, ignition	8-35-4 to 8-35-115	Moulding, garnish	12-15-17 to 12-15-30
Lock cylinder and key	23-17-2 to 23-17-72	Moulding, hood	23-22-7 to 23-22-160
Low oil pressure switch	8-53-327	Moulding, outside finish	15-25-0 to 23-23-2
Luggage compartment front lining panel	23-96-3 to 23-96-41	Moulding, trim finish	23-23-85 to 23-26-16
M		Moulding, hood	15-25-0
Manifold	9-48-6 to 9-48-158	Moulding, outside finish	23-23-2
Manifold gasket	9-50-1 to 9-50-16	Moulding, trim finish	23-23-85
Manifold heat control valve	9-59-13 to 9-59-15	Mounting parts, license	23-26-87 to 8-47-8
Manifold heat control valve stop	9-62-1	Muffler	8-47-131
Manifold heat control valve thermostat	9-58-1 to 9-58-14	Muffler support	11-01-1 to 11-02-1
		Muffler support	11-02-1 to 11-02-13
		N	
		Name plate, fender	12-15-17 to 12-15-30
		Name plate, hood	15-06-0
		Nipple, water pump	7-48-22

PART NAME	CODE	PART NAME	CODE
O		Panel, body	23-34-10 to 23-34-354
Oil filter	10-26-5 to 10-26-65	Panel, cowl trim	23-91-6
Oil gauge	8-37-316	Panel, door trim	23-92-5 to 23-92-25
Oil level indicator	10-03-4 to 10-03-10	Panel, hood top	15-03-3 to 15-03-67
Oil pan	10-24-1 to 10-24-38	Panel, instrument	23-33-6 to 23-33-240
Oil pressure relief valve	10-22-11 to 10-22-41	Panel, luggage compartment front lining	23-96-3 to 23-96-41
Oil pump	10-07-2 to 10-07-14	Panel, rear quarter trim	23-101-3 to 23-101-26
Oil pump drive gear	10-10-1	Panel, rear upper pillar	23-99-38
Oil pump drive shaft	10-09-1 to 10-09-7	Panel, shelf trim	23-102-3
Oil pump rotor	10-14-18	Panel, visor trim	23-103-3 to 23-103-48
Oil pump suction pipe	10-18-4	Parking brake cable	4-23-1 to 4-23-46
Oil seal, drive shaft	3-35-14	Parking brake lever (foot operated) . .	4-25-1 to 4-25-34
Oil strainer	10-23-7	Parking brake lever (hand operated) . .	4-08-1 to 4-08-36
Ornament, fender	12-15-17 to 12-15-30	Parking brake lever return spring . . .	4-19-1
Ornament, radiator grille	7-17-2 to 7-17-19	Parking brake operating lever	4-26-1 to 4-26-27
Output, manual transmission	21-05-2	Parking brake signal lamp	1-09-1 8-31-2 to 8-31-18
Outside finish moulding	23-23-2 to 23-23-85	Parking brake signal lamp switch . . .	8-31-10
P		Parking lamp	8-50-82 to 8-50-354
Package, automatic transmission . . .	21-01-3	Pedal, accelerator	14-01-1 to 14-01-31
Package, belt	1-67-1 to 1-67-9	Pedal, clutch	6-38-1 to 6-38-23
Package, manual transmission	2-01-3	Pedal and bushing, brake	5-27-1 to 5-27-21
Package, wheel cylinder repair	5-63-1 to 5-63-3	Pillar, body	23-36-5 to 23-36-142
Pad, body	23-31-33 to 23-31-205	Pilot, automatic	14-02-2 to 14-02-79
Pad, brake pedal	5-28-8	Pin, piston	9-36-5 to 9-36-7
Pad, clutch pedal	6-39-2	Pinion, automatic transmission	21-85-5 to 21-85-61
Pad, instrument panel trim	23-84-3 to 23-84-31	speedometer	3-07-1 to 3-07-2
Pan, automatic transmission oil	21-119-3 to 21-119-25	Pinion, differential	
Pan, body	23-32-15 to 23-32-115		
Pan, clutch housing	6-10-2 to 6-10-31		
Pan, oil	10-24-1 to 10-24-38		

PART NAME	CODE	PART NAME	CODE
Pinion, manual transmission main drive	21-09-2 to 21-09-33	Propeller shaft center bearing	16-16-1 to 16-16-47
Pinion and gear, manual transmission speedometer	21-85-4 to 21-85-61	Propeller shaft center bearing housing insulator	16-17-1 16-20-1
Pipe, exhaust	11-05-1 to 11-05-12	Propeller shaft flange	16-20-1 to 16-20-8
Pipe, oil pump suction	10-18-4	Propeller shaft sliding yoke	6-14-1 to 6-14-9
Pipe, tail	11-09-3	Propeller shaft spline	6-14-1 to 6-14-9
Piston, master cylinder	5-44-8 to 5-44-9	Pulley, fan and alternator idler	7-04-1 to 7-04-16
Piston, power steering gear	19-56-6 to 19-56-90	Pulley, fan drive and driven	7-06-1 to 7-06-14
Piston, w/pin	9-34-5	Pump, automatic transmission oil	21-118-6 to 21-118-57
Piston, wheel cylinder	5-70-1	Pump, fuel	14-73-1
Piston pin	9-36-5 to 9-36-7	Pump, oil	10-07-2 to 10-07-14
Piston ring set	9-35-1	Pump, power steering oil	19-54-2 to 19-54-258
Plate, clutch cover and pressure	6-14-1 to 6-14-10	Pump, water	7-42-1 to 7-42-4
Plug, body	23-32-15 to 23-32-115	Push button blower motor switch	1-48-770 to 1-48-942
Plug, spark	8-36-114	Push button vacuum switch	24-24-150
Power brake air cleaner	5-113-17 to 5-113-23	Push nut, front seat back to cushion	23-115-4 to 23-115-10
Power brake hose clamp	5-112-1		
Power brake hose connector	5-110-18	Q	
Power brake power unit	5-100-1 to 5-100-304	Quarter lamp	8-11-5 to 8-11-24
Power brake vacuum check valve	5-105-1 to 5-105-10	Quarter window opening weathercord	23-113-25 to 23-113-87
Power brake vacuum hose	5-111-17		
Power brake vacuum tank	5-102-2 to 5-102-11	R	
Power steering gear hose	19-58-7 to 19-58-31	Rack, roof luggage	1-74-1
Power steering gear piston	19-56-6 to 19-56-90	Rack, roof rail and luggage	23-40-82 to 23-40-190
Power steering gear valve	19-57-1 to 19-57-64	Radiator core	7-11-3
Power steering oil pump	19-54-2 to 19-54-258	Radiator core fan shroud	7-08-2 to 7-08-20
Power unit, power brake	5-100-1 to 5-100-304	Radiator cross bar	7-33-1 to 7-33-18
Power unit mounting bracket	5-101-1 to 5-101-6	Radiator drain cock	7-13-2
Propeller shaft	16-02-1 to 16-02-5	Radiator dust shield	7-31-10 to 7-31-45
		Radiator filler cap	7-12-1

PART NAME	CODE	PART NAME	CODE
Radiator grille	7-16-11	Rear window defogger switch	1-47-7
	to	Rear window defogger switch package	1-47-7
	7-16-118	Receiver, ash	23-02-1
Radiator grille medallion	7-10-2		to
	to		23-02-150
	7-10-19	Receiver drier	24-26-20
Radiator grille ornament	7-10-2		to
	to		24-26-100
	7-10-19	Reinforcement body	23-07-169
Radiator hose	7-14-4	Repair package, wheel cylinder	5-63-1
	to		to
	7-14-31		5-63-3
Radiator stone deflector	7-35-2	Retainer, folding top header top material	23-112-4
	to		to
	7-35-20		23-112-160
Radiator yoke	7-26-2	Rocker, valve	9-43-1
	to		to
	7-26-37		9-43-26
Radio	1-87-1	Rod, accelerator pedal to accelerator shaft	14-07-1
	to		to
	1-87-404		14-07-15
Radio antenna	1-88-1	Rod, clutch pedal	6-50-1
	to		to
	1-88-170		6-50-10
Radio foot control switch	1-87-5	Rod, clutch release	6-24-1
Radio power antenna switch	1-88-205		to
Rail, manual transmission gearshift	21-34-42		6-24-14
	to	Rod, connecting	9-31-4
	21-34-53		to
Rear axle control strut	3-01-25		9-31-10
	to	Rod, fuel pump push	14-77-17
	3-01-34	Rod, manual transmission gearshift	21-30-2
Rear axle differential and carrier	3-03-1		to
	to		21-30-438
	3-03-36	Rod, master cylinder piston push	5-47-4
Rear axle housing	3-02-1		to
	to		5-47-8
	3-02-20	Rod, power steering gearshift	19-46-3
Rear bumper face bar	13-66-3		to
	to		19-46-55
	13-66-153	Rod, power steering gearshift control	19-48-1
Rear door pull-to handle	23-81-3		to
Rear quarter trim panel	23-101-3		19-48-52
	to	Rod, standard gearshift	19-46-8
	23-101-26		to
Rear seat back	23-109-3		19-46-55
	to	Rod, standard gearshift control	19-48-1
	23-109-40		to
Rear speaker switch	1-87-289		19-48-52
Rear spring	17-11-3	Rod, steering knuckle, tie	2-07-1
	to		to
	17-11-7		2-07-41
Rear spring bumper	17-19-3	Rod, valve push	9-42-1
	to	Rod, wheel cylinder piston push	5-12-1
	17-19-20	Roller and bushing, universal cross	16-10-1
Rear spring center bolt	17-14-10		to
Rear spring clip	17-15-1		16-10-3
	to	Roof luggage rack	1-74-1
	17-15-30	Roof rail and luggage rack	23-40-82
Rear spring leaf	17-12-4		to
	to		23-40-190
	17-12-12	Rotor, oil pump	10-14-18
Rear spring shackle	17-16-1	Run, window glass	23-42-13
	to		to
	17-16-8		23-42-59
Rear upper pillar panel	23-99-38		
Rear window defogger	1-47-1		
	to		
	1-47-19		

PART NAME	CODE	PART NAME	CODE
S			
Safe-T-matic	23-13-0	Shaft, automatic transmission torque converter reaction	21-129-5 to
Safety seat belt	1-67-1		21-129-24
	to	Shaft, brake pedal	5-29-1
	1-67-18	Shaft, clutch pedal	6-43-1
Screw, front seat center arm	23-115-10		to
Screw, wheel cylinder bleeder	5-67-1		6-43-14
Seal, body	23-31-33	Shaft, clutch torque	6-52-1
	to		to
	23-31-205		6-52-17
Seal, crankshaft rear bearing oil	9-11-1	Shaft, differential pinion	3-08-1
	to		to
	9-11-7		3-08-2
Seal, drive shaft oil	3-35-14	Shaft, drive	3-32-1
Seal, fender	12-02-5		to
	to		3-32-9
	12-02-12	Shaft, manual transmission main	21-16-3
Seal, manual transmission main shaft bearing oil	21-22-2	Shaft, manual transmission reverse idler gear	21-12-1
Seal, water pump	7-46-1		to
Seat, front	23-45-29		21-12-2
	to	Shaft, oil pump drive	10-09-1
	23-45-52		to
Seat, second and third	23-48-6		10-09-7
	to	Shaft, propeller	16-02-1
	23-48-189		to
Seat cloth trim material	23-114-2		16-02-5
	to	Shaft, sway eliminator	17-29-5
	23-114-15		to
Second and third seat	23-48-6		17-29-21
	to	Shaft and housing, automatic transmission speedometer cable	21-84-1
	23-48-189		to
Second seat back hinge cover	23-70-5		21-84-28
	to	Shaft and housing, manual transmission speedometer cable	21-84-1
	23-70-6		to
Service parts and carburetor assemblies	14-30-2		21-84-28
	14-30-4	Shaft and impeller, water pump	7-45-31
	14-30-7	Shaft and roller tooth, power steering gear	19-19-1
	14-30-8		to
	14-30-27		19-19-72
	14-30-28	Shaft and roller tooth, standard steering gear	19-19-4
	14-35-1		to
	14-35-6		19-19-70
	14-35-8	Shelf trim panel	23-102-3
	14-35-33	Shield, battery heat	13-35-1
	14-35-39	Shield, front fender	12-04-4
	14-39-45		to
	14-41-3		12-04-25
	14-43-5	Shield, radiator dust	7-31-10
Servos, automatic transmission	21-137-5		to
	to		7-31-45
	21-137-205	Shim, fender	12-02-5
Set, automatic transmission	21-01-1		to
Set, drive gear and pinion	3-19-1	Shock absorber	12-02-12
Set, manual transmission	21-01-3		17-23-3
Set, piston ring	9-35-1		to
Shackle, rear spring	17-16-1		17-23-57
	to	Shock absorber bracket	17-24-3
	17-16-8		to
Shaft, accelerator	14-11-1		17-24-28
	to	Shock absorber (load leveler)	1-07-1
	14-11-48		
Shaft, automatic transmission	21-05-1		
	to		
	21-05-35		
Shaft, automatic transmission input	21-129-5		
	to		
	21-129-24		

PART NAME	CODE	PART NAME	CODE
Shoe and lining, wheel brake	5-03-1 to 5-03-23	Steering gear arm and idler arm, power steering	19-27-2 to 19-27-55
Shroud, radiator	7-08-2 to 7-08-20	Steering gear arm and idler arm, standard	19-27-2 to 19-27-55
Signal, hand brake	1-09-1	Steering gear column jacket, power steering	19-14-1 to 19-14-99
Sill, body side	23-51-3 to 23-51-48	Steering gear column jacket, standard	19-14-1 to 19-14-68
Spare wheel carrier	22-20-29 to 22-20-89	Steering gear housing, power steering	19-02-4 to 19-02-55
Spark plug	8-36-114	Steering gear housing, standard	19-04-1 to 19-04-13
Speedometer	8-37-371 to 8-37-372	Steering gear shaft and roller tooth, power steering	19-19-1 to 19-19-72
Speedometer cable, shaft and housing	21-84-1 to 21-84-28	Steering gear shaft and roller tooth, standard	19-19-4 to 19-19-70
Spline, propeller shaft	16-14-1 to 16-14-9	Steering gear tube and coupling, power steering	19-15-4 to 19-15-118
Spotlight	1-108-1 to 1-108-49	Steering gear tube and coupling, standard	19-15-4 to 19-15-111
Spotlight switch	1-108-28	Steering knuckle	2-03-3
Spring, accelerator pedal return	14-06-1 to 14-06-10	Steering knuckle tie rod	2-07-1 to 2-07-41
Spring, brake pedal return	5-34-1 to 5-34-6	Steering linkage knuckle arm	2-05-4
Spring, clutch pressure	6-16-1	Steering wheel, power steering	19-30-4 to 19-30-18
Spring, clutch release bearing return	6-20-14	Steering wheel, standard	19-30-4 to 19-30-18
Spring, clutch release center	6-35-1 to 6-35-17	Stop, brake pedal	5-30-12
Spring, clutch release fork return	6-27-5 to 6-27-10	Stop, manifold heat control valve	9-62-1
Spring, master cylinder piston return	5-46-1	Stop lamp	8-58-60
Spring, parking brake lever return	4-19-1	Strainer, automatic 3 speed transmission oil pump	21-117-1
Spring, rear	17-11-3 to 17-11-7	Strainer, oil	10-23-7
Spring, wheel brake shoe hold-down	5-26-1 to 5-26-5	Strap, assist	23-77-3 to 23-77-17
Sprocket, camshaft	9-17-5	Strap, battery hold-down	13-34-3 to 13-34-12
Sprocket, crankshaft	9-08-5	Striker, body	23-08-12 to 23-08-75
Starting motor	8-52-4 to 8-52-389	Striker, hood lock	15-13-2
Steering column bracket, power steering	19-31-1 to 19-31-15	Strip, folding top bow tacking	23-111-10 to 23-111-37
Steering column bracket, standard	19-31-1 to 19-31-15	Strut, rear axle control	3-01-25 to 3-01-34
Steering gear, power steering	19-01-4 to 19-01-62		
Steering gear, standard	19-01-3 to 19-01-24		

PART NAME	CODE	PART NAME	CODE
Stud, battery hold-down	13-36-5	Switch, stop lamp mechanical	8-58-60
Stud, throttle linkage ball	14-13-1	Switch, tailgate electric window lift	23-54-167
	to	Switch, thermostat	24-28-241
	14-13-5	Switch, trunk compartment lamp	1-30-3
Stud and gasket exhaust pipe flange	11-06-2	Switch, trunk lamp	8-13-2
	to	Switch, turn signal	8-50-82
	11-06-10	Switch, underhood light	1-13-10
Sub-sidemember, frame	13-04-20	Switch, windshield washer	1-82-14
Support, engine front	9-64-5	Switch and cable, turn signal electric	8-50-82
	to	Switch and lamp, dome	8-05-6
	9-64-24		to
Support, fender	12-07-1		8-05-40
Support, fuel tank	14-88-8	Switch and lamp, glove box	8-38-23
	to	Switch package, automatic	
	14-88-36	transmission	21-113-24
Support, muffler	11-02-1	Switch package, automatic	
	to	transmission neutral starter	21-113-24
	11-02-13	Switch package, rear window defogger	1-47-7
Support, tail pipe	11-10-3	Switches	8-53-150
	to		to
	11-10-43		8-53-327
Support, wheel brake	5-13-1		
	to	T	
	5-13-35	Tachometer, console	1-36-1
Support and clamp, exhaust pipe	11-08-5	Tail, stop and directional signal lamp	8-55-1
	to		to
	11-08-24		8-55-300
Sway, eliminator shaft	17-29-5	Tail pipe	11-09-3
	to	Tail pipe support	11-10-3
	17-29-21		to
Switch, automatic door lamp	8-12-2		11-10-43
	to	Tailgate	23-54-1
	8-12-17		to
Switch, automatic transmission			23-54-208
neutral starter	21-113-24	Tailgate electric window lift switch	23-54-167
	to	Tailgate window screen	1-08-1
	21-113-29	Tank, fuel	14-86-1
Switch, auxiliary vacuum	24-24-150		to
Switch, back-up lamp	8-56-2		14-86-85
Switch, blower motor	1-48-770	Tank, power brake vacuum	5-102-2
	24-24-5		to
Switch, blower motor, w/cable	24-24-5		5-102-11
Switch, brake	14-02-32	Tappet, valve	9-41-1
Switch, courtesy lamp	8-11-6		to
Switch, dome lamp	8-05-14		9-41-4
Switch, electric door lock	23-18-103	Tee, brake tube	5-58-1
Switch, electric seat adjuster	23-47-446		to
Switch, electric window lift	23-41-170		5-58-5
Switch, electric window lift and		Tee, carburetor fuel line	14-85-31
vent wing	23-41-170		to
Switch, electric window lift safety	23-41-170		14-85-33
Switch, emergency flasher light	1-06-3	Terminal block	8-21-1
Switch, folding top lift	23-58-532	Temperature gauge	8-37-176
Switch, foot dimmer	8-53-150	Thermostat	7-41-4
Switch, horn	8-33-90	Thermostat, manifold heat control	
Switch, ignition and starter	8-35-59	valve	9-5
Switch, instrument lamp	8-53-270		to
Switch, low oil pressure	8-53-327		9-58
Switch, map lamp	8-42-25	Thermostat switch	24-28-24
Switch, parking brake indicator lamp	8-31-10	Throttle control bell crank	14-14-1
Switch, parking brake signal	8-31-10		to
Switch, push button blower motor	1-48-770		14-14-49
Switch, push button vacuum	24-24-150	Throttle control cable	14-25-5
Switch, radio foot control	1-87-5		to
Switch, rear speaker	1-87-289		14-25-17
Switch, rear window defogger	1-47-7	Throttle control mounting bracket	14-26-2
Switch, socket and cable, trunk lamp	8-13-1		to
Switch, spotlight	1-108-28		14-26-6
Switch, starter and ignition	8-35-4		

1964 PASSENGER CAR PARTS CATALOG

PART NAME	CODE	PART NAME	CODE
Throttle linkage ball stud	14-13-1 to 14-13-5	Transmission gearshift rail, manual	21-34-42 to 21-34-53
Timing chain	9-20-1	Transmission gearshift rod, manual	21-30-2 to 21-30-438
Top, folding	23-58-3 to 23-58-607	Transmission governor, automatic	21-138-2 to 21-138-38
Torque convertor	9-46-4 to 9-46-228	Transmission input shaft, automatic	21-129-5 to 21-129-24
Torsion parts, front suspension	2-14-1 to 2-14-25	Transmission main drive pinion, manual	21-09-2 to 21-09-33
Transmission, automatic	21-02-1	Transmission main shaft bearing, manual	21-19-2 to 21-19-15
Transmission, manual	21-02-1 to 21-02-6	Transmission main shaft bearing oil seal, manual	21-22-2
Transmission bands, automatic	21-136-5 to 21-136-237	Transmission, main shaft pilot bearing, manual	21-17-2 to 21-17-9
Transmission case, automatic	21-03-1 to 21-03-40	Transmission, neutral starter switch, automatic	21-113-24 to 21-113-29
Transmission case, manual	21-03-1 to 21-03-25	Transmission oil filter, automatic	21-117-1 to 21-117-5
Transmission case cover, manual	21-29-3 to 21-29-33	Transmission oil pan, automatic	21-119-3 to 21-119-25
Transmission case extension, automatic	21-04-1 to 21-04-18	Transmission oil pump, automatic	21-118-6 to 21-118-57
Transmission case extension, manual	21-04-1 to 21-04-14	Transmission output, manual	21-05-2
Transmission case housing, manual	21-29-3 to 21-29-33	Transmission package, automatic	21-01-3
Transmission clutch, automatic	21-133-5 to 21-133-65	Transmission package, manual	21-01-3
Transmission clutch gear, manual	21-14-1 to 21-14-21	Transmission parking lock	4-10-1 to 4-10-28
Transmission control lever, automatic	21-142-12 to 21-142-21	Transmission remote control gearshift, manual	21-42-11 to 21-42-43
Transmission countershaft, manual	21-24-2 to 21-24-22	Transmission reverse idler gear, manual	21-11-1 to 21-11-9
Transmission countershaft bearing, manual	21-25-2 to 21-25-6	Transmission reverse idler gear shaft, manual	21-12-1 to 21-12-2
Transmission countershaft gear, manual	21-15-2 to 21-15-33	Transmission servos, automatic	21-137-5 to 21-137-205
Transmission gear, automatic	21-10-3 to 21-10-31	Transmission set, automatic	21-01-1
Transmission gearshift button and cable, automatic	21-30-6 to 21-30-408	Transmission set, manual	21-01-3
Transmission gearshift fork, manual	21-39-3	Transmission speedometer cable shaft and housing, automatic	21-84-1 to 21-84-28
Transmission gearshift lever, manual	21-30-2 to 21-30-438	Transmission speedometer cable shaft and housing, manual	21-84-1 to 21-84-28

PART NAME	CODE	PART NAME	CODE
Transmission speedometer pinion, automatic	21-85-5 to 21-85-61	Universal joint centering button	16-06-1 to 16-06-3
Transmission speedometer pinion and gear, manual	21-85-4 to 21-85-61	Universal joint cover	16-07-3 to 16-07-4
Transmission valve body and valves, automatic	21-139-4 to 21-139-193	Universal joint cross	16-08-6 to 16-08-7
Transmission torque converter reaction shaft, automatic	21-129-5 to 21-129-24	V	
Tray, battery support	13-33-61 to 13-33-69	Valve, exhaust	9-39-6 to 9-39-21
Trim finish moulding	23-26-16 to 23-26-87	Valve, intake	9-39-1 to 9-39-5
Trough, drain	23-59-25 to 23-59-63	Valve, manifold heat control	9-59-13 to 9-59-15
Truck lamp	8-13-3 to 8-13-4	Valve, oil pressure relief	10-22-11 to 10-22-41
Tube, fuel line	14-89-2	Valve, power brake vacuum check	5-105-1 to 5-105-10
Tube, master cylinder brake	5-52-3 to 5-52-62	Valve, power steering gear	19-57-1 to 19-57-64
Tube, power steering gearshift	19-46-3 to 19-46-55	Valve body and valves, automatic transmission	21-139-4 to 21-139-193
Tube, standard gearshift	19-46-8 to 19-46-55	Valve push rod	9-42-1
Tube and coupling, power steering gear	19-15-4 to 19-15-118	Valve rocker	9-43-1 to 9-43-26
Tube and coupling, standard steering gear	19-15-4 to 19-15-111	Valve tappet	9-41-1 to 9-41-4
Tubing and cover, brake	5-53-3 to 5-53-6	Valves and valve body, automatic transmission	21-139-4 to 21-139-193
Tufting button	23-78-2	Vent, cowl	23-61-39 to 23-61-116
Turn signal lamp	8-50-82 to 8-50-354	Vent system, crankcase closed	10-02-40 to 10-02-67
U		Vent wing	23-64-4 to 23-64-314
Underhood light	1-13-1	Visor, arm and bracket	23-103-10 to 23-103-48
Underhood light switch	1-13-10	Visor, bracket and arm	23-103-10 to 23-103-48
Unit, fan fluid drive	7-07-1	Visor trim panel	23-103-3 to 23-103-48
Unit, power brake power	5-100-1 to 5-100-304		
Universal cross roller and bushing	16-10-1 to 16-10-3		
Universal joint	16-03-1 to 16-03-20		
Universal joint body	16-04-1		

PART NAME	CODE	PART NAME	CODE
W			
Washer, windshield	1-82-2 to 1-82-49	Wheel cylinder piston cup	5-71-1 to 5-71-2
Water pump	7-42-1 to 7-42-4	Wheel cylinder piston push rod	5-12-1
Water pump elbow	7-48-22	Wheel cylinder repair package	5-63-1 to 5-63-3
Water pump gasket	7-44-3 to 7-44-4	Wheel hub	22-05-14 to 22-05-24
Water pump housing	7-43-1 to 7-43-8	Window	23-64-4 to 23-64-314
Water pump nipple	7-48-22	Window glass run	23-42-13 to 23-42-59
Water pump seal	7-46-1	Window lift (electric window)	23-41-4 to 23-41-286
Water pump shaft and impeller	7-45-31	Window lift (manual)	23-39-2 to 23-39-53
Weathercord	23-113-2 to 23-113-87	Windshield	23-66-65 to 23-66-239
Weatherstrip	23-63-14 to 23-63-183	Windshield washer	1-82-2 to 1-82-49
Weight, wheel balance	22-09-1	Windshield washer switch	1-82-14
Wheel	22-01-5 to 22-01-58	Windshield wiper	23-67-2 to 23-67-204
Wheel, power steering	19-30-4 to 19-30-18	Wing, vent	23-64-4 to 23-64-314
Wheel, standard steering	19-30-4 to 19-30-18	Wiper, windshield	23-67-2 to 23-67-204
Wheel balance weight	22-09-1	Wiring, body and chassis	8-15-2 to 8-15-53
Wheel brake adjuster	5-20-1 to 5-20-20	Wiring, instrument panel	8-19-2 to 8-19-87
Wheel brake cylinder	5-64-1 to 5-64-2	Y	
Wheel brake shoe and lining	5-03-1 to 5-03-23	Yoke, propeller shaft sliding	6-14-1 to 6-14-9
Wheel brake shoe hold-down spring	5-26-1 to 5-26-5	Yoke, radiator	7-26-2 to 7-26-37
Wheel brake support	5-13-1 to 5-13-35		
Wheel cylinder bleeder screw	5-67-1		
Wheel cylinder boot	5-69-1		
Wheel cylinder piston	5-70-1		

NOTES

PART NAME	CODE	PART NAME	CODE
-----------	------	-----------	------

ALPHABETICAL INDEX

A

Absorber, shock	17-23-3 to 17-23-57	Arm, standard steering gear	19-27-2 to 19-27-55
Absorber, shock (load leveler)	1-07-1	Arm, standard steering gear idler	19-27-2 to 19-27-55
Accelerator pedal	14-01-1 to 14-01-30	Arm, steering linkage knuckle	2-05-4
Accelerator pedal return spring	14-06-1 to 14-06-10	Arm and bracket, visor	23-103-10 to 23-103-48
Accelerator pedal to accelerator shaft rod	14-07-1 to 14-07-15	Arm rest, front door	23-76-3 to 23-76-86
Accelerator shaft	14-11-1 to 14-11-48	Ash receiver	23-02-1 to 23-02-150
Accessories	1-04-0 thru 1-108-0	Assist strap	23-77-3 to 23-77-17
Actuator	24-29-1 to 24-29-15	Automatic choke to carburetor rod clip	14-65-4
Adjuster, front seat	23-47-6 to 23-47-462	Automatic door lamp switch	8-12-2 to 8-12-17
Adjuster, wheel brake	5-20-1 to 5-20-20	Automatic headlamp dimmer	1-04-4 to 1-04-18
Air cleaner, carburetor	14-29-2 to 14-29-44	Automatic pilot	1-26-1 to 14-02-1
Air cleaner, crankcase vent inlet	10-01-40	Automatic 3 speed transmission	14-02-79 to 21-02-1
Air cleaner, power brake	5-113-17	Automatic 3 speed transmission band	21-02-8 to 21-136-5
Air conditioning	24-01-1 to 24-01-87	Automatic 3 speed transmission case	21-136-237 to 21-03-1
Air conditioning control	24-24-5 to 24-24-167	Automatic 3 speed transmission case extension	21-03-46 to 21-04-1
Air intake	23-61-39 to 23-61-116	Automatic 3 speed transmission clutch	21-04-12 to 21-133-5
Alternator	8-28-3 to 8-28-292	Automatic 3 speed transmission control lever	21-133-65 to 21-142-12
Alternator component parts	8-29-17 to 8-29-208	Automatic 3 speed transmission front and rear planet pinion carrier and components	21-142-21 to 21-134-5
Ammeter	8-37-1	Automatic 3 speed transmission gear- shift button and cable	21-134-45 to 21-30-6
Antenna, radio	1-88-1 to 1-88-205	Automatic 3 speed transmission governor	21-30-408 to 21-138-2
Anti-squeak, body	23-31-33 to 23-31-205		21-138-38
Arm, front wheel lower control	2-10-6 to 2-10-76		
Arm, power steering gear	19-27-2 to 19-27-55		
Arm, power steering gear idler	19-27-2 to 19-27-55		

1964 PASSENGER CAR PARTS CATALOG

ALPHABETICAL INDEX

PART NAME	CODE	PART NAME	CODE
Automatic 3 speed transmission input shaft	21-129-5 to 21-129-24	Bar, front suspension torsion	2-14-0 to 2-14-3
Automatic 3 speed transmission neutral started switch	21-113-24 to 21-113-29	Bar, radiator cross	7-33-1 to 7-33-12
Automatic 3 speed transmission neutral starter switch package	21-113-24	Bar, rear bumper face	13-66-3 to 13-66-153
Automatic 3 speed transmission oil pan	21-119-3 to 21-119-25	Battery and Cable	8-01-4 to 8-01-23
Automatic 3 speed transmission oil pump	21-118-6 to 21-118-57	Battery heat shield	13-35-1
Automatic 3 speed transmission oil pump strainer	21-117-1	Battery hold-down strap	13-34-3
Automatic 3 speed transmission output shaft	21-05-1 to 21-05-35	Battery hold-down stud	13-36-5
Automatic 3 speed transmission package	21-01-3	Battery support tray	13-33-61 to 13-33-68
Automatic 3 speed transmission servos	21-137-5 to 21-137-205	Bearing, camshaft	9-16-6 to 9-16-17
Automatic 3 speed transmission set	21-01-3	Bearing, clutch release	6-19-2 to 6-19-3
Automatic 3 speed transmission speedometer cable shaft and housing	21-84-1 to 21-84-28	Bearing, differential	3-11-1 to 3-11-14
Automatic 3 speed transmission speedometer pinion	21-85-5 to 21-85-61	Bearing, drive pinion	3-22-24 to 3-22-45
Automatic 3 speed transmission torque converter reaction shaft	21-129-5 to 21-129-24	Bearing, drive shaft	3-33-1 to 3-33-8
Automatic 3 speed transmission valve body and valves	21-139-4 to 21-139-193	Bearing, front wheel	22-06-1 to 22-06-18
Auxiliary vacuum switch	24-24-150	Bearing, manual transmission countershaft	21-25-2 to 21-25-6
Axle, housing rear	3-02-0	Bearing, manual transmission main shaft	21-19-2 to 21-19-15
B		Bearing, manual transmission main shaft pilot	21-17-2 to 21-17-9
Back, rear seat	23-109-3 to 23-109-40	Bearing, propeller shaft center	16-16-1 to 16-16-47
Back-up lamp	1-10-1 8-56-1 to 8-56-74	Bearing, standard transmission countershaft	21-25-2 to 21-25-6
Back-up lamp switch	8-56-2	Bearing, standard transmission main shaft	21-19-2 to 21-19-16
Band, automatic 3 speed transmission	21-136-5 to 21-136-237	Bearing, standard transmission main shaft pilot	21-17-2 to 21-17-9
Bar, belt	23-51-3 to 23-51-45	Bearing package, connecting rod	9-32-2
Bar, front bumper face	13-64-3 to 13-64-149	Bearing package, crankshaft	9-09-2
		Belt, fan and related drive	7-03-1
		Belt, safety seat	1-67-1 to 1-67-15

PART NAME	CODE	PART NAME	CODE
Belt bar	23-51-3	Boot, master cylinder	5-40-1
	to	Boot, wheel cylinder	5-69-1
	23-51-45	Box, glove	23-06-4
Belt package	1-67-1	to	to
	to		23-06-53
	1-67-9	Brace, fender	12-07-1
Block, cylinder	9-02-5	to	to
	to		12-07-3
	9-02-17	Bracket, body	23-07-168
Block, rear spring silent	17-17-3	to	to
	to		23-07-169
	17-17-5	Bracket, brake pedal	5-31-11
Blower motor switch	24-24-5	to	to
Blower motor switch w/cable	24-24-5		5-31-15
Board, floor	23-04-117	Bracket, brake tube	5-57-2
	to	Bracket, fender	12-06-3
	23-04-250	to	to
Body, universal joint	16-04-1		12-06-6
Body anti-squeak	23-31-33	Bracket, fender pillar support and cowl	12-05-2
	to	Bracket, frame engine rear support crossmember	9-70-9
	23-31-205	Bracket, power unit mounting	5-101-1
Body bracket	23-07-168	Bracket, shock absorber	17-24-3
	to	to	to
	23-07-169		17-24-28
Body bumper	23-08-12	Bracket, throttle control mounting	14-26-2
	to	to	to
	23-08-76		14-26-6
	23-32-15	Bracket and arm, visor	23-103-10
	to	to	to
	23-32-115		23-103-48
Body insulator	23-31-33	Brake, power	1-42-1
	to	Brake, support	5-13-0
	23-31-205	to	to
Body liner	23-31-33		5-13-85
	to	Brake drum	22-04-2
	23-31-205	to	to
Body pad	23-31-33		22-04-14
	to	Brake flexible hose	5-62-1
	23-31-205	to	to
Body pan	23-32-15		5-62-20
	to	Brake fluid	5-01-1
	23-32-115	Brake pedal and bushing	5-27-1
Body panel	23-34-10	to	to
	to		5-27-21
	23-34-354	Brake pedal bracket	5-31-11
Body pillar	23-36-5	to	to
	to		5-31-15
	23-36-142	Brake pedal pad	5-28-8
Body plug	23-32-15	Brake pedal return spring	5-34-1
	to	to	to
	23-32-115		5-34-6
Body reinforcement	23-07-168	Brake pedal shaft	5-29-1
	to	Brake pedal stop	5-30-12
	23-07-169	Brake self adjusting package	1-44-1
Body seal	23-31-33	Brake shoe guide	5-25-9
	to	Brake switch	14-02-32
	23-31-205	Brake tube bracket	5-57-2
Body side sill	23-51-3	Brake tube clip	5-56-2
	to	Brake tube tee	5-58-1
	23-51-45	to	to
Body striker	23-08-12		5-58-2
	to	Brake tubing and cover	5-53-3
	23-08-78	to	to
Bolt, drive gear	3-20-1		5-53-4
Bolt, rear spring center	17-14-10	Bulb	8-44-1
Boot, folding top dust	23-112-12		
	to		
	23-112-153		

PART NAME	CODE	PART NAME	CODE
Bumper, body	23-08-12 to 23-08-76 23-32-15 to 23-32-115	Cap, radiator filler	7-12-1
Bumper, hood	15-09-4	Carburetor	14-30-1
Bumper, rear spring	17-19-3 to 17-19-20	Carburetor air cleaner	14-29-2 to 14-29-44
Bumper guard	1-01-1 13-68-6 to 13-68-18	Carburetor anti-stall diaphragm	14-50-25
Bumper jack	13-72-1 to 13-72-4	Carburetor assemblies and service parts	14-30-2 14-30-4 14-30-7 14-30-8 14-30-27 14-30-28 14-35-1 14-35-6 14-35-8 14-35-33 14-35-39 14-39-45 14-41-3 14-43-5
Bushing and pedal, brake	5-27-1 to 5-27-21	Carburetor fuel line tee	14-85-31
Bushing and roller, universal cross	16-10-1 to 16-10-3	Carpet, front floor	23-79-3 to 23-79-79
Button, tufting	23-78-2	Carrier, spare wheel	22-20-29 to 22-20-89
Button, universal joint centering	16-06-1 to 16-06-3	Carrier and components, automatic 3 speed transmission front and rear planet pinion	21-134-5 to 21-134-45
Button and cable, automatic 3 speed transmission gearshift	21-30-6 to 21-30-408	Case, automatic 3 speed transmission	21-03-1 to 21-03-40
C		Case, differential	3-04-6 to 3-04-10
Cable, choke control	14-63-1 to 14-63-24	Case, manual transmission	21-03-1 to 21-03-25
Cable, fast idle	14-24-1 to 14-24-11	Case, standard transmission	21-03-1 to 21-03-25
Cable, parking brake	4-23-1 to 4-23-46	Center pillar trim cover	23-99-4 to 23-99-38
Cable, speedometer	21-84-1 to 21-84-28	Chain, timing	9-20-1
Cable, throttle control	14-25-5 to 14-25-17	Chain case cover	9-23-5 to 9-23-40
Cable and button automatic 3 speed transmission gearshift	21-30-6 to 21-30-408	Channel, glass	23-09-2 to 23-09-75
Cable and connection	8-16-1 to 8-16-10	Chassis and body wiring	8-15-2 to 8-15-53
Camshaft	9-15-1 to 9-15-10	Check, door	23-10-1 to 23-10-18
Camshaft bearing	9-16-6 to 9-16-17	Choke control cable	14-63-1 to 14-63-24
Camshaft sprocket	9-17-5	Cigar lighter	1-12-1 8-20-3 to 8-20-16
Cap, crankshaft bearing	9-10-2 to 9-10-26		
Cap, fuel tank locking	1-39-2		
Cap, hub	22-08-5 to 22-08-57		

PART NAME	CODE	PART NAME	CODE
Clamp and support, exhaust pipe	11-08-5	Components and heater	1-48-1
	to	Compressor	24-25-2
	11-08-24		to
Clip, automatic choke to carburetor			24-25-260
rod	14-65-4	Condenser	24-27-5
Clip, fuel line tube	14-90-1		to
Clip, rear spring	17-15-1		24-27-15
	to	Conditioning, air	24-01-1
	17-15-30		to
Clock	1-21-1		24-01-87
	to	Connecting rod	9-31-4
	1-21-27		to
Clutch	6-01-3		9-31-10
Clutch, automatic 3 speed transmission	21-133-5	Connecting rod bearing package	9-32-2
	to	Connection and cable	8-16-1
	21-133-65		to
Clutch cover and pressure plate . . .	6-14-1		8-16-10
	to	Connector, power brake tube	5-110-18
	6-14-10	Console, floor tunnel	23-38-1
Clutch disc	6-13-1		to
	to		23-38-40
	6-13-8	Control, air conditioning	24-24-5
Clutch housing	6-09-1		to
Clutch housing pan	6-10-2		24-24-167
	to	Control, door lock and remote	23-18-5
	6-10-31		to
Clutch parts, differential	3-09-1		23-18-217
	to	Control, hood lock	15-14-1
	3-09-3		to
Clutch pedal	6-38-1		15-14-21
	to	Control, manifold heat	9-59-13
	6-38-23		to
Clutch pedal pad	6-29-2	Control, manual transmission remote .	9-59-15
Clutch pedal rod	6-50-1		21-42-11
	to		to
	6-50-10		21-42-43
Clutch pedal shaft	6-43-7	Converter, torque	9-46-4
	to		to
	6-43-13		9-46-228
Clutch pressure plate	6-15-1	Core, radiator	7-11-3
Clutch pressure spring	6-16-1		to
Clutch release bearing	6-19-2		7-11-4
	to	Countershaft, manual transmission . .	21-24-2
	6-19-3		to
Clutch release bearing return spring . .	6-20-14		21-24-22
Clutch release center spring	6-35-1	Courtesy lamp	1-14-4
	to		to
	6-35-17		1-14-40
Clutch release fork	6-22-1		8-11-5
	to		to
	6-22-19		8-11-24
Clutch release fork return spring . .	6-27-5	Cover, center pillar trim	23-99-4
	to		to
	6-27-10		23-99-38
Clutch release lever	6-17-3	Cover, chain case	9-23-5
Clutch release rod	6-24-1		to
	to		9-23-40
	6-24-10	Cover, front console	23-71-1
Clutch torque shaft	6-52-1	Cover, manual transmission case . . .	21-29-3
	to		to
	6-52-17		21-29-33
Coat hanger hook	23-82-30	Cover, second seat back hinge	23-70-5
	to		to
	23-82-39		23-70-6
Components and carrier, automatic		Cover, universal joint	16-07-3
3 speed transmission front and rear			to
planet pinion	21-134-5		16-07-4
	to		
	21-134-45		

PART NAME	CODE	PART NAME	CODE
Cover and tubing, brake	5-53-3	Deflector, fuel tank stone	14-87-2
	to	Deflector, radiator stone	7-35-2
	5-53-4		to
Cowl trim panel	23-91-6		7-35-13
Cowl vent	23-61-39	Defogger, rear window	1-47-1
	to		to
	23-61-116		1-47-19
Crank, throttle control bell	14-14-1	Diaphragm, carburetor anti-stall . . .	14-50-25
	to	Differential and carrier, rear axle . .	3-03-1
	14-14-57		to
Crankcase closed vent system	10-02-53	Differential bearing	3-03-36
	to		3-11-1
	10-02-67		to
Crankcase vent inlet air cleaner . . .	10-01-21	Differential case	3-11-14
	to		3-04-6
	10-01-40		to
Crankshaft	9-07-5	Differential clutch parts	3-04-10
	to		3-09-1
	9-07-22		to
Crankshaft bearing cap	9-10-2	Differential pinion	3-09-3
	to		3-07-1
	9-10-26		to
Crankshaft bearing package	9-09-2	Differential pinion shaft	3-07-2
Crankshaft rear bearing oil seal . . .	9-11-1		3-08-1
	to		to
	9-11-7	Differential side gear	3-08-2
Crankshaft sprocket	9-08-5		3-06-5
Crankshaft vibration damper	9-13-5		to
Cross, universal joint	16-08-6	Dimmer, automatic headlamp	3-06-8
	to		1-04-4
	16-08-7		to
Crossmember, frame engine rear support	9-69-4		1-04-18
	to	Disc, clutch	6-13-1
	9-69-21		to
Crossmember, frame front	13-11-5	Distributor, ignition	6-13-8
Crossmember, frame rear	13-18-4		8-27-1
	to		to
	13-18-32	Dome lamp and switch	8-27-352
Cup, wheel cylinder piston	5-71-1		8-05-6
	to		to
	5-71-2	Dome lamp switch	8-05-40
Cushion, front seat	23-108-4	Door	8-05-14
	to		23-11-1
	23-108-142		to
Cylinder, master	5-39-1	Door check	23-11-21
	to		23-10-1
	5-39-24		to
Cylinder, wheel brake	5-64-1	Door edge protector	23-10-18
	to		1-135-1
	5-64-2	Door hinge	23-15-1
Cylinder and key, lock	23-17-2		to
	to		23-15-32
	23-17-72	Door lock and remote control	23-18-5
Cylinder block	9-02-5		to
	to	Door regulator	23-18-117
	9-02-17		23-14-10
Cylinder head	9-03-4		to
	9-03-29	Door remote control handle	23-14-153
Cylinder head water outlet elbow	9-05-5		23-14-10
	to		to
	9-05-6	Door trim panel	23-14-153
			23-92-5
			to
			23-92-25
		Drain cock, radiator	7-13-2
		Drain trough	23-59-35
			to
			23-59-63
		Drier, receiver	24-26-20
			to
			24-26-100

D

Damper, crankshaft vibration 9-13-5
Deck lid 23-19-8
to
23-19-188

PART NAME	CODE	PART NAME	CODE
Drive gear and pinion set	3-19-1		
Drive gear bolt	3-20-1		
Drive pinion bearing	3-22-24		
	to		
	3-22-45		
Drive shaft	3-32-1		
	to		
	3-32-9		
Drive shaft bearing	3-33-1		
	to		
	3-33-8		
Drive shaft oil seal	3-35-14		
Drum, brake	22-04-2		
	to		
	22-04-14		
Drum, hub and brake	22-03-1		
	to		
	22-03-2		
E			
Elbow, cylinder head water outlet . . .	9-05-5		
	to		
	9-05-6		
Elbow, water pump	7-48-22		
Electric Door lock switch	23-18-103		
Electric seat adjuster switch	23-47-446		
Electric window lift and vent wing switch	23-41-170		
Electric window lift safety switch package	1-50-1		
Electric window lift switch	23-41-170		
Emergency flasher light	1-06-1		
	to		
	1-06-11		
Emergency flasher light switch	1-06-3		
Engine	9-01-5		
	to		
	9-01-24		
Engine front support	9-64-5		
	to		
	9-64-24		
Engine front support insulator	9-67-4		
Engine rear support insulator	9-71-5		
	to		
	9-71-19		
Evaporator	24-28-3		
	to		
	24-28-398		
Exhaust pipe	11-05-1		
	to		
	11-05-12		
Exhaust pipe flange gasket and stud .	11-06-8		
	to		
	11-06-10		
Exhaust pipe support and clamp	11-08-5		
	to		
	11-08-24		
Exhaust valve	9-39-6		
	to		
	9-39-21		
Extension, automatic 3 speed transmission case	21-04-1		
	to		
	21-04-12		
Extension manual transmission case . .	21-04-1		
	to		
	21-04-14		
F			
		Fan	7-02-1
			to
			7-02-16
		Fan and alternator idler pulley	7-04-1
			to
			7-04-16
		Fan and related drive belts	7-03-1
		Fan drive and driven pulley	7-06-1
			to
			7-06-14
		Fan fluid drive unit	7-07-1
		Fan pulley hub	7-05-1
		Fast idle cable	14-24-1
			to
			14-24-11
		Fender, front	12-01-5
			to
			12-01-105
		Fender brace	12-07-1
			to
			12-07-3
		Fender bracket	12-06-3
			to
			12-06-6
		Fender moulding	12-15-0
		Fender name plate	12-15-0
		Fender pillar support and cowl bracket	12-05-2
		Fender seal	12-02-5
			to
			12-02-12
		Fender shim	12-02-5
			to
			12-02-12
		Fender support	12-07-1
			to
			12-07-3
		Filter, oil	10-26-5
			to
			10-26-65
		Filter, fuel	14-67-1
			to
			14-67-2
		Flange, propeller shaft	16-21-1
		Floor board	23-04-2
			to
			23-04-250
		Floor mat	23-20-8
			to
			23-20-65
		Floor tunnel console	23-38-1
			to
			23-38-40
		Fluid, brake	5-01-1
		Flywheel	9-45-1
			to
			9-45-2
		Folding top	23-58-3
			to
			23-58-573
		Folding top bow tacking strip	23-111-10
			to
			23-111-37

1964 PASSENGER CAR PARTS CATALOG

ALPHABETICAL
INDEX

PART NAME	CODE	PART NAME	CODE
Folding top dust boot	23-112-12	Front wheel upper control arm	2-08-5
	to		to
	23-112-153	Fuel filter	2-08-72
Folding top header top material			14-67-1
retainer	23-112-4		to
	to		14-67-2
	23-112-160	Fuel gauge	8-37-275
Folding top lift switch	23-58-532	Fuel line tube	14-89-2
Foot control switch	1-87-5	Fuel line tube clip	14-90-1
Foot dimmer switch	8-53-150	Fuel pump	14-73-1
Fork, clutch release	6-22-1	Fuel pump mounting gasket	14-74-1
	to	Fuel pump push rod	14-77-17
	6-22-19	Fuel tank	14-86-1
Fork, manual transmission gearshift .	21-39-3		to
Frame	13-01-1	Fuel tank gauge	14-86-85
	to		14-72-1
	13-01-6		to
Frame engine rear support cross-			14-72-47
member	9-69-4	Fuel tank locking cap	1-39-2
	to	Fuel tank stone deflector	14-87-2
	9-69-21	Fuel tank support	14-88-8
Frame engine rear support cross-			to
member bracket	9-70-9		14-88-36
Frame front crossmember	13-11-5	G	
Frame rear crossmember	13-18-4	Garnish moulding	23-22-7
	to		to
	13-18-32		23-22-160
Frame rear spring hanger	13-54-4	Gasket, fuel pump mounting	14-74-1
	to	Gasket, manifold	9-50-1
	13-54-15		to
Front bumper face bar	13-64-3		9-50-16
	to	Gasket, water pump	7-44-3
	13-64-149		to
Front console cover	23-71-1		7-44-4
Front door arm rest	23-76-3	Gasket and stud, exhaust pipe flange . .	11-06-8
	to		to
	23-76-86		11-06-10
Front fender	12-01-5	Gauge, fuel	8-37-275
	to	Gauge, fuel tank	14-72-1
	12-01-105		to
Front fender shield	12-04-4		14-72-47
	to	Gauge, oil	8-37-316
	12-04-26	Gauge, temperature	8-37-176
Front floor carpet	23-79-3	Gear, differential side	3-06-5
	to		to
	23-79-79		3-06-8
Front seat	23-45-29	Gear, manual transmission	21-10-3
	to		to
	23-45-52		21-10-31
Front seat adjuster	23-47-6	Gear, manual transmission clutch . .	21-14-1
	to		to
	23-47-462		21-14-21
Front seat back grab handle	23-82-14	Gear, manual transmission countershaft	21-15-2
Front seat back to cushion push nut . .	23-115-4		to
	to		21-15-33
	23-115-10	Gear, manual transmission reverse idler	21-11-1
Front seat center arm screw	23-115-10		to
Front seat cushion	23-108-4		21-11-9
	to	Gear, oil pump drive	10-10-1
	23-108-142	Gear, power steering	19-01-4
Front suspension torsion parts	2-14-1		to
	to		19-01-62
	2-14-25	Gear, standard transmission clutch . .	21-14-1
Front wheel bearing	22-06-1		to
	to		21-14-20
	22-06-18	Gear, standard transmission countershaft	21-15-2
Front wheel lower control arm	2-10-6		to
	to		21-15-33
	2-10-76		

PART NAME	CODE	PART NAME	CODE
Gear, standard transmission reverse idler	21-11-1 to 21-11-16	Headlamp beam indicator light	8-39-15
Gear and pinion, manual transmission speedometer	21-85-4 to 21-85-61	Headlamp switch	8-53-270
Gear and pinion, standard transmission speedometer	21-85-4 to 21-85-61	Headlining and listing	23-86-2 to 23-86-37
Gearshift, standard transmission remote control	21-42-11 to 21-42-43	Heater and components	1-48-1
Generator	8-28-3 to 8-28-292	Hinge, door	23-15-1 to 23-15-32
Generator component parts	8-29-17 to 8-29-208	Hinge, hood	15-19-2 to 15-19-47
Glass channel	23-09-2 to 23-09-75	High beam indicator lamp	8-39-3 to 8-39-15
Glove box	23-06-4 to 23-06-53	Hood bumper	15-09-4
Glove box lamp	1-19-1	Hood hinge	15-19-2 to 15-19-47
Glove box lamp and switch	8-38-23	Hood letters	15-06-0
Glove compartment lamp	8-38-4 to 8-38-23	Hood lock	15-11-3 to 15-11-53
Governor	14-68-3 to 14-68-8	Hood lock control	15-14-1 to 15-14-21
Governor, automatic 3 speed transmission	21-138-2 to 21-138-38	Hood lock striker	15-13-2 to 15-13-6
Grille, radiator	7-16-11 to 7-16-118	Hood moulding	15-25-0
Grille guard	1-01-1	Hood name plate	15-06-0
Grommet	8-30-1	Hood top panel	15-03-3 to 15-03-60
Guard, bumper	1-01-1 13-68-6 to 13-68-18	Hook, coat hanger	23-82-30 to 23-82-39
Guard, grille	1-01-1	Horn	8-32-2 to 8-32-18
Guide, brake shoe	5-25-9	Horn control	8-33-4 to 8-33-164
Guide, wheel brake shoe	5-26-1 to 5-26-5	Hose, brake flexible	5-62-1 to 5-62-20
H		Hose, power brake vacuum	5-111-17
Handle, door remote control	23-14-10 to 23-14-153	Hose, radiator	7-14-4 to 7-14-31
Handle, front seat back grab	23-82-14	Housing, clutch	6-09-1
Handle, rear door pull-to	23-81-3	Housing, manual transmission case	21-29-3 to 21-29-33
Hanger, frame rear spring	13-54-4 to 13-54-15	Housing, rear axle	3-02-1 to 3-02-20
Head, cylinder	9-03-4 to 9-03-29	Housing, standard transmission case	21-29-3 to 21-29-25
Headlamp	8-34-1 to 8-34-374	Housing, water pump	7-43-1 to 7-43-8
		Housing and shaft, manual transmission speedometer cable	21-84-1 to 21-84-28
		Hub, fan pulley	7-05-1

1964 PASSENGER CAR PARTS CATALOG

ALPHABETICAL INDEX

PART NAME	CODE	PART NAME	CODE
Hub, wheel	22-05-14 to 22-05-24	K	
Hub and brake drum	22-03-1 to 22-03-2	Knuckle, steering	2-03-2
Hub cap	22-08-5 to 22-08-57	L	
I		Lamp, back-up	1-10-1 8-56-1 to 8-56-74
Ignition	8-36-1 to 8-36-137	Lamp, courtesy	1-14-4 to 1-14-40
Ignition coil	8-35-4 to 8-35-115	Lamp, glove box	8-11-5 to 8-11-24
Ignition distributor	8-27-1 to 8-27-352	Lamp, high beam indicator	1-19-1 8-39-3 to 8-39-15
Ignition lamp	8-40-16	Lamp, license	8-57-0 to 8-57-79
Impeller and shaft, water pump	7-45-31	Lamp, map	1-14-4
Indicator, oil level	10-03-4 to 10-03-10	Lamp, parking and turn signal	8-50-0 to 8-50-337
Instrument lamp switch	8-53-270	Lamp, parking brake signal	1-09-1
Instrument panel	23-33-6 to 23-33-240	Lamp, quarter	8-11-5 to 8-11-24
Instrument panel instruments	8-37-1 to 8-37-517	Lamp, stop	8-58-0 to 8-58-60
Instrument panel lamp	8-41-36	Lamp, trunk compartment	1-30-1
Instrument panel trim pad	23-84-3 to 23-84-31	Lamp, underhood	1-13-10
Instrument panel wiring	8-19-2 to 8-19-87	Lamp and switch, dome	8-05-6 to 8-05-40
Insulator, body	23-31-33 to 23-31-205	Lamp and switch, glove box	8-38-23
Insulator, engine front support	9-67-4	Leaf, rear spring	17-12-4 to 17-12-12
Insulator, engine rear support	9-71-5 to 9-71-19	Letters, hood	15-06-0
Insulator, propeller shaft center bearing housing	16-17-1	Lever, automatic 3 speed transmission control	21-142 21
Intake, air	23-61-39 to 23-61-116	Lever, clutch release	6-17-3
Intake valve	9-39-1 to 9-39-5	Lever, parking brake (foot operated)	4-25-1 to 4-25-28
J		Lever, parking brake (hand operated)	4-08-1 to 4-08-36
Jack, bumper	13-72-1 to 13-72-4	Lever, parking brake operating	4-26-1 to 4-26-27
Jacket, steering gear column	19-14-1 to 19-14-99	Lever and rod, manual transmission gearshift	21-30-2 to 21-30-438
Joint, universal	16-03-1 to 16-03-20	License lamp	8-57-7 to 8-57-89
		License mounting parts	8-47-8 to 8-47-131
		Lid, deck	23-19-8 to 23-19-188

PART NAME	CODE	PART NAME	CODE
Lift, window	23-39-2	Manual transmission countershaft . . .	21-24-2
	to	to	to
	23-39-53		21-24-22
Lift, window (electric window)	23-41-4	Manual transmission countershaft	
	to	bearing	21-25-2
	23-41-287	to	to
Light, emergency flasher	1-06-1	Manual transmission countershaft gear	21-15-2
	to	to	to
	1-06-11		21-15-33
Lighter, cigar	1-12-1	Manual transmission gear	21-10-3
Liner, body	23-31-33	to	to
	to		21-10-31
	23-31-205	Manual transmission gearshift fork .	21-39-3
Lining, brake shoe	5-03-0	Manual transmission gearshift rail . .	21-34-42
	to	to	to
	5-03-23		21-34-53
Listing and headlining	23-86-3	Manual transmission gearshift rod . . .	21-30-2
	to	to	to
	23-86-37		21-30-438
Lock, hood	15-11-3	Manual transmission main drive pinion.	21-09-2
	to	to	to
	15-11-53		21-09-31
Lock, rear door safety	1-72-5	Manual transmission main shaft	21-16-3
Lock, safe-T-matic door	23-13-0	Manual transmission main shaft bearing	21-19-2
Lock, transmission parking	4-10-1	to	to
	to		21-19-15
	4-10-28	Manual transmission main shaft bearing	
Lock cylinder and key	23-17-2	oil seal	21-22-2
	to	Manual transmission main shaft pilot	
	23-17-72	bearing	21-17-2
Low oil pressure switch	8-53-327	to	to
Luggage compartment front lining			21-17-9
panel	23-96-3	Manual transmission package	21-01-3
	to	Manual transmission remote control .	21-42-11
	23-96-41	to	to
			21-42-43
M			
Manifold	9-48-6	Manual transmission reverse idler	
	to	gear	21-11-1
	9-48-158	to	to
Manifold gasket	9-50-1		21-11-9
	to	Manual transmission reverse idler	
	9-50-16	gear shaft	21-12-1
Manifold heat control valve	9-59-13	to	to
	to		21-12-2
	9-59-15	Manual transmission set	21-01-3
Manifold heat control valve stop . . .	9-62-1	Manual transmission speedometer	
Manifold heat control valve thermostat .	9-58-1	cable shaft and housing	21-84-1
	to	to	to
	9-58-14		21-84-28
Manual transmission	21-02-1	Manual transmission speedometer	
	to	pinion and gear	21-85-4
	21-02-6	to	to
Manual transmission case	21-03-1		21-85-61
	to	Map and courtesy lamp	8-42-2
	21-03-25	to	to
Manual transmission case cover . . .	21-29-3		8-42-29
	to	Map lamp	1-14-4
	21-29-33	to	to
Manual transmission case extension .	21-04-1		1-14-40
	to	Master cylinder	5-39-1
	21-04-14	to	to
Manual transmission case housing . .	21-29-3		5-39-24
	to	Master cylinder boot	5-40-1
	21-29-33	Master cylinder brake tube	5-52-3
Manual transmission clutch gear . . .	21-14-1	to	to
	to		5-52-62
	21-14-21	Master cylinder piston	5-44-8
		to	to
			5-44-9

PART NAME	CODE	PART NAME	CODE	
Master cylinder piston push rod . . .	5-47-4	P		
	to			
	5-47-8		Package, automatic 3 speed trans-	21-01-3
Master cylinder piston return spring .	5-46-1		mission	9-32-2
Mat, floor	23-20-8		Package, bearing connecting rod . . .	1-67-1
	to		Package, belt	to
	23-20-65			1-67-9
Material, seat cloth trim	23-114-2			1-44-1
	to		Package, brake self adjusting	2-01-3
	23-114-15		Package, manual transmission	5-63-1
Medallion, radiator grille	7-17-0		Package, wheel cylinder service	to
Mirror	1-76-1			5-63-3
	to			23-31-33
	1-76-27		Pad, body	to
	23-21-3			23-31-205
	to			5-28-8
	23-21-74		Pad, brake pedal	6-39-1
Moulding, fender	12-15-0		Pad, clutch pedal	23-84-3
Moulding, garnish	23-22-7		Pad, instrument panel trim	to
	to			23-84-31
	23-22-160			
Moulding, hood	15-25-0		Pan, automatic 3 speed transmission	
Moulding, outside finish	23-23-2		oil	21-119-3
	to			to
	23-23-85			21-119-25
Moulding, trim finish	23-26-16		Pan, body	23-32-15
	to			to
	23-26-87			23-32-115
Muffler	11-01-1		Pan, clutch housing	6-10-2
Muffler support	11-02-1			to
	to			6-10-31
	11-02-13		Pan, oil	10-24-1
				to
				10-24-38
			Panel, body	23-34-10
				to
				23-34-354
			Panel, cowl trim	23-91-6
			Panel, door trim	23-92-5
				to
				23-92-25
			Panel, hood top	15-03-3
				to
				15-03-60
			Panel, instrument	23-33-6
				to
				23-33-240
			Panel, luggage compartment front lining	23-96-3
				to
				23-96-41
		Panel, rear quarter trim	23-101-3	
			to	
			23-101-26	
		Panel, rear upper pillar	23-99-38	
		Panel, shelf trim	23-102-3	
		Panel, visor trim	23-103-3	
			to	
			23-103-48	
		Parking brake cable	4-23-1	
			to	
			4-23-46	
		Parking brake lever (foot operated) . .	4-25-1	
			to	
			4-25-28	
		Parking brake lever (hand operated) . .	4-08-1	
			to	
			4-08-36	
		Parking brake lever return spring . . .	4-19-1	

N

Name plate, fender	12-15-0
Name plate, hood	15-06-0
Nipple, water pump	7-48-22

O

Oil filter	10-26-5
	to
	10-26-65
Oil gauge	8-37-316
Oil level indicator	10-03-4
	to
	10-03-10
Oil pan	10-24-1
	to
	10-24-38
Oil pressure relief valve	10-22-11
	to
	10-22-41
Oil pump	10-07-2
	to
	10-07-14
Oil pump drive gear	10-10-1
Oil pump drive shaft	10-09-1
	to
	10-09-7
Oil pump rotor	10-14-18
Oil pump suction pipe	10-18-4
Oil strainer	10-23-7
Ornament, radiator grille	7-17-0
Outside finish moulding	23-23-2
	to
	23-23-85

PART NAME	CODE	PART NAME	CODE
Parking brake operating lever	4-26-1	Power brake tube connector	5-110-18
	to	Power brake vacuum check valve	5-105-1
	4-26-27		to
Parking brake signal lamp	1-09-1		5-105-10
	8-31-2	Power brake vacuum hose	5-111-17
	to	Power brake vacuum tank	5-102-2
	8-31-16		to
Parking lamp	8-50-82	Power steering column bracket	5-102-11
	to		19-31-7
	8-50-354		to
Pedal, accelerator	14-01-1		19-31-24
	to	Power steering gear	19-01-4
	14-01-30		to
Pedal, clutch	6-38-1		19-01-82
	to	Power steering gear arm	19-27-2
	6-38-23		to
Pedal and bushing, brake	5-27-1	Power steering gear arm and idler arm	19-27-55
	to		19-27-2
	5-27-21		to
Pillar, body	23-36-5	Power steering gear column jacket	19-27-55
	to		19-14-1
	23-36-142		to
Pilot, automatic	1-26-1		19-14-68
	14-02-1	Power steering gear hose	19-58-7
	to		to
	14-02-79		19-58-31
Pin, piston	9-36-5	Power steering gear housing	19-02-4
	to		to
	9-36-7		19-02-69
Pinion, automatic 3 speed transmission		Power steering gear idler arm	19-27-2
speedometer	21-85-5		to
	to		19-27-55
	21-85-61	Power steering gear piston	19-56-6
Pinion, differential	3-07-1		to
	to		19-56-90
	3-07-2	Power steering gear shaft and roller	
Pinion, manual transmission main		tooth	19-19-1
drive	21-09-2		to
	to		19-19-72
	21-09-31	Power steering gear tube and coupling .	19-15-4
Pinion and gear, manual transmission			to
speedometer	21-85-4	Power steering gearshift control rod .	19-15-69
	to		19-48-1
	21-85-61		to
Pipe, exhaust	11-05-1	Power steering gearshift rod	19-48-52
	to		19-46-3
	11-05-12		to
Pipe, oil pump suction	10-18-4		19-46-55
Pipe, tail	11-09-3	Power steering gearshift tube	19-46-3
Piston, master cylinder	5-44-8		to
	to		19-46-55
	5-44-9	Power steering oil pump	19-54-2
Piston, w/pin	9-34-5		to
Piston, wheel cylinder	5-70-1		19-54-258
Piston pin	9-36-5	Power steering wheel	19-30-4
	to		to
	9-36-7		19-30-18
Piston ring set	9-35-1	Power unit mounting bracket	5-101-1
Plate, clutch cover and pressure	6-14-1	Propeller shaft	16-02-1
	to		to
	6-14-10		16-02-5
Plate, clutch pressure	6-15-1	Propeller shaft center bearing	16-16-1
Plug, body	23-32-15		to
	to		16-16-47
	23-32-115	Propeller shaft center bearing housing	
Plug, spark	8-36-114	insulator	16-17-1
Power brake	1-42-1	Propeller shaft flange	16-21-1
Power brake air cleaner	5-113-17	Propeller shaft sliding yoke	6-14-1
Power brake power unit	5-100-1		to
	to		6-14-9
	5-100-304		

1964 PASSENGER CAR PARTS CATALOG

PART NAME	CODE	PART NAME	CODE
Propeller shaft spline	6-14-1 to 6-14-9	Radiator yoke	7-26-2 to 7-26-37
Protector, door edge	1-135-1	Radio	1-87-1 to 1-87-406
Pulley, fan and alternator idler	7-04-1 to 7-04-16	Radio antenna	1-88-1 to 1-88-205
Pulley, fan drive and driven	7-06-1 to 7-06-14	Radio power antenna switch	1-88-205
Pump, automatic 3 speed transmission oil	21-118-6 to 21-118-57	Rail, manual transmission gearshift	21-34-42 to 21-34-53
Pump, fuel	14-73-1	Rear axle control strut	3-01-25 to 3-01-34
Pump, oil	10-07-2 to 10-07-14	Rear axle differential and carrier	3-03-1 to 3-03-36
Pump, water	7-42-1 to 7-42-4	Rear axle housing	3-02-1 to 3-02-20
Push button blower motor switch	1-48-770 to 1-48-942	Rear bumper face bar	13-66-3 to 13-66-153
Push button vacuum switch	24-24-150	Rear door pull-to handle	23-81-3
Push nut, front seat back to cushion	23-115-4 to 23-115-10	Rear door safety lock	1-72-5
Q		Rear quarter trim panel	23-101-3 to 23-101-26
Quarter lamp	8-11-5 to 8-11-24	Rear seat back	23-109-3 to 23-109-40
Quarter window opening weathercord	23-113-25 to 23-113-87	Rear speaker switch	1-87-289
R		Rear spring	17-11-3 to 17-11-7
Rack, roof luggage	1-74-1	Rear spring bumper	17-19-3 to 17-19-20
Rack, roof rail and luggage	23-40-82 to 23-40-190	Rear spring center bolt	17-14-10
Radiator core	7-11-3 to 7-11-4	Rear spring clip	17-15-1 to 17-15-30
Radiator core fan shroud	7-08-2 to 7-08-16	Rear spring leaf	17-12-4 to 17-12-12
Radiator cross bar	7-33-1 to 7-33-12	Rear spring shackle	17-16-1 to 17-16-8
Radiator drain cock	7-13-2	Rear spring silent block	17-17-3 to 17-17-5
Radiator dust shield	7-31-10 to 7-31-45	Rear upper pillar panel	23-99-38
Radiator filler cap	7-12-1	Rear window defogger	1-47-1 to 1-47-19
Radiator grille	7-16-11 to 7-16-118	Receiver, ash	23-02-1 to 23-02-150
Radiator grille medallion	7-17-0	Receiver drier	24-26-20 to 24-26-100
Radiator grille ornament	7-17-0	Regulator, door	23-14-10 to 23-14-153
Radiator hose	7-14-4 to 7-14-31	Reinforcement, body	23-07-168 to 23-07-169

PART NAME	CODE	PART NAME	CODE
Retainer, folding top header top material	23-112-4	Seal, water pump	7-46-1
	to	Seat, front	23-45-29
	23-112-160		to
Rocker, valve	9-43-1		23-45-52
	to	Seat, second and third	23-48-6
	9-43-26		to
Rod, accelerator pedal to accelerator shaft	14-07-1		23-48-189
	to	Seat cloth trim material	23-114-2
	14-07-15		to
Rod, clutch pedal	6-50-1		23-114-15
	to	Second and third seat	23-48-6
	6-50-10		to
Rod, clutch release	6-24-1		23-48-189
	to	Second seat back hinge cover	23-70-5
	6-24-10		to
Rod, connecting	9-31-4		23-70-6
	to	Service parts and carburetor assemblies	14-30-2
	9-31-10		14-30-4
Rod, fuel pump push	14-77-17		14-30-7
Rod, master cylinder piston push	5-47-4		14-30-8
	to		14-30-27
	5-47-8		14-30-28
Rod, power steering gearshift	19-46-3		14-35-1
	to		14-35-6
	19-46-55		14-35-8
Rod, power steering gearshift control	19-48-1		14-35-33
	to		14-35-39
	19-48-52		14-39-45
Rod, steering knuckle, tie	2-07-1		14-41-3
	to		14-43-5
	2-07-41	Servos, automatic 3 speed transmission	21-137-5
Rod, valve push	9-42-1		to
Rod, wheel cylinder piston push	5-12-1		21-137-205
Rod and lever, standard transmission gearshift	21-30-2	Set, automatic 3 speed transmission	21-01-3
	to	Set, drive gear and pinion	3-19-1
	21-30-438	Set, manual transmission	21-01-3
Roller and bushing, universal cross	16-10-1	Set, piston ring	9-35-1
	16-10-3	Shackle, rear spring	17-16-1
Roof luggage rack	1-74-1		to
Roof rail and luggage rack	23-40-82		17-16-8
	to	Shaft, accelerator	14-11-1
	23-40-190		to
Rotor, oil pump	10-14-18		14-11-48
Run, window glass	23-42-13	Shaft, automatic 3 speed transmission	21-05-1
	to		to
	23-42-59		21-05-35
		Shaft, automatic 3 speed transmission input	21-129-5
			to
			21-129-24
		Shaft, automatic 3 speed transmission torque converter reaction	21-129-5
			to
			21-129-24
		Shaft, brake pedal	5-29-1
		Shaft, clutch pedal	6-43-7
			to
			6-43-13
		Shaft, clutch torque	6-52-1
			to
			6-52-17
		Shaft, differential pinion	3-08-1
			to
			3-08-2
		Shaft, drive	3-32-1
			to
			3-32-9
		Shaft, oil pump drive	10-09-1
			to
			10-09-7

S

SAFE-T-MATIC Door Lock	23-13-0
Safety seat belt	1-67-1
	to
	1-67-15
Screen, tailgate window	1-08-1
Screw, front seat center arm	23-115-10
Screw, wheel cylinder bleeder	5-67-1
Seal, body	23-31-33
	to
	23-31-205
Seal, crankshaft rear bearing oil	9-11-1
	to
	9-11-7
Seal, drive shaft oil	3-35-14
Seal, fender	12-02-5
	to
	12-02-12
Seal, manual transmission main shaft bearing oil	21-22-2

PART NAME	CODE	PART NAME	CODE
Shaft, manual transmission main	21-16-3	Spline, propeller shaft	16-14-1
Shaft, manual transmission reverse idler gear	21-12-1 to 21-12-2	Spotlight	16-14-9 1-108-1
Shaft, propeller	16-02-1 to 16-02-5	Spring, accelerator pedal return . . .	14-06-1 to 14-06-10
Shaft, standard transmission reverse idler gear	21-12-1 to 21-12-2	Spring, brake pedal return	5-34-1 to 5-34-6
Shaft, sway eliminator	17-29-5 to 17-29-21	Spring, clutch pressure	6-16-1
Shaft and housing, automatic 3 speed transmission speedometer	21-84-1 to 21-84-28	Spring, clutch release bearing return .	6-20-14
Shaft and housing, manual transmission cable	21-84-1 to 21-84-28	Spring, clutch release center	6-35-1 to 6-35-17
Shaft and impeller, water pump	7-45-31	Spring, clutch release fork return . . .	6-27-5 to 6-27-10
Shaft and roller tooth, power steering gear	19-19-1 to 19-19-72	Spring, master cylinder piston return .	5-46-1
Shaft and roller tooth, standard steering gear	19-19-4 to 19-19-70	Spring, parking brake lever return . .	4-19-1
Shelf trim panel	23-102-3	Spring, rear	17-11-3 to 17-11-7
Shield, battery heat	13-35-1	Spring, wheel brake shoe hold-down . .	5-26-1 to 5-26-5
Shield, front fender	12-04-4 to 12-04-26	Sprocket, camshaft	9-17-5
Shield, radiator dust	7-31-10 to 7-31-45	Sprocket, crankshaft	9-08-5
Shim, fender	12-02-5 to 12-02-12	Standard steering column bracket . . .	19-31-1 to 19-31-19
Shock absorber	17-23-3 to 17-23-57	Standard steering gear	19-01-3 to 19-01-24
Shock absorber bracket	17-24-3 to 17-24-28	Standard steering gear arm	19-27-2 to 19-27-55
Shock absorber (load leveler)	1-07-1	Standard steering gear arm and idler arm	19-27-2 to 19-27-55
Shoe and lining, wheel brake	5-03-1 to 5-03-23	Standard steering gear column jacket .	19-14-1 to 19-14-68
Shroud, radiator	7-08-2 to 7-08-16	Standard steering gear idler arm . . .	19-27-2 to 19-27-55
Still, body side	23-51-3 to 23-51-45	Standard steering gear housing	19-02-4 to 19-02-18
Spare wheel carrier	22-20-29 to 22-20-89	Standard steering gear housing cover .	19-04-1 to 19-04-13
Spark plug	8-36-114	Standard steering gear shaft and roller tooth	19-19-4 to 19-19-70
Speedometer	8-37-371 to 8-37-372	Standard steering gear tube and coupling	19-15-4 to 19-15-111
Speedometer cable, shaft and housing .	21-84-1 to 21-84-28	Standard steering gearshift control rod .	19-48-1 to 19-48-52
		Standard steering gearshift rod	19-46-3 to 19-46-55

PART NAME	CODE	PART NAME	CODE
Standard steering gearshift tube	19-46-3 to 19-46-55	Support and clamp, exhaust pipe	11-08-5 to 11-08-24
Standard steering wheel	19-30-4 to 19-30-18	Sway, eliminator shaft	17-29-5 to 17-29-21
Starting motor	8-52-4 to 8-52-389	Switch, automatic 3 speed transmission neutral starter	21-113-24 to 21-113-29
Steering gear column jacket	19-14-1 to 19-14-99	Switch, auxiliary vacuum	24-24-150
Steering knuckle	2-03-3	Switch, back-up lamp	8-56-2
Steering knuckle tie rod	2-07-1 to 2-07-41	Switch, blower motor	24-24-5
Steering linkage knuckle arm	2-05-4	Switch, blower motor, w/cable	24-24-5
Steering wheel, standard	19-30-4 to 19-30-18	Switch, brake	14-02-32
Stop, brake pedal	5-30-12	Switch, courtesy lamp	8-11-6
Stop, manifold heat control valve	9-62-1	Switch, dome lamp	8-05-14
Stop and turn signal lamp	8-55-1 to 8-55-335	Switch, electric door lock	23-18-103
Stop lamp	8-58-60	Switch, electric seat adjuster	23-47-446
Strainer, automatic 3 speed transmission oil pump	21-117-1	Switch, electric window lift	23-41-170
Strainer, oil	10-23-7	Switch, electric window lift and vent wing	23-41-170
Strap, assist	23-77-3 to 23-77-17	Switch, electric window lift safety	23-41-170
Strap, battery hold-down	13-34-3	Switch, emergency flasher light	1-06-3
Striker, body	23-08-12 to 23-08-78	Switch, folding top lift	23-58-532
Striker, hood lock	15-13-2 to 15-13-6	Switch, foot control	1-87-5
Strip, folding top bow tacking	23-111-10 to 23-111-37	Switch, horn	8-33-90
Strut, rear axle control	3-01-25 to 3-01-34	Switch, ignition and starter	8-35-59
Stud, battery hold-down	13-36-5	Switch, map lamp	8-42-25
Stud, throttle linkage ball	14-13-1 to 14-13-5	Switch, parking brake indicator lamp . . .	8-31-10
Stud and gasket exhaust pipe flange . .	11-06-8 to 11-06-10	Switch, push button blower motor	1-48-770 to 1-48-942
Support, engine front	9-64-5 to 9-64-24	Switch, push button vacuum	24-24-150
Support, fender	12-07-1 to 12-07-3	Switch, radio power antenna	1-88-205
Support, fuel tank	14-88-8 to 14-88-36	Switch, rear speaker	1-87-289
Support, muffler	11-02-1 to 11-02-13	Switch, socket and cable, trunk lamp . . .	8-13-1
Support, tail pipe	11-10-3 to 11-10-43	Switch, starter and ignition	8-35-4
Support, wheel brake	5-13-1 to 5-13-35	Switch, stop lamp mechanical	8-58-60
		Switch, tailgate electric window lift . . .	23-54-167
		Switch, thermostat	24-28-241
		Switch, trunk compartment lamp	1-30-3
		Switch, trunk lamp	8-13-2
		Switch, turn signal	8-50-82
		Switch, underhood lamp	1-13-10
		Switch, window safety	1-50-1
		Switch, windshield washer	1-82-14
		Switch and cable, turn signal electric . .	8-50-82
		Switch and lamp, dome	8-05-6 to 8-05-40
		Switch and lamp, glove box	8-38-23
		Switch package, automatic 3 speed transmission	21-113-24
		Switch package, automatic 3 speed transmission neutral starter	21-113-24
		Switch package, electric window lift safety	1-50-1
		Switches	8-53-150 to 8-53-327
		T	
		Tail lamp	8-55-1 to 8-55-335
		Tail pipe	11-09-3
		Tail pipe support	11-10-3 to 11-10-43

1964 PASSENGER CAR PARTS CATALOG

PART NAME	CODE	PART NAME	CODE
Tailgate	23-54-1	Trunk lamp	8-13-1
	to		to
	23-54-208		8-13-6
Tailgate electric window lift switch	23-54-167	Tube, fuel line	14-89-2
Tailgate window screen	1-08-1	Tube, master cylinder brake	5-52-3
Tank, fuel	14-86-1		to
	to		5-52-82
	14-86-85	Tube, power steering gearshift	19-46-2
Tank, power brake vacuum	5-102-2		to
	to		19-46-55
	5-102-11	Tubing and cover, brake	5-53-3
Tappet, valve	9-41-1		to
	to		5-53-4
	9-41-4	Tufting button	23-78-2
Tee, brake tube	5-58-1	Turn signal lamp	8-50-82
	to		to
	5-58-2		8-50-354
Tee, carburetor fuel line	14-85-31	U	
Temperature gauge	8-37-176	Underhood lamp	1-13-1
Thermostat	7-41-4		to
Thermostat, manifold heat control			1-13-10
valve	9-58-1	Underhood lamp switch	1-13-10
	to	Unit, fan fluid drive	7-07-1
	9-58-14	Unit, power brake power	5-100-1
Thermostat switch	24-28-241		to
Throttle control bell crank	14-14-1		5-100-304
	to	Universal cross roller and bushing	16-10-1
	14-14-57		to
Throttle control cable	14-25-5		16-10-3
	to	Universal joint	16-03-1
	14-25-17		to
Throttle control mounting bracket	14-26-2		16-03-20
	to	Universal joint body	16-04-1
	14-26-6	Universal joint centering button	16-06-1
Throttle linkage ball stud	14-13-1		to
	to		16-06-3
	14-13-5	Universal joint cover	16-07-3
Timing chain	9-20-1		to
Top, folding	23-58-3		16-07-4
	to	Universal joint cross	16-08-6
	23-58-573		to
Torque convertor	9-46-4		16-08-7
	to	V	
	9-46-228	Valve, exhaust	9-39-6
Torsion parts, front suspension	2-14-1		to
	to		9-39-21
	2-14-25	Valve, intake	9-39-1
Transmission, automatic 3 speed	21-02-1		to
	to		9-39-5
	21-02-8	Valve, oil pressure relief	10-22-11
Transmission, manual	21-02-1		to
	to		10-22-41
	21-02-6	Valve, power brake vacuum check	5-105-1
Transmission parking lock	4-10-1		to
	to		5-105-10
	4-10-28	Valve, power steering gear	19-57-1
Tray, battery support	13-33-61		to
	to		19-57-64
	13-33-68	Valve body and valves, automatic	
Trim finish moulding	23-26-16	3 speed transmission	21-139-4
	to		to
	23-26-87		21-139-193
Trough, drain	23-59-35	Valve push rod	9-42-1
	to		
	23-59-63		
Trunk compartment lamp	1-30-1		
Trunk compartment lamp switch	1-30-3		

PART NAME	CODE	PART NAME	CODE
Valve rocket	9-43-1 to 9-43-26	Wheel brake shoe and lining	5-03-1 to 5-03-23
Valve tappet	9-41-1 to 9-41-4	Wheel brake shoe guide	5-26-1 to 5-26-5
Valves and valve body, automatic 3 speed transmission	21-139-4 to 21-139-193	Wheel brake shoe hold-down spring	5-26-1 to 5-26-5
Vent, cowl	23-61-39 to 23-61-116	Wheel brake support	5-13-1 to 5-13-35
Vent system, crankcase closed	10-02-53 to 10-02-67	Wheel cylinder bleeder screw	5-67-1
Vent wing	23-64-4 to 23-64-314	Wheel cylinder boot	5-69-1
Visor	1-32-2	Wheel cylinder piston cup	5-71-1 to 5-71-2
Visor, arm and bracket	23-103-10 to 23-103-48	Wheel cylinder piston	5-70-1
Visor, bracket and arm	23-103-10 to 23-103-48	Wheel cylinder piston push rod	5-12-1
Visor trim panel	23-103-3 to 23-103-48	Wheel cylinder service package	5-63-1 to 5-63-3
W			
Washer, windshield	1-82-2 to 1-82-49	Wheel hub	22-05-14 to 22-05-24
Water pump	7-42-1 to 7-42-4	Window	23-64-4 to 23-64-314
Water pump elbow	7-48-22	Window glass run	23-42-13 to 23-42-59
Water pump gasket	7-44-3 to 7-44-4	Window lift (electric window)	23-41-4 to 23-41-287
Water pump housing	7-43-1 to 7-43-8	Window lift (manual)	23-39-2 to 23-39-53
Water pump nipple	7-48-22	Window safety switch	1-50-1
Water pump seal	7-46-1	Windshield	23-66-65 to 23-66-239
Water pump shaft and impeller	7-45-31	Windshield washer	1-82-2 to 1-82-49
Weathercord	23-113-2 to 23-113-87	Windshield washer switch	1-82-14
Weatherstrip	23-63-14 to 23-63-181	Windshield wiper	23-67-2 to 23-67-204
Weight, wheel balance	22-09-1	Wing, vent	23-64-4 to 23-64-314
Wheel	22-01-5 to 22-01-56	Wiper, windshield	23-67-2 to 23-67-204
Wheel balance weight	22-09-1	Y	
Wheel brake adjuster	5-20-1 to 5-20-20	Yoke, propeller shaft sliding yoke	6-14-1 to 6-14-9
Wheel brake cylinder	5-64-1 to 5-64-2	Yoke, radiator	7-26-2 to 7-26-37

