

## INDEX

**GROUP 0—LUBRICATION AND  
MAINTENANCE**

	Page
Air Cleaners .....	6
Alternator .....	9
Battery .....	9
Body Maintenance .....	9
Brakes .....	10
Capacities .....	4
Carburetor Choke Linkage and Shaft .....	7
Certified Car Care .....	5
Certified Car Care—Brake System Maintenance Every 20,000 Miles .....	21
Certified Car Care—Engine Performance Evaluation Every 10,000 Miles .....	21
Certified Car Care—Front Suspension Alignment .....	22
Certified Car Care—Semi-Annual Maintenance .....	21
Clutch and Gearshift Linkages .....	12
Cooling System .....	12
Crankcase Ventilator Valve .....	7
Distributor .....	13
Engine Oil .....	6
Engine Oil Filter .....	8
Frequency of Oil Change .....	6
Front Suspension Ball Joints .....	10
Front Wheel Bearings .....	13
Fuel Filter .....	8
Headlamps .....	15
Hoisting .....	15
Hood Latch .....	19
Lubrication and Maintenance Service .....	3
Manifold Heat Control Valve .....	9
Parts Requiring No Lubrication .....	16
Passenger Car Maintenance Schedule for Certified Car Care .....	19
Passenger Car Trailer-Towing Service Recommendations ..	20
Propeller Shafts and Universal Joints .....	15
Rear Axle Sure-Grip .....	16
Recommended Services at Mileage Intervals .....	20
Selection of Lubricant .....	6
Speedometer Cable .....	16
Steering .....	16
Summary of Lubrication .....	5
Tires .....	17
Transmission .....	17
Windshield Wipers .....	18

**GROUP 1—ACCESSORIES, (RADIOS,  
HEATERS, MIRRORS)**

	Page
Accelerator Linkage Adjustment .....	2
AM-FM Radio .....	15
Antenna Trimmer Adjustment .....	11
Auto Pilot Calibration .....	4
Auto Pilot Drive Mechanism .....	5
Automatic Operation .....	2
Clock Removal and Installation .....	5
Control Cable Adjustment .....	2
Electric Antenna .....	13
Electrical Tests .....	3
Fader Control .....	11
Foot Switch For Search Tuning .....	11
Heater Blower .....	7
Heater Core .....	8
Heater Vacuum Actuator .....	8
Instrument Panel Selector Control .....	4
Interference Elimination .....	11
Lubrication .....	2
Manual Antenna .....	12
Motor and Drive or Mast Assembly .....	14
Push Buttons .....	11
Radio .....	9
Radio Speaker .....	10
Radio Speaker Reverberator .....	20
Rear Window Defroster .....	9
Speed Warning Operation .....	2
Tests—Auto Pilot .....	2
Tests—Radio .....	13
Vent Deflector .....	8
Ventilator Door Adjustment .....	9
Wiring Diagrams .....	20

**GROUP 2—FRONT SUSPENSION**

Front Suspension Alignment .....	4
Front Suspension Height Adjustment .....	3
Lower Ball Joints .....	5
Lower Control Arm and Shaft .....	8
Lower Control Arm Strut .....	7
Preparation for Measuring Front End Alignment .....	2
Service Diagnosis .....	11
Specifications .....	1
Sway Bar .....	10
Tool List .....	1
Torque Reference .....	2
Torsion Bars .....	5
Upper Ball Joints .....	6
Upper Control Arm .....	9

## INDEX—(Continued)

## GROUP 3—REAR AXLE

	Page
Axle Drive Shafts . . . . .	3
Axle Drive Shafts End Play . . . . .	4
Differential Carrier Assembly—Installation . . . . .	15
Differential Carrier Assembly—Removal . . . . .	5
Differential Case Assembly . . . . .	8
Differential Case Assembly—Installation . . . . .	13
Drive Gear and Pinion Backlash . . . . .	14
Gear Tooth Contact Pattern . . . . .	14
Pinion Bearing Cup . . . . .	9
Pinion Bearing Preload—Depth of Mesh . . . . .	9
Pinion Bearing Preload and Pinion Setting . . . . .	11
Rear Axle Housing—Welding . . . . .	15
Service Diagnosis . . . . .	20
Special Tools . . . . .	2
Specifications . . . . .	1
Sure Grip Differential—Identification . . . . .	16
Sure Grip Differential—Removal and Installation . . . . .	17
Torque Reference . . . . .	2

## GROUP 5—BRAKES

Bleeding the Brake System . . . . .	6
Booster Brake—Removal (Bendix) . . . . .	14
Booster Brake—Removal (Imperial Only) (Bendix) . . . . .	21
Booster Brake—Removal (Midland Ross) . . . . .	17
Brake Drum—Removal . . . . .	4
Brake Shoe—Installation . . . . .	5
Brake Shoe—Removal . . . . .	4
Brake Support Plate . . . . .	9
Grinding Recommendations . . . . .	5
Master Cylinder . . . . .	7
Parking Brake Adjustment . . . . .	10
Parking Brake Cable (Front) . . . . .	11
Parking Brake Cable (Rear) . . . . .	10
Remote Power Brake—Removal . . . . .	22
Service Brake Adjustment . . . . .	3
Service Diagnosis . . . . .	25
Special Tools . . . . .	2
Specifications . . . . .	1
Test for Fluid Contamination . . . . .	10
Testing Automatic Adjuster Operation . . . . .	4
Torque Reference . . . . .	2
Wheel Cylinders . . . . .	8
Wheel Stud Tightening . . . . .	9

## GROUP 6—CLUTCH

Clutch Adjustment . . . . .	2
Clutch Housing Alignment . . . . .	6

## GROUP 6—CLUTCH—Continued

	Page
Clutch Installation . . . . .	7
Clutch Pedal Free Play . . . . .	2
Clutch Release . . . . .	6
Service Diagnosis . . . . .	8
Special Tools . . . . .	1
Specifications . . . . .	1
Torque Shaft and Bearings . . . . .	6
Torque Reference . . . . .	1
Transmission Main Drive Pinion Pilot Bushing . . . . .	5

## GROUP 7—COOLING SYSTEM

Belt Deflection Method . . . . .	9
Engine Water Temperature Gauge . . . . .	8
Fluid Fan Drive . . . . .	3
Pressure Testing the Cooling System . . . . .	7
Proper Belt Tension (Accessory Belt Drives) . . . . .	8
Radiator . . . . .	5
Radiator Hoses . . . . .	6
Radiator Pressure Cap . . . . .	7
Reverse Flushing the Cooling System . . . . .	5
Service Diagnosis . . . . .	9
Special Tools . . . . .	2
Specifications (Accessory Belt Drives) . . . . .	2
Specifications (Cooling) . . . . .	1
Testing the Radiator Cap . . . . .	7
Thermostat . . . . .	6
Torque Method . . . . .	8
Torque Reference . . . . .	2
Transmission Oil Cooler . . . . .	5
Water Pump . . . . .	3

## GROUP 8—ELECTRICAL

Adjusting the Headlamps . . . . .	60
Adjusting Horns . . . . .	78
Aiming the Headlamps . . . . .	59
Alternator Bench Test . . . . .	38
Alternator Removal . . . . .	38
Alternator Testing . . . . .	34
Armature Testing—Direct Drive . . . . .	18
Armature Testing—Reduction Gear Type . . . . .	26
Assembly Wiper Motor . . . . .	76
Battery Charging . . . . .	12
Battery Inspection . . . . .	10
Body Wiring—Imperial . . . . .	94
Body Wiring—(Except Town and Country Chrysler) . . . . .	95
Body Wiring—(Town and Country Chrysler) . . . . .	100
Breaker Arm Spring Tension Test . . . . .	55
Brushes and Springs—Direct Drive . . . . .	17
Brushes and Springs—Reduction Gear Type . . . . .	26

## INDEX—(Continued)

## GROUP 8—ELECTRICAL—Continued

	Page
Circuit Breaker.....	68
Contact Points Installation.....	55
Control Switch.....	88
Coupling—Motor to Gear Housing.....	89
Dual Headlamps.....	59
Directional Indicator Switch—Chrysler.....	70
Directional Indicator Switch—Imperial.....	70
Disassembly of Wiper Links.....	75
Distributor Advance.....	55
Distributor Point Dwell.....	49
Distributor Removal.....	50
Distributor Resistance Test.....	48
Drive Unit and Solenoid Assembly.....	83
Dual Breaker Points.....	49
Dwell Variation.....	49
Electric Drive Switch.....	88
Electric Window Lifts—Chrysler.....	103
Electric Window Lifts, Power Vent, Door Locks & Cigar Lighter—Imperial.....	104
End Play Adjustment.....	76
Engine Compartment Wiring—Chrysler.....	101
Engine Compartment Wiring—Imperial.....	102
Field Coil Testing—Direct Drive.....	18
Field Coil Testing—Reduction Gear Type.....	26
Flexible Cables.....	81
Front Seat Assembly & Adjuster.....	81
Fuel Level Indicating System.....	63
Fuse Block.....	68
Gravity Test.....	10
Headlamp Sealed-Beam Replacement.....	61
High Rate Discharge Test.....	11
Horizontal Drive Mechanism.....	89
Idle RPM Test.....	49
Ignition Coil.....	57
Inspecting Wiper Motor.....	75
Instrument Cluster Bulbs.....	68
Instrument Cluster—Chrysler.....	67
Instrument Cluster—Imperial.....	66
Instrument Panel Wiring—Chrysler.....	98
Instrument Panel Wiring—Imperial.....	96
Motor—Electric Windows.....	90
Oil Pressure Gauge—Imperial.....	65
Oil Pressure Warning Lamp—Chrysler.....	66
Operation—Electric Deck Lid.....	93
Operation—Six Way Power Seats.....	81
Parking Spring Lubrication—Variable Speed.....	74
Power Seat Wiring.....	84
Rectifiers Testing.....	41
Replacing Wiper Pivot.....	77
Seat & Cushion Assembly.....	87

## GROUP 8—ELECTRICAL—Continued

	Page
Seat Track & Rails Assembly.....	88
Seat Motor—Six Way Power Seats.....	82
Secondary Circuit Inspection.....	48
Service Diganosis—Alternator.....	47
Service Diagnosis—Battery.....	13
Service Diagnosis—Directional Indicators.....	71
Service Diagnosis—Electric Door Locks.....	80
Service Diagnosis—Electric Windows.....	92
Service Diagnosis—Four Way Power Seats.....	98
Service Diganosis—Headlamps.....	62
Service Diagnosis—Horns.....	79
Service Diagnosis—Ignition.....	57
Service Diagnosis—Instruments.....	69
Service Diagnosis—Six Way Power Seats.....	85
Service Diagnosis—Starting Motor.....	31
Service Diagnosis—Windshield Wipers.....	77
Slave Unit.....	84
Slip Rings Replacement.....	43
Solenoid.....	80
Spark Plugs.....	57
Specifications—Alternator.....	5
Specifications—Battery.....	4
Specifications—Starting Motor.....	4
Switches—Chrysler.....	67
Switches—Imperial.....	68
Switch Title Lighting—Imperial.....	68
Starter Clutch Unit.....	26
Starting Motor Assembly.....	19
Starting Motor Bench Test.....	22
Starting Motor Circuit Tests.....	15
Starting Motor Removal (Direct Drive).....	15
Starting Motor Removal (Reduction Gear Type).....	22
Starting Motor Testing.....	20
Tail Gate Window Lift Switch Wiring—Chrysler.....	102
Test—Electric Deck Lid.....	93
Testing Headlamp Aim.....	60
Temperature Indicating System.....	64
Testing Horns.....	78
Vertical Drive Mechanism.....	89
Voltage Limiter.....	63
Voltage Tests.....	11

## GROUP 9—ENGINE

Camshaft.....	21
Camshaft Bearings.....	22
Connecting Rods.....	27
Connecting Rod Bearings.....	27
Connecting Rod Bearing Clearance.....	27
Crankshaft Main Bearings.....	28

## INDEX—(Continued)

**GROUP 9—ENGINE—Continued**

	Page
Crankshaft Main Journals.....	28
Crankshaft Ventilator Valve.....	31
Cylinder Block.....	24
Cylinder Heads.....	12
Distributor Drive Shaft Bushing.....	23
Engine Assembly—Assembly.....	11
Engine Assembly—Removal.....	11
Engine Oil Pan.....	32
Front Engine Mounts.....	30
Hydraulic Tappets.....	16
Main Bearings.....	29
Measuring Main Bearing Clearance.....	29
Mechanical Tappets.....	18
Oil Filter Replacement.....	35
Oil Pump.....	33
Piston and Connecting Rod Assembly in Cylinder Block.....	28
Rear Engine Mounts.....	31
Rear Main Bearing Oil Seal.....	29
Rocker Arms and Shaft.....	12
Service Diagnosis.....	35
Special Tools.....	7
Specifications.....	1
Timing Chain Case Cover Oil Seal Replacement.....	20
Timing Sprocket and Chain.....	19
Torque Reference.....	8
Tune-Up.....	9
Valves and Valve Springs.....	14
Valve Timing—Except Fire Power 390.....	18
Valve Timing—VC-2 Fire Power 390.....	19

**GROUP 11—EXHAUST SYSTEM**

Exhaust Manifold.....	2
Exhaust, Mufflers and Tail Pipes.....	6
Intake Manifold.....	2
Manifold Heat Control Valve.....	5
Manifold Heat Control Valve Replacement.....	6
Service Diagnosis.....	7
Torque Reference.....	1

**GROUP 13—FRAME**

Body to Frame Alignment (Chrysler).....	5
Frame Alignment (Imperial).....	2
Frame Alignment Measurement (Chrysler).....	3
Frame Alignment Measurement (Imperial).....	2
Frame Replacement (Chrysler).....	3
Gauge Alignment Adapter Chart.....	5

**GROUP 14—FUEL SYSTEM (PUMP,  
CARBURETOR, TANK)**

	Page
Automatic Choke (Well Type)—AFB.....	35
Automatic Choke (Well Type)—BBD.....	23
Automatic Choke (Well Type)—WWC3.....	14
Carburetor Adjustments—AFB.....	32
Carburetor Adjustments—BBD.....	19
Carburetor Adjustments—Firepower 390.....	48
Carburetor Adjustments—WWC3.....	10
Closed Crankcase Vent System—AFB.....	36
Closed Crankcase Vent System—BBD.....	23
Disassembling the Carburetor—AFB.....	26
Disassembling the Carburetor—AFB Firepower 390.....	43
Disassembling the Carburetor—BBD.....	16
Disassembling the Carburetor—WWC3.....	5
Fuel Pump Operation.....	50
Fuel Tank Removal.....	52
Inspection and Reassembly—AFB.....	29
Inspection and Reassembly—BBD.....	17
Inspection and Reassembly—Firepower 390.....	45
Inspection and Reassembly—WWC3.....	7
Intake Manifolds.....	38
Service Diagnosis.....	55
Testing the Fuel Pump.....	50
Throttle Linkage—AFB.....	36
Throttle Linkage—BBD.....	23
Throttle Linkage—Firepower 390.....	41

**GROUP 16—PROPELLER SHAFT AND  
UNIVERSAL JOINTS**

Ball and Trunion Universal Joint (VC-1, VC-2, VC-3).....	3
Center Bearing (VY-1).....	8
Center Bearing Height (VY-1).....	7
Cross and Roller Universal Joint (VC-1, VC-2, VC-3).....	4
Propeller Shaft (VC-1, VC-2, VC-3).....	3
Propeller Shaft (VY-1).....	7
Propeller Shaft Angularity (VC-1, VC-2, VC-3).....	2
Propeller Shaft Angularity (VY-1).....	6
Service Diagnosis.....	9
Special Tools.....	1
Specifications.....	1
Torque Reference.....	1
Universal Joint (VY-1).....	8

**GROUP 17—SPRINGS AND  
SHOCK ABSORBERS**

Front Shock Absorber and/or Bushing.....	4
Measuring Rear Spring Height.....	2
Rear Shock Absorber Replacement.....	5

INDEX—(Continued)

**GROUP 17—SPRINGS AND SHOCK  
ABSORBERS—Continued**

	Page
Rear Springs .....	2
Rear Spring Front Pivot Bushing Replacement .....	4
Rear Spring Interliners .....	3
Service Diagnosis .....	6
Specifications .....	1
Testing and Bleeding the Shock Absorber .....	5
Tool List .....	1
Torque Reference .....	1

**GROUP 19—STEERING, (POWER, PUMPS  
AND LINKAGE)**

Adjustment of Roller Tooth and Worm .....	11
Belt Adjustment .....	38
Final Test, Adjustments and Specifications .....	26
Fluid Level .....	30
Gear Shaft Adjustment .....	13
Gear Shaft Oil Seal Replacement .....	13
Power Steering Gear—Removal .....	15
Power Steering Pump—Removal .....	32
Power Train—Assembly .....	24
Power Train—Disassembly .....	19
Pressure Test .....	30
Pump Flow Test .....	31
Service Diganosis—Manual Steering .....	39
Service Diagnosis—Power Steering .....	40
Service Diagnosis—Power Steering Pump .....	43
Specifications .....	1
Steering Column—Removal .....	4
Steering Gear Alignment—Manual .....	10
Steering Gear Assembly—Power .....	26
Steering Gear Installation (Chrysler)—Power .....	27
Steering Gear Installation (Imperial) .....	28
Steering Gear Removal—Manual .....	6
Steering Knuckles—Removal .....	12
Steering Linkage—Removal .....	12

**GROUP 21—TRANSMISSION (TORQUE  
CONVERTER)**

**3-Speed Heavy Duty Manual Transmission**

Gearshift Assembly—Removal .....	11
Gearshift Linkage Adjustment .....	12
Rear Oil Seal .....	13
Special Tools .....	2
Specifications .....	2
Torque Reference .....	2
Transmission Assembly .....	7
Transmission — Disassembly .....	4
Transmission — Installation in the Vehicle .....	9
Transmission — Removal from the Vehicle .....	4

**GROUP 21—TRANSMISSION (TORQUE  
CONVERTER) —Continued**

	Page
<b>4 Forward Speed Manual Transmission</b>	
Rear Oil Seal .....	25
Shift Linkage — Adjustment .....	16
Special Tools .....	14
Specifications .....	14
Transmission — Assembly .....	23
Transmission — Disassembly .....	18
Transmission — Installation in the Vehicle .....	25
Transmission — Removal .....	17

**Service Diagnosis**

Manual Transmission .....	26
---------------------------	----

**TorqueFlite Transmission (Torque Converter)**

Accumulator Piston and Spring .....	70
Air Pressure Tests .....	54
Aluminum Thread Repair .....	63
Back-up Lamp Switch Replacement .....	45
Band Adjustments .....	48
Clutch Engagement and Band Application Chart .....	38
Console Gearshift Unit .....	44
Extension Housing .....	56
Extension Housing Bearing and Oil Seal .....	70
Flushing the Torque Converter .....	63
Front Clutch .....	73
Front Oil Pump and Reaction Shaft Support .....	71
Front Pump Oil Seal .....	63
Gearshift and Parking Lock Controls .....	40
Gearshift Control Cable (Transmission End) .....	45
Governor .....	57
Governor and Support .....	71
Hydraulic Control Pressure Adjustments .....	53
Hydraulic Control Pressure Tests .....	51
Hydraulic Control System .....	39
Installation of Sub-Assemblies .....	81
Kickdown Servo and Band .....	79
Low-Reverse Servo and Band .....	80
Lubrication .....	41
Maintenance Adjustments and Tests .....	41
Neutral Starting Switch .....	47
Neutral Starting Switch .....	59
Overrunning Clutch .....	79
Ouput Shaft Oil Seal .....	55
Operating Instructions .....	40
Parking Lock Cable (Transmission End) .....	46
Parking Lock Components .....	59
Parking Sprag and Lever .....	70
Planetary Gear Assemblies, Sun Gear and Driving Shell .....	77

## INDEX—(Continued)

**GROUP 21—TRANSMISSION (TORQUE CONVERTER)—Continued**

	Page
Push Button and Console Shift Lamp Replacement.....	45
Rear Clutch .....	75
Rear Oil Pump .....	58
Rear Oil Pump .....	71
Recondition Sub-Assemblies .....	66
Removal of Sub-Assemblies .....	64
Service Diagnosis .....	84
Specifications .....	27
Special Tools .....	28
Speedometer Pinion .....	55
Servicing Operation with Transmission in Vehicle.....	55
Starter Ring Gear Replacement.....	83
Throttle Linkage Adjustment .....	48
Torque Reference .....	28
Transmission and Converter Removal and Installation...	60
Valve Body Assembly .....	67
Valve Body Assembly and Accumulator Piston.....	60

**GROUP 22—WHEELS, BEARINGS AND TIRES**

Care of Tires .....	2
Dismounting and Mounting Tires.....	3
Front Wheel Bearings .....	4
Measuring Wheel and Tire Runout.....	2
Repairing Leaks .....	3
Service Diagnosis .....	6
Specifications .....	1
Tire Rotation .....	2
Tire Wear Patterns .....	5
Tool List .....	1
Wheel Balance .....	3

**GROUP 23—BODY AND SHEET METAL****Part 1—Body Adjustments Maintenance**

Care and Cleaning of the Top.....	6
Cleaning Interior Upholstery .....	5
Paint Finish Care (All Models).....	5
Rear Window (Convertible Coupe).....	6

**Part 2—Body Adjustments**

Aligning Doors (All Models).....	8
Aligning the Hood .....	7
Centering Deck Lid in Opening.....	10
Deck Lid Alignment .....	10
Final Door Striker Plate Adjustment.....	9
Fitting the Front Door Flush with Adjacent Panels.....	9
Front Door Vent Wing and Door Glass Adjustment (Hardtop Models) Chrysler .....	13

**GROUP 23—BODY AND SHEET METAL—(Continued)**

	Page
<b>Part 2—Body Adjustments—Continued</b>	
Hood .....	15
Hood Hinge .....	15
Moving the Door Forward or Back (Front Door).....	9
Quarter Glass Adjustment (Chrysler).....	15
Quarter Glass Adjustment (Imperial).....	14
Rear Door Adjustments .....	10
Rear Door Glass Adjustment (Hardtop) Chrysler.....	14
Rear Door Glass Adjustment (Hardtop) Imperial.....	13
To Raise or Lower Door (Front Doors).....	9
Vent Wing Frame and Door Glass Adjustment.....	12
<b>Part 3—Body Sealing</b>	
Deck Lid Lock Cylinder and Bezel.....	22
Door Openings .....	19
Exterior Moulding Attaching .....	23
Floor Pan Leakage .....	23
Gasoline Resistant Sealer .....	16
General Seam Sealing Material.....	16
Housing—Fuel Filler .....	21
Leakage at Deck Lid.....	21
Luggage Compartment Sealing .....	20
Rear Quarter Panel .....	21
Rear Window .....	22
Roof .....	22
Water and Dust Leakage Areas.....	16
Weatherstrip Adhesive .....	16
Windshield Rubber Cement .....	16
<b>Part 4—Minor Body Servicing</b>	
Convertible Windshield Glass .....	39
Custom Positioned Six-Way Manual Front Seat Adjustment .....	25
Deck Lid .....	36
Deck Lid Hinges .....	37
Deflector (Chrysler Models) .....	24
Deflector (Imperial Models) .....	24
Door and Quarter Panel Trim Panels Removal.....	25
Door and Quarter Panel Trim Replacement.....	25
Door Inside Hardware and Trim (Manual Door Locks)...	30
Door Hinges (All Models).....	30
Door Lock and Remote Control Assemblies.....	31
Door Opening Weatherseal .....	26
Electric Window Regulator Switch Removal.....	25
Exterior Mouldings .....	29
Fender .....	24
Front and Rear Door Window Regulator.....	34
Front Door .....	29
Front Door Glass .....	41

INDEX—(Continued)

**GROUP 23—BODY AND SHEET METAL—  
(Continued)**

	Page
<b>Part 4—Minor Body Servicing—Continued</b>	
Front Door Glass (Four Door Sedan) Chrysler.....	43
Front Door Vent Wing.....	40
Front Seat.....	28
Grille (Chrysler Models).....	24
Grille (Imperial Models).....	24
Headlining.....	26
Lock Cylinder.....	33
Outside Door Handle and Key Cylinder.....	33
Quarter Glass (Convertible and Hardtop).....	44
Radiator Core Support.....	25
Rear Deck Lid (Convertible).....	35
Rear Deck Lid Hinges and Locks—Removal, Installation Alignment.....	35
Rear Door (All Models).....	30
Rear Door Glass (Four Door Hardtop and Town and Country).....	43
Rear Door Glass (Four Door Sedan).....	44
Rear Seat.....	29
Rear Seat Back.....	29
Rear Window Glass.....	40
Windshield Glass (All Models).....	37
<b>Part 5—Major Body Servicing</b>	
Application.....	48
Paint Refinishing.....	47
Preparation.....	47
Refinishing.....	48
Removing Old Finish.....	47
Replacement of Body Panels Sub-Assemblies (All Models).....	46
<b>Part 6—Convertible Maintenance</b>	
Body Alignment—Imperial Only.....	49
Care and Cleaning of Top.....	56
Correcting Top Header Water Leaks.....	51
Correcting Top Well Water Leaks.....	55
Correcting Wrinkles in Back Light.....	54
Fluid Level in Reservoir.....	55
Front Hinge Adjustment.....	52
Front Top Bow Adjustment.....	53
Main Control Prop Link Bracket Adjustment.....	53
Operating the Convertible Coupe Top.....	49
Power Guide Link Adjustment.....	53
Rear Bow Tension Cables.....	54
Rear Hinge Adjustment.....	52
Rear Window Convertible Coupe.....	56
Roof Side Rail Alignment.....	51
Roof Side Rail Weatherstrip Adjustment.....	54

**GROUP 23—BODY AND SHEET METAL—  
(Continued)**

	Page
<b>Part 6—Convertible Maintenance—Continued</b>	
Servicing the Top Folding Mechanism.....	55
Testing the Top Control Switch.....	56
Testing Wires Between Control Switch and Pump Motor.....	56
Top Adjustments.....	49
Top Headers.....	50
Top Header Adjustment.....	50
Top Shifts to One Side.....	53
Top Will Not Raise or Lower.....	55
Vent Frame Leak at Top Edge.....	51
<b>Part 7—Town and Country</b>	
Folding Third Seat.....	58
Power Windows (Vent Wing, Door, Quarter Glass and Tail Gate).....	59
Quarter Glass.....	58
Tail Gate.....	57
Tail Gate Glass.....	57
Tail Gate Glass.....	59
Tail Gate Glass Run Channel.....	58
Tail Gate Glass Run Channel Leakage.....	60
Tail Gate Sealing.....	59
Tail Gate Weatherstrip.....	59
Tail Lamp.....	60
<b>Part 8—Service Diagnosis</b>	
Convertible Coupe Top.....	64
Manual Door Locks and Linkage.....	61
Vacuum Door Locks.....	62
<b>GROUP 24—AIR CONDITIONING</b>	
AntiFreeze Recommendations.....	22
Blower and Distribution Duct.....	34
Charging the System.....	39
Compression Drive Belt Adjustment.....	22
Compressor Removal.....	28
Crankshaft and Ball Bearing.....	31
Crankshaft Bearing Housing and Gas Seal.....	29
Cylinder Head and Valve Plate Assembly.....	28
Discharge the System.....	36
Electrical Controls and Circuits.....	3
EPR Valve.....	27
Evacuate the System.....	38
Evaporator Assembly—Removal.....	33
Expansion Valve.....	32
Gauge Set Manifold.....	5
Heater Core.....	32
Magnetic Clutch.....	25
Oil Pump.....	31

## INDEX—(Continued)

GROUP 24—AIR CONDITIONING—  
(Continued)

	Page
Operation .....	3
Piston and Connecting Rod.....	29
Preliminary Test, Inspection and Adjustments.....	5
Radiator Pressure Cap Requirements.....	23
Receiver, Drier, Strainer—Replace .....	38
Refrigerant Service .....	35
Safety Precautions .....	21
Service Diagnosis .....	39
Servicing the Compressor .....	27
Specifications .....	1
Sweep-Test Charge .....	36
Test Precautions .....	37

GROUP 24—AIR CONDITIONING—  
(Continued)

	Page
Test 1—Test System Pressure.....	7
Test 2—Refrigerant Level .....	8
Test 3—Testing the System for Leaks.....	8
Test 4—Correcting Low Refrigerant Level.....	9
Test 5—Performance Test .....	9
Test 6—Evaporator Pressure Regulator Valve Test.....	15
Test 7—Compression Capacitor Test.....	17
Test 8—Expansion Valve Test.....	19
Testing Electromagnet Current Draw.....	25
Testing the System for Leaks.....	36
Torque Reference .....	2
Vacuum Control System Adjustments and Tests.....	23

---



