

PART NAME	CODE	PART NAME	CODE
A			
ALPHABETICAL INDEX			
Absorber, shock	1-07-1 17-23-3 to 17-23-57	Arm and idler arm, steering link gear, power steering	19-27-2 to 19-27-55
Accelerator pedal	14-01-1 to 14-01-30	Arm and idler arm, steering link gear, standard steering	19-27-2 to 19-27-51
Accelerator pedal return spring . . .	14-06-1 to 14-06-10	Arm rest, front door	23-76-3 to 23-76-86
Accelerator pedal to accelerator shaft rod	14-07-15	Ash receiver	23-02-1 to 23-02-151
Accelerator shaft	14-11-1 to 14-11-48	Assist strap	23-77-3 to 23-77-17
Accessories	1-04-0 thru 1-108-0	Automatic choke to carburetor rod clip	14-65-4
Actuator	24-29-1 to 24-29-15	Automatic door lamp switch	8-12-2 to 8-12-17
Adjuster, front seat	23-47-6 to 23-47-456	Automatic headlamp dimmer	1-04-4 to 1-04-18
Adjuster, wheel brake	5-20-1 to 5-20-20	Automatic pilot	1-26-1 14-02-1 to 14-02-79
Air cleaner, carburetor	14-29-2 to 14-29-40	Automatic 3 speed transmission . . .	21-02-1
Air cleaner, crankcase vent inlet . . .	10-01-21 to 10-01-62	Auxiliary vacuum switch	24-24-150
Air cleaner, power brake	5-113-17 to 5-113-23	Axle, housing rear	3-02-1 to 3-02-20
Air conditioning	24-01-1 to 24-01-87	B	
Air conditioning control	24-24-5 to 24-24-167	Back, rear seat	23-109-3 to 23-109-40
Air intake	23-61-39 to 23-61-118	Back-up lamp	1-10-1 8-56-1 to 8-56-61
Alternator	8-28-3 to 8-28-292	Back-up lamp switch	8-56-2
Alternator component parts	8-29-17 to 8-29-208	Band, automatic 3 speed transmission	21-136-5 to 21-136-237
Ammeter	8-37-1	Bar, belt	23-51-3 to 23-51-48
Antenna, radio	1-88-1 to 1-88-205	Bar, front bumper face	13-64-3 to 13-64-149
Anti-squeak, body	23-31-33 to 23-31-205	Bar, front suspension torsion	2-14-0 to 2-14-3
Arm, front wheel lower control	2-10-6 to 2-10-76	Bar, radiator cross	7-33-1 to 7-33-22
Arm, front wheel upper control	2-08-5 to 2-08-72	Bar, rear bumper face	13-66-3 to 13-66-153
Arm, steering linkage knuckle	2-05-4 to 2-05-12	Battery and cable	8-01-4 to 8-01-21
Arm and bracket, visor	23-103-10 to 23-103-48	Battery heat shield	13-35-1
		Battery hold-down strap	13-34-3
		Battery hold-down stud	13-36-5
		Battery support tray	13-33-61 to 13-33-68

PART NAME	CODE	PART NAME	CODE
Bearing, camshaft	9-16-6 to 9-16-17	Body insulator	23-31-33 to 23-31-205
Bearing, clutch release	6-19-2 to 6-19-3	Body liner	23-31-33 to 23-31-205
Bearing, countershaft, manual transmission	21-25-2 to 21-25-6	Body pad	23-31-33 to 23-31-205
Bearing, differential	3-11-1 to 3-11-14	Body pan	23-32-6 to 23-32-115
Bearing, drive pinion	3-22-24 to 3-22-45	Body panel	23-34-3 to 23-34-354
Bearing, drive shaft	3-33-1 to 3-33-11	Body pillar	23-36-4 to 23-36-141
Bearing, front wheel	22-06-1 to 22-06-18	Body plug	23-32-6 to 23-32-115
Bearing, main shaft, manual transmission	21-19-2 to 21-19-15	Body reinforcement	23-07-168 to 23-07-169
Bearing, main shaft pilot, manual transmission	21-17-2 to 21-17-7	Body seal	23-31-33 to 23-31-205
Bearing, propeller shaft center	16-16-1 to 16-16-43	Body side sill	23-51-3 to 23-51-45
Bearing package, connecting rod	9-32-2	Body striker	23-08-12 to 23-08-75
Bearing package, crankshaft	9-09-2	Bolt, drive gear	3-20-1
Belt, fan and related drive	7-03-1	Bolt, rear spring center	17-14-10
Belt, safety seat	1-67-1 to 1-67-18	Boot, folding top dust	23-112-12 to 23-112-153
Belt bar	23-51-3 to 23-51-48	Boot, master cylinder	5-40-1
Belt package	1-67-1 to 1-67-9	Boot, wheel cylinder	5-69-1
Block, cylinder	9-02-7 to 9-02-16	Box, glove	23-06-4 to 23-06-68
Block, rear spring silent	17-17-3 to 17-17-5	Brace, fender	12-07-1
Blower motor switch	24-24-5	Bracket, body	23-07-169
Blower motor switch w/cable	24-24-5	Bracket, brake pedal	5-31-11 to 5-31-18
Board, floor	23-04-205 to 23-04-250	Bracket, brake tube	5-57-2
Body, universal joint	16-04-1	Bracket, clutch pedal	6-46-1
Body and chassis wiring	8-15-2 to 8-15-53	Bracket, fender	12-06-3
Body anti-squeak	23-31-33 to 23-31-205	Bracket, fender pillar support and cowl	12-05-2
Body bracket	23-07-169	Bracket, frame engine rear support crossmember	9-70-9
Body bumper	23-08-12 to 23-08-75	Bracket, power unit mounting	5-101-1
	23-32-6 to 23-32-115	Bracket, steering column, power steering	19-31-1 to 19-31-7
		Bracket, steering column, standard steering	19-31-1 to 19-31-7
		Bracket, throttle control mounting	14-26-2 to 14-26-11
		Bracket and arm, visor	23-103-10 to 23-103-48

PART NAME	CODE	PART NAME	CODE
Brake, power	1-42-1	Cable, fast idle	14-24-1
Brake, support	5-13-0	to	14-24-6
	to	Cable, parking brake	4-23-1
	5-13-85	to	4-23-46
Brake drum	22-04-2		
	to	Cable, speedometer, automatic	
	22-04-14	transmission	21-84-1
Brake flexible hose	5-62-1	to	21-84-28
	to		
	5-62-20	Cable, speedometer, manual	
Brake fluid	5-01-1	transmission	21-84-1
Brake pedal and bushing	5-27-1	to	21-84-28
	to		
	5-27-21	Cable, throttle control	14-25-5
Brake pedal bracket	5-31-11	to	14-25-17
	to		
	5-31-18	Cable and battery	8-01-4
Brake pedal pad	5-28-8	to	8-01-21
	to		
	5-28-9	Cable and connection	8-16-1
Brake pedal return spring	5-34-1	to	8-16-10
	to		
	5-34-6	Camshaft	9-15-1
Brake pedal shaft	5-29-1	to	9-15-10
Brake pedal stop	5-30-12	Camshaft bearing	9-16-6
Brake self adjusting package	1-44-1	to	9-16-17
Brake shoe guide	5-25-9	Camshaft sprocket	9-17-5
Brake switch, w/bracket	14-02-32	Cap, crankshaft bearing	9-10-2
Brake tube bracket	5-57-2	to	9-10-26
Brake tube clip	5-56-2	Cap, fuel tank locking	1-39-2
Brake tube tee	5-58-1	Cap, hub	22-08-5
	to	to	22-08-57
	5-58-2	Cap, radiator filler	7-12-1
Brake tubing and cover	5-53-3	Carburetor	14-30-1
	to	Carburetor air cleaner	14-29-2
	5-53-6	to	14-29-40
Bulb	8-44-1	Carburetor assemblies and service	
Bumper, body	23-08-12	parts	14-30-2
	to		14-30-4
	23-08-75		14-30-7
	23-32-6		14-30-8
	to		14-30-27
Bumper, hood	23-32-115		14-30-28
Bumper, rear spring	15-09-4		14-35-1
	17-19-3		14-35-6
	to		14-35-8
	17-19-20		14-35-33
Bumper guard	1-01-1		14-35-39
	13-68-6		14-39-7
	to		14-39-45
	13-68-18		14-41-3
Bumper jack	13-72-1		14-49-5
	to	Carburetor fuel line tee	14-85-31
	13-72-4	Carpet, front floor	23-79-3
Bushing and pedal, brake	5-27-1	to	23-79-79
	to	Carrier, spare wheel	22-20-29
	5-27-21	to	22-20-89
Bushing and roller, universal		Carrier and components, front and rear	
joint cross	16-10-1	planet pinion, automatic 3 speed	
	to	transmission	21-134-5
	16-10-3	to	21-134-45
Button, tufting	23-78-2		
Button, universal joint centering	16-06-1		
	to		
	16-06-3		
C			
Cable, choke control	14-63-1		
	to		
	14-63-24		

1965 PASSENGER CAR PARTS CATALOG

ALPHABETICAL
INDEX

PART NAME	CODE	PART NAME	CODE
Carrier and differential, rear axle . . .	3-03-1 to 3-03-36	Clutch parts, differential	3-09-1 to 3-09-3
Case, differential	3-04-6 to 3-04-10	Clutch pedal	6-38-1 to 6-38-23
Case, manual transmission	21-03-1 to 21-03-25	Clutch pedal bracket	6-46-1
Case, transmission, automatic 3 speed	21-03-2 to 21-03-40	Clutch pedal pad	6-29-2
Case, transmission, manual	21-03-1 to 21-03-25	Clutch pedal rod	6-50-1 to 6-50-10
Center pillar trim cover	23-99-4 to 23-99-38	Clutch pedal shaft	6-43-1 to 6-43-13
Chain, timing	9-20-1	Clutch pressure plate	6-15-1
Chain case cover	9-23-5 to 9-23-40	Clutch pressure spring	6-16-1
Channel, glass	23-09-9 to 23-09-75	Clutch release bearing	6-19-2 to 6-19-3
Chassis and body wiring	8-15-2 to 8-15-53	Clutch release bearing return spring . . .	6-20-14
Check, door	23-10-1 to 23-10-18	Clutch release overcenter spring . . .	6-35-1 to 6-35-17
Choke control cable	14-63-1 to 14-63-24	Clutch release fork	6-22-1 to 6-22-19
Cigar lighter	1-12-1 8-20-3 to 8-20-16	Clutch release fork return spring . . .	6-27-5
Clamp and support, exhaust pipe . . .	11-08-5 to 11-08-24	Clutch release lever	6-17-3
Clip, automatic choke to carburetor rod	14-65-4	Clutch release rod	6-24-1 to 6-24-14
Clip, brake tube	5-56-2	Clutch torque shaft	6-52-1 to 6-52-17
Clip, fuel line tube	14-90-1	Coat hanger hook	23-82-30 to 23-82-39
Clip, rear spring	17-15-1 to 17-15-30	Component parts, alternator	8-29-17 to 8-29-208
Clock	1-21-1 to 1-21-27	Components, seat belt	23-49-3 to 23-49-9
Clutch	6-01-3	Components and carrier, front and rear planet pinion, automatic	21-134-5 to 21-134-45
Clutch, automatic 3 speed transmission	21-133-7 to 21-133-65	Components and heater	1-48-1 to 1-48-950
Clutch cover and pressure plate . . .	6-14-1 to 6-14-10	Compressor	24-25-2 to 24-25-260
Clutch disc	6-13-1 to 6-13-4	Condenser	24-27-5 to 24-27-15
Clutch housing	6-09-1 to 6-09-11	Conditioning, air	24-01-1 to 24-01-87
Clutch housing pan	6-10-2 to 6-10-10	Connecting rod	9-31-4 to 9-31-10
		Connecting rod bearing package	9-32-2
		Connection and cable	8-16-1 to 8-16-10
		Connector, power brake hose	5-110-18
		Console, floor tunnel	23-38-1 to 23-38-40

PART NAME	CODE	PART NAME	CODE
Control, air conditioning	24-24-5 to 24-24-167	Crankcase vent inlet air cleaner . . .	10-01-21 to 10-01-62
Control, door lock and remote	23-18-5 to 23-18-125	Crankshaft	9-07-5 to 9-07-22
Control, gearshift, automatic 3 speed transmission	21-30-2 to 21-30-425	Crankshaft bearing cap	9-10-2 to 9-10-26
Control, hood lock	15-14-1 to 15-14-21	Crankshaft bearing package	9-09-2
Control, horn	8-33-4 to 8-33-164	Crankshaft rear bearing oil seal . . .	9-11-1 to 9-11-7
Control, manifold heat	9-59-13 to 9-59-15	Crankshaft sprocket	9-08-5
Converter, torque	9-46-4 to 9-46-229	Crankshaft vibration damper	9-13-5
Core, radiator	7-11-3	Cross, universal joint	16-08-6 to 16-08-7
Countershaft, manual transmission . .	21-24-2 to 21-24-22	Crossmember, frame engine rear support	13-10-1 to 13-10-12
Coupling and shaft, steering column, power steering	19-15-4 to 19-15-111	Crossmember, frame front	13-11-5 to 13-11-17
Courtesy and map lamp	1-14-4 to 1-14-6	Crossmember, frame rear	13-18-4 to 13-18-32
Courtesy lamp	8-42-1 to 8-42-29	Cup, wheel cylinder piston	5-71-1 to 5-71-2
Cover, case, manual transmission . .	21-29-3 to 21-29-33	Cushion, front seat	23-108-4 to 23-108-142
Cover, center pillar trim	23-99-4 to 23-99-38	Cylinder, master	5-39-1 to 5-39-24
Cover, chain case	9-23-5 to 9-23-40	Cylinder, wheel brake	5-64-1 to 5-64-2
Cover, front console	23-71-1	Cylinder and key, lock	23-17-2 to 23-17-72
Cover, second seat back hinge	23-70-5 to 23-70-6	Cylinder block	9-02-7 to 9-02-16
Cover, universal joint	16-07-3 to 16-07-4	Cylinder head	9-03-4 to 9-03-29
Cover and tubing, brake	5-53-3 to 5-53-6	Cylinder head water outlet elbow . . .	9-05-5 to 9-05-6
Cowl trim panel	23-91-6	D	
Cowl vent	23-61-39 to 23-61-118	Damper, crankshaft vibration	9-13-5
Crank, throttle control bell	14-14-1 to 14-14-41	Deck lid	23-19-8 to 23-19-206
Crankcase closed vent system	10-02-53 to 10-02-67	Deck lid lock release switch	23-19-94
		Deflector, fuel tank stone	14-87-2
		Deflector, radiator stone	7-35-2 to 7-35-14
		Defogger, rear window	1-47-1 to 1-47-20
		Differential and carrier, rear axle . .	3-03-1 to 3-03-36

1965 PASSENGER CAR PARTS CATALOG

PART NAME	CODE	PART NAME	CODE
Differential bearing	3-11-1 to 3-11-14	Drive shaft oil seal	3-35-14
Differential case	3-04-6 to 3-04-10	Drum, brake	22-04-2 to 22-04-14
Differential clutch parts	3-09-1 to 3-09-3	Drum, hub and brake	22-03-1
Differential pinion	3-07-1 to 3-07-2	E	
Differential pinion shaft	3-08-1 to 3-08-2	Elbow, cylinder head water outlet . . .	9-05-5 to 9-05-6
Differential side gear	3-06-5 to 3-06-8	Elbow, water pump	7-48-22
Dimmer, automatic headlamp	1-04-4 to 1-04-18	Electric Door lock switch	23-18-103
Disc, clutch	6-13-1 to 6-13-4	Electric seat adjuster switch	23-47-446
Distributor, ignition	8-27-1 to 8-27-352	Electric window lift and vent wing switch	23-41-170
Dome lamp and switch	8-05-6 to 8-05-40	Electric window lift safety switch package	1-50-1
Dome lamp switch	8-05-14	Electric window lift switch w/bezel . .	23-41-170
Door	23-11-1 to 23-11-30	Emergency flasher light	1-06-1 to 1-06-4
Door check	23-10-1 to 23-10-18	Emergency flasher light switch	1-06-3
Door hinge	23-15-1 to 23-15-38	Engine	9-01-5 to 9-01-24
Door lock and remote control	23-18-5 to 23-18-125	Engine front support	9-64-5 to 9-64-24
Door regulator	23-14-10 to 23-14-153	Engine front support insulator	9-67-4
Door remote control handle	23-14-10 to 23-14-153	Engine rear support insulator	9-71-5 to 9-71-15
Door trim panel	23-92-5 to 23-92-25	Evaporator	24-28-3 to 24-28-396
Drain cock, radiator	7-13-2	Exhaust pipe	11-05-1 to 11-05-12
Drain trough	23-59-25 to 23-59-61	Exhaust pipe flange gasket and stud . .	11-06-3 to 11-06-10
Drier, receiver	24-26-20 to 24-26-101	Exhaust pipe support and clamp	11-08-5 to 11-08-24
Drive gear and pinion set	3-19-1	Exhaust valve	9-39-6 to 9-39-21
Drive gear bolt	3-20-1	Extension, case, automatic 3 speed transmission	21-04-1 to 21-04-18
Drive pinion bearing	3-22-24 to 3-22-45	Extension, case, manual transmission.	21-04-1 to 21-04-11
Drive shaft	3-32-1 to 3-32-13	F	
Drive shaft bearing	3-33-1 to 3-33-11	Fan	7-02-1 to 7-02-16
		Fan and alternator idler pulley	7-04-1 to 7-04-16
		Fan and related drive belts	7-03-1
		Fan drive and driven pulley	7-06-1 to 7-06-14
		Fan fluid drive unit	7-07-1
		Fan pulley hub	7-05-1
		Fast idle cable	14-24-1 to 14-24-6

PART NAME	CODE	PART NAME	CODE
Fender, front	12-01-5 to 12-01-105	Frame engine rear support cross- member	13-10-1 to 13-10-12
Fender brace	12-07-1	Frame engine rear support cross- member bracket	9-70-9
Fender bracket	12-06-3	Frame front crossmember	13-11-5 to 13-11-17
Fender moulding	12-15-11 to 12-15-21	Frame rear crossmember	13-18-5
Fender name plate	12-15-11 to 12-15-21	Frame rear spring hanger	13-54-4 to 13-54-15
Fender ornaments	12-15-11 to 12-15-21	Frame sub - sidemember	13-04-20
Fender pillar support and cowl bracket	12-05-2	Front bumper face bar	13-64-3 to 13-64-149
Fender seal	12-02-5 to 12-02-10	Front console cover	23-71-1
Fender shim	12-02-5 to 12-02-10	Front door arm rest	23-76-3 to 23-76-86
Fender support	12-07-1	Front door power unit vent switch . .	23-41-170
Filter, fuel	14-67-1 to 14-67-29	Front fender	12-01-5 to 12-01-105
Filter, oil	10-26-5 to 10-26-65	Front fender shield	12-04-4 to 12-04-25
Filter, oil, automatic 3 speed transmission	21-117-1 to 21-117-5	Front floor carpet	23-79-3 to 23-79-79
Flange, propeller shaft	16-20-1 to 16-20-8	Front seat	23-45-29 to 23-45-197
Floor board	23-04-205 to 23-04-250	Front seat adjuster	23-47-6 to 23-47-456
Floor mat	23-20-8 to 23-20-65	Front seat back grab handle	23-82-14
Floor tunnel console	23-38-1 to 23-38-40	Front seat back to cushion push nut .	23-115-4 to 23-115-10
Fluid, brake	5-01-1	Front seat center arm screw	23-115-10
Flywheel	9-45-1 to 9-45-2	Front seat cushion	23-108-4 to 23-108-142
Folding top	23-58-3 to 23-58-607	Front suspension torsion parts	2-14-1 to 2-14-25
Folding top bow tacking strip	23-111-10 to 23-111-37	Front wheel bearing	22-06-1 to 22-06-18
Folding top dust boot	23-112-12 to 23-112-153	Front wheel lower control arm	2-10-6 to 2-10-76
Folding top header top material retainer	23-112-4 to 23-112-160	Front wheel upper control arm	2-08-5 to 2-08-72
Folding top lift switch	23-58-532	Fuel filter	14-67-1 to 14-67-29
Foot dimmer switch	8-53-150	Fuel gauge	8-37-275
Fork, clutch release	6-22-1 to 6-22-19	Fuel line tube	14-89-2
Fork, gearshift, manual transmission .	21-39-3	Fuel line tube clip	14-90-1
Frame	13-01-1	Fuel pump	14-73-1
		Fuel pump mounting gasket	14-74-1
		Fuel pump push rod	14-77-1
		Fuel tank	14-86-1 to 14-86-85

PART NAME	CODE	PART NAME	CODE
Fuel tank gauge	14-72-1 to 14-72-47	Gearshift control rod, standard steering	19-48-1 to 19-48-52
Fuel tank locking cap	1-39-2	Generator	8-28-3 to 8-28-292
Fuel tank stone deflector	14-87-2	Generator component parts	8-29-17 to 8-29-208
Fuel tank support	14-88-8 to 14-88-36	Glass channel	23-09-9 to 23-09-75
Fuses	8-17-2 to 8-17-30	Glove box	23-06-4 to 23-06-68
G		Glove compartment lamp	1-19-1 8-38-4 to 8-38-23
Garnish moulding	23-22-53 to 23-22-155	Glove compartment lamp and switch. .	8-38-4 to 8-38-23
Gasket, fuel pump mounting	14-74-1	Governor	14-68-3 to 14-68-8
Gasket, manifold	9-50-1 to 9-50-6	Governor, automatic 3 speed transmission	21-138-2 to 21-138-38
Gasket, water pump	7-44-3 to 7-44-4	Grille, radiator	7-16-11 to 7-16-82
Gasket and stud, exhaust pipe flange . .	11-06-3 to 11-06-10	Guard, bumper	13-68-6 to 13-68-18
Gauge, fuel	8-37-275	Guide, brake shoe	5-25-9
Gauge, fuel tank	14-72-1 to 14-72-47	Guide, wheel brake shoe	5-26-1 to 5-26-5
Gauge, oil	8-37-316	H	
Gauge, temperature	8-37-176	Handle, door remote control	23-14-10 to 23-14-153
Gear, differential side	3-06-5 to 3-06-8	Handle, front seat back grab	23-82-14
Gear, clutch, manual transmission . .	21-14-1 to 21-14-21	Handle, rear door pull-to	23-81-3
Gear, countershaft, manual transmission	21-15-2 to 21-15-33	Hanger, frame rear spring	13-54-4 to 13-54-15
Gear, manual transmission	21-10-3 to 21-10-31	Head, cylinder	9-03-4 to 9-03-29
Gear, oil pump drive	10-10-1	Headlamp	8-34-1 to 8-34-365
Gear, power steering	19-01-4 to 19-01-62	Headlamp beam indicator lamp	8-39-15
Gear, reverse idler, manual transmission	21-11-1 to 21-11-9	Headlamp switch	8-53-270
Gear, steering, standard	19-01-3 to 19-01-19	Headlining and listing	23-86-2 to 23-86-37
Gear and pinion, speedometer, manual transmission	21-85-22 to 21-85-61	Heater and components	1-48-1 to 1-48-950
Gearshift, remote control, manual transmission	21-42-11 to 21-42-43	Heater blower switch	1-48-770
Gearshift control, automatic 3 speed transmission	21-30-2 to 21-30-425	Hinge, door	23-15-1 to 23-15-38
Gearshift control rod, power steering.	19-48-1 to 19-48-52	Hinge, hood	15-19-2 to 15-19-47

PART NAME	CODE	PART NAME	CODE
High beam indicator lamp	8-39-15	Ignition and starter switch	8-35-59
Hood bumper	15-09-4	Ignition coil	8-35-4
Hood hinge	15-19-2	to	
	to		8-35-115
	15-19-47	Ignition distributor	8-27-1
Hood letters	15-06-0	to	
Hood lock	15-11-3		8-27-352
	to	Ignition lamp	8-40-5
	15-11-58	to	
Hood lock control	15-14-1		8-40-16
	to	Ignition switch and lock cylinder . . .	8-35-4
	15-14-21	to	
Hood lock striker	15-13-2		8-35-115
Hood medallion	15-06-0	Impeller, water pump	7-45-31
Hood moulding	15-25-0	Indicator, oil level	10-03-4
Hood name plate	15-06-0	to	
Hood top panel	15-03-3		10-03-10
	to	Instrument lamp switch	8-53-270
	15-03-60	Instrument panel	23-33-10
Hook, coat hanger	23-82-30	to	
	to		23-33-236
	23-82-39	Instrument panel center moulding and	
Horn	8-32-2	finish plate	1-40-3
	to	Instrument panel instruments	8-37-1
	8-32-18	to	
Horn control	8-33-4		8-37-509
	to	Instrument panel lamp	8-41-35
	8-33-164	to	
Hose, brake flexible	5-62-1		8-41-36
	to	Instrument panel trim pad	23-84-3
	5-62-20	to	
Hose, power brake vacuum	5-111-17		23-84-31
Hose, power steering	19-58-7	Instrument panel wiring	8-19-2
	to	to	
	19-58-31		8-19-87
Hose, radiator	7-14-4	Instruments, instrument panel	8-37-1
	to	to	
	7-14-31		8-37-509
Housing, case, manual transmission. .	21-29-3	Insulator, body	23-31-33
	to	to	
	21-29-33		23-31-205
Housing, clutch	6-09-1	Insulator, engine front support	9-67-4
	to	Insulator, engine rear support	9-71-5
	6-09-11	to	
Housing, rear axle	3-02-1		9-71-15
	to	Insulator, propeller shaft center	
	3-02-20	bearing	16-17-1
Housing, steering gear, power steering	19-02-4	Intake, air	23-61-39
	to	to	
	19-02-55		23-61-116
Housing, steering gear, standard		Intake valve	9-39-1
steering	19-02-4	to	
	to		9-39-5
	19-02-17		
Housing, water pump	7-43-1		
	to		
	7-43-8	Jack, bumper	13-72-1
Hub, fan pulley	7-05-1	to	
Hub, wheel	22-05-14		13-72-4
	to	Jacket, steering column, power	
	22-05-24	steering	19-14-1
Hub and brake drum	22-03-1	to	
Hub cap	22-08-5		19-14-68
	to	Jacket, steering column, standard	
	22-08-57	steering	19-14-1
		to	
			19-14-68
Ignition	8-36-1	Joint, universal	16-03-1
	to	to	
	8-36-139		16-03-20

PART NAME	CODE	PART NAME	CODE
K			
Knuckle, steering	2-03-3	Lever, control, automatic 3 speed . . transmission	21-142-12 to 21-142-21
L			
Lamp, back-up	1-10-1 8-56-1 to 8-56-61	Lever, gearshift, manual transmission	21-30-2 to 21-30-433
Lamp, courtesy	8-11-5 to 8-11-28	Lever, parking brake (foot operated) .	4-25-1 to 4-25-28
Lamp, courtesy and map	1-14-4 to 1-14-6 8-42-1 to 8-42-29	Lever, parking brake (hand operated) .	4-08-1 to 4-08-36
Lamp, glove compartment	1-19-1	Lever, parking brake operating	4-26-1 to 4-26-27
Lamp, high beam indicator	8-39-15	License lamp	8-57-10 to 8-57-109
Lamp, ignition	8-40-5 to 8-40-16	License mounting parts	8-47-8 to 8-47-131
Lamp, license	8-57-10 to 8-57-109	Lid, deck	23-19-8 to 23-19-188
Lamp, map and courtesy	1-14-4 to 1-14-6	Lift, window (manual)	23-39-2 to 23-39-53
Lamp, parking and turn signal	8-50-82 to 8-50-354	Lift, window (electric window)	23-41-4 to 23-41-281
Lamp, parking brake signal	1-09-1 8-31-2 to 8-31-18	Light, emergency flasher	1-06-1 to 1-06-4
Lamp, power brake indicator	1-09-1	Light, underhood	1-13-10
Lamp, quarter	8-11-5 to 8-11-28	Lighter, cigar	1-12-1 8-20-3 to 8-20-16
Lamp, safety	8-14-6 to 8-14-13	Liner, body	23-31-33 to 23-31-205
Lamp, stop	8-58-60 to 8-58-79	Lining, brake shoe	5-03-0 to 5-03-23
Lamp, stop and turn signal	8-55-1 to 8-55-300	Lining and shoe, wheel brake	5-03-1 to 5-03-23
Lamp, trunk	8-13-2 to 8-13-6	Listing and headlining	23-86-3 to 23-86-37
Lamp, trunk compartment	1-30-1	Lock, hood	15-11-3 to 15-11-58
Lamp, turn signal and stop	8-55-1 to 8-55-300	Lock, safe-T-matic door	23-13-0
Lamp, underhood	1-13-10	Lock, transmission parking	4-10-1 to 4-10-30
Lamp and switch, dome	8-05-6 to 8-05-40	Lock cylinder and ignition switch . . .	8-35-4 to 8-35-115
Lamp and switch, glove compartment.	8-38-4 to 8-38-23	Lock cylinder and key	23-17-2 to 23-17-72
Leaf, rear spring	17-12-4 to 17-12-12	Lock, cylinder and switch ignition . .	8-35-4 to 8-35-115
Letters, hood	15-06-0	Low oil pressure switch	8-53-327
Lever, clutch release	6-17-3		

PART NAME	CODE	PART NAME	CODE
Luggage compartment front lining panel	23-96-3 to 23-96-41	Mounting parts, license	8-47-8 to 8-47-131
M		Motor, starting	8-52-4 to 8-52-395
Manifold	9-48-6 to 9-48-155	Muffler	11-01-1 11-02-1
Manifold gasket	9-50-1 to 9-50-6	Muffler support	to 11-02-13
Manifold heat control valve	9-59-13 to 9-59-15	N	
Manifold heat control valve stop . . .	9-62-1	Name plate, fender	12-15-11 to 12-15-21
Manifold heat control valve thermostat	9-58-1 to 9-58-14	Name plate, hood	15-06-0
Map and courtesy lamp.	1-14-4 to 1-14-6	Nipple, water pump	7-48-22
Master cylinder	5-39-1 to 5-39-24	Nut and stud, wheel driving	22-05-14 to 22-05-24
Master cylinder boot	5-40-1	O	
Master cylinder brake tube	5-52-3 to 5-52-62	Oil filter	10-26-5 to 10-26-65
Master cylinder piston	5-44-8 to 5-44-9	Oil gauge	8-37-316
Master cylinder piston push rod. . . .	5-47-4 to 5-47-8	Oil level indicator	10-03-4 to 10-03-10
Master cylinder piston return spring .	5-46-1	Oil pan	10-24-1 to 10-24-38
Mat, floor	23-20-8 to 23-20-65	Oil pressure relief valve	10-22-11 to 10-22-41
Material, seat cloth trim	23-114-2 to 23-114-15	Oil pump	10-07-2 to 10-07-14
Medallion, hood	15-06-0	Oil pump drive gear	10-10-1
Medallion, radiator grille	7-17-0	Oil pump drive shaft	10-09-1 to 10-09-7
Mirror	1-76-1 to 1-76-27	Oil pump, power steering	19-54-2 to 19-54-258
Moulding, fender	23-21-3 to 23-21-66	Oil pump rotor	10-14-18
Moulding, garnish	12-15-11 to 12-15-21	Oil pump suction pipe	10-18-4
Moulding, hood	23-22-53 to 23-22-155	Oil strainer	10-23-7
Moulding, outside finish	15-25-0	Ornament, radiator grille	7-17-0
Moulding, trim finish.	23-23-2 to 23-23-85	Ornaments fender	12-15-11 to 12-15-21
Moulding and finish plate, instrument panel center	23-26-16 to 23-26-87	Outside finish moulding	23-23-2 to 23-23-85
	1-40-3	P	
		Package, automatic 3 speed trans- mission	21-01-3
		Package, bearing connecting rod . . .	9-32-2
		Package, belt, safety seat	1-67-1 to 1-67-9
		Package, brake self adjusting	1-44-1
		Package, manual transmission	2-01-3
		Package, wheel cylinder repair	5-63-1 to 5-63-3

PART NAME	CODE	PART NAME	CODE
Pad, body	23-31-33 to 23-31-205	Pedal, accelerator	14-01-1 to 14-01-30
Pad, brake pedal	5-28-8 to 5-28-9	Pedal, clutch	6-38-1 to 6-38-23
Pad, clutch pedal	6-39-1	Pedal and bushing, brake	5-27-1 to 5-27-21
Pad, instrument panel trim	23-84-3 to 23-84-31	Pillar, body	23-36-4 to 23-36-141
Pan, body	23-32-6 to 23-32-115	Pilot, automatic	1-26-1 14-02-1 to 14-02-79
Pan, clutch housing	6-10-2 to 6-10-10	Pin, piston	9-36-5 to 9-36-7
Pan, oil	10-24-1 to 10-24-38	Pinion, automatic 3 speed transmission speedometer	21-85-5 to 21-85-61
Pan, oil, automatic 3 speed transmis- sion	21-119-3 to 21-119-19	Pinion, differential	3-07-1 to 3-07-2
Panel, body	23-34-3 to 23-34-354	Pinion, main drive manual transmission	21-09-2 to 21-09-33
Panel, cowl trim	23-91-6	Pinion, speedometer, automatic 3 speed transmission	21-85-22 to 21-85-61
Panel, door trim	23-92-5 to 23-92-25	Pinion and gear, speedometer, manual transmission	21-85-22 to 21-85-61
Panel, hood top	15-03-3 to 15-03-60	Pipe, exhaust	11-05-1 to 11-05-12
Panel, instrument	23-33-10 to 23-33-236	Pipe, oil pump suction	10-18-4
Panel, luggage compartment front lining	23-96-3 to 23-96-41	Pipe, tail	11-09-3
Panel, rear quarter trim	23-101-3 to 23-101-26	Piston, master cylinder	5-44-8 to 5-44-9
Panel, rear upper pillar	23-99-38	Piston, power steering gear	19-56-6 to 19-56-83
Panel, rocker	23-51-3 to 23-51-48	Piston, w/pin	9-34-5
Panel, shelf trim	23-102-3	Piston, wheel cylinder	5-70-1
Panel, visor trim	23-103-3 23-103-48	Piston pin	9-36-5 to 9-36-7
Parking and turn signal lamp	8-50-82 to 8-50-354	Piston ring set	9-35-1
Parking brake cable	4-23-1 to 4-23-46	Plate, clutch cover and pressure	6-14-1 to 6-14-10
Parking brake lever (foot operated)	4-25-1 to 4-25-28	Plate, clutch pressure	6-15-1
Parking brake lever (hand operated)	4-08-1 to 4-08-36	Plate, instrument panel center moulding and finish	1-40-3
Parking brake lever return spring	4-19-1	Plug, body	23-32-6 to 23-32-115
Parking brake operating lever	4-26-1 to 4-26-27	Plug, spark	8-36-114
Parking brake signal lamp	8-31-2 to 8-31-18	Pocket panel lamp switch	8-11-4
		Power brake air cleaner	5-113-17 to 5-113-23
		Power brake hose connector	5-110-18
		Power brake indicator lamp	1-09-1

PART NAME	PAGE NO.	CODE	PART NAME	PAGE NO.	CODE	
Power brake power unit	5-100-1	to	Q	8-11-5	Quarter lamp	
Power brake vacuum check valve . . .	5-100-212	5-105-1		to	8-11-28	
Power brake vacuum hose	5-105-6	5-105-6		Quarter window opening weathercord .	23-113-25	
Power brake vacuum tank	5-111-17	5-102-2		to	23-113-87	
		to				
Power steering gear piston	5-102-11	19-56-6		Rack, roof luggage	1-74-1	
		to		Rack, roof rail and luggage	23-40-82	
		19-56-83		to	23-40-189	
Power steering gear valves	19-57-1	to		Radiator core	7-11-3	
		19-57-64		Radiator core fan shroud	7-08-2	
Power steering hose	19-58-7	to		to	7-08-20	
		19-58-31		Radiator cross bar	7-33-1	
Power steering oil pump	19-54-2	to		to	7-33-22	
		19-54-258		Radiator drain cock	7-13-2	
Power steering wheel	19-30-4	to		Radiator dust shield	7-31-10	
		to		to	7-31-12	
		19-30-18		R		
Power unit mounting bracket	5-101-1	5-101-1			Radiator filler cap	7-12-1
Propeller shaft	16-02-1	to			Radiator grille	7-16-11
		16-02-5			to	7-16-82
Propeller shaft center bearing	16-16-1	to	Radiator grille medallion		7-17-5	
		to	to		7-17-10	
Propeller shaft center bearing	16-16-43	insulator	16-17-1		7-17-5	
Propeller shaft flange	16-20-1	to	to		7-17-10	
		16-20-8	Radiator hose		7-14-4	
Propeller shaft sliding yoke	16-14-1	to	to		7-14-31	
		16-14-8	Radiator stone deflector		7-35-2	
Propeller shaft spline	16-14-1	to	to		7-35-14	
		16-14-9	Radiator yoke		7-26-2	
Protector, door edge	1-135-1	7-04-1	to		7-26-37	
Pulley, fan and alternator idler	7-04-1	to	Radio		1-87-1	
		7-04-16	to		1-87-404	
Pulley, fan drive and driven	7-06-1	to	Radio antenna		1-88-1	
		7-06-14	to		1-88-205	
Pump, fuel	14-73-1	to	Radio foot control switch		1-87-6	
Pump, oil	10-07-2	10-07-14	Radio power antenna switch		1-88-205	
		to	Rear axle control strut	3-01-25		
Pump, oil, automatic 3 speed	21-118-6	to	to	3-01-34		
transmission	21-118-57	19-54-2	Rear axle differential and carrier . .	3-03-1		
		to	to	3-03-36		
Pump, oil, power steering	19-54-2	19-54-258	Rear axle housing	3-02-1		
		to	to	3-02-20		
Pump, water	7-42-1	7-42-4	Rear bumper face bar	13-66-3		
		to	to	13-66-153		
Push button blower motor switch	1-48-770	1-48-942	Rear door pull-to handle	23-81-3		
		24-24-150	Rear door safety lock	1-72-5		
Push button vacuum switch	23-115-4	to	Rear quarter trim panel	23-101-3		
Push nut, front seat back to cushion .	23-115-10		to	23-101-26		

1965 PASSENGER CAR PARTS CATALOG

ALPHABETICAL
INDEX

PART NAME	CODE	PART NAME	CODE
Rear seat back	23-109-3 to 23-109-40	Rod, gearshift, manual transmission	21-30-2 to 21-30-433
Rear spring	17-11-3 to 17-11-7	Rod, master cylinder piston push	5-47-4 to 5-47-8
Rear spring bumper	17-19-3 to 17-19-20	Rod, steering knuckle, tie	2-07-1 to 2-07-41
Rear spring center bolt	17-14-10	Rod, valve push	9-42-1
Rear spring clip	17-15-1 to 17-15-30	Rod, wheel cylinder piston push	5-12-1
Rear spring leaf	17-12-4 to 17-12-12	Roller and bushing, universal joint cross	16-10-1 to 16-10-3
Rear spring shackle	17-16-1 to 17-16-8	Roof rail and luggage rack	23-40-82 to 23-40-189
Rear spring silent block	17-17-3 to 17-17-5	Rotor, oil pump	10-14-18
Rear upper pillar panel	23-99-38	Run, window glass	23-42-13 to 23-42-59
Rear window defogger	1-47-1 to 1-47-20	S	
Rear window defogger switch	1-47-7	SAFE-T-MATIC Door lock	23-13-0
Receiver, ash	23-02-1 to 23-02-151	Safety lamp	8-14-6 to 8-14-13
Receiver drier	24-26-20 to 24-26-101	Safety seat belt	1-67-1 to 1-67-18
Regulator, door	23-14-10 to 23-14-153	Screw, front seat center arm	23-115-10
Reinforcement, body	23-07-168 to 23-07-169	Screw, wheel cylinder bleeder	5-67-1
Repair package, wheel cylinder	5-63-1	Seal, body	23-31-33 to 23-31-205
Retainer, folding top header top material	23-112-4 to 23-112-160	Seal, crankshaft rear bearing oil	9-11-1 to 9-11-7
Rocker, valve	9-43-1 to 9-43-19	Seal, drive shaft oil	3-35-14
Rocker panel	23-51-3 to 23-51-48	Seal, fender	12-02-5 to 12-02-10
Rod, accelerator pedal to accelerator shaft	14-07-15	Seal, main shaft bearing oil, manual transmission	21-22-2
Rod, clutch pedal	6-50-1 to 6-50-10	Seal, water pump	7-46-1
Rod, clutch release	6-24-1 to 6-24-10	Seal and weatherstrip	23-63-14 to 23-63-182
Rod, connecting	9-31-4 to 9-31-10	Seat, front	23-45-29 to 23-45-197
Rod, fuel pump push	14-77-1	Seat, second and third	23-48-11 to 23-48-206
Rod, gearshift control, power steering	19-48-1 to 19-48-52	Seat belt components	23-49-3 to 23-49-9
Rod, gearshift control, standard steering	19-48-1 to 19-48-52	Seat cloth trim material	23-114-2 to 23-114-15
		Second and third seat	23-48-11 to 23-48-206
		Second seat back hinge cover	23-70-5 to 23-70-6

PART NAME	CODE	PART NAME	CODE
Service parts and carburetor assemblies	14-30-2 14-30-4 14-30-7 14-30-8 14-30-27 14-30-28 14-35-1 14-35-6 14-35-8 14-35-33 14-35-39 14-39-7 14-39-45 14-41-3 14-43-5	Shaft, sway eliminator	17-29-5 to 17-29-21
Servos, automatic 3 speed transmission	21-137-5 to 21-137-205	Shaft, torque converter reaction, automatic 3 speed transmission . . .	21-129-5 to 21-129-24
Set, automatic 3 speed transmission . .	21-01-3	Shaft and coupling, steering column, power steering	19-15-4 to 19-15-111
Set, drive gear and pinion	3-19-1	Shaft and coupling, steering column, standard steering	19-15-4 to 19-15-111
Set, manual transmission	21-01-3	Shelf trim panel	23-102-3
Set, piston ring	9-35-1	Shield, battery heat	13-35-1
Shackle, rear spring	17-16-1 to 17-16-8	Shield, front fender	12-04-4 to 12-04-25
Shaft, accelerator	14-11-1 to 14-11-48	Shield, radiator dust	7-31-10 to 7-31-12
Shaft, brake pedal	5-29-1	Shim, fender	12-02-5 to 12-02-10
Shaft, clutch pedal	6-43-1 to 6-43-13	Shock absorber	1-07-1 17-23-3 to 17-23-57
Shaft, clutch torque	6-52-1 to 6-52-17	Shock absorber support	17-24-28
Shaft, differential pinion	3-08-1 to 3-08-2	Shoe and lining, wheel brake	5-03-1 to 5-03-23
Shaft, drive	3-32-1 to 3-32-9	Shroud, radiator core fan	7-08-2 to 7-08-20
Shaft, input, automatic 3 speed transmission	21-129-5 to 21-129-24	Sill body side	23-51-3 to 23-51-45
Shaft, main, manual transmission . . .	21-16-3	Spare wheel carrier	22-20-29 to 22-20-89
Shaft, oil pump drive	10-09-1 to 10-09-7	Spark plug	8-36-114
Shaft, output, automatic 3 speed transmission	21-05-1 to 21-05-35	Speedometer	8-37-371 to 8-37-372
Shaft, propeller	16-02-1 to 16-02-5	Speedometer cable, shaft and housing .	21-84-1 to 21-84-28
Shaft, reverse idler gear, manual transmission	21-12-1 to 21-12-2	Spline, propeller shaft	16-14-1 to 16-14-9
Shaft, steering gear, power steering .	19-19-1 to 19-19-72	Spring, accelerator pedal return . . .	14-06-1 to 14-06-10
Shaft, steering gear, standard steering	19-19-4 to 19-19-70	Spring, brake pedal return	5-34-1 to 5-34-6
		Spring, clutch pressure	6-16-1
		Spring, clutch release bearing return.	6-20-14
		Spring, clutch release fork return . .	6-27-5
		Spring, clutch release overcenter spring	6-35-1 to 6-35-17
		Spring, master cylinder piston return	5-46-1
		Spring, parking brake lever return . .	4-19-1

1965 PASSENGER CAR PARTS CATALOG

ALPHABETICAL INDEX

PART NAME	CODE	PART NAME	CODE
Spring, rear	17-11-3 to 17-11-7	Steering gear valves, power steering .	19-57-1 to 19-57-64
Spring, wheel brake shoe hold-down . .	5-26-1 to 5-26-5	Steering knuckle	2-03-3
Sprocket, camshaft	9-17-5	Steering knuckle tie rod	2-07-1 to 2-07-41
Sprocket, crankshaft	9-08-5	Steering link gear arm and idler arm power steering	19-27-2 to 19-27-55
Starting motor	8-52-4 to 8-52-395	Steering link gear arm and idler arm, standard steering	19-27-2 to 19-27-51
Steering column bracket, power steering	19-31-1 to 19-31-7	Steering linkage knuckle arm	2-05-4 to 2-05-12
Steering column bracket, standard steering	19-31-1 to 19-31-7	Steering wheel, power steering	19-30-4
Steering column gearshift tube, power steering	19-46-3 to 19-46-55	Steering wheel, standard steering . . .	19-30-4
Steering column gearshift tube, standard steering	19-46-3 to 19-46-55	Stop, brake pedal	5-30-12
Steering column jacket, power steering	19-14-1 to 19-14-68	Stop, manifold heat control valve . . .	9-62-1
Steering column jacket, standard steering	19-14-1 to 19-14-68	Stop and turn signal lamp	8-55-1 to 8-55-300
Steering column shaft and coupling, power steering	19-15-4 to 19-15-111	Stop lamp	8-58-60 to 8-58-79
Steering column shaft and coupling, standard steering	19-15-4 to 19-15-111	Strainer, oil	10-23-7
Steering column support, power steering	19-31-1 to 19-31-7	Strap, assist	23-77-3 to 23-77-17
Steering column support, standard steering	19-31-1 to 19-31-7	Strap, battery hold down	13-34-2
Steering gear, power steering	19-01-4 to 19-01-62	Striker, body	23-08-12 to 23-08-78
Steering gear, standard steering . . .	19-01-3 to 19-01-19	Striker, hood lock	15-13-2
Steering gear housing, power steering	19-02-4 to 19-02-55	Strip, folding top bow tacking	23-111-10 to 23-111-37
Steering gear housing, standard steering	19-02-4 to 19-02-17	Strut, rear axle control	3-01-25 to 3-01-34
Steering gear piston, power steering .	19-56-6 to 19-56-83	Stud, battery hold-down	13-36-5
Steering gear shaft, power steering . .	19-19-1 to 19-19-72	Stud, throttle linkage ball	14-13-1 to 14-13-5
Steering gear shaft, standard steering.	19-19-4 to 19-19-70	Stud and gasket exhaust pipe flange . .	11-06-3 to 11-06-10
		Stud and nut, wheel driving	22-05-14 to 22-05-24
		Sub-side member frame	13-04-20
		Support, engine front	9-64-5 to 9-64-24
		Support, fender	12-07-1
		Support, fuel tank	14-88-8 to 14-88-36
		Support, muffler	11-02-1 to 11-02-13
		Support, shock absorber	17-24-8
		Support, steering column, power steering	19-31-1 to 19-31-7

PART NAME	CODE	PART NAME	CODE
Support, steering column, standard steering	19-31-1 to 19-31-7	Switch and lamp, dome	8-05-6 to 8-05-40
Support, tail pipe	11-10-3 to 11-10-43	Switch and lock cylinder, ignition . . .	8-35-4 to 8-35-115
Support, wheel brake	5-13-1 to 5-13-35	Switch and lamp, glove box	8-38-23
Support and clamp, exhaust pipe . . .	11-08-5 to 11-08-24	Switches	8-53-150 to 8-53-327
Sway eliminator shaft	17-29-5 to 17-29-21	T	
Switch, automatic door lamp	8-12-2 to 8-12-17	Tail lamp	8-55-1 to 8-55-300
Switch, auxiliary vacuum	24-24-150	Tail pipe	11-09-3
Switch, back-up lamp	8-56-2	Tail pipe support	11-10-3 to 11-10-43
Switch, blower motor, w/cable	24-24-5	Tailgate	23-54-1 to 23-54-218
Switch, blower toggle	24-24-5	Tailgate electric window lift switch .	23-54-167
Switch, brake	14-02-32	Tank, fuel	14-86-1 to 14-86-85
Switch, courtesy lamp	8-11-6	Tank, power brake vacuum	5-102-2 to 5-102-11
Switch, deck lid lock release	23-19-94	Tappet, valve	9-41-4
Switch, dome lamp	8-05-14	Tee, brake tube	5-58-1 to 5-58-2
Switch, electric door lock	23-18-103	Tee, carburetor fuel line	14-85-31
Switch, electric seat adjuster	23-47-446	Temperature gauge	8-37-176
Switch, electric window lift w/bezel .	23-41-170	Thermostat	7-41-4
Switch, electric window lift and vent wing	23-41-170	Thermostat, manifold heat control valve	9-58-1 to 9-58-14
Switch, emergency flasher light	1-06-3	Throttle control bell crank	14-14-1 to 14-14-41
Switch, folding top lift	23-58-532	Throttle control cable	14-25-5 to 14-25-17
Switch, front door power unit vent . .	23-41-170	Throttle control mounting bracket . .	14-26-2 to 14-26-11
Switch, headlamp	8-53-270	Throttle linkage ball stud	14-13-1 to 14-13-5
Switch, heater blower	1-48-770	Timing chain	9-20-1
Switch, horn	8-33-90	Top, folding	23-58-3 to 23-58-607
Switch, ignition and starter	8-35-59	Torque converter	9-46-4 to 9-46-229
Switch, instrument lamp	8-53-270	Torsion parts, front suspension	2-14-1 to 2-14-25
Switch, lock cylinder and ignition . .	8-35-4 to 8-35-115	Transmission, automatic 3 speed . . .	21-02-1
Switch, lockout electric	23-41-170	Transmission, manual	21-02-1
Switch, map lamp	8-42-25	Transmission band, automatic 3 speed.	21-136-5 to 21-136-237
Switch, neutral starter, automatic 3 speed transmission	21-113-24 to 21-113-29	Transmission case, automatic 3 speed	21-03-2 to 21-03-40
Switch, parking brake indicator lamp .	8-31-10		
Switch, pocket panel lamp	8-11-6		
Switch, push button blower motor . . .	1-48-770 to 1-48-942		
Switch, push button vacuum	24-24-150		
Switch, radio foot control	1-87-6		
Switch, radio power antenna	1-88-205		
Switch, rear door automatic lamp . . .	8-12-2		
Switch, rear window defogger	1-47-7		
Switch, socket and cable, trunk lamp .	8-13-2		
Switch, starter and ignition	8-35-59		
Switch, stop lamp mechanical	8-58-60		
Switch, tailgate electric window lift .	23-54-167		
Switch, trunk compartment lamp	1-30-3		
Switch, trunk lamp	8-13-2		
Switch, turn signal	8-50-82		
Switch, underhood lamp	1-13-10		
Switch, windshield wiper	23-67-160		
Switch and cable, turn signal electric .	8-50-82		

PART NAME	CODE	PART NAME	CODE
Transmission case, manual	21-03-1 to 21-03-25	Transmission main drive pinion, manual	21-09-2 to 21-09-33
Transmission case cover, manual . . .	21-29-3 to 21-29-33	Transmission main shaft bearing, manual	21-19-2 to 21-19-15
Transmission case extension, automatic 3 speed	21-04-1 to 21-04-18	Transmission main shaft bearing oil seal, manual	21-22-2
Transmission case extension, manual	21-04-1 to 21-04-11	Transmission main shaft, manual . . .	21-16-3
Transmission case housing, manual . .	21-29-3 to 21-29-33	Transmission main shaft pilot bearing, manual	21-17-2 to 21-17-7
Transmission clutch, automatic 3 speed	21-133-7 to 21-133-65	Transmission neutral starter switch, automatic 3 speed	21-113-24 to 21-113-29
Transmission clutch gear, manual . .	21-14-1 to 21-14-21	Transmission oil filter, automatic 3 speed	21-117-1 to 21-117-5
Transmission control lever, automatic 3 speed	21-142-12 to 21-142-21	Transmission oil pan, automatic 3 speed	21-119-3 to 21-119-12
Transmission countershaft bearing, manual	21-25-2 to 21-25-6	Transmission oil pump, automatic 3 speed	21-118-6 to 21-118-57
Transmission countershaft gear, manual	21-15-2 to 21-15-33	Transmission output shaft, automatic 3 speed	21-05-1 to 21-05-35
Transmission countershaft, manual . .	21-24-2 to 21-24-22	Transmission package, automatic 3 speed	21-01-3
Transmission front and rear planet pinion carrier and components, automatic 3 speed	21-134-5 to 21-134-45	Transmission package, manual	21-01-3
Transmission gear, manual	21-10-3 to 21-10-31	Transmission parking lock	4-10-1 to 4-10-30
Transmission gearshift control, automatic 3 speed	21-30-2 to 21-30-425	Transmission remote control gearshift, manual	21-42-11 to 21-42-43
Transmission gearshift fork, manual .	21-39-3	Transmission reverse idler gear, manual	21-11-1 to 21-11-9
Transmission gearshift lever, manual .	21-30-2 to 21-30-433	Transmission reverse idler gear shaft, manual	21-12-1 to 21-12-2
Transmission gearshift rail, manual . .	21-34-42 to 21-34-53	Transmission servos, automatic 3 speed	21-137-5 to 21-137-205
Transmission gearshift rod, manual . .	21-30-2 to 21-30-433	Transmission set, automatic 3 speed .	21-01-3
Transmission governor, automatic 3 speed	21-138-2 to 21-138-38	Transmission set, manual	21-01-3
Transmission input shaft, automatic 3 speed	21-129-5 to 21-129-24	Transmission speedometer cable, automatic 3 speed	21-84-1 to 21-84-28
		Transmission speedometer cable, manual	21-84-1 to 21-84-28

PART NAME	CODE	PART NAME	CODE
Transmission speedometer pinion and gear, manual	21-85-22 to 21-85-61	Universal joint cross	16-08-6 to 16-08-7
Transmission speedometer pinion, automatic 3 speed	21-85-22 to 21-85-61	Universal joint cross roller and bushing	16-10-1 to 16-10-3
Transmission torque converter reaction shaft, automatic 3 speed	21-129-5 to 21-129-24	V	
Transmission valve body and valves, automatic 3 speed	21-139-4 to 21-139-143	Valve, exhaust	9-39-6 to 9-39-21
Tray, battery support	13-33-61 to 13-33-68	Valve, intake	9-39-1 to 9-39-5
Trim finish moulding	23-26-16 to 23-26-87	Valve, manifold heat control	9-59-13 to 9-59-15
Trough, drain	23-59-25 to 23-59-61	Valve, oil pressure relief	10-22-11 to 10-22-41
Trunk compartment lamp switch	1-30-3	Valve, power brake vacuum check.	5-105-1 to 5-105-6
Trunk lamp	8-13-1 to 8-13-6	Valve body and valves, automatic 3 speed transmission	21-139-4 to 21-139-143
Tube, fuel line	14-89-2	Valve push rod	9-42-14
Tube, master cylinder brake	5-52-3 to 5-52-62	Valve rocker	9-43-1 to 9-43-26
Tube, steering column gearshift, power steering	19-46-3 to 19-46-55	Valve tappet	9-41-1 to 9-41-4
Tube, steering column gearshift, standard steering	19-46-3 to 19-46-55	Valves, steering gear, power steering	19-57-1 to 19-57-64
Tubing and cover, brake	5-53-3 to 5-53-6	Valves and valve body, automatic 3 speed transmission	21-139-4 to 21-139-143
Tufting button	23-78-2	Vent, cowl	23-61-39 to 23-61-116
Turn signal and parking lamp	8-50-82 to 8-50-354	Vent system, crankcase closed	10-02-53 to 10-02-67
Turn signal and stop lamp	8-55-1 to 8-55-300	Vent wing	23-64-4 to 23-64-314
U		Visor	1-32-2
Underhood light	1-13-10	Visor, arm and bracket	23-103-10 to 23-103-48
Underhood light switch	1-13-10	Visor, bracket and arm	23-103-10 to 23-103-48
Unit, fan fluid drive	7-07-1	Visor trim panel	23-103-3 to 23-103-48
Unit, power brake power	5-100-1 to 5-100-212	W	
Universal joint	16-03-1 to 16-03-20	Washer, windshield	1-82-2 to 1-82-44
Universal joint body	16-04-1	Water pump	7-42-1 to 7-42-4
Universal joint centering button	16-06-1 to 16-06-3	Water pump elbow	7-48-22
Universal joint cover	16-07-3 to 16-07-4		

