

PART NAME	CODE	PART NAME	CODE
-----------	------	-----------	------

ALPHABETICAL INDEX

A

ABSORBER, Front Seat Shock	23-45-83
ABSORBER, Shock	17-23-3
ACCELERATOR PEDAL	14-01-1
ACTUATOR, Air Cond. Vacuum	24-29-1
ACTUATOR, Heater Door Vacuum	1-48-258
ACTUATOR, Hood Fresh Air Door	15-03-92
ACTUATOR, Starter	8-52-87
ACTUATOR, T/Gate Window Washer	23-67-263
ADAPTER, A/Cond. Air Inlet	24-28-84
ADAPTER, A/Cond. Sensor	24-24-53
ADAPTER, Bumper Guard	13-68-20
ADAPTER, Defogger Blower	1-47-22
ADAPTER, Disc Brake	6-05-43
ADAPTER, Headlamp Seat	8-34-28
ADAPTER, Manual Antenna	1-88-6
ADAPTER, Oil Filter	10-26-5
ADAPTER, Power Strg. Pressure Hose	19-58-15
ADAPTER, Power Strg. Return Hose	19-57-19
ADAPTER, Rr. Htr. Inlet	1-48-5
ADAPTER, Rr. Window Defogger	1-47-2
ADAPTER, Speedometer Drive Pinion	21-85-9
ADAPTER, Two Speed Axle Speedo	21-86-0
ADJUSTER, Diff. Bearing	3-11-13
ADJUSTER, Drive Shaft Brg.	3-33-5
ADJUSTER, Manual Seat	23-47-6
ADJUSTER, Reclining Seat Back	23-45-194
AIR CLEANER, Booster Brake Breather	5-113-0
AIR CLEANER, Carb.	14-29-2
AIR CLEANER, Crankcase Vent Inlet	10-01-21
AIR CONDITIONING PACKAGE	24-01-1
AIR DEFLECTOR, Cowl Hinge Pillar	23-36-134
AIR OUTLET, Air Cond.	24-28-78
AIR PUMP	25-02-1
ALTERNATOR	8-28-3
AMMETER	8-37-1
AMPLIFIER, Auto. Headlamp Sentinel	8-53-301
ANTENNA, Radio	1-88-1
ANTISPIN PARTS, Rear Axle	3-09-0
APPLIQUE, Bumper	13-64-19
APPLIQUE, Wheel Cover	22-01-43
ARM, Door Check	23-10-1
ARM, Frt. Suspension Lower Control	2-10-0
ARM, Frt. Suspension Upper Control	2-08-5
ARM, Glove Box Door Hinge Check	23-06-13
ARM, Heater Control	1-48-940
ARM REST	23-76-0
ARM, Strg. Gear Idler	19-27-31
ARM, Steering Idler	19-27-2
ARM, Strg. Knuckle	2-05-4
ARM, W/Shield Wiper	23-67-5
ARMATURE, Starter	8-52-120
ASH RECEIVER	23-02-18
ASPIRATOR, Air Cond.	24-24-40
ASSISTOR, Clutch	6-41-0
ASSISTOR REPAIR PKG., Clutch	6-41-1
AUXILIARY TRANSMISSION	21-88-0

B

BACKPLATE, Htr. Distribution Duct	1-48-156
BAFFLE, C/SHAFT OIL SCRAPPER	10-24-30
BAFFLE, Hood Air Intake Scoop	15-03-52
BAFFLE, Trans. Case Ext. Vent	21-04-17
BAFFLE, Trans. Shaft	21-129-11
BALL JOINT PACKAGE, Lwr. Cont. Arm	2-10-55
BALL JOINT PACKAGE, Upr. Cont. Arm	2-08-57
BALL STUD, Carb. Lever	14-13-1
BAND, Parking Brake	4-03-0
BAND, Trans. Kickdown	21-136-5
BAND, Trans. Reverse	21-136-30
BAR and BASE PACKAGE, Bumper Jack	13-72-4
BAR, Deck Lid Hinge Torsion	23-19-177
BAR, Door Lwr. Hinge Torsion	23-15-30
BAR, Front Bumper Face	13-64-3
BAR, Front Stabilizer	17-29-5
BAR, Headlamp Door	8-34-45
BAR, Rear Bumper Face	13-66-3
BAR, T/Gate Hinge Torsion	23-54-140
BAR, Torsion	2-14-3
BASE, Bucket Front Seat Back	23-45-185
BASE, Oil Filter	10-26-12
BATTERY HEAT SHIELD	13-35-1
BATTERY HOLD-DOWN STRAP	13-34-3
BATTERY HOLD-DOWN STUD	13-36-5
BATTERY SUPPORT TRAY	13-33-61
BEAM, Tandem Equalizing	17-37-0
BEARING, Air Cond. Compr. Clutch	24-25-219
BEARING, Alternator Drive End Shield	8-29-154
BEARING, Alternator Rectifier	8-29-133
BEARING & SMALL PARTS PKG., Trans.	21-01-8
BEARING & THRUST WASHER, Distributor	8-27-133
BEARING, Aux. Trans. M/Drv. Gear	21-95-9
BEARING, Camshaft	9-16-6
BEARING, Clutch Pedal	6-38-3
BEARING, Clutch Release	6-19-0
BEARING, Clutch Shaft Pivot	6-52-11
BEARING, Connecting Rod	9-32-2
BEARING, Crankshaft	9-09-2
BEARING, Front Axle Diff.	21-11-45
BEARING, Front Axle Drive Pinion	21-11-88
BEARING, Front Axle Strg. Knuckle	2-13-15
BEARING, Front Door Vent Wing	23-64-95
BEARING, Front Wheel	22-06-0
BEARING, Pwr. Strg. Control Val. Stud	19-63-250
BEARING, Propellor Shaft Center	16-16-0
BEARING, Rear Axle Diff. Spiral Pinion	3-13-0
BEARING, Rear Axle Drive Pinion	3-22-0
BEARING, Rear Axle Shaft	3-33-1
BEARING, Rear Wheel	22-07-0
BEARING, Starter Pinion Housing	8-52-80
BEARING, Strg. Column G/Shift Tube	19-46-6
BEARING, Strg. Column Shaft	19-14-4
BEARING, Strg. Gear Shaft	19-19-19
BEARING, Strg. Gear Thrust	19-15-1
BEARING, Strg. Gear Worm	19-15-60
BEARING, Tailgate Hinge	23-54-142
BEARING, Transfer Case	21-102-7
BEARING, Trans. Aux. Co/Shaft	21-18-52

PART NAME	CODE	PART NAME	CODE
BEARING, Trans. Aux. M Shaft	21-18-2	BOLT, Brake M/Cyl. Push Rod	5-47-4
BEARING, Trans. Co. Shaft	21-25-2	BOLT, Bumper to Support	13-64-5
BEARING, Trans. Main	21-09-5	BOLT, Chain Case Cover	9-23-10
BEARING, Trans. M/Shaft Frt. Spindle	21-16-9	BOLT, Cylinder Head	9-03-10
BEARING, Trans. M/Shaft Rear	21-19-2	BOLT, Connecting Rod Cap	9-31-5
BEARING, Trans. Output Shaft	21-05-2	BOLT, Drive Pinion Carrier	3-19-15
BEARING, Water Pump	7-45-11	BOLT, Exhaust Manif. Heat Control Valve	9-58-13
BEARING, Winch Drive Shaft	21-97-6	BOLT, Frame to Body	23-05-1
BELL CRANK, Throttle Cont.	14-14-1	BOLT, Frt. Axle Control Arm Cam	2-08-50
BELT, Fan and Related Drives	7-03-1	BOLT, Frt. Suspension Crossmember	23-32-18
BEZEL, Accelerator Pedal	14-01-6	BOLT, Frt. Wheel Brk. Support	5-13-9
BEZEL and Lens, Dome Lamp	8-05-8	BOLT, Jack Bar Retainer	13-72-6
BEZEL and SPACER, Seat Belt	23-49-17	BOLT, Rear Axle Hsg. to Diff. Carrier	3-03-26
BEZEL, Back up Lamp	8-56-36	BOLT, Rear Spring Center	17-14-10
BEZEL, Brake Pedal Pad	5-28-9	BOLT, Rear Spring Pivot Bushing	17-17-4
BEZEL, Cigar Lighter	8-20-16	BOLT, Spring Hanger	13-54-11
BEZEL, Clock and A/Cond.	8-37-463	BOLT, Strg. Link Idler Arm Brkt.	19-27-45
BEZEL, Clutch Pedal Pad	6-39-9	BOOSTER, Brake	5-100-0
BEZEL, Defogger Inlet	1-47-6	BOOSTER BRAKE TUBE	5-107-15
BEZEL, Defogger Switch	1-47-9	BOOT, Brake Booster Push Rod	5-100-26
BEZEL, Filler Tube Cap	14-86-23	BOOT, Brake Pedal Linkage to Firewall	5-100-26
BEZEL, Floor Console End Cap	23-38-43	BOOT, Clutch Pedal Rod	6-50-10
BEZEL, Folding Top Pocket Panel	23-02-107	BOOT, Elect. Door Lock Switch	23-18-126
BEZEL, Glove Box Door	23-06-55	BOOT, Gearshift Control	19-48-44
BEZEL, Headlamp	8-34-40	BOOT, Gearshift Floor	21-30-413
BEZEL, Heater Control	1-48-70	BOOT, Master Cyl.	5-40-1
BEZEL, Hood Air Grabber Switch	15-03-85	BOOT, Shifting Fork	8-52-88
BEZEL, Hood Turn Signal Indicator	8-50-171	BOOT, T/Gate Latch Remote Control	23-54-222
BEZELS, Instrument Cluster	8-37-90	BOOT, Trans. G/Shift Lever	21-30-109
BEZEL, Instr. Pnl. G/Shift Control	23-33-217	BOOT, Wheel Brake Cylinder	5-69-1
BEZEL, Map and Courtesy Lamp Switch	8-42-29	BOOT, X-Press Super Lite	8-14-18
BEZEL, Parking and Turn Signal Lamp	8-50-315	BOW, Folding Top	23-58-75
BEZEL, Parking Brake Pedal Pad	4-25-23	BOW, Roof Panel	23-86-10
BEZEL, Radio	1-87-22	BOX, Glove	23-06-4
BEZEL, Rear Ash Receiver	23-02-68	BRACE, Battery Tray Support	13-33-68
BEZEL, Rear Speaker Control	1-87-292	BRACE, Bumper Jack	13-66-21
BEZEL, Rear View Mirror	23-21-28	BRACE, Exhaust Pipe	11-08-5
BEZEL, Road Lamp	8-14-9	BRACE, Fender	12-07-1
BEZEL, Side Marker Lamp	8-14-9	BRACE, Frt. Crossmember	23-32-31
BEZEL, Stop, Turn Signal Lamps	8-55-158	BRACE, Frt. Door	23-11-9
BEZEL, T/Gate Latch Remote Control	23-54-221	BRACE, Frt. Floor Pan	23-32-6
BEZEL, T/Gate Window Washer	23-67-243	BRACE, F/Tank Protector	14-88-42
BEZEL, Trans. Gearshift Selector Lever Lens	21-30-15	BRACE, Hood Lock Plate Yoke	15-11-7
BEZEL, Vacuum Deck Lid Latch Release	23-19-100	BRACE, Instrument Panel Lower Reinforcement	23-33-10
BEZEL, Wiper Switch Mtg.	23-67-195	BRACE, Power Antenna Mtg.	1-88-126
BEZELS, Air Conditioner	24-24-140	BRACE, Qtr. Deck Drain Trough	23-59-41
BEZELS, Switch	8-53-294	BRACE, Qtr. Inside Panel	23-64-281
BLADE, Snow Plow	1-93-0	BRACE, Qtr. Panel Belt Bar	23-51-48
BLADE, W/Shield Wiper	23-67-25	BRACE, Radiator Grille	7-16-22
BLEEDER, Wheel Cylinder	5-67-1	BRACE, Shelf Panel to Deck	23-34-328
BLOCK, Alternator Mtg.	8-28-35	BRACE, Tailgate Opening	23-34-17
BLOCK, Ammeter Wiring Terminal	8-21-1	BRACE, Wheel House to Deck Lid	23-19-76
BLOCK, Drive Shaft Thrust	3-32-8	BRACKET & SHAFT, Rear View Mirror	23-21-14
BLOCK, w/Pistons and Rings	9-02-5	BRACKET & STRAP, Vapor Canister (Charcoal)	25-04-16
BLOWER, A/Cond. and Heater	24-28-165	BRACKET & SUPPORT, Frt. Door Window	23-39-19
BOARD, Printed Circuit	8-19-15	BRACKET w/ROLLER, Quarter Window	23-64-269
BODY, A/Cleaner	14-29-19	BRACKET w/STUD, Deck Lid Hinge	23-19-181
BODY, Oil Pump	10-07-10	BRACKET, Accelerator Shaft	14-11-20
BODY, Strg. Column Shaft Coupling	19-15-23	BRACKET, Air Cond. Actuator	24-29-3
BODY, Trans. Valve	21-139-4	BRACKET, Air Cond. Compressor	24-25-15
BOLT & SWIVEL PKG., Anchor Adjusting	2-14-1	BRACKET, Air Cond. Evaporator Mtg.	24-28-8
BOLT or SCREW, Frt. Axle Drive Gear	2-11-71	BRACKET, Air Cond. Hose	24-28-29
BOLT or SCREW, Rear Axle Drv. Gear Pinion	3-20-1	BRACKET, Air Cond. Idler Pulley	24-25-45
BOLT, Battery Cable Clamp	8-01-11	BRACKET, Air Cond. Receiver Drier Mtg.	24-26-35
BOLT, Brake M/Cyl. Mtg.	5-39-11	BRACKET, Air Pump Mtg.	25-02-24

PART NAME	CODE	PART NAME	CODE
BRACKET, Alt. & Coil Mtg.	8-28-36	BRACKET, Voltage Regulator Mtg.	8-28-78
BRACKET, Auto. Headlamp Sentinel	8-53-303	BRACKET, Wheelhouse	23-34-13
BRACKET, Auto. Speed Control Cable	14-02-18	BRACKET, Windshield Side Frame	23-66-77
BRACKET, Body Hold Down	23-05-31	BRAKE FLEXIBLE HOSE	5-62-1
BRACKET, Body Pillar	23-36-33	BRAKE FLUID	5-01-2
BRACKET, Brake Booster Mtg.	5-101-1	BRAKE PEDAL AND BUSHING	5-27-0
BRACKET, Brake Hose	5-57-2	BRAKE PEDAL BRACKET	5-31-15
BRACKET, Brake Pedal	5-31-15	BRAKE PEDAL PAD	5-28-8
BRACKET, Bumper	13-64-72	BRAKE PEDAL SHAFT	5-29-1
BRACKET, Bumper Alignment	13-66-136	BRAKE SHOE GUIDE SPRING	5-26-1
BRACKET, Bumper Filler	13-64-32	BRAKE TUBE	5-55-1
BRACKET, Bumper Impact	13-66-44	BRAKE TUBE BRACKET	5-57-2
BRACKET, Cab Hold Down	13-39-0	BRAKE TUBE CLIP	5-56-2
BRACKET, Center Floor Pan Carrier	17-19-4	BRAKE TUBE TEE or CONNECTOR	5-58-1
BRACKET, Clutch Hyd. Slave Cylinder	6-40-59	BRAKE, Power	5-100-1
BRACKET, Clutch Pedal	6-46-1	BRAKE SHOE and LINING	5-03-3
BRACKET, Cowl Side	23-34-82	BRUSH PACKAGE, Alternator	8-29-17
BRACKET, Deck Opening, Lower	23-34-191	BRUSH PACKAGE, Starter	8-52-135
BRACKET, Dome Lamp	8-05-28	BULBS	8-44-1
BRACKET, Engine Frt. Support Insulator	9-64-24	BUMPER GUARDS	13-68-6
BRACKET, Fan Belt Idler Pulley	7-04-5	BUMPER JACK	13-72-1
BRACKET, Fast Idle Cable Mtg.	14-24-6	BUMPER, Ash Receiver	23-02-38
BRACKET, Fender Mtg.	18-06-3	BUMPER, Control Arm, Lower	2-10-10
BRACKET, Floor Console	23-38-27	BUMPER, Control Arm, Upper	2-08-48
BRACKET, Frame Engine Rear Support	9-69-6	BUMPER, Door	23-08-12
BRACKET, Frt. Seat Lap Belt	23-49-7	BUMPER, Fender Hood Side	15-09-4
BRACKET, Frt. Spring	13-53-0	BUMPER, Front	13-64-3
BRACKET, Frt. Wheel Stop	2-08-63	BUMPER, Glove Box Door	23-06-14
BRACKET, Fuel Tank Filler Tube	14-86-43	BUMPER, Park Brake Pedal Stop	4-25-9
BRACKET, Fuel Tank Vapor Separator	14-86-71	BUMPER, Rear	13-66-3
BRACKET, Hand Brk. Cable Support	4-83-2	BUMPER, Rear Spring	17-19-3
BRACKET, Headlamp Door Motor	8-34-291	BUSHING or BEARING, Crankshaft Trans. Pilot	9-07-12
BRACKET, Headlamp Scanner	8-53-286	BUSHING, Accelerator Pedal	14-01-30
BRACKET, Hood Lock Vertical	15-11-50	BUSHING, Brake Pedal	5-27-2
BRACKET, License	8-47-8	BUSHING, Clutch Pedal	6-38-3
BRACKET, Muffler & Exhaust Support	11-08-5	BUSHING, Control Arm - Lower	2-10-59
BRACKET, Parking Brake	4-06-0	BUSHING, Control Arm - Upper	2-08-7
BRACKET, Parking Brake Indicator Lamp	8-31-11	BUSHING, Door Hinge	23-15-38
BRACKET, Pedal Return Spring	14-06-10	BUSHING, Intake Valve	9-43-2
BRACKET, Prop Shaft Center Bearing	16-16-46	BUSHING, Gearshift Control Selector	21-30-38
BRACKET, Quarter Window Regulator	23-39-48	BUSHING, Gearshift Rod	19-48-6
BRACKET, Radiator Core Fan Shroud	7-08-13	BUSHING, Shock Absorber Mounting	17-23-52
BRACKET, Radiator Grille	7-16-25	BUSHING, Spring Shackle Pivot	17-16-8
BRACKET, Radiator Yoke Crossmember	7-26-37	BUSHING, Strg. Column Gearshift	19-46-14
BRACKET, Rear Bumper Guard	13-68-12	BUSHING, Steering Knuckle	2-03-4
BRACKET, Rear Floor Pan Bumper	23-32-52	BUSHING, T/Gate Hinge	23-54-20
BRACKET, Rear Seat Radio Speaker Grille	1-87-25	BUSHING, T/Gate Window Washer	23-67-265
BRACKET, Rear Spring	13-54-0	BUSHING, Tilt Cab Pivot	23-1-3
BRACKET, Roof Bow, No. 1	23-58-84	BUSHING, Trans. Frt. Clutch	21-133-10
BRACKET, Roof Luggage Rack Rail	23-40-170	BUSHING, Trans. Input Shaft	21-129-6
BRACKET, Seat Adjuster Switch	23-47-456	BUTTON, Brake Auto. Adj.	5-20-17
BRACKET, Seat Back Stop	23-47-345	BUTTON, Gearshift, Control Selector	21-30-10
BRACKET, Second Seat Back Bumper	23-48-111	BUTTON, Heater Control Push	1-48-12
BRACKET, Second Seat Back Hinge	23-48-99	BUTTON, Horn	8-33-41
BRACKET, Shock Absorber	17-24-0	BUTTON, Parking Brake Lever	4-14-0
BRACKET, Side Marker Lamp Mtg.	8-14-2	BUTTON, Steering Wheel Horn	8-33-17
BRACKET, Spare Tire Cover Mtg.	23-04-245	BUZZER, Headlamp Warning	8-34-8
BRACKET, Steering Column	19-14-37	BUZZER, Ign. Key Warning	8-35-66
BRACKET, Steering Column Support	19-31-1	BUZZER, Low Air Pressure	5-128-0
BRACKET, Steering Gear	19-12-1	BUZZER, Low Vacuum Warning	5-103-36
BRACKET, Steering Pump	19-54-115		
BRACKET, Third Seat Back Release	23-48-24		
BRACKET, Tilt Cab Rear Support	23-1-35		
BRACKET, Trans. Mtg. Crossmember	13-10-12		
BRACKET, Valve Brake Shaft	9-43-10		

PART NAME	CODE	PART NAME	CODE
C			
"C" WASHER - Brake Shoe Anchor	5-19-7	CARRIER, Rear Axle Drive Pinion	3-19-7
CABLE, A/C Temp. Control	24-01-65	CARTRIDGE, Oil Filter	10-26-8
CABLE, Battery Ground	8-01-4	CASE, Auxiliary Transmission	21-88-5
CABLE, Battery Positive	8-01-17	CASE, Inter Axle Diff.	3-29-53
CABLE, Brake Auto. Adj.	5-20-10	CASE, Rear Axle Diff.	3-04-6
CABLE, Clock Reset	8-37-458	CASE, Trans.	21-03-1
CABLE, Electric Seat Adjuster	23-47-432	CASE, Axle Diff. Gear Support	3-05-1
CABLE, Fuel Tank Gauge	14-72-33	CATCH, Glove Box Door Lock	23-06-15
CABLE, Glove Box Door	23-06-46	CATCH, Hood Safety	15-11-34
CABLE, Heater Control	1-48-941	CHAIN CASE COVER	9-23-5
CABLE, Hood Duct Air Control	14-03-74	CHAIN, Tailgate	23-54-8
CABLE, Horn Contact	8-33-100	CHAIN, Timing	9-20-1
CABLE, Horn Ground	8-33-114	CHAMBER, Air Brake Service	5-98-26
CABLE, Ignition Coil Secondary	8-36-49	CHAMBER, Air Brake Spring	5-121-0
CABLE, Power Antenna Lead	1-88-162	CHANNEL, Door Glass	23-09-52
CABLE, P.T.O. Control	21-08-280	CHANNEL, Qtr. Tailgate Glass Run	23-09-67
CABLE, Seat Back Latch Release	23-45-204	CHASSIS AND BODY WIRING	8-15-2
CABLE SET, Ignition	8-36-1	CHECK ARM, Door Hinge	23-10-1
CABLE, Spark Plug	8-36-83	CHECK ARM, Glove Box Door	23-06-13
CABLE, Speed Control	14-02-34	CHOKE, Carburetor	14-39-0
CABLE, Speedometer	21-84-1	CHUCK, Strg. Gear	19-01-8
CABLE, Tachometer Drive	8-37-508	CIGAR LIGHTER	8-20-1
CABLE, Transmission G/Shift	21-30-365	CIRCUIT BREAKER, Rr. Comp't. Cigar Lighter	8-20-3
CABLE, Winch	21-97-17	CIRCUIT BREAKER, Wiring	8-17-30
CABLE, Wire	8-16-3	CLAMP, Air Cleaner	14-29-15
CABLE, Parking Brake	4-23-1	CLAMP, Distributor	8-27-26
CAGE, Rear Axle Diff. Spiral Pinion	3-14-0	CLAMP-W/PUMP By Pass Hose	7-48-19
CAGE, Rear Axle Drive Pinion Brg.	3-23-0	CLAMPS, Air Cond.	24-28-17
CAM, Control Arm	2-08-59	CLAMP, Hand Brake Brake Cable	4-23-28
CAM, Hydraulic Brake Adjusting	5-22-1	CLAMP, Exhaust Pipe	11-08-24
CAM, Turn Signal Switch Cancelling	8-50-126	CLAMP, Fuel Line Hose	14-86-49
CAM, w/Shield Wiper	23-67-2	CLAMP, Gearshift Control Rod	19-48-12
CAMSHAFT	9-15-1	CLAMP, Htr, Blower Motor Wheel	1-48-50
CAMSHAFT, Air Brake	5-97-1	CLAMP, Instrument Panel Strg. Column	19-14-35
CAMSHAFT BEARING	9-16-6	CLAMP, Intake Manifold Exhaust Pipe	11-05-30
CAMSHAFT SPROCKET	9-17-5	CLAMP, Intern and Rear Seat Mounting	23-48-123
CANISTER, Vapor (Charcoal)	25-04-1	CLAMP, Master Cyl. Cover	5-39-26
CAP, Crankshaft Bearing	9-10-5	CLAMP, Muffler	11-02-1
CAP, Brake Vacuum Hose	5-105-14	CLAMP, Power Brake Hose	5-111-19
CAP, Distributor	8-27-71	CLAMP, Radiator Hose	7-14-13
CAP NUT, ANTENNA Mtg.	1-88-120	CLAMP, Speedometer Drive Pinion	21-85-61
CAP, Fuel Tank Filler	14-86-35	CLAMP, Tail Pipe Rr. Support	11-09-4
CAP, Frt. Wheel Grease	22-08-57	CLAMP, T/Gate Hinge Torsion	23-54-144
CAP, Oil Filler	10-01-54	CLAMP, V/Wing Upper Pivot	23-64-237
CAP, Oil Pressure Rel. Valve	10-22-40	CLEANER, Crankcase Vent Inlet Air	10-01-21
CAP, Strg. Pump Reservoir	19-54-182	CLIP, B/Crank to Carb. Rod	14-11-3
CAP, Radiator Filler = 16	7-12-1	CLIP, Brake Tube	5-56-2
CAP, Roof Luggage Rack Side	23-40-177	CLIP, Carburetor Air Scoop Door	15-03-82
CAP, Wheel Cover Dome	22-01-48	CLIP, Front Spring	17-05-1
CAP, Wheel Hub	22-08-5	CLIP, Rear Spring	17-15-1
CAP, W/Shield Washer Reservoir	23-67-241	CLIP, Strg. Column Support Bracket	19-31-3
CAPACITOR, Alternator	8-29-129	CLIP, Throttle Linkage Rod	14-13-3
CARBURETOR	14-30-1	CLIP, Top Lift Motor Pump	23-58-557
CARBURETOR AIR CLEANER	14-29-2	CLIP, T/Gate Glass W/Strip	23-63-183
CARBURETOR AIR HEATER	14-62-1	CLIP, T/Gate Window Washer	23-67-30
CARBURETOR INTERCONNECTING ROD	14-15-3	CLUTCH, Trans. Aux. M/Shaft	21-18-13
CARPET, Front	23-70-3	CLUTCH, Transfer Case Sliding	21-112-0
CARPET, Rear	23-79-33	CLUTCH, Trans. Synchronizer	21-14-6
CARRIER, Rear Axle Differential	3-03-3	CLUTCH, Two Speed Axle	3-48-0
CARRIER, Trans. Planet Pinion	21-134-5	CLOCK	8-37-14
		CLOSURE, Bumper Front	13-64-26
		CLUTCH COVER AND PRESSURE PLATE	6-14-1
		CLUTCH DISC	6-13-1
		CLUTCH HOUSING	6-09-1
		CLUTCH HOUSING PAN	6-10-2

PART NAME	CODE	PART NAME	CODE
CLUTCH PEDAL	6-38-1	COOLER, Radiator Core Oil	9-46-31
CLUTCH PEDAL BRACKET	6-46-1	COOLER, Trans. Oil	9-46-31
CLUTCH PEDAL PAD	6-39-2	COOLER, Torque Converter	9-46-31
CLUTCH PEDAL ROD	6-50-1	CORE, Air Cond. & Heater	24-01-24
CLUTCH PEDAL SHAFT	6-43-1	CORE, Engine Oil Cooler	10-34-23
CLUTCH PRESSURE SPRING	6-16-1	CORE, Heater	1-48-88
CLUTCH RELEASE BEARING	6-19-2	CORE, Radiator	7-11-3
CLUTCH RELEASE BEARING RETURN SPRING	6-20-14	CORE, Starter Solenoid Moving	8-52-375
CLUTCH RELEASE FORK RETURN SPRING	6-27-5	COUNTERSHAFT, Aux. Trans.	21-94-1
CLUTCH RELEASE FORK	6-22-1	COUNTERSHAFT GEAR	21-15-2
CLUTCH RELEASE LEVER	6-17-3	COUNTERSHAFT, Trans.	21-24-2
CLUTCH RELEASE OVER-CENTER SPRING	6-35-0	COUNTERSHAFT, Trans. Aux.	21-18-56
CLUTCH RELEASE ROD	6-24-1	COUNTERWEIGHT, Heat Control	9-58-12
CLUTCH, Starter	8-52-41	COUPLING, Electric Wdo. Regulator	23-54-152
CLUTCH TORQUE SHAFT	6-52-1	COUPLING, Strg. Column Shaft	19-15-23
COIL, Air Cond. Compr. Clutch Field	24-25-232	COVER, Oil Filter	10-26-26
COIL, Air Cond. Evaporator	24-28-220	COVER, Air Cleaner	14-29-7
COIL, Ignition	8-35-4	COVER, A/Conditioning Spot Cooler Hole	23-33-16
COLLAR, Distributor Shaft	8-27-137	COVER, A/Cond. and Heater Vent.	24-24-184
COLLAR, Manual Antenna Mtg.	1-88-170	COVER, Auto. Headlamp Scanner	8-53-285
COMPRESSOR, Air Brake	5-114-0	COVER, Chain Case	9-23-5
COMPRESSOR, Air Cond.	24-25-5	COVER, Clutch	6-14-1
CONDENSER, Distributor	8-27-190	COVER, Console Trans. Control Lever	21-30-408
CONDENSER, Air Cond.	24-27-5	COVER, Cylinder Block Starter Opening	9-02-37
CONE and ROLLER, Frt. Wheel Bearing	22-06-1	COVER, Cylinder Head	9-03-28
CONE, Differential	3-11-1	COVER, Dash Panel Heater Motor	23-34-116
CONE, Rear Axle Drv. Pinion Brg.	3-22-24	COVER, Exhaust Manifold Heat Tube	9-48-125
CONNECTING ROD	9-31-4	COVER, Front Axle Diff.	2-11-26
CONNECTING ROD BEARING PACKAGES	9-32-2	COVER, Front Door Outside Panel	23-34-135
CONNECTOR, Wiring	8-16-1	COVER, Front Seat Adjuster	23-47-8
CONNECTOR, Heater Control Vac. Hose	1-48-280	COVER, Fuse Block Base	8-15-13
Connector, Intake Manifold Vacuum	9-48-8	COVER, Gearshift Boot	21-30-414
CONNECTOR, Park Brk. Air Line	4-25-0	COVER, Gearshift Indicator Hole	21-30-19
CONNECTOR, Power Brk. Hose Vane	5-110-18	COVER, Hood Air Intake Scoop	14-03-65
CONNECTOR, Radiator Outlet	7-14-42	COVER, Inst. Panel Map Light Opening	23-33-216
CONNECTOR, Trans. Oil Cooler	9-46-44	COVER, Instrument Panel Clock Hole	23-33-20
CONNECTOR, Water Pump to Oil Cooler	7-48-8	COVER, Instrument Panel Steering	23-33-132
CONNECTOR, W/Shield Washer	23-67-262	COVER, Master Cyl. Reservoir	5-39-20
CONSOLE, Floor Tunnel	23-38-1	COVER, Radio and Heater Opening	23-33-12
CONTACT, Starter Solenoid	8-52-341	COVER, Radio Opening	1-87-22
CONTACT and SPRING PACKAGE, Starter Sol. Sw.	8-52-342	COVER, Rear Axle Diff. Carrier	3-03-29
CONTACT and SPRING PACKAGE, Distributor	8-27-85	COVER, Roof Drain Trough Mldg. Joint	23-59-57
CONTACT SET, Distributor	8-27-158	COVER, Seat Belt	23-49-3
CONTACT, Dome Lamp Socket	8-05-31	COVER, Spare Tire	23-04-229
CONTACT, Fender Side Marker Lamp	8-14-4	COVER, Spare Tire	23-79-64
CONTACT, Gearshift Selector Lamp	21-30-33	COVER, Spare Wheel	22-20-91
CONTACT, Horn Ring and Feed Cable	8-33-118	COVER, Spotcooler Hole	24-24-151
CONTACT, Inst. Cluster Lamp Socket	8-41-39	COVER, Starter Gear Hsg.	8-52-101
CONTROL, Vacuum	8-27-308	COVER, Strg. Column Jacket	19-14-28
CONTROL, Air Brk. Tractor & Trailer	5-127-0	COVER, Strg. Column Shaft Coupling	19-15-17
CONTROL, A/Cond. and Htr.	24-24-39	COVER, Strg. Gear Housing	19-04-1
CONTROL, Door Key Cyl. Locking	23-18-25	COVER, Strg. Wheel Hub	19-30-7
CONTROL, Heater Fresh Air Door	1-48-374	COVER, Tie Rod Dust	2-07-28
CONTROL, Heater	1-48-4	COVER, Trans. Case	21-29-0
CONTROL, Hood Carburetor Air	15-03-63	COVER, Trans. P.T.O. Opening	21-08-1
CONTROL, Rear Speaker Fader	1-87-58	COVER, Trans. Output Shaft	21-04-8
CONTROL, Skid	5-06-7	COVER, Underbody Engine Housing	23-04-45
CONTROL, Snow Plow	1-93-0	COVER, Underbody Trans.	23-04-103
CONTROL, T/Gate and Door Latch	23-54-218	COVER, Whl. Brake Adj. Screw Hole	5-13-35
CONTROL, Transfer Case	21-101-0	COVER, Wiper Parking Mechanism	23-67-201
CONTROL, Trans. G/Shift Remote	21-42-0	COWL, Body Front	23-12-1
CONTROL UNIT, NOx	8-22-6	CRANK, Wiper Drive	23-67-76
CONTROLS, Air Cond.	24-24-0	CRANKSHAFT, A/Cond. Compressor	24-25-154
CONVERTER, Torque	9-46-4	CRANKSHAFT	9-07-5
COOLER, Strg. Pump Oil	19-54-196	CRANKSHAFT BEARING CAP	9-10-5

PART NAME	CODE	PART NAME	CODE
CRANKSHAFT BEARING PACKAGE	9-09-2		
CRANKSHAFT REAR BEARING OIL SEAL	9-11-1		
CRANKSHAFT SPROCKET	9-08-5		
CRANKSHAFT VIBRATION DAMPER	9-13-5		
CROSS BAR, Radiator Grille	7-33-1		
CROSSMEMBER, Aux. Trans.	21-88-59		
CROSSMEMBER, Cab Support	13-09-1		
CROSSMEMBER, Engine Rear Support	13-10-1		
CROSSMEMBER, Frt. Suspension	23-32-17		
CROSSMEMBER, Frt. Frame	13-11-5		
CROSSMEMBER, Front Spring	13-10-1		
CROSSMEMBER, Fuel Tank Support	13-15-1		
CROSSMEMBER, Intermediate	13-16-0		
CROSSMEMBER, Rear	13-18-0		
CROSSMEMBER, Rear Shock	13-22-0		
CROSSMEMBER, Rear Spring	13-23-0		
CROSSMEMBER, Roof Luggage Rack	23-40-155		
CROSSMEMBER, Rear Anchor	13-11-5		
CROSSMEMBER, Radiator Yoke Side Pnl.	7-26-32		
CROSSMEMBER, Trans. Mounting	13-10-1		
CROSSMEMBER, Transfer Case	13-27-0		
CROSSMEMBER, Trunnion	13-12-2		
CROSSOVER, Exhaust	11-05-1		
CUP, Brake Cyl. Piston	5-71-1		
CUP, Clutch Hydraulic M/Cyl.	6-40-12		
CUP, Clutch Hydraulic Slave Cyl.	6-40-53		
CUP, Differential	3-11-2		
CUP, Drive Pinion Brg.	3-22-25		
CUP, Frt. Wheel Bearing	22-06-2		
CUP, Rear Wheel Brg.	22-07-2		
CUP, Strg. Gear Worm Thrust Bearing	19-15-63		
CURTAIN, Sleeper Compartment	23-88-0		
CUSHION, Bumper Guard	13-68-18		
CUSHION, Step-Pad, Sta. Wgn.	13-66-148		
CYLINDER and KEY PACKAGE, Dr. and Ign.	23-17-2		
CYLINDER & KEY PKG., Console	23-17-38		
CYLINDER & KEY PKG., Deck	23-17-4		
CYLINDER & KEY PKG., Floor	23-17-72		
CYLINDER & KEY PKG., Ignition, Truck	8-35-115		
CYLINDER, Auto. Trans. Retarder Master	21-145-20		
CYLINDER BLOCK	9-02-5		
CYLINDER, Booster Brk. Slave	5-100-230		
CYLINDER, Brake Booster	5-100-0		
CYLINDER, Clutch Hyd. Master	6-40-0		
CYLINDER, Clutch Hyd. Slave	6-40-46		
CYLINDER HEAD	9-03-4		
CYLINDER, Inter Axle Shift	3-29-194		
CYLINDER, Master	5-39-3		
CYLINDER PACKAGE, Tandem Brake	5-39-3		
CYLINDER, Park Brk. Lever	4-25-22		
CYLINDER, Power Strg.	19-63-86		
CYLINDER REPAIR KIT, Brake	5-39-1		
CYLINDER REPAIR PKG. - Clutch M/Cyl.	6-40-3		
CYLINDER REPAIR PKG. - Clutch Slave	6-40-44		
CYLINDER REPAIR PACKAGE, Wheel	5-63-1		
CYLINDER, Top Lift	23-58-200		
CYLINDER, Snow Plow	1-93-0		
CYLINDER, Tilt Cab Tilting	23-1-22		
CYLINDER, Trans. Aux. Shift	21-18-69		
		D	
		DAMPER, A Cond. and Htr. Defroster	24-28-383
		DAMPER, Vibration	9-13-5
		DASHPOT, Carburetor	14-50-25
		DECAL, Door	23-11-21
		DECK LID	23-19-8
		DECK LID LUGGAGE RACK PACKAGE	1-74-1
		DEFLECTOR, REAR, STONE	13-66-106
		DEFLECTOR, Roof Rr. Air	23-36-134
		DEFOGGER, Rear Window	1-47-1
		DIAL, Trans. Column Gearshift	21-30-21
		DIAPHRAGM, Air Brake Chamber	5-98-21
		DIAPHRAGM, A/Cleaner Snorkel	14-29-34
		DIAPHRAGM, Brake Booster Cylinder	5-100-4
		DIAPHRAGM, Carburetor Choke	14-39-7
		DIFFERENTIAL CASE	3-04-6
		DIFFERENTIAL CLUTCH PARTS	3-09-0
		DIFFERENTIAL PINION	3-07-1
		DIFFERENTIAL PINION SHAFT	3-08-1
		DIFFERENTIAL SIDE GEAR	3-06-5
		DIFFERENTIAL, Partial	3-03-2
		DIFFERENTIAL, w/Carrier and Tubes	3-03-1
		DISC, Clutch	6-13-1
		DISC, Differential Clutch	3-09-1
		DISC, Parking Brake	4-01-0
		DISC, Trans. Frt. Clutch	21-133-36
		DISTRIBUTOR, Assembly	8-27-1
		DOME LAMP AND SWITCH	8-05-2
		DOME, Wheel	22-01-51
		DOOR, Cowl Ventilator	23-61-29
		DOOR, Glove Box	23-06-10
		DOOR, Headlamp	8-34-40
		DOOR, Htr. Shut Off	1-48-365
		DOOR HINGE	23-15-0
		DOOR LOCKS AND REMOTE CONTROLS	23-18-0
		DOOR REGULATORS AND REMOTE CONTROL HANDLES	23-14-0
		DOOR, Quarter Panel Fuel Filler	23-34-253
		DOOR, Tilt Cab Radiator Access	23-34-201
		DOORS	23-11-0
		DOWEL, Cylinder Block	9-02-7
		DOWEL, Rear Axle Drive Shaft Stud	3-36-8
		DRAG LINK, Steering	2-02-6
		DRAIN COCK, RADIATOR	7-13-2
		DRAIN TROUGH	23-59-0
		DRIER, Air Cond. Receiver	24-26-20
		DRIVE GEAR AND PINION SET, Rr. Axle	3-19-1
		DRIVE GEAR BOLT OR SCREW	3-20-1
		DRIVE SHAFT, Rr. Axle	3-32-1
		DRIVE, Fan Fluid	7-07-1
		DRUM, Front Brake	22-04-1
		DRUM, Parking Brake	4-01-0
		DRUM, Rear Brake	22-04-2
		DRUM, Trans. Reverse	21-136-65
		DUCT and DOOR, Fresh Air Vent	1-48-707
		DUCT, Heater Defroster	1-48-141
		DUCT, Hood Cold Air Intake	15-03-76
		DUCT, Rr. Window Defogger	1-47-3
		DUCTS, Air Cond. Air Distribution	24-28-73
		DUST SEAL, Strg. Gear Shaft	19-19-38

PART NAME	CODE	PART NAME	CODE
E			
ECCENTRIC, Camshaft	9-15-2	FILLER, Frt. Floor Pan	23-32-29
ELBOW, Air Cond. Exp. Valve to Dash	24-28-302	FILLER, Qtr. O/Side Panel Rear	23-64-213
ELBOW, Filler Tube	14-86-69	FILLER, Quarter Panel Taillamp	23-34-280
ELBOW, Water Pump By-Pass	7-48-8	FILLER, Rear Bumper Guard, B	13-68-15
ELBOW, Water Outlet	9-05-5	FILLER, Rear Wdo. Opening Lower	23-64-84
ELEMENT, Cigar Lighter	8-20-9	FILLER, Rr. Floor Pan Tailgate Opening	23-34-19
ELEMENT, Trans. Aux. Air Filter	21-18-133	FILLER, Shelf Panel Extension	23-34-326
ELEMENT, Water Filter	7-53-1	FILTER, Fuel	14-67-1
EMISSION CONTROLS	25-0-0	FILTER, Carb. Air	14-29-6
END PACKAGE, Tie Rod	2-07-1	FILTER, Engine Water	7-53-2
ENGINE, Short Assembly	9-01-24	FILTER, Transmission Oil	21-117-1
ENGINE FRONT SUPPORT INSULATOR	9-67-4	FILTER, Fuel Tank	14-86-85
ENGINE FRONT SUPPORT	9-64-0	FILTER, Power Brake Air Cleaner	5-113-17
ENGINE LESS ACCESSORIES	9-01-19	FILTER, Oil	10-12-6
ENGINE REAR SUPPORT INSULATOR	9-71-5	FILTER, Trans. Aux. Air	21-18-65
EVAPORATOR, Parts - Air Cond.	24-28-0	FILTER, Trans. Splitter Air	21-06-37
EXHAUST PIPE	11-05-1	FILTER, Vapor Canister (Charcoal)	25-04-4
EXHAUST PIPE FLANGE GASKET AND STUD	11-06-8	FILTER, W/Shield Washer	23-67-242
EXHAUST PIPE SUPPORT CLAMP	11-08-24	FINGER, Gearshift Control Selector	21-30-55
EXTENSION, Trans.	21-04-1	FINISH PLATE, Floor Console	23-38-5
EXTENSION, Body Side Sill	23-51-16	FINISH PLATE, Glove Box	23-06-17
EXTENSION, Body Side Sill Door Scuff	23-20-24	FINISH PLATE, Instrument Panel	23-33-135
EXTENSION, Center Floor Pan	23-32-25	FINISH PLATE, Qtr. Trim Panel	23-26-46
EXTENSION, Console to Floor	23-38-2	FINISH PLATE, Rear Seat Back	23-26-75
EXTENSION, Deck Opening Lower	23-34-176	FITTING'S, Air Cond. Compressor	24-25-107
EXTENSION, Exhaust Pipe	11-05-4	FITTING, Strg. Pump Discharge	19-54-225
EXTENSION, Fender Front	12-01-105	FLANGE, Exhaust Extension Pipe	11-05-12
EXTENSION, Frame	13-42-0	FLANGE, Frt. Axle Drive	2-12-65
EXTENSION, Frt. Side Rail to Side	23-32-116	FLANGE, Frt. Axle Strg. Knuckle	2-13-3
EXTENSION, Headlamp Door	8-34-48	FLANGE, Strg. Column Shaft Coupling	19-15-43
EXTENSION, Heater Vacuum Control	1-48-7	FLANGE, Strg. Wheel Locking	19-30-19
EXTENSION, Pillar	23-36-20	FLASHER, Turn Signal	8-50-186
EXTENSION, Quarter Inside	23-34-236	FLOOR BOARDS	23-04-0
EXTENSION, Quarter End	23-34-242	FLUID, Brake	5-01-2
EXTENSION, Rear Floor Pan Side	23-32-49	FLYWHEEL	9-45-1
EXTENSION, Rear Wdo. Opening	23-64-68	FOLDING TOP	23-58-3
EXTENSION, Roof Side Rail	23-40-92	FORK, Aux. Trans. G/Shift	21-90-2
EXTENSION, Shelf Panel Rear	23-34-330	FORK, Clutch	6-22-1
EXTENSION, Strg. Wheel Hub	19-30-8	FORK, Inter Axle Shift	3-29-101
EXTENSION, Tail Pipe	11-09-37	FORK, Starter Shifting	8-52-49
EXTENSION, Valve Stem	22-01-46	FORK, Transfer Case Shift	21-109-0
EXTENSION, Wheelhouse Inner Seat	23-49-22	FORK, Trans. Aux. Shift	21-18-18
F			
FAN AND ALTERNATOR IDLER PULLEY	7-04-1	FORK, Trans. G/Shift	21-39-3
FAN AND RELATED DRIVE BELTS	7-03-1	FORK, Trans. Splitter Shift	21-06-24
FAN ASSEMBLY	7-02-1	FORK, Two Speed Axle Clutch	3-51-2
FAN DRIVE PULLEY	7-06-1	FORK, Two Speed Axle Shift	3-46-0
FAN FLUID DRIVE UNIT OR THERMAL DRIVE UNIT	7-07-0	FRAME	13-01-1
FAN PULLEY HUB	7-05-1	FRAME and CHANNEL, Vent Wing	23-64-48
FASTENER, Front Door Glass	23-64-272	FRAME, Windshield	23-66-65
FENDER, Front	12-01-5	FRONT SEAT HARDWARE	23-45-0
FENDER BRACE	12-07-1	FRONT SEAT ADJUSTER	23-47-0
FENDER BRACKET	12-06-3	FUEL FILTER	14-67-1
FENDER, Rear	12-18-5	FUEL GAUGE	8-37-275
FENDER SHIELD	12-04-4	FUEL PUMP	14-73-1
FIELD COIL, Starter	8-52-214	FUEL TANK	14-86-1
FILLER, Body Front Pillar Lower	23-36-3	FUEL TANK GAUGE	14-72-1
FILLER, Body Pillar	23-36-29	FUSE BLOCK	8-15-3
		FUSES	8-17-2

PART NAME	CODE	PART NAME	CODE
G			
GARNISH MOULDINGS	23-22-0	GEAR, Aux. Trans. M/Shaft Second Spd.	21-92-70
GASKET & SEAL, Transmission	21-01-3	GEAR, Aux. Trans. M/Shaft U/Drive	21-92-49
GASKET SET, Engine	9-01-5	GEAR, Flywheel Ring	9-45-2
GASKET SET, Engine Valve Grind	9-39-1	GEAR, Front Axle Diff Side	2-11-39
GASKET SET, Intake Manif.	9-50-1	GEAR, Inter Axle Diff. Drive	3-29-13
GASKET SET, Oil Pan	10-24-1	GEAR, Inter Axle Diff. Driven	3-29-41
GASKET, Air Cleaner Cover	14-29-4	GEAR, Inter Axle Diff. Idler	3-29-29
GASKET, Air Cleaner to Carb.	14-29-5	GEAR, Inter Axle Diff. Side	3-29-82
GASKET, Air Cond. Compr. Cyl. Head.	24-25-94	GEAR, Oil Pump Drive	10-10-1
GASKET, Auto. Trans. Drain Plug	21-119-12	GEAR, P.T.O. Drive	21-08-76
GASKET, Auto. Trans. Frt. Pump Hsg.	21-118-54	GEAR, P.T.O. Idler	21-08-86
GASKET, Auto. Trans. Oil Pan	21-119-5	GEAR, P.T.O. Reverse	21-08-77
GASKET, Brake M/Cyl.	5-39-18	GEAR, Rear Axle Diff. Drive	3-19-16
GASKET, Brake M/Cyl. Reservoir Cover	5-39-24	GEAR, Rear Axle Diff. Side	3-06-5
GASKET, Brake Support	5-13-7	GEAR, Transfer Case	21-102-0
GASKET, Brake Whl. Cyl. Hose	5-62-7	GEAR, Trans. Annulus	21-134-38
GASKET, Carburetor Flange	14-30-2	GEAR, Trans. Aux. Co/Shaft Drive	21-18-57
GASKET, Chain Case Cover	9-23-17	GEAR, Trans. Aux. M/Shaft Reduction	21-18-7
GASKET, Cylinder Head	9-03-5	GEAR, Trans. Co/Shaft Drive	21-15-3
GASKET, Cylinder Head Cover	9-03-29	GEAR, Trans. Co/Shaft First Spd.	21-15-11
GASKET, Distributor Mtg.	8-27-4	GEAR, Trans. Co/Shaft Fourth Spd.	21-15-23
GASKET, Drive Pinion Brg. Retainer	3-33-10	GEAR, Trans. Co/Shaft O/Drive	21-54-43
GASKET, Exhaust Manifold	9-50-5	GEAR, Trans. Co/Shaft P.T.O. Drive	21-15-26
GASKET, Exh. Manif. Heat Tube	9-50-18	GEAR, Trans. Co/Shaft Range	21-15-6
GASKET, Exh. Pipe Flange	11-06-8	GEAR, Trans. Co/Shaft Second Spd.	21-15-15
GASKET, Fender Side Marker Lamp	8-14-13	GEAR, Trans. Co/Shaft Third Spd.	21-15-22
GASKET, Fuel Pump	14-74-1	GEAR, Trans. High and Low Range Co/Shaft	21-06-46
GASKET, Gearshift Lever	21-34-53	GEAR, Trans. M/Drive	21-09-2
GASKET, Intake & Exhaust Manif.	9-50-0	GEAR, Trans. M/Shaft Drive	21-10-11
GASKET, Oil Filter Body	10-26-18	GEAR, Trans. M/Shaft First Spd.	21-10-6
GASKET, Oil Filter Cover	10-26-27	GEAR, Trans. M/Shaft Fourth Spd.	21-10-43
GASKET, Oil Pan	10-24-8	GEAR, Trans. M/Shaft Low Speed	21-10-3
GASKET, Oil Pan Drain Plug	10-24-38	GEAR, Trans. M/Shaft Output	21-10-75
GASKET, Oil Pump	10-07-0	GEAR, Trans. M/Shaft O/Drive	21-54-29
GASKET, Rear Axle Carrier Cover	3-03-30	GEAR, Trans. M/Shaft Reverse Speed	21-10-72
GASKET, Rear Axle Carr. Cvr. Filler Plug.	3-03-36	GEAR, Trans. M/Shaft Second Speed	21-10-16
GASKET, Rear Axle Drive Shaft Flange	3-36-1	GEAR, Trans. M/Shaft Sliding, First & Rev.	21-10-4
GASKET, Rear Axle Frt. Brg. Oil Seal	3-22-78	GEAR, Trans. M/Shaft Third Speed	21-10-31
GASKET, Strg. Gear Shaft Cover	19-19-28	GEAR, Trans. Output Shaft Coupling	21-10-70
GASKET, Tail, Stop & T/Signal Lamp	8-55-8	GEAR, Trans. Reverse Idler	21-11-1
GASKET, Trans. Case Cover	21-29-25	GEAR, Trans. Sun	21-133-40
GASKET, Water Outlet Elbow	9-05-6	GEAR, Trans. Synchronizer Clutch	21-14-5
GASKETS, Water Pump	7-44-0	GEAR, Two Speed Axle Clutch	3-50-1
GATE, Trans. Column G/Shift Lever	21-30-11	GLASS, Body Cargo Area	23-64-310
GAUGE, Fuel	8-37-275	GLASS, Qtr. Window	23-64-311
GAUGE, Fuel Tank Sending Unit	14-72-1	GLASS, Rear Window	23-64-314
GAUGE, Oil Pressure	8-37-316	GLASS, Vent Wing	23-64-306
GAUGE, Temperature	8-37-136	GLASS, Windshield	23-66-135
GAUGE, Vacuum	8-37-127	GLASS, Door Window	23-64-308
GEAR & PIN, Distributor Shaft	8-27-352	GLASS CHANNELS	23-09-0
GEAR & PINION, Front Axle	2-11-58	GLASS, T/Gate Window	23-64-10
GEAR & PINION, Rear Axle	3-19-1	GLOVE BOX	23-06-4
GEAR & PINION, Speedometer	21-85-0	GLOVE COMPARTMENT LAMP	8-38-23
GEAR & SEAL PKG., Windshield Wiper	23-67-10	GOVERNOR	14-68-0
GEAR & SHAFT, Transfer Case Idler	21-104-0	GOVERNOR REPAIR PACKAGE, Trans.	21-138-2
GEAR, Aux. Trans. Co/Shaft Drive	21-94-20	GRILLE, Defogger Outlet	1-47-4
GEAR, Aux. Trans. Co/Shaft O/Drive	21-94-23	GRILLE, Defroster Outlet	1-48-158
GEAR, Aux. Trans. Co/Shaft Second Spd.	21-94-2	GRILLE	7-16-11
GEAR, Aux. Trans. Co/Shaft Third Spd.	21-94-9	GRILLE, Radio Speaker	23-33-42
GEAR, Aux. Trans. M/Drive	21-95-8	GRILLE, Rear Seat Heater	1-87-21
GEAR, Aux. Trans. M/Shaft First Spd.	21-92-60	GROUND LEAD, Distributor	8-27-207
GEAR, Aux. Trans. M/Shaft O/Drive	21-92-6	GJARD, Alternator	7-08-5
		GUARD, Bumper	13-68-6
		GUARD, Prop Shaft	16-15-6
		GUIDE, Auto. Adj. Cable	5-20-11

PART NAME	CODE	PART NAME	CODE
GUIDE, Trans. Kickdown Servo.....	21-137-13	HOOD PANEL.....	15-03-3
GUIDE, Manual Seat Adjuster.....	23-47-67	HOOK, Coat Hanger.....	23-82-30
GUIDE, Valve.....	9-39-10	HOOK, Stake Rack.....	23-68-2
GUSSET, Frame.....	13-46-0	HORN.....	8-32-2
		HORN CONTROLS.....	8-33-0
H			
HANDLE, A/Cond. or Htr. Vent Dr.	1-48-401	HOSE PACKAGE, Pump Pressure.....	19-58-7
HANDLE, Ash Receiver.....	23-02-42	HOSE, Air Brake.....	5-116-0
HANDLE, Door Latch Remote Control.....	23-14-27	HOSE, Air Brake Compressor.....	5-120-0
HANDLE, Door Outside.....	23-14-10	HOSE, Air Cleaner.....	10-01-62
HANDLE, Door Window Reg.....	23-14-18	HOSE, Air Conditioning.....	24-28-24
HANDLE, Floor Pan Cvr. Release.....	23-32-80		
		HOSE, Air Pump Diverter Valve.....	25-02-42
HANDLE, Glove Box Door.....	23-06-25	HOSE, Brake.....	5-62-1
HANDLE, Grab.....	23-77-0	HOSE, Carburetor Vapor Hose.....	14-73-11
HANDLE, Hood Latch Release.....	15-11-5	HOSE, Fuel Filter.....	14-67-2
HANDLE PACKAGE, Door Vent Wing.....	23-14-53	HOSE, Front Wheel Brake.....	5-62-1
HANDLE, Park Brake Lever.....	4-08-2		
		HOSE, Heater Connector.....	1-48-7
HANDLE, Qtr. Window Glass.....	23-14-70	HOSE, Htr. Core.....	1-48-555
HANDLE, Qtr. Window Regulator.....	23-14-79	HOSE, Power Brake Vacuum.....	5-111-17
HANDLE, Reclining Front Seat Back.....	23-45-52	HOSE, P/Strg. Pump Return.....	19-58-14
HANDLE, Tailgate Lock.....	23-54-180	HOSE, Radiator Inlet.....	7-14-4
HANDLE, Tailgate Wdo. Regulator.....	23-54-73		
		HOSE, Radiator Outlet.....	7-14-5
HANDLE, 3rd Seat Back Release.....	23-48-20	HOSE, Water Pump By-Pass.....	7-14-9
HANGER, Rr. Spring Front.....	13-54-4	HOSE, W/Shield Washer Connector.....	23-67-260
HANGER, Rr. Spring Rear.....	13-54-15	HOUSING, Air Brake Chamber.....	5-98-11
HEADLAMP.....	8-34-1	HOUSING, Air Cond.....	24-28-334
HEAD, Starter Commutator End.....	8-52-176		
		HOUSING, Air Cond. Evaporator.....	24-28-113
HEAD, A/Cond. Compressor.....	24-25-84	HOUSING, Clutch.....	6-09-1
HEAD, Cylinder.....	9-03-4	HOUSING, A/Cond. and Heater.....	24-01-18
HEAD, Power Strg. Gear Housing.....	19-02-55	HOUSING, Ash Receiver.....	23-02-19
HEAD END SPLITTER & RANGE PARTS, Trans.....	21-06-0	HOUSING, Defogger Blower.....	1-48-17
HEADER, Roof Rear.....	23-34-293		
		HOUSING, Disc Brakes.....	5-05-1
HEADLINING.....	23-86-22	HOUSING, Distributor.....	8-27-96
HEAT CONTROL VALVE, Manifold.....	9-58-1	HOUSING, Front Axle.....	2-11-22
HEAT SHIELD, Exhaust Pipe.....	11-05-5	HOUSING, Front Fender.....	12-01-5
HEAT SHIELD, Muffler.....	11-01-16	HOUSING, Gearshift Selector Lever.....	21-30-403
HEAT SHIELD, Spark Plug.....	8-36-124		
		HOUSING, Headlamp.....	8-34-362
HEATER.....	1-48-1	HOUSING, Heater.....	1-48-125
HEATER AND COMPONENTS.....	1-48-0	HOUSING, Heater Fresh Air Intake.....	1-48-383
HEATER, Engine Jacket.....	9-02-50	HOUSING, Inter Axle Diff.....	3-29-68
HEATER, Carburetor.....	14-62-1	HOUSING, P.T.O.....	21-08-11
HELPER SPRING, Front Seat Cushion.....	23-52-1		
		HOUSING, Pwr. Strg. Cont. Val. Actuator.....	19-63-314
HIGH BEAM INDICATOR LAMP.....	8-39-0	HOUSING, Rr. Axle.....	3-02-1
HINGE, Hood.....	15-19-2	HOUSING, Starter Pinion.....	8-52-76
HINGE, 3rd Seat Back Frame.....	23-48-121	HOUSING, Speed and Inst.....	8-37-178
HINGE, Deck Lid.....	23-19-84	HOUSING, Strg. Column Shaft Bearing.....	19-14-21
HINGE, Door Lwr.....	23-15-3		
		HOUSING, Steering Gear.....	19-02-4
HINGE, Door Upr.....	23-15-1	HOUSING, Strg. Column Gearshift.....	19-46-8
HINGE, Floor Console Compartment.....	23-38-14	HOUSING, Trans. Aux. Case.....	21-18-45
HINGE, Front Fender.....	12-01-18	HOUSING, Turn Signal Indicator Lamp.....	8-50-64
HINGE, Glove Box Door.....	23-06-21	HOUSING, Trans. Oil Pump.....	21-118-40
HINGE, Hood Cold Air Intake Door.....	15-03-86		
		HOUSING, Underbody Engine Cover.....	23-04-42
HINGE, Rear Floor Pan Cvr. Pnl.....	23-32-65	HOUSING, Water Pump.....	7-43-01
HINGE, Side and Cargo Door Window.....	23-64-126	HUB And DRUM FRONT.....	22-03-1
HINGE, Stake Rack.....	23-68-3	HUB And Drum Rear.....	22-03-2
HINGE, T/Gate.....	23-54-4	HUB, Disc Brake.....	5-05-3
HOLDER, Alternator Brush.....	8-29-42		
		HUB, Fan Pulley.....	7-05-1
HOLDER, Starter Brush.....	8-52-150	HUB, Frt. Wheel Locking.....	2-12-17
HOLDER, Air Cond. Fuse.....	24-24-7	HUB, Wheel.....	22-05-4
HOOD BUMPER.....	15-09-4	HUB with LEVER, Power Brake.....	5-100-189
HOOD LATCH.....	15-11-3		
HOOD LATCH STRIKER.....	15-13-2		

PART NAME	CODE	PART NAME	CODE
I		L	
I-BEAM, Front Axle	2-01-2	LAMP, Ash Receiver	8-19-83
IDLER ARM, Steering Link	19-27-31	LAMP, Back-up	8-56-1
IGNITION COIL	8-35-4	LAMP, Cargo and Dome	8-05-0
IMPELLER, Water Pump	7-45-31	LAMP, Clearance and I.D.	8-48-0
INDICATOR, Hi Beam	8-39-0	LAMP, Console	21-30-15
INDICATOR, Low Oil Pressure	8-37-75	LAMP, Cornering	8-50-292
INDICATOR, Oil Level	10-03-4	LAMP, Courtesy	8-11-2
INDICATOR, Trans. Oil Level	21-119-19	LAMP, Fender T/Signal Indicator	8-50-175
INJECTOR, Fuel	14-99-0	LAMP, Glove Box	8-38-23
INSTRUMENT PANEL	23-33-0	LAMP, Head	8-34-1
INSTRUMENT PANEL INSTRUMENTS	8-37-0	LAMP, Heater Control	1-48-10
INSTRUMENT PANEL WIRING	8-19-3	LAMP, Hood T/Signal Indicator	8-50-175
INSULATION	23-31-0	LAMP, Ignition and Starter Switch	8-40-5
INSULATOR, Aux. Trans.	21-88-61	LAMP, License	8-57-10
INSULATOR, Body Hold Down	23-05-10	LAMP, Map and Courtesy	8-42-1
INSULATOR, Engine Front Support	9-67-4	LAMP, Parking and T/Signal	8-50-303
INSULATOR, Engine Rear	9-71-5	LAMP, Side Marker	8-14-1
INSULATOR, Clutch Rod	6-24-8	LAMP, Super Light	8-39-9
INSULATOR, Muffler and Tail Pipe	11-10-3	LAMP, Tail, Stop and T/Signal	8-55-7
INSULATOR, Muffler Support	11-02-16	LAMP, Tailgate Tail	8-55-1
INSULATOR, Prop Shaft Ctr. Brg.	16-17-18	LAMP, Trunk	8-13-1
INSULATOR, Radiator Support Bolt	7-29-11	LAMP, Underhood	8-10-1
INSULATOR, Wiring	8-16-6	LATCH, Deck Lid	23-19-105
INTER AXLE PARTS, Front Rear Axle	3-29-0	LATCH, Door	23-18-5
J		LATCH, Glove Box	23-06-15
JACK BAR and BASE	13-72-4	LATCH, Hood	15-11-3
JACKET, Strg. Column	19-14-1	LATCH PACKAGE, Qtr. Wdo. Glass	23-64-181
JET, Carburetor	14-35-1	LATCH, Tailgate	23-54-1
JOINT, Universal Cross	16-03-1	LATCH, Tilt Cab Safety Release	23-1-49
K		LEAF, Front Spring	17-02-0
KING PIN, Strg. Knuckle	2-04-1	LEAF, Rear Spring	17-12-4
KIT, Carburetor Gasket	14-30-7	LENS, Back Up Lamp	8-56-8
KIT, Carburetor Repair	14-30-4	LENS, Clearance and I.D.	8-48-5
KIT, Carburetor Zip	14-30-4	LENS, Dome Lamp	8-05-23
KNOB and WIRE, Choke	14-63-1	LENS, Double Face T/Signal	8-50-71
KNOBS, Air Cond. Control	24-24-156	LENS, Gearshift Selector Lever	21-30-21
KNOB, Clock Reset	8-37-454	LENS, Glove Comp't. Lamp	8-38-3
KNOB, Front Seat Back Release	23-45-39	LENS, Map and Courtesy Lamp	8-42-5
KNOB, Trans. Gearshift Selector	21-30-6	LENS and MASK, Inst. Cluster	8-37-162
KNOB, Headlamp Switch	8-53-296	LENS, Side Marker	8-14-6
KNOB, Heater Control	1-48-942	LENS, Tail, Stop and Turn Sig.	8-55-194
KNOBS, Inst. Panel	8-53-296	LENS, Turning and Parking Lamp	8-50-334
KNOB, Cigar Lighter	8-20-8	LEVER, Air Brake Camshaft	5-97-16
KNOB, Manual Seat Adjuster	23-47-55	LEVER, Aux. Trans. G/Shift Hand	21-91-1
KNOB, Parking Brk. Lever	4-25-3	LEVER, Aux. Trans. G/Shift Stub	21-89-1
KNOB, Radio Control	1-87-180	LEVER, Auto. Brake Adjuster	5-20-9
KNOB, Rr. Window Defogger Sw.	1-47-8	LEVER, Clutch Pedal Shaft	6-43-11
KNOB, Wiper Switch	23-67-194	LEVER, Clutch Release	6-17-3
KNUCKLE, Steering	2-03-3	LEVER, Clutch Shaft Assistor	6-41-78
		LEVER, Door Elect. Lock	23-18-101
		LEVER, Fast Idle Adjusting	14-24-17
		LEVER, Gearshift Operating	21-42-11
		LEVER, Hood Fresh Air Intake	15-03-91
		LEVER, Park Brk. Operating (Wheel)	4-26-1
		LEVER, Parking Brake Hand	4-08-1
		LEVER, Park Brk. Actuating (Foot)	4-25-1
		LEVER, Throttle Control	14-17-0
		LEVER, Transmission Gearshift	21-30-2

PART NAME	CODE	PART NAME	CODE
OIL PUMP	10-07-6	PANEL, Rear Floor Pan	23-32-56
OIL PUMP DRIVE GEAR	10-10-1	PANEL, Rocker Dr. Sill	23-51-5
OIL PUMP DRIVE SHAFT	10-09-1	PANEL, Roof	23-34-301
OIL PUMP ROTOR	10-14-18	PANEL, 2nd Seat Back	23-48-65
OIL SEAL, Crankshaft Bearing	9-11-1	PANEL, Side Lock Pillar	23-34-288
OIL SEAL, Chain Case Cover	9-23-18	PANEL, Side or Sill to U/Body	23-23-48
OIL SEAL, Drive Pinion Brg.	3-22-45	PANEL, Side Wheelhouse	23-34-27
OIL SEAL, Drive Shaft	3-35-14	PANEL, Underbody Floor	23-32-24
OIL SEAL, P/Strg. Pump Rotor	19-54-151	PANEL, Underbody Stepwell	23-34-58
OIL SLINGER, CRANKSHAFT	9-07-17	PANS, PLUGS AND BODY BUMPERS	23-32-0
OIL STRAINER	10-23-7	PARKING BRAKE CABLE	4-23-1
OILER, Distributor	8-27-100	PARKING BRAKE LEVER	4-08-1
ORNAMENT, Grille	7-17-1	PARKING BRAKE SIGNAL LAMP	8-31-10
ORNAMENT, Hood	15-03-18	PAWL, Parking Brake	4-13-0
ORNAMENT, Strg. Wheel Horn	8-33-6	PEDAL, Accelerator	14-01-1
OUTLET, A/Cond. Air	24-28-78	PEDAL, Auto. Trans. Retarder	21-145-1
OUTSIDE FINISH MOULDINGS	23-23-0	PEDAL, Clutch	6-38-1
OVERLAY, Door	23-11-10	PEDAL, BRAKE	5-27-1
OVERLAY, Fender Side	12-15-32	PENTASTAR, Front Fender	12-15-21
OVERLAY, Quarter Outside Panel	23-34-329	PHOTOCELL, Auto. Headlamp Sentinel	8-53-304
OVERLAY, T /Gate Outside	23-54-2	PILLARS, Body	23-36-0
		PILLAR, Body Center	23-36-5
		PILLAR, Body Lock	23-36-53
		PILLAR, Cowl Hinge	23-36-14
		PILLAR, Quarter Panel Tailgate	23-36-118
		PIN, Brake Hold Down Spring	5-26-4
		PIN, Cable	14-25-12
		PIN, Clutch Rel. Over Center Spring	6-35-15
		PIN, Clutch Spring Anchor	6-35-15
		PIN, Differential Lock	3-08-2
		PIN, Gearshift Selector Lever	21-30-22
		PIN, License Plate Mtg.	8-47-76
		PIN, Link Clevis	14-02-86
		PIN, Parking Lever	4-08-35
		PIN, Parking Brake Lever Hinge	4-08-35
		PIN, Piston	9-36-5
		PIN, Pwr. Brake Link	5-100-194
		PIN, Reclining Seat Release Cable	23-45-184
		PIN, Starter Shifting Fork Pivot	8-52-50
		PIN, T/Gate Hinge	23-54-17
		PIN, T/Gate Window Washer Arm	23-67-254
		PIN, Trans. Interlock	21-34-42
		PIN, Trans. Interlock, Low & Rev.	21-42-28
		PIN, Trans. Manual Valve	21-139-34
		PINION, Front Axle Diff.	2-11-41
		PINION, Inter Axle Diff.	3-29-88
		PINION, Rear Axle Diff.	3-07-1
		PINION, Rear Axle Diff. Spiral Idler	3-12-0
		PINION, Speedometer	21-85-5
		PINION, Trans. Frt. Planetary	21-134-8
		PINION, Trans. Main Drive	21-09-2
		PINION, Two Speed Axle Idler	3-30-1
		PINTLE HOOK	13-62-0
		PIPE, Air Intake	14-29-16
		PIPE, Exhaust	11-05-4
		PIPE, Exhaust Extension	11-05-4
		PIPE, Flexible Exhaust	11-05-0
		PIPE, Oil Filler	10-01-9
		PISTON, Air Brk. Adjusting	5-98-42
		PISTON, Air Brk. Chamber	5-98-36
		PISTON, Booster Brk. Slave Cyl.	5-100-33
		PISTON, Disc Brake	5-05-10
		PISTON, Hyd. Brk. Master Cyl.	5-44-3
		PISTON, Hyd. Brk. Wheel Cyl.	5-70-1
		PISTON PIN	9-36-5

P

PAD, Accelerator Pedal	14-01-2
PAD, Brake Pedal	5-28-8
PAD, Clutch Pedal	6-39-2
PAD, Instrument Panel	23-84-0
PAD, Parking Brake Pedal	4-25-6
PAD, Strg. Wheel Horn	8-33-13
PAD, Tailgate Step	23-34-38
PADS, LINERS, INSULATORS, SEALS, ANTI-SQUEAK	23-31-0
PAN, Clutch Hsg.	6-10-2
PAN, Oil	10-24-4
PAN, Trans. Oil	21-119-3
PANEL, Body Metal	23-34-55
PANEL, Bumper Texture	13-66-151
PANEL, Cargo Area Side	23-34-39
PANEL, Center Pillar Up. Finish	23-23-16
PANEL, Cowl Plenum	23-34-80
PANEL, Cowl Side Inner	23-34-89
PANEL, Cowl Top and Dash	23-34-80
PANEL, Ctr. Floor Pan	23-32-46
PANEL, Dash	23-34-110
PANEL, Deck Opening Upper	23-34-166
PANEL, Deck Opening Lower	23-34-167
PANEL, Door Outside Repair	23-34-120
PANEL, Express Body - Inner	23-34-43
PANEL, Front Fender	12-01-7
PANEL, Frt. Floor	23-32-13
PANEL, Header, Side and Rear	23-34-293
PANEL, Header, Windshield	23-34-354
PANEL, Hood	15-03-3
PANEL, Instrument	23-33-109
PANEL, License Plate Mtg.	8-47-68
PANEL, Qtr. Outside Panel Finish	23-23-85
PANEL, Quarter Inside	23-34-234
PANEL, Quarter Outside Repair	23-34-235
PANEL, Quarter Wheel Opening	23-34-212
PANEL, Quarter Wheelhouse	23-34-29
PANEL, Radiator Grille	7-16-63
PANEL, Radiator Yoke	7-26-30
PANEL, Rear Corner	23-34-78

PART NAME	CODE	PART NAME	CODE
R			
RACE, Trans. "O" Running Clutch	21-136-232	RELAY, Concealed Headlamp	8-34-282
RACE, Inner	19-14-22	RELAY, Elect. Door Lock	23-18-106
RACE, Strg. Gear Thrust Bearing, Inner	19-15-63	RELAY, Electric Window	23-41-27
RACK, Luggage	1-74-1	RELAY, Headlamp Delay	8-53-283
RACKS & GATES, Stake Body	23-68-0	RELAY, Horn	8-33-164
RADIATOR CORE	7-11-3	RELAY, Ignition Lamp Thermal Time Delay	8-40-10
RADIATOR CORE FAN SHROUD	7-08-2	RELAY, Low Fuel	8-37-70
RADIATOR CROSS BAR	7-33-1	RELAY, Starter	8-52-328
RADIATOR FILLER CAP	7-12-1	RELAY, T/Gate Wdo.	23-54-159
RADIATOR GRILLE	7-16-11	REMOTE Control, Door Latch	23-18-13
RADIATOR YOKE	7-26-2	REPAIR PKG., Auto. Trans. M/Cyl.	21-145-20
RADIO and CONTROLS	1-87-1	REPAIR PKG., Carburetor	14-30-4
RADIO ANTENNA	1-88-1	REPAIR PACKAGE, Trans. Governor	21-138-2
RAIL, Aux. Trans. G/Shift	21-90-1	REPAIR PACKAGE, Strg. Gear	19-01-3
RAIL, Body Side	23-32-105	RESERVOIR, Air Brake	5-119-0
RAIL, Roof Luggage Rack	23-40-150	RESERVOIR, Head Lamp Washer	8-34-323
RAIL, Roof Side	23-40-85	RESERVOIR, Snow Plow Hyd. Remote	1-93-0
RAIL, Trans. Aux. Shift	21-18-19	RESERVOIR, Strg. Pump Oil	19-54-180
RAIL, Transfer Case Shift	21-108-0	RESERVOIR, W/Shield Washer	23-67-240
RAIL, Trans. G/Shift	21-34-8	RESET, Clock	8-37-452
RAIL, Trans. Splitter Shift	21-06-23	RESISTOR, A/Cond. Blower Motor	24-24-67
RAIL, Underbody Longitudinal	23-32-105	RESISTOR, Htr. Blower Motor	1-48-832
REAR AXLE COMPLETE, Less Brakes	3-01-8	RESISTOR, Ignition Coil	8-35-22
REAR AXLE DIFFERENTIAL AND CARRIER	3-03-1	RESONATOR	11-01-1
REAR AXLE HOUSING	3-02-1	RESTRICTOR, Engine Support	9-67-19
REAR BRAKE DRUM	22-04-2	RETAINER, Door Trim Panel	23-92-28
REAR BUMPER FACE BAR	13-66-3	RETAINER, Door Weatherstrip	23-63-55
REAR SPRING	17-11-3	RETAINER, Drive Shaft Brg.	3-33-8
REAR SPRING BUMPER	17-19-3	RETAINER, Parking Brk. Lever	4-08-36
REAR SPRING CENTER BOLT	17-14-10	RETAINER, Trans. Aux. Co/Shaft	21-18-55
REAR SPRING CLIP	17-15-1	RETAINER, Trans. Aux. M/Shaft	21-18-3
REAR SPRING LEAF	17-12-4	RETAINER, Trans. Co/Shaft Frt. Brg.	21-26-3
REAR SPRING SHACKLE	17-16-1	RETAINER, Trans. Co/Shaft Rear Brg.	21-27-2
REAR SPRING SILENT BLOCK	17-17-3	RETAINER, Trans. M/Drive Gear Brg.	21-09-29
REAR WINDOW DEFOGGER	1-47-1	RETAINER, Transmission M/Shaft Rear Bearing	21-23-2
RECEIVER, Ash	23-02-18	RETAINER, Trim Panel	23-101-26
RECEIVER DRIER, A Cond.	24-26-20	RETARDER, Auto. Trans.	21-145-0
RECEIVER, Floor Console Ash	23-02-105	RIM and WEB, Disc Brakes	5-03-6
RECEIVER, Qtr. Arm Rest Ash	23-02-62	RIM, Wheel	22-11-0
RECEIVER, Rear Ash	23-02-78	RING, Clutch Adjusting	6-17-27
RECTIFIER, Alternator Positive	8-29-131	RING, Clutch Pivot Snap	6-52-12
REFLECTOR, Side Marker Lamp	8-14-19	RING, F/Tank Filler Cap Ornament	14-86-38
REFLECTOR, Side Marker	8-48-12	RING, Horn	8-33-13
REGULATOR, Alternator Voltage	8-28-74	RING, Horn, Partial	8-33-4
REGULATOR, Air Cond. Control Vacuum	24-24-159	RING, Piston Pin Retaining	9-36-7
REGULATOR, Door Window	23-39-5	RING, Sealed Beam Retaining	8-34-180
REGULATOR, Electric Window	23-41-4	RING SET, Piston	9-35-1
REGULATOR, Air Cond. Evap. Coil Sensing	24-28-13	RING, Starter Clutch Actuator Ret.	8-52-61
REGULATOR, Front Door Vent	23-39-29	RING, Steering Gear Piston	19-56-6
REGULATOR, Inst. Voltage	8-37-2	RING, 3rd Seat Back Release Latch	23-48-17
REGULATOR, Quarter Window	23-39-34	RING, Transmission Frt. and Rr. Planet	21-134-12
REGULATOR, T/Gate Window	23-54-72	RING, Transmission Servos Accumulator	21-137-202
REGULATOR, Trans. Splitter Air	21-06-40	RING, Trans. Gearshift Lever	21-30-7
REINFORCEMENT, Frame Side	13-03-3	RING, Transmission Governor Support	21-138-38
REINFORCEMENT, Frt. Axle Control Arm	2-10-69	RING, Transmission Input Shaft	12-129-7
REINFORCEMENT, Roof Rail	23-40-86	RING, Transmission Kickdown Servo	21-137-8
REINFORCEMENT, Side & Rear Corner	23-34-57	RING, Wheel Trim	22-01-41
RELAY, Air Cond. Vacuum Time Delay	24-24-16	RINGS, Air Cond. Compr. Clutch	24-25-234
RELAY, Auto. Headlamp Dimmer	8-53-283	RISER, Front Seat	23-45-120
RELAY, Auto. Trans. Retarder Light	21-145-45	ROCKER, Valve	9-43-1
		ROD, Accelerator Pedal	14-07-0
		ROD, Air Cond. Water Valve Control	24-01-38
		ROD, Brake Cyl. Piston	5-12-1
		ROD, Brake Pedal to Booster Linkage	5-100-20
		ROD, Clutch Assistor Push	6-41-11

PART NAME	CODE	PART NAME	CODE
ROD, Clutch Hyd. M/Cyl. Push	6-40-21	SEAL & GASKET PKG., Power Strg.	19-01-4
ROD, Clutch Hyd. Slave Cyl. Push	6-40-47	SEAL & GASKET PKG., Transmission	21-01-3
ROD, Clutch Pedal	6-50-1	SEAL & PLATE, Power Brake Booster	5-100-206
ROD, Clutch Release	6-24-1	SEAL & SPACER PKG., W/Shield Wiper Motor	23-67-104
ROD, Clutch Torque Shaft	6-52-27	SEAL KIT, Power Strg. Pump	19-54-55
ROD, Connecting	9-31-4	SEAL PKG., Power Strg. Gear Valve	19-57-1
ROD, Door Lock	23-18-26	SEAL PKG., Strg. Gear Shaft Cover	19-19-1
ROD, Eng. B/Crank	4-11-9	SEAL, Air Cond. Compr. Brg. Hsg.	24-25-189
ROD, Fuel Pump Push	14-77-17	SEAL, Air Cond. Compr. Oil Pump Cover	24-25-252
ROD, Gearshift Control	19-48-1	SEAL, Air Cond. Evaporator	24-28-92
ROD, Gearshift Control, Upper	21-30-418	SEAL, Air Cond. Evaporator Coil	24-28-225
ROD, Gearshift First and Reverse	21-30-418	SEAL, Air Cond. Hose & Tube	24-28-326
ROD, Hood Prop	15-21-0	SEAL, Air Cond. Temp. Control Valve	24-01-39
ROD, Inter Axle Shift	3-29-113	SEAL, Auto. Trans. Clutch Piston	21-113-17
ROD, Master Cyl. Push	5-47-2	SEAL, Auto. Trans. Manual Valve	21-139-16
ROD, Parking Brake Lever Release	4-25-14	SEAL, Auto. Trans. Oil Filler Tube	21-119-25
ROD, Spare Wheel Anchor	22-20-87	SEAL, Auto. Trans. Oil Pump Hsg.	21-118-45
ROD, Telescopic Locking	19-14-81	SEAL, Auto. Trans. Reverse Servo	21-137-50
ROD, Trans. Park Sprag	4-10-35	SEAL, Auto. Trans. Throttle Lever	21-139-47
ROD, Trans. Kickdown Servo	21-137-11	SEAL, Aux. Trans. M/Drive Gear	21-95-18
ROD, Two Speed Axle Shift	3-31-64	SEAL, Aux. Trans. M/Shaft	21-92-33
ROD, Valve Push	9-42-1	SEAL, Brk. Tube Metering Valve	5-107-36
ROD, Wheel Cyl. Push	5-12-1	SEAL, Bumper to Hood	13-64-33
ROLLER and BUSHING, Universal Joint	16-10-1	SEAL, Carb. Air Scoop (Hood)	15-03-67
ROLLER, Accelerator Shaft	14-11-39	SEAL, Clutch Hsg. Pan Dust	6-10-10
ROLLER, Clutch	6-14-4	SEAL, Clutch Pedal Brg.	6-43-13
ROLLER, Door Window Regulator	23-39-45	SEAL, Clutch Release Fork	6-22-4
ROLLER, Electric Window Regulator	23-41-250	SEAL, Clutch Shaft	6-52-17
ROLLER, Manual Wdo. Regulator	23-54-98	SEAL, Dash Panel to Fender	23-31-146
ROLLER, Transmission Pilot Bearing	21-17-2	SEAL, Disc Brk. Splash Shield	5-05-17
ROLLER, Transmission Countershaft Bearing	21-25-2	SEAL, Distributor Hsg.	8-27-44
ROLLER, Trans. "O" Running Clutch	21-136-235	SEAL, Fender Wheelhouse Panel	12-01-26
ROLLER, Trans. Reverse Idler Gear Brg.	21-11-2	SEAL, Frt. Fender Hd/Lp Splash Shield	12-04-23
ROLLER, Trans. Planet Pinion Carrier	21-134-11	SEAL, Frt. Suspension Lower Ball Joint	2-10-66
ROLLER, Torque Converter	9-46-228	SEAL, Frt. Suspension Upper Ball Joint	2-08-61
ROTOCAP, Valve	9-39-13	SEAL, Fuel Tank Sending Unit	14-72-9
ROTOR, Alternator	8-29-97	SEAL, Heater Core Tube	1-48-90
ROTOR, Ignition Distributor	8-27-300	SEAL, Heater to Dash	1-48-126
ROTOR PACKAGE, Transmission Oil Pump	21-118-6	SEAL, Heater to Plenum	1-48-362
ROTOR PACKAGE, Folding Top Motor Pump	23-58-381	SEAL, Hood to Cowl	15-03-5
ROTOR, Oil Pump	10-14-18	SEAL, Inter Axle Differential	3-29-75
RUN, Frt. Door Glass	23-42-16	SEAL, Oil Filter Base Screw	10-26-20
RUN, Frt. Door V/Wing Divisional	23-42-13	SEAL, Oil Pump	10-07-2
RUN, Quarter Window Glass	23-42-38	SEAL, Oil Pump Body	10-07-12
RUN, Rear Door Glass	23-42-23	SEAL, Power Strg. Control Valve	19-63-149
RUN, Tailgate Glass Lower	23-42-46	SEAL, Power Strg. Control Valve Spool	19-63-259
RUNNING BOARD	12-26-2	SEAL, Power Strg. Cylinder Piston	19-63-110
		SEAL, Power Strg. Pump Drive Shaft	19-54-29
		SEAL, Power Strg. Pump Frt. Plt. to Hsg.	19-54-258
		SEAL, Power Strg. Pump Oil Reserv. Mtg.	19-54-181
		SEAL, Rear Axle Drive Pinion	3-22-45
		SEAL, Rear Axle Drive Shaft	3-35-14
		SEAL, Rear Wheel Brg. Oil	22-07-14
		SEAL, Rear Wheel Brk. Cyl. to Support	5-64-7
		SEAL, Spark Plug Tube	8-36-137
		SEAL, Starter Solenoid	8-52-389
		SEAL, Starter to Engine or Trans.	8-52-39
		SEAL, Strg. Column G/Shift Hsg.	19-46-26
		SEAL, Strg. Column Jacket	19-14-68
		SEAL, Strg. Column Shaft	19-15-28
		SEAL, Strg. Gear Reaction	19-01-52
		SEAL, Strg. Gear Shaft Adj. Scr.	19-19-35
		SEAL, Strg. Gear Worm Sleeve	19-19-70
		SEAL, Strg. Link Idler Arm	19-27-40
		SEAL, Tailgate Inside Panel	23-54-53

S

SADDLE, Tandem Suspension	17-37-36
SAFETY SEAT BELT	23-49-1
SAFETY CATCH, Tilt Cab Lock	23-1-33
SAFETY LINK, Wiring	8-15-7
SCANNER	8-53-284
SCOOP, Carburetor Air	15-03-64
SCREENS, Air Cond. Evaporator Coil	24-28-10
SCREEN, Air Cond. Compr. Suction	24-25-114
SCREW, Brake Adjusting	5-20-1
SCREW, Brake Bleeder	5-67-1
SCREW, Brake Cyl. Mounting	5-64-2
SCREW, Crakshift Brg. Cap	9-10-9
SEAL & BOOT PKG., Disc Brakes	5-05-9

PART NAME	CODE	PART NAME	CODE
SEAL, Torque Converter Impeller	9-46-130	SHAFT, Propeller	16-02-1
SEAL, Trans. Aux. Valve	21-18-94	SHAFT, Radio Channel Selector Ejector	1-87-51
SEAL, Trans. G/Shift Oil	21-42-31	SHAFT, R. Axle Diff. Pinion	3-08-1
SEAL, Trans. M/Drive Gear Brg. Retainer	21-09-30	SHAFT, R. Axle Drive	3-32-1
SEAL, Trans. M/Shaft Rear Brg.	21-22-2	SHAFT, R. Axle Thru.	3-19-27
SEAL, Trans. Output Brg. Yoke	21-05-12	SHAFT, Speedo Drive	21-84-4
SEAL, Trans. Pinion	21-09-30	SHAFT, Strg. Column	19-15-4
SEAL, Trans. Speedo Pinion Adapter	21-85-22	SHAFT, Strg. Gear	19-19-4
SEAL, U/Joint Cross Roller Dust	16-8-6	SHAFT, Sway Bar	17-29-5
SEAL, Vent Wing W/Strip Retainer	23-64-74	SHAFT, Transfer Case Driven Gear	21-103-0
SEAL, Ventilator Door	23-61-110	SHAFT, Trans. Input Drive	21-09-4
SEAL, Water Pump	7-46-1	SHAFT, Trans. Output	21-05-1
SEAL, Wheel Brk. Support	5-13-22	SHAFT, Trans. Output	21-16-3
SEAL, Wheel Hub Dust	22-06-18	SHAFT, Trans. Parking Sprag	4-10-8
SEAL, W/Shield Upper Frame	23-66-69	SHAFT, Trans. Rev. Idler Gear	21-12-1
SEALED BEAM, Headlamp	8-34-175	SHAFT, Two Spd. Axle Clutch	3-49-0
SEALS, Air Conditioning	24-01-70	SHAFT, Valve Locker	9-43-9
SEALS, Air Cond. Compressor	24-25-135	SHAFT, Winch Drive	21-97-5
SEAT, Exhaust Valve	9-39-9	SHAFT & RETAINING RING, P. Strg. Pump	19-54-25
SEAT, Front (Truck)	23-108-2	SHAFT & ROTOR, Oil Pump	10-07-3
SEAT, Rear & Intern., (Truck)	23-109-1	SHAFT w/WORM, Strg. Gear	19-15-3
SEAT BACK, Front (Truck)	23-108-12	SHELL, Cigar Lighter	8-20-10
SEAT BACK, Rear (Truck)	23-109-3	SHELL, Frt. Door	23-11-1
SEAT BELTS	23-49-1	SHELL, Rear Door	23-11-3
SEAT CUSHION, Front	23-108-4	SHIELD, Air Cond. Idler Pulley Bearing	24-25-31
SEAT CUSHION, Rear	23-109-35	SHIELD, Altr. Drive End	8-29-153
SEAT, Headlamp Sealed Beam	8-34-176	SHIELD, Alternator Rectifier End	8-29-132
SEAT SPRING	23-52-1	SHIELD, Battery Heat	13-35-1
SEAT TRIM MATERIAL (Truck)	23-114-0	SHIELD, Dash Panel to Fender	23-34-121
SECTOR, Parking Brake	4-12-0	SHIELD, Disc Brake Splash	5-05-16
SENDING UNIT, Temperature Gage	8-37-155	SHIELD, Fan Belt Idler Pulley Brg.	7-04-17
SENDING UNIT, Oil Pressure Gauge	8-53-327	SHIELD, Fender	12-04-4
SENSOR, A/Cleaner Temp.	14-29-53	SHIELD, Front Bumper Air	13-64-28
SENSOR, A/Cond.	24-24-44	SHIELD, Frt. Pump Hsg.	21-118-57
SENSOR, Skid Control	5-06-9	SHIELD, Frt. Suspension Crossmember	23-32-110
SEPARATOR, Fuel Pump Vapor	14-73-2	SHIELD, Headlamp	8-34-60
SEPARATOR, Fuel Tank Vapor	14-86-65	SHIELD, Htr. Hose	1-48-573
SEPARATOR, Spark Plug Cable	8-36-14	SHIELD, Intake Manifold	9-4856
SERVO, Speed Control	14-02-15	SHIELD, Intake Valve Stem Oil	9-39-14
SHACKLE and Bushing, Spring	17-16-1	SHIELD, Metering Valve Disc Brake	5-05-47
SHACKLE, Front Spring	17-06-0	SHIELD, Metering Valve Power Brake	5-107-37
SHACKLE, Rear Spring	17-16-1	SHIELD, Oil Pump Body Splash	10-07-14
SHAFT, Accelerator	14-11-1	SHIELD, Qtr. Wdo. Opening	23-64-288
SHAFT, Air Cond. Shut-Off Door	24-28-100	SHIELD, Quarter Panel Rear Stone	23-34-240
SHAFT, Auto. Trans. Gov. Valve	21-138-26	SHIELD, Radiator Air	7-26-15
SHAFT, Auto. Trans. Input	21-129-5	SHIELD, Shock Dust	17-26-4
SHAFT, Auto. Trans. Kickdown Band	21-136-23	SHIELD, Strg. Column Shaft Coupling	19-15-111
SHAFT, Auto. Trans. Planet Pinion	21-134-9	SHIELD, Vapor Separator Tube	14-86-61
SHAFT, Auto. Trans. Reaction	21-129-10	SHIFT CONTROL, Two Speed Axle	3-31-0
SHAFT, Auto. Trans. Retarder Pedal	21-145-35	SHIM, Drive Pinion Bearing	3-22-28
SHAFT, Auto. Trans. Rev. Band Lever	21-136-49	SHIM, Trans. Synchronizer	21-14-21
SHAFT, Brake Pedal	5-29-1	SHOCK ABSORBER	17-23-3
SHAFT, Carburetor Throttle	14-38-12	SHOE & LINING, Parking Brk.	4-03-0
SHAFT, Clutch Pedal	6-43-1	SHOE & LINING PACKAGE, Wheel Brakes	5-03-3
SHAFT, Clutch Torque	6-52-1	SHOE w/LINING, Brake	5-03-5
SHAFT, Defroster Door	24-28-399	SHOE, Strg. Column Shaft Coupling	19-15-44
SHAFT, Distributor	8-27-250	SHORT ENGINE	9-01-24
SHAFT, Front Axle Drive	2-12-5	SHROUD, Radiator	7-08-2
SHAFT, Front Door V/Wing Lwr.	23-64-93	SHUTTER, Radiator	7-38-0
SHAFT, Front Suspension Cont. Arm	2-10-61	SIDE MARKER LAMP	8-14-1
SHAFT, G/Shift Operating Lever	21-30-421	SIDE RAIL, Frame	13-03-2
SHAFT, G/Shift Torque	19-48-45	SILENCER, Hood	15-03-60
SHAFT, Oil Pump Drive	10-09-1	SILENCER, Roof Panel	23-31-205
SHAFT, Pwr. Strg. Pump Rotor	19-54-263	SILENCER, Valve Body	5-100-197
SHAFT, P.T.O. Drive	21-08-16	SKID CONTROL	5-06-0

PART NAME	CODE	PART NAME	CODE
SLACK ADJUSTER, Air Brake	5-97-28	SPACER, Auto. Headlamp Sentinel Photocell.....	8-53-308
SLEEVE, A/Cond. and Heater Hose	24-01-31	SPACER, Body Hold Down	23-05-36
SLEEVE, Brake Pedal	5-27-2	SPACER, Bumperette, .054 Thk.	13-66-141
SLEEVE, Clutch Control	6-19-2	SPACER, Deck Opening Upper Panel.....	23-34-193
SLEEVE, Control Arm	2-08-11	SPACER, Dist. Cam	8-27-259
SLEEVE, Defogger Blower Motor Term.....	1-47-24	SPACER, Door Latch Striker	23-08-54
SLEEVE, Htr. Hose	1-48-557	SPACER, Door Manual Wdo. Reg. Handle	23-14-24
SLEEVE, Metering Valve	5-107-35	SPACER, Drive Pinion Brg.	3-22-26
SLEEVE, Power Brake Lever Hub.....	5-100-198	SPACER, Diff. Adjusting	3-11-3
SLEEVE, Power Strg. Pump Pressure Hose	19-58-9	SPACER, Fan	7-02-16
SLEEVE, Power Strg. Pump Return Hose.....	19-58-9	SPACER, Fan Belt Idler Pulley	7-04-10
SLEEVE, Strg. Column Shaft Lock Plate	19-14-123	SPACER, Front Seat Manual Adjuster	23-47-15
SLEEVE, Strg. Gear Worm	19-19-72	SPACER, Frt. Brg. Adj.	3-22-26
SLEEVE, Strut Bushing	2-10-65	SPACER, Gearshift control Selector	21-30-393
SLEEVE, Sway Bar Shaft Insulator Link.....	17-29-19	SPACER, Gearshift Torque Shaft	19-48-51
SLEEVE, Trans. Gearshift Rail Interlock	21-34-45	SPACER, Pump Mounting Bracket	19-54-116
SLEEVE, Trans. Regulator Valve	21-139-64	SPACER, Radiator Grille	7-16-19
SLEEVE, Trans. Synchronizer.....	21-14-6	SPACER, Roof Luggage Rack	23-40-157
SLEEVE, Wiring Terminal	8-16-5	SPACER, Rr. Seat Lap Belt to Floor.....	23-49-11
SLIDE, Deck Lid Hge. Torsion Bar	23-19-178	SPACER, Spring Center Bolt	17-11-31
SLIDE, Qtr. Wdo. Track Regulator	23-64-282	SPACER, Strg. Column Gearshift	19-46-12
SLIDE, T/Gate Electric Wdo.....	23-54-88	SPACER, Strg. Gear Thrust Bearing	19-15-77
SLIDER, A/Cond. and Heater Control	24-24-177	SPACER, Thrust Block	3-32-9
SLIDER, Push Button Htr. Control	1-48-33	SPACER, T/Gate and Door.....	23-54-27
SLINGER, Crankshaft Oil	9-07-17	SPACER, Trans. Rr. Clutch.....	21-133-62
SLINGER, Frt. Brg.	3-22-40	SPACER, Valve Rocker	9-43-5
SLINGER, Trans. Brg. Oil	21-09-19	SPACER, Valve Spring	9-39-21
SNAP RING, Inner, Trans.....	21-19-15	SPARE WHEEL CARRIER, Body Inside.....	22-20-0
SNAP RING, Output Shaft	21-05-19	SPARE WHEEL CARRIER, Body Outside	22-48-0
SNAP RING, Park Sprag Plug	4-10-33	SPARE WHEEL CARRIER, Underslung.....	22-12-0
SNAP RING, Pump Rear Plug	19-54-130	SPARK Plug	8-36-114
SNAP RING, Shuttle Valve	21-139-98	SPEAKER, Instrument Panel Radio	1-87-2
SNAP RING, Starter Pinion Shaft Gear Ret.....	8-52-67	SPEEDOMETER	8-37-372
SNAP RING, Strg. Gear Cylinder Head.....	19-01-62	SPEEDOMETER CABLE	21-84-1
SNAP RING, Strg. Gear Shaft Seal	19-19-5	SPIDER, Inter Axle Diff.....	3-29-95
SNAP RING, Trans. Drive Brg., Outer	21-09-23	SPIDER, Rear Axle Diff.....	3-10-1
SNAP RING, Trans. Frt. Clutch	21-133-43	SPOILER, Deck Lid	23-19-24
SNAP RING, Trans. Governor	21-138-19	SPOT COOLER, Air Cond.....	24-28-78
SNAP RING, Trans. Governor Body	21-138-7	SPRAG, Trans. Park Lock	4-10-10
SNAP RING, Trans. Governor Valve	21-138-29	SPRING, Accelerator Rod	14-06-1
SNAP RING, Trans. Kickdown	21-137-19	SPRING, Air Brk. Adjusting Wedge	5-98-9
SNAP RING, Trans. M/Shaft Roller	21-17-7	SPRING, Auxiliary.....	17-11-33
SNAP RING, Trans. Output Brg., Outer	21-05-8	SPRING, Brk. Auto. Adjusting Lever.....	5-20-20
SNAP RING, Trans. Pinion Carrier	21-134-40	SPRING, Brk. Drum Damper.....	22-04-11
SNAP RING, Trans. Rr. Clutch	21-133-25	SPRING, Brk. Pedal Return	5-34-0
SNAP RING, Trans. Reverse Servo	21-137-59	SPRING, Brk. Shoe Hold Down.....	5-26-1
SNAP RING, Trans. Synchronizer.....	21-14-20	SPRING, Brk. Shoe Return.....	5-03-23
SNOW PLOW	1-93-0	SPRING, Clutch Pivot	6-22-19
SOCKET	8-12-3	SPRING, Clutch Pressure.....	6-16-1
SOCKET, Brake Auto. Adjusting	5-20-17	SPRING, Clutch Rel. Brg. Retainer	6-20-14
SOCKET, Brake Warning Ind. Lamp.....	8-31-16	SPRING, Clutch Rel. Fork	6-27-5
SOCKET, Dome Lamp	8-05-12	SPRING, Clutch Rel. O/Center	6-35-1
SOCKET, High Beam Indicator Lamp	8-39-15	SPRING, Clutch Shaft to Fork	6-52-5
SOCKET, Inst. Lamp	8-41-36	SPRING, Disc Brk. Shoe.....	5-05-8
SOCKET, Low Oil Pressure Ind. Lamp.....	8-37-88	SPRING, Front	17-01-3
SOCKET, Map and Courtesy Lamp	8-42-10	SPRING, Headlamp Sealed Beam	8-34-177
SOCKET, Overhead Console Door Ajar	8-12-13	SPRING, Hood Fresh Air Intake	15-03-90
SOCKET, Side Marker Lamp	8-14-3	SPRING, Hood Hinge	15-19-8
SOCKET, Tail, Stop and Turn Signal Lamp	8-55-57	SPRING, Hood Release Pop-up.....	15-11-16
SOCKET, Turn Signal Ind. Lamp	8-50-156	SPRING, Hyd. Brk. Adjusting Cam	5-22-2
SOLENOID, Carburetor Idle	14-38-24	SPRING, Hyd. Brk. Shoe Wedge	5-20-4
SOLENOID, Door Elect. Latch.....	23-18-115	SPRING, Jack Stowage	13-72-7
SOLENOID, Hood Fresh Air Intake	15-03-54	SPRING, Manual Seat Adjuster	23-47-75
SOLENOID, Idle Throttle	8-27-97	SPRING, Oil Pressure Valve	10-22-15
SOLENOID, Starter	8-52-345	SPRING, Parking Brk. Lever	4-19-1

PART NAME	CODE	PART NAME	CODE
SPRING, Parking Brk. Pedal Return	4-25-7	SUPPORT, Air Cond. Compressor	24-25-10
SPRING, Parking Brk. Wheel	4-26-18	SUPPORT, Alternator Adj. Strap	8-28-32
SPRING, Rear	17-11-3	SUPPORT, Bumper Guard	13-68-43
SPRING, Rear Seat Helper	23-52-1	SUPPORT, Engine Rear	9-69-25
SPRING, Tilt Cab Lock	23-1-17	SUPPORT, Exhaust Pipe	11-08-4
SPRING, Torque Converter	9-46-229	SUPPORT, Fuel Tank	14-88-2
SPRING, Trans. Accumulator	21-137-205	SUPPORT, Gearshift Control Selector	21-30-416
SPRING, Trans. Frt. Clutch Piston	21-133-20	SUPPORT, Hood Lock Vertical	15-11-46
SPRING, Trans. Gov. Weight	21-138-15	SUPPORT, Muffler	11-02-4
SPRING, Trans. Kickdown Servo	21-137-22	SUPPORT, Parking Brk. Air Reservoir	4-30-0
SPRING, Trans. O/Running Clutch	21-136-236	SUPPORT, Parking Brk. Trans.	4-29-0
SPRING, Trans. Parking Sprag	4-10-11	SUPPORT, Radiator	7-29-1
SPRING, Trans. Regulator Valve	21-139-68	SUPPORT, Radiator Grille	7-16-27
SPRING, Trans. Reverse Lever	21-34-47	SUPPORT, Radiator Side	7-11-82
SPRING, Trans. Synchronizer	21-14-15	SUPPORT, Running Board	13-48-0
SPRING, Valve	9-39-15	SUPPORT, Shock Absorber	17-24-0
SPRING, Valve Rocker Shaft	9-43-14	SUPPORT, Spare Wheel Mounting	23-34-53
SPRING, Brake Cyl. Piston	5-71-2	SUPPORT, Stake Socket	23-34-79
SPROCKET or GEAR, Camshaft	9-17-5	SUPPORT, Tail Pipe	11-10-3
SPROCKET, Crankshaft	9-08-5	SUPPORT, Tilt Cab Rear	23-1-14
STAND PIPE, Oil Filter	10-26-46	SUPPORT, Trans. Governor	21-138-10
STARTER	8-52-4	SUPPORT, Trans. Output Shaft	21-05-25
STATOR, Alternator	8-29-98	SUPPORT, Wheel Brake	5-13-1
STEERING COLUMN GEARSHIFT TUBE	19-46-3	SWAY BAR, Rear	17-30-1
STEERING COLUMN JACKET	19-14-1	SWAY BAR SHAFT, FRONT	17-29-0
STEERING COLUMN SHAFT AND COUPLING	19-15-4	SWITCH, Air Cond. Blower	24-24-5
STEERING GEAR ASSEMBLY	19-01-0	SWITCH, Air Cond. Temperature	24-24-150
STEERING GEAR HOUSING	19-02-4	SWITCH, Air Grabber Vacuum	15-03-84
STEERING GEAR SHAFT	19-19-4	SWITCH, Arm Rest Courtesy	8-11-6
STEERING KNUCKLE	2-03-3	SWITCH, Auto. Headlamp Dimmer	8-53-270
STEERING KNUCKLE ARM	2-05-4	SWITCH, Auto. Trans. Retarder	21-145-12
STEERING KNUCKLE TIE ROD END	2-07-1	SWITCH, Back-up Lamp	8-56-2
STEERING LINK GEAR ARM AND IDLER ARM	19-27-0	SWITCH, Brk. System Indicator Lamp	8-31-10
STEERING WHEEL	19-30-0	SWITCH, Brk. Tube Tie Warning	5-58-9
STEM, Valve	22-01-46	SWITCH, Clutch Starter, w/Man. Trans.	8-52-42
STEP, Tilt Cab	23-51-30	SWITCH, Convertible Top	23-58-532
STEP-PAD	13-66-147	SWITCH, Courtesy Lamp Door	8-12-2
STOP, Brake Pedal	5-30-8	SWITCH, Defogger	1-47-7
STOP, Clu. Pedal	6-38-23	SWITCH, Dome Lamp	8-05-14
STOP, Strg. Knuckle Arm	2-05-7	SWITCH, Door Ajar Warning	8-12-2
STRAINER, Oil	10-23-7	SWITCH, Door Window	23-41-170
STRAINER, Trans.	21-117-1	SWITCH, Elec. F/Pump Oil Press.	14-73-10
STRAP, Air Pump Adjusting	25-02-26	SWITCH, Emergency Warning	8-50-82
STRAP, Alternator Adj.	8-28-15	SWITCH, Foot Dimmer	8-53-150
STRAP, Battery Hold Down	13-34-3	SWITCH, Front Door Lock	23-18-102
STRAP, Fuel Tank	14-88-21	SWITCH, Fuel Tank Selector	14-86-6
STRIKER, Bucket Front Seat Back	23-45-76	SWITCH, Headlamp, Instr. Lamp & Dome	8-53-270
STRIKER, Deck Lid Latch	23-19-70	SWITCH, Headlamp Washer	8-34-281
STRIKER, Door Latch	23-08-60	SWITCH, Heater Control	1-48-770
STRIKER, Floor Console Lid Latch	23-38-46	SWITCH, Horn	8-33-90
STRIKER, Front Fender	12-03-2	SWITCH, Ignition & Starter	8-35-59
STRIKER, Hood	15-13-2	SWITCH, Instr. Pnl. Dimmer	8-53-150
STRIKER, Second Seat Back Latch	23-48-19	SWITCH, Inter Axle Diff.	3-29-126
STRIKER, Tailgate Latch	23-54-6	SWITCH, Low Air	5-128-0
STRUT, Bumper Front	13-64-150	SWITCH, Map & Courtesy Lamp	8-42-25
STRUT, Clutch Hsg.	6-09-11	SWITCH, NOx Speed (Trans.)	8-22-8
STRUT, Control Arm	2-10-58	SWITCH, NOx Thermal	8-22-4
STRUT, Parking Brk. Whl.	4-26-17	SWITCH, Oil Pressure	8-53-327
STRUT, Trans. Kickdown Band	21-136-15	SWITCH, Parking & T/Signal	8-50-82
STRUT, Trans. Reverse Band	21-136-41	SWITCH, Parking Brk. Ind. Lamp	8-31-10
STUD, Battery Hold down	13-36-5	SWITCH, Radio Foot Selector	1-87-5
STUD, Carburetor Lever	14-11-40	SWITCH, Road Lamp	8-14-23
STUD, Intake and Exhaust Manifold	9-48-12	SWITCH, Seat Adjuster	23-47-446
STUD, Wheel	22-05-14	SWITCH, Starter Solenoid	8-52-330
SUMP, Air Cond. Compressor Oil	24-25-258	SWITCH, Stop Lamp	8-58-60

PART NAME	CODE	PART NAME	CODE
SWITCH, Stop Lamp Actuator	8-58-66	TRANSMISSION INPUT SHAFT	21-129-0
SWITCH, Tail Gate Window Lift	23-54-167	TRANSMISSION MAIN DRIVE GEARS	21-10-0
SWITCH, Temperature Gauge	8-37-155	TRANSMISSION MAIN DRIVE PINION	21-09-2
SWITCH, Trans. Neutral Start	21-113-24	TRANSMISSION OIL PUMP	21-118-0
SWITCH, Trunk Lamp	8-13-2	TRANSMISSION OIL FILTER	21-117-0
SWITCH, Turn Signal	8-50-82	TRANSMISSION OIL PAN	21-119-3
SWITCH, Two Speed Axle Shift	3-31-105	TRANSMISSION OUTPUT SHAFT	21-05-1
SWITCH, Vacuum Deck Lid Latch	23-19-84	TRANSMISSION SERVOS	21-137-0
SWITCH, W/Shield Wiper & Washer	23-67-160	TRANSMISSION SETS OR PACKAGES	21-01-0
SWITCHES, Electrical	8-53-0	TRAY, Ash	23-02-18
SWIVEL, Acc. Pedal Lever	14-01-38	TRAY, Battery	13-33-61
SWIVEL, Anchor Adjusting	2-14-1	TRIM FINISH MOULDINGS	23-26-0
SWIVEL, Gearshift Control Rod	21-30-428	TRIM, Pass. Car-Ref. to Trim Catalog	23-92-5
SYNCHRONIZER, Trans.	21-14-1	TRIM PANEL, Door	23-92-13
T			
TACHOMETER	8-37-504	TRIM PANEL, Pillar	23-99-0
TAIL PIPE	11-09-3	TRIM PANEL, Rear	23-89-10
TAIL PIPE SUPPORT	11-10-3	TRIM PANEL, Rear Corner	23-101-3
TAILGATE	23-54-3	TROUGH, Qtr. Deck Drain	23-59-35
TANK, Booster Brake Vacuum	5-102-0	TROUGH, Roof Side Drain	23-59-56
TANK, Vacuum Deck Lid Latch Reservoir	23-19-79	TROUGH, Strg. Column Wiring	19-14-49
TANK, Fuel	14-86-1	TRUNK LAMP	8-13-1
TAPE, Fender	12-15-33	TUBE, Air Brake	5-116-0
TAPE, Hood	15-03-69	TUBE, Air Injection	25-02-50
TAPE, Outside Body	23-23-12	TUBE, Air Intake	14-29-24
TAPPET, Valve	9-41-4	TUBE, Brake Hose	5-55-1
TEE, Brake Tube	5-58-1	TUBE, Carb. to Dist. Vac. Control	8-27-320
TEMPERATURE GAUGE	8-37-136	TUBE, Defroster	1-48-287
TERMINAL and INSULATOR, Electric Window	23-41-176	TUBE, Electric Seat Adjuster	23-47-431
TERMINAL BLOCK	8-21-0	TUBE, Exhaust Manifold Heat	9-48-126
TERMINAL, Wiring	8-16-4	TUBE, Fuel Tank Filler	14-86-40
TEXTURE, Grille	7-17-13	TUBE, Heater Blower Motor Vent	1-48-606
THERMOSTAT	7-41-4	TUBE, Heater Defroster	1-48-151
THERMOSTAT, Exhaust Manifold Heat Control	9-58-5	TUBE, Hood Fresh Air Intake Door	15-03-93
THROTTLE CONTROL CABLE	14-25-11	TUBE, Oil Indicator	10-03-7
THROTTLE, Hand Control	14-24-1	TUBE, Power Brake	5-107-15
THRUST WASHER, Starter Armature	8-52-121	TUBE, Spark Plug	8-36-136
TIE ROD END	2-07-1	TUBE, Strg. Column Gearshift	19-46-3
TILT CAB PIVOT	23-1-2	TUBE, Tie Rod	2-07-2
TIMING CHAIN	9-20-1	TUBE, Tandem Torque	17-37-9
TOP, Folding	23-58-3	TUBE, Vacuum Deck Lid Release	23-19-97
TORQUE ARRESTOR, Front Spring	17-10-5	TUBING, Brake	5-53-3
TORQUE CONVERTER	9-46-4	TUBING, Fuel Tank 25 Ft. Roll	14-89-2
TORQUE CONV. REACTION SHAFT	21-129-0	TUBING, Underbody Rear Heater	1-48-55
TORQUE ROD, Tandem	17-18-0	U	
TORSION BAR	2-14-3	UNDERSLUNG, Spare Wheel Carrier	22-12-0
TORSION BAR PARTS, Frt. Suspension	2-14-0	UNIVERSAL JOINT	16-03-1
TOW HOOK and SHACKLE	13-61-0	UNIVERSAL JOINT CROSS ROLLER and BUSHING	16-10-1
TOWER, Trans. G/Shift	21-29-8	UNIVERSAL JOINT SLIP SPLINE YOKE	16-14-1
TRANSFER CASE	21-100-0	UNIVERSAL JOINT, Frt. Axle Drv. Shaft	2-12-44
TRANSMISSION	21-02-1	UNIVERSAL JOINT, Strg. Column	19-15-100
TRANSMISSION BANDS	21-136-0	V	
TRANSMISSION CASE	21-03-1	VALVE, Air Brk. Hand Control	5-127-5
TRANSMISSION CASE EXTENSION	21-04-1	VALVE, Air Brk. Quick Release	5-122-0
TRANSMISSION CLUTCH	21-133-0	VALVE, Air Cond. Compressor	24-25-132
TRANSMISSION CLUTCH GEAR	21-14-0	VALVE, Air Cond. Expansion	24-28-300
TRANSMISSION COUNTERSHAFT BEARING	21-25-0	VALVE, Air Cond. Water	24-01-36
TRANSMISSION COUNTERSHAFT	21-24-2	VALVE, Air Pump Diverter	25-02-30
TRANSMISSION GEARSHIFT RAIL	21-34-0	VALVE, Auto. Trans. Kickdown	21-139-78
TRANSMISSION GEARSHIFT CONTROLS	21-30-0	VALVE, Auto. Trans. Shuttle	21-139-95
TRANSMISSION GOVERNOR	21-138-0	VALVE, Auto. Trans. Throttle	21-139-30
		VALVE, Auto. Trans. Torq. Conv.	21-139-117

