

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
------	---------------------------	------	---------------------------

PARTS PACKAGES

1-47-1 DEFOGGER PACKAGE,

REAR WINDOW Part No. 2837 969

Consists of:

- 1 - 2096 773 Blower
- 1 - 2607 141 Plate
- 3 - 9419 320 Screw
- 3 - 138 479 Lockwasher
- 4 - 9414 711 Screw
- 4 - 6022 701 Lockwasher
- 1 - 2521 668 Outlet
- 1 - 2485 982 Duct
- 1 - 2197 891 Seal
- 1 - 9414 711 Screw
- 2 - 446 060 Nut and Washer
- 1 - 2096 471 Tube Flex
- 1 - 1887 366 Clamp
- 1 - 2837 219 Bezel
- 1 - 2837 220 Grille
- 4 - 9424 881 Screw
- 4 - 144 485 Nut
- 1 - 2820 455 Switch
- 1 - 2631 657 Name Plate, Switch
- 1 - 6008 055 Nut, Switch Mtg.
- 1 - 2899 062 Wiring, Switch
- 1 - 2889 561 Wiring
- 1 - 2291 863 Cable, Feed
- 1 - 106 653 Fuse

1-47-1 DEFOGGER PACKAGE,

REAR WINDOW Part No. 2837 971

Consists of:

- 1 - 2096 773 Blower Comp.
- 1 - 2607 141 Plate
- 3 - 9419 320 Screw
- 3 - 138 479 Lockwasher
- 4 - 9414 711 Screw
- 4 - 6022 701 Lockwasher
- 1 - 2837 219 Bezel, Inlet
- 1 - 2837 220 Grille
- 4 - 9424 881 Screw
- 4 - 9419 662 Screw
- 4 - 144 485 Nut
- 1 - 2485 407 Dust
- 1 - 2197 891 Seal
- 1 - 9414 711 Screw
- 2 - 446 060 Nut and Washer
- 1 - 2485 053 Tube, Flex
- 1 - 1887 366 Clamp
- 1 - 2219 627 Grille and Gasket
- 1 - 2820 455 Switch
- 1 - 2820 200 Spacer
- 1 - 2580 774 Bezel
- 1 - 2771 705 Title Plate
- 1 - 2889 062 Switch Wiring
- 1 - 2889 561 Wiring
- 1 - 2291 863 Cable, Feed
- 1 - 106 653 Fuse
- 81-685-1235 Template, Bezel Mtg.

1-47-1 DEFOGGER PACKAGE,

REAR WINDOW Part No. 2936 885

Consists of:

- 1 - 2607 754 Duct
- 2 - 446 060 Nut
- 1 - 2607 769 Plate
- 3 - 9419 320 Screw
- 3 - 138 479 Lockwasher
- 1 - 2096 773 Blower
- 4 - 9414 711 Screw
- 4 - 6022 701 Lockwasher
- 1 - 2277 456 Tube
- 1 - 2837 303 Bezel
- 1 - 2837 219 Bezel
- 1 - 2837 220 Grille
- 4 - 9419 662 Screw
- 1 - 2889 777 Wiring, Motor
- 1 - 2926 781 Wiring, Switch
- 1 - 2291 863 Cable
- 1 - 106 653 Fuse
- 1 - 2947 262 Switch
- 1 - 2947 246 Plate
- 4 - 9414 711 Screw
- 1 - 2947 247 Knob

1-47-1 DEFOGGER PACKAGE,

REAR WINDOW Part No. 3441 320

Consists of:

- 1 - Blower Assy
- 4 - 6029 087 Screw, Blower Mtg.
- 1 - 1887 582 Plate Blower Mtg.
- 3 - Screw, Plate Mtg.
- 3 - Lockwasher, Plate Mtg.
- 1 - 2837 748 Duct Assy.
- 1 - 9414 711 Screw, Duct Mtg.
- 1 - Seal, Duct Mtg.
- 1 - Tube, Blower to Duct
- 1 - Clamp, Tube
- 1 - 2521 668 Bezel and Gasket Outlet
- 2 - Nut, Outlet Bezel and Duct Mtg.
- 1 - 2837 219 Bezel, Inlet
- 1 - 2837 220 Grille, Inlet
- 4 - 9419 662 Screw, Inlet Bezel Mtg.
- 1 - 2889 777 Wiring, Motor
- 1 - 2983 480 Wiring, Switch
- 1 - 106 653 Fuses Acc. Feed
- 1 - Term and Clip, Fuse Block
- 1 - 2947 262 Switch
- 1 - 2947 246 Plate Switch Mtg.
- 4 - 9414 711 Screw, Switch and Plate Mtg.
- 1 - 2947 556 Knob, Switch

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
<p>1-47-1 DEFOGGER PACKAGE, (BASIC) Part No. 3441 539 Consists of:</p> <ul style="list-style-type: none"> 1 - Blower 2 - 2607 141 Plate, Blower Mtg. 3 - Screw Blower to Mtg. Plate Mtg. 3 - Lockwasher Blower to Mtg. Plate Mtg. 4 - 9414 711 Screw, Blower and Plate Mtg. 4 - 6022 701 Rockwasher Blower and Plate Mtg. 4 - Nut, Blower Mtg. 2 - Nut Outlet Duct and Bezel Mtg. 1 - Clamp, Flex Tube Mtg. 1 - Tube, Flex Tube 16" 1 - 2837 219 Bezel, Inlet 1 - 2837 220 Grille, Inlet 4 - 9424 881 Screw, Inlet Bezel Mtg. 1 - Wiring, Fuse Block to Acc. Feed 1 - 106 653 Fuse 1 - 2926 752 Wiring, Motor 1 - Duct Outlet 1 - 2521 668 Bezel and Gasket, Outlet 1 - 9414 711 Screw, Outlet Duct Mtg. 1 - Seal, Duct 	<ul style="list-style-type: none"> 1 - 2096 989 Tube, Flex. 1 - Clamp Flex. Tube Ret. 1 - 2219 627 Grille and Gasket 1 - 2822 529 Wiring Assy. <p>1-47-2 ADAPTER PACKAGE, REAR WINDOW DEFOGGER Part No. 3420 912 Consists of:</p> <ul style="list-style-type: none"> 1 - 2947 411 Switch 1 - Switch Wiring 1 - 2947 666 Decal, Switch Nomenclature J 1 - Decal, Switch Nomenclature J 1 - Decal, Switch Nomenclature B 1 - Decal, Switch Nomenclature B 2 - 9416 049 Screw <p>1-47-2 ADAPTER PACKAGE, REAR WINDOW DEFOGGER Part No. 3420 943 Consists of:</p> <ul style="list-style-type: none"> 1 - 2631 657 Name Plate, Switch 1 - 2820 455 Switch 1 - Nut 1 - 2889 062 Switch Wiring 		
<p>1-47-1 DEFOGGER PACKAGE, (BASIC) Part No. 3441 540 Consists of:</p> <ul style="list-style-type: none"> 1 - Blower 2 - 2607 141 Plate, Blower Mtg. 3 - Screw, Blower to Mtg. Plate Mtg. 3 - Lockwasher 4 - 9414 711 Screw, Blower and Plate Mtg. 4 - 6022 701 Lockwasher 4 - Nut, Blower Mtg. 2 - Nut, Outlet Duct and Bezel Mtg. 1 - Clamp, Flex Tube Mtg. 1 - Tube, Flex Tube 16" 1 - 2837 219 Bezel, Inlet 1 - 2837 220 Grille Inlet 4 - 9424 881 Screw Inlet Bezel Mtg. 1 - Wiring Fuse Block to Acc. Feed 1 - 106 653 Fuse 1 - 2926 752 Wiring, Motor 1 - 2607 754 Duct, Outlet 1 - 3441 005 Outlet 	<p>1-47-2 ADAPTER PACKAGE, REAR WINDOW DEFOGGER Part No. 3420 944 Consists of:</p> <ul style="list-style-type: none"> 1 - 2631 657 Name Plate, Switch 1 - 2820 455 Switch 1 - 2820 116 Nut 1 - 2983 140 Switch Wiring <p>1-47-2 ADAPTER PACKAGE, REAR WINDOW DEFOGGER Part No. 3420 945 Consists of:</p> <ul style="list-style-type: none"> 1 - 2947 770 Bezel and J/Plate, Switch Mtg. 1 - 2864 440 Switch 1 - 2983 140 Switch Wiring 2 - Screw <p>1-47-2 ADAPTER PACKAGE, REAR WINDOW DEFOGGER Part No. 3420 946 Consists of:</p> <ul style="list-style-type: none"> 1 - 2984 911 Bezel 1 - 2864 440 Switch 1 - 2983 140 Switch Wiring 2 - Screw 		
<p>1-47-1 DEFOGGER PACKAGE (BASIC) Part No. 3441 903 Consists of:</p> <ul style="list-style-type: none"> 1 - Blower Assy. 2 - 2607 141 Plate, Blower Mtg. 3 - 9414 596 Screw, Blower to Plate Mtg. 3 - Lockwasher 4 - 6029 087 Screw, Blower Mtg. 1 - 2837 219 Bezel-Inlet 1 - 2837 220 Grille, Inlet 4 - 9426 436 Screw Inlet Bezel Mtg. 4 - 9419 662 Screw Inlet Bezel Mtg. 4 - Nut, Blower Plate Mtg. 1 - 2485 738 Duct Assy. 1 - Seal, Duct 1 - 9414 711 Screw, Duct Mtg. 2 - Nut/Washer Duct and Grille Mtg. 	<p>1-47-2 ADAPTER PACKAGE, REAR WINDOW DEFOGGER Part No. 3420 947 Consists of:</p> <ul style="list-style-type: none"> 1 - 2984 740 Bezel 1 - 2947 258 Switch 1 - Screw 		

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
1-47-2	ADAPTER PACKAGE, REAR WINDOW DEFOGGER w/DUAL SPEAKERS Part No. 3441 426 Consists of: 1 - 2936 346 Adaptor, Blower and Speaker 3 - 6027 964 Screw, Adaptor Mtg. 1 - 2936 347 Plate, Blower Mtg. 2 - Screw, Plate Mtg. 4 - Screw, Blower Mtg. 1 - 2936 688 Bracket 2 - 6027 964 Screw, Bracket Mtg.	4 -	9418 486 Screw, Lugg. Rail Att. (Att. to Brkt. Roof Lugg. Rack Frt. & Rr. Rail)
1-47-2	ADAPTER PACKAGE, REAR WINDOW DEFOGGER..... Part No. 3579 234 Consists of: 1 - Wiring, Rr. Wdo. Defogger Switch 1 - 3488 235 Lamp and Bracket 1 - 3488 520 Switch 1 - 3488 526 Bezel 4 - 6029 087 Screw	4 -	2528 454 Bracket, Roof Lugg. Rack Frt. & Rr. Rail
1-47-2	ADAPTER PACKAGE, REAR WINDOW DEFOGGER..... Part No. 3579 235 Consists of: 1 - 2985 574 Bezel 1 - 3488 182 Switch 1 - Switch Wiring 2 - 6024 654 Screw	4 -	2528 465 Tapping Plate, Roof Lugg. Rack Rail Bracket
1-47-2	ADAPTER PACKAGE, REAR WINDOW DEFOGGER..... Part No. 3579 236 Consists of: 1 - 2985 544 Bezel 1 - 3488 022 Switch 2 - 6024 654 Screw	4 -	2528 464 Screw, Roof Lugg. Rack Rear Rail Brkt. Thumb
1-74-1	DECK LID LUGGAGE, RACK PACKAGE..... Part No. 3419 382 Consists of: 1 - Lugg. Rack 2 - 2842 897 Pad, Adapter 6 - 6013 054 Nut-Riveting 1/4-20 2 - 6028 285 Screw 1/4-20 x 3/4 6 - 1384 85 Washer, Int. Tooth Lock	6 -	2860 759 SPACER, Roof Lugg. Rack Side Rail Lower
1-74-1	DECK LID LUGGAGE RACK PACKAGE..... Part No. 3419 498 Consists of: 1 - Lugg. Rack 2 - 3445 415 Support, Inter Tube 2 - 3445 416 Support, Frt. Tube 2 - 3445 418 Pad, Frt. Tube Supp. 4 - Screw 1/4-20 x 2.25 4 - 6028 290 Washer-Ret. Support (Special) 4 - 6028 289 Washer, Sealing 4 - 6028 288 Washer, Insulating 4 - Rivnut 1/4-20 2 - Nut and Washer 5/16-18-3/4 O.D. 4 - 1384 85 Washer Int. Tooth Lock	1 -	2602 651 Rail, Roof Lugg. Rack Rear
1-74-1	ROOF LUGGAGE RACK PACKAGE..... Part No. 2932 073 Consists of: 2 - 2602 647 Rail, Roof Lugg. Rack Side 2 - Cap, Roof Lugg. Rack Side Rail End Rt. & Lt.	4 -	2602 652 C/Member, Roof Lugg. Rack
		8 -	2842 991 T/Plate, Roof Lugg. Rack C/Member End
		4 -	134 422 Screw, Roof Lugg. Rack Front Rail Bracket
		6 -	9422 167 Screw, Roof Lugg. Rack Side Rail Att.
		6 -	2094 869 Nut, Roof Lugg. Rack Side Rail Att.
		8 -	6027 115 Screw, Roof Lugg. Rack C/Member End Att.
		4 -	9423 197 Screw, Roof Lugg. Rack Side Rail to Cap - Upper
		4 -	9427 850 Screw, Roof Lugg. Rack Side Rail to Cap - Lower
		4 -	2602 656 Pad, Roof Lugg. Rack C/Member
		2 -	2602 655 Pad, Roof Lugg. Rack Side Rail
		1 -	2602 651 Sand & Plug, Roof Lugg. Rack Frt. Rail
		1-74-1	ROOF LUGGAGE RACK PACKAGE..... Part No. 2933 973 Consists of: 2 - 2894 882 Rail, Roof Lugg. Rack Side 4 - Stanchion, Roof Lugg. Rack Side Rail 4 - 9418 486 Screw, Roof Lugg. Rack Frt. & Rr. Rail Frt. & Rr. Stanchion 4 - 2894 893 Tie Plate Roof Lugg. Rack Crossbar 2 - 2894 894 Plate Roof Lugg. Rack Side Rail Tie Down 2 - 2894 899 Tapped Plate & Spacer Roof Lugg. Rack Side Rail Tie Down Plate 4 - 2894 899 Tapped Plate & Spacer Roof Lugg. Rack Side Rail Bar Tie Plate 4 - 6028 787 Screw, Roof Lugg. Rack Cross Bar Tie Plate Thumb Rear 4 - 186 810 Screw, Roof Lugg. Rack Cross Bar Tie Plate Front 4 - 6028 787 Screw, Roof Lugg. Rack Side Tie Down 2 - 2894 892 Rail, Sand & Plug Roof Lugg. Rack Frt. & Rr. 4 - 179 117 Set Screw, Roof Lugg. Rack Side Rail Stanchion to Side Rail 8 - 2094 869 Nut, Roof Lugg. Rack Stanchion to Roof Panel 4 - 2894 888 Pad, Roof Lugg. Rack Side Rail Stanchion 5 - 3439 314 Strip, Roof Lugg. Rack Skid 5 - 3439 315 Pad, Roof Lugg. Rack Skid Strip 15 - 3499 754 Spacer, Roof Lugg. Rack Skid Strip 15 - Screw, Roof Lugg. Rack Skid Strip Att. 8 - 6027 941 Screw, Roof Lugg. Rack Side Rail Stanchion Att.
		1-74-1	ROOF LUGGAGE RACK PACKAGE..... Part No. 3440 127 Consists of: 1 - Rail, Roof Lugg. Rack Side Rt./Lt. 5 - 3439 314 Strip, Roof Lugg. Rack Skid 5 - 3439 315 Pad, Roof Lugg. Rack Skid Strip 15 - 3499 754 Spacer, Roof Lugg. Rack Skid Strip 15 - Screw, Roof Lugg. Rack Skid Strip Att. 2 - Rail, Sand & Plug Lugg. Rack Frt. & Rr. 8 - Screw, Roof Lugg. Rack Frt. & Rr. Rail 8 - 2094 869 Nut, Roof Lugg. Rack Side Rail to Roof Pnl. 8 - 6029 070 Screw, Roof Lugg. Rack Side to Roof Pnl.

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
1-74-1 Cont'd.			
1 -	Pad, Roof Lugg. Rack Side Rail Stanchion Frt. Rt./Lt.		
1 -	Pad, Roof Lugg. Rack Side Rail Stanchion Rr. Rt./Lt.		
1-74-1	ROOF LUGGAGE RACK		
	PACKAGE Part No. 3499 839		
	Consists of:		
1 -	Rail, Roof Lugg. Rack Side Rt./Lt.		
5 -	3439 314 Strip, Roof Lugg. Rack Skid		
5 -	3439 315 Pad, Roof Lugg. Rack Skid Strip		
15 -	3499 754 Spacer, Roof Lugg. Rack Skid Strip		
15 -	Screw, Roof Lugg. Rack Skid Strip Att.		
2 -	2894 892 Rail, Sand & Plug Lugg. Rack Frt. & Rr.		
8 -	Screw, Roof Lugg. Rack Frt. & Rr. Rail		
8 -	2094 869 Nut, Roof Lugg. Rack Side Rail to Roof Panel		
8 -	6029 070 Screw, Roof Lugg. Rack Side to Roof Panel		
4 -	2894 888 Pad, Roof Lugg. Rack Side Rail Stanchion		
1-87-2	FADER CONTROL PACKAGE, REAR COMPARTMENT Part No. 2864 331		
	Consists of:		
1 -	Control, Fader		
1 -	2426 942 Bezel, Fader Control Mtg.		
1 -	2580 253 Screw, Knob and Set		
1 -	Wiring		
1 -	2427 603 Speaker and Cover		
4 -	Screw, Speaker and Cover Mtg.		
1 -	Insulator		
1 -	2991 876 Grille, Rr. Speaker		
1 -	Bezel, Speaker		
4 -	Nut, and Washer, Speaker Mtg.		
1 -	Nut, Speaker Fader Control Mtg.		
1-87-2	FADER CONTROL PACKAGE, REAR COMPARTMENT Part No. 2864 332		
	Consists of:		
1 -	Control, Fader		
1 -	2580 774 Bezel, Control Mtg.		
1 -	2631 689 Screw, Knob and Set		
1 -	Wiring, Speaker		
1 -	2427 603 Speaker and Cover		
4 -	Screw, Speaker and Cover Mtg.		
1 -	Insulator		
1 -	2291 876 Grille, Rr. Speaker		
1 -	Bezel, Rr. Speaker		
4 -	Nut and Washer Speaker, Mtg.		
1-87-2	FADER CONTROL PACKAGE, REAR SPEAKER Part No. 2947 220		
	Consists of:		
1 -	2947 230 Rear Speaker Fader Control		
1 -	Nut, Rear Speaker Control Mtg.		
1 -	2426 942 Bezel, Rear Speaker Control		
1 -	2820 186 Knob and Set Screw		
1 -	2427 603 Rear Speaker		
4 -	9415 956 Screw, Rear Speaker Mtg.		
1 -	2580 038 Wiring, Rr. Speaker Body		
1 -	2298 882 Insulator, Radio Wiring		
1 -	2291 876 Grille, Rr. Compt. Speaker		
1 -	1819 014 Bezel, Rr. Compt. Speaker		
4 -	120 614 Nut and Lockwasher, Rr. Compt. Speaker Mtg.		
1-87-2	FADER CONTROL PACKAGE, REAR SPEAKER Part No. 2947 223		
	Consists of:		
1 -	2947 231 Rear Speaker Fader Control		
1 -	2580 361 Bezel, Rear Speaker Fader Control		
1 -	Nut, Rear Speaker Control Mtg.		
1 -	2820 186 Knob and Set Screw		
1 -	2427 603 Rear Speaker		
4 -	9415 956 Screw, Rr. Speaker Mtg.		
1 -	2580 038 Wiring, Rr. Speaker Body		
1 -	Insulator, Radio Lead		
1 -	2991 876 Grille, Rr. Compt. Speaker		
1 -	1819 014 Bezel, Rr. Compt. Speaker		
4 -	Nut and Lockwasher Rr. Compt. Speaker Mtg.		
1-87-2	FADER CONTROL PACKAGE, REAR SPEAKER Part No. 2947 234		
	Consists of:		
1 -	2820 568 Control Rr. Speaker Fader		
1 -	2580 361 Bezel, Rr. Speaker Control		
1 -	Nut, Rr. Speaker Control Mtg.		
1 -	2820 186 Knob and Set Screw		
1 -	Speaker, Rr. Compt.		
4 -	9415 956 Screw, Rr. Speaker Mtg.		
1 -	2580 038 Wiring, Rr. Speaker Body		
1 -	Insulator, Radio Lead		
1 -	2291 876 Grille, Rr. Compt. Speaker		
1 -	2837 219 Bezel, Rr. Compt. Speaker		
4 -	134 289 Screw, Rr. Compt. Speaker Mtg.		
4 -	9417 714 Washer, Rr. Compt. Speaker Mtg.		
4 -	116 000 Nut, Rr. Compt. Speaker Mtg.		
4 -	Screw, Rr. Speaker		
1-87-2	SPEAKER AND CONTROL PACKAGE, REAR COMPARTMENT Part No. 2947 881		
	Consists of:		
1 -	2947 444 Control, Rr. Speaker Fader		
1 -	2947 484 Bezel Rr. Speaker Fader Control		
1 -	Nut, Rr. Speaker Fader Control Mtg.		
1 -	2947 359 Knob and Spring		
1 -	Insulator, Radio Wiring		
1 -	2427 603 Speaker Rear Compt.		
4 -	9415 956 Screw, Rr. Compt. Spkr. Mtg.		
1 -	2291 876 Grille, Rr. Compt. Spkr.		
1 -	1819 014 Bezel, Rr. Compt. Spkr.		
4 -	Nut, Rr. Compt. Spkr. Mtg.		
1-87-2	SPEAKER AND CONTROL PACKAGE, REAR COMPARTMENT Part No. 2947 882		
	Consists of:		
1 -	2947 230 Control Rr. Speaker Fader		
1 -	Nut, Rr. Speaker Cont. Mtg.		
1 -	2426 942 Bezel, Rr. Speaker Control		
1 -	2820 186 Knob and Set Screw.		
1 -	2580 038 Wiring Body		
1 -	Insulator, Radio Wiring		
1 -	2067 FX9 Grille		
1 -	2947 832 Speaker, w/House Cover		
4 -	6023 214 Nut, Speaker to Grille Mtg.		
1 -	Bracket, Grille and Speaker Mtg.		
2 -	6028 567 J-Nut, Grille Mtg.		
7 -	Screw, Grille Mtg.		
5 -	115 998 Nut, Grille Mtg.		

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
1-87-2 CONTROL PACKAGE, REAR SPEAKER..... Part No. 2947 883 Consists of: 1 - 2947 231 Control, Rr. Speaker Fader 1 - 2580 361 Bezel, Rr. Speaker Cont. Mtg. 1 - Nut, Rr. Speaker Cont. Mtg. 1 - 2820 186 Knob and Set Screw 1 - 2580 038 Wiring, Body 1 - Insulator, Radio Wiring 1 - 2067 FX9 Grille 1 - 2947 832 Speaker, w/House Cover 4 - 6023 214 Nut, Speaker to Grille Mtg. 1 - Bracket, Grille Mtg. 2 - 6028 567 J-Nut Grille Mtg. 7 - Screw, Grille Mtg. 5 - 120 622 Nut, Grille Mtg. 1 - 2068 FX9 Grille, w/House Cover 4 - Nut, Grille to Lid Mtg.	4 - 9414 977 Nut, Bezel and Grille to Cover Mtg. 1 - Jumper Wire 1-87-2 SPEAKER AND CONTROL PACKAGE, REAR COMPARTMENT Part No. 3488 434 Consists of: 1 - 2864 300 Control, Rear Speaker 1 - 6008 060 Nut, Rear Speaker Cont. Mtg. 1 - 2580 361 Bezel, Rear Speaker Control 1 - 2820 186 Knob, Rear Speaker Control 1 - 2580 038 Wiring, Rear Speaker 1 - 2298 882 Insulator, Radio Speaker Lead 1 - 2427 603 Speaker, Rear Compt. 1 - 2291 876 Grille, Rear Compt. Speaker 1 - 1819 014 Bezel, Rear Compt. Speaker 4 - 1206 14 Nut & Lk/Washer Rr. Compt. Speaker Mtg.		
1-87-2 SPEAKER AND CONTROL PACKAGE, REAR COMPARTMENT..... Part No. 2947 884 Consists of: 1 - 2947 723 Control, Rr. Speaker Fader 1 - 2947 673 Bezel, Rr. Speaker Fader Control 1 - 1887 603 Nut, Rr. Speaker Cont. Mtg. 1 - 2947 359 Knob and Spring 1 - Insulator, Radio Wiring 1 - 2427 603 Speaker, Rr. Compt. 4 - 9416 105 Screw, Rr. Compt. Speaker 1 - 2291 876 Grille, Rr. Compt. Speaker 1 - 1819 014 Bezel, Rr. Compt. Speaker 4 - Nut, Rr. Compt. Speaker	1-87-2 SPEAKER AND CONTROL PACKAGE REAR COMPT..... Part No. 3501 182 Consists of: 1 - 2947 444 Rear Speaker Fader Control 1 - 2947 484 Bezel, Rear Speaker Fader Control 1 - 6008 060 Nut, Rear Speaker Fader Control Mtg. 1 - 2947 359 Knob & Spring 1 - 2298 882 Insulator, Radio Wiring 1 - 2427 603 Rear Compt. Speaker 4 - 9415 956 Screw, Rear Compt. Speaker Mtg. 1 - 2291 876 Grille, Rear Compt. Speaker 1 - 1819 014 Bezel, Rear Compt. Speaker 4 - 120 614 Nut, Rear Compt. Speaker Mtg. 1 - 2580 038 Wiring, Rear Speaker Control to Speaker		
1-87-2 SPEAKER CONTROL PACKAGE RR. COMPT..... Part No. 3488 423 Consists of: 1 - 3488 325 Control, Rr. Compt. Speaker 1 - 3488 322 Bezel, Rr. Speaker Control 1 - Nut, Rr. Speaker Control Mtg. 1 - 3488 323 Knob, Rr. Speaker Control 1 - 2580 038 Wiring, Rr. Speaker Control to Speaker 1 - Speaker, Rr. Shelf Panel 1 - Insulator, Radio Lead 1 - 2291 876 Grille, Rr. Compt. Speaker 1 - 1819 014 Bezel, Rr. Compt. Speaker 4 - 120 614 Nut & Lockwasher, Speaker Grille & Bezel Mtg. 1 - 3513 555 Wiring, Fader Switch	1-87-2 SPEAKER AND CONTROL PACKAGE, REAR COMPT. Part No. 3501 183 Consists of: 1 - 2947 723 Rear Speaker Fader Control 1 - 2947 673 Bezel, Rear Speaker Fader Control 1 - 1887 603 Nut, Rear Speaker Control Mtg. 1 - 2947 359 Knob & Spring 1 - 2298 882 Insulator, Radio Wiring 1 - 2427 603 Rear Compt. Speaker 4 - 9415 956 Screw, Rear Compt. Speaker 1 - 2291 876 Grille, Rear Compt. Speaker 1 - 1819 014 Bezel, Rear Compt. Speaker 4 - 120 614 Nut, Rear Compt. Speaker 1 - 2580 038 Wiring, Rear Speaker Control to Speaker		
1-87-2 SPEAKER CONTROL PACKAGE RR. COMPT. Part No. 3488 424 Consists of: 1 - 3488 325 Control, Rr. Compt. Speaker 1 - 3488 322 Bezel, Rr. Speaker Control 1 - 6028 839 Nut, Rr. Speaker Control Mtg. 1 - 3488 323 Knob, Rr. Speaker Control 1 - Wiring, Control to Speaker 1 - 2298 882 Insulator, Radio Lead 1 - 3488 209 Bracket and Seal Rr. Speaker Mtg. 1 - 3488 211 Speaker, Rr. Compt. 4 - Nut and Lockwasher Speaker to Bracket Mtg. 4 - 9415 214 Screw, Speaker and Bracket to Front Support Mtg. 1 - 2826 GX9 Bezel and Grille, Rr. Speaker	2-03-3 STEERING KNUCKLE PACKAGE, FRONT SUSPENSION Part No. 3004 816 Consists of: 2 - 6026 705 Bolt 1 - Knuckle 2-05-4 ARM PACKAGE, FRONT SUSPENSION STEERING KNUCKLE BALL JOINT HOUSING, RHD., Rt. Part No. 2585 596 Lft. Part No. 2585 595 Consists of: 1 - Arm, Steering Knuckle Ball Joint Housing 1 - Nut, Steering Knuckle Ball Joint Stud 1 - Pin, Steering Knuckle Ball Joint Nut Cutter		

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
2-07-1 END PACKAGE, TIE ROD, STEERING LINKAGE Part No. 3004 787 Consists of: 1 - Bolt, Tie Rod Tube Clamp 1 - Clamp, Tie Rod Tube 1 - End, Tie Rod, Inner 1 - 9425 132 Nut, Tie Rod End Stud 1 - Nut, Tie Rod Tube Clamp Bolt 1 - C/Pin, Tie Rod End Stud Nut 1 - 2535 457 Seal, Tie Rod End Dust	1 - 6028 801 Nut, Ball Joint Stud 1 - Pin, Ball Joint Stud Nut Cotter 1 - 2462 848 Seal, Ball Joint		
END PACKAGE, TIE ROD, STEERING LINKAGE Part No. 3004 788 3004 789 3004 794 3004 795 3004 796 3004 797	2-08-59 CAM and BUSHING PACKAGE, FRONT SUSPENSION UPPER CONTROL ARM Part No. 2804 920 Consists of: 2 - 2071 204 Bushing, Arm 2 - Cam, Arm Slotted 2 - Cam, Arm 2 - 1825 449 Nut, Arm Bolt 2 - 120 384 Washer, Lock Arm Cam		
Consists of: 1 - Bolt, Tie Rod Tube Clamp 1 - Clamp, Tie Rod Tube 1 - End, Tie Rod 1 - 9425 132 Nut, Tie Rod End Stud 1 - Nut, Tie Rod Tube Clamp Bolt 1 - C/Pin, Tie Rod End Stud Nut	CAM and BUSHING PACKAGE, FRONT SUSPENSION UPPER CONTROL ARM Part No. 2808 445 Consists of: 2 - 2269 124 Bushing, Arm 2 - Bracket, Cam 2 - Cam, Bracket Slotted 2 - 1825 449 Nut, Bracket Bolt 2 - 120 384 Washer, Bracket Cam		
END PACKAGE, TIE ROD, STEERING LINKAGE Part No. 3004 792 3004 793 3420 154 3420 155	2-10-6 ARM PACKAGE, LOWER CONTROL, RT Part No. 2808 620 Consists of: 1 - Arm 1 - 2071 506 Bushing 1 - Nut 1 - Pin		
Consists of: 1 - 181 610 Bolt, Tie Rod Tube Clamp 1 - Clamp, Tie Rod Tube 1 - C/Pin, Tie Rod End Stud Nut 1 - End, Tie Rod 1 - 9425 132 Nut, Tie Rod End Stud	2-10-7 ARM PACKAGE, LOWER CONTROL, LT Part No. 2808 621 Consists of: 1 - Arm 1 - 2071 506 Bushing 1 - Nut 1 - Pin		
2-08-57 BALL JOINT PACKAGE, FRONT SUSPENSION UPPER Part No. 2298 534 Consists of: 1 - Ball Joint 1 - Nut, Ball Joint Stud 1 - Pin, Ball Joint Stud Nut Cotter 1 - 1825 487 Seal, Ball Joint 1 - 1672 960 Washer, Ball Joint Stud Nut	2-10-55 ARM and BALL JOINT PACKAGE, FRONT SUSPENSION STEERING KNUCKLE HOUSING LOWER Part No. 2275 466 2275 467 Consists of: 1 - Arm, Ball Joint Housing 1 - Nut, Ball Joint Stud 1 - C/Pin, Ball Joint Stud Nut		
BALL JOINT PACKAGE, FRONT SUSPENSION UPPER Part No. 2808 394 Consists of: 1 - Ball Joint 1 - 128 027 Nut, Ball Joint Stud 1 - Pin, Ball Joint Stud Nut Cotter 1 - 1825 761 Seal, Ball Joint 1 - 1672 960 Washer, Ball Joint Stud Nut	ARM and BALL JOINT PACKAGE, FRONT SUSPENSION STEERING KNUCKLE HOUSING, LOWER Part No. 3004 817 3004 818 3004 819 3004 820		
BALL JOINT PACKAGE, FRONT SUSPENSION UPPER Part No. 3514 974 Consists of: 1 - Ball Joint	Consists of: 1 - Arm, Ball Joint Housing 1 - C/Pin, Ball Joint Stud Nut 1 - 128 027 Nut, Ball Joint Stud		

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
3-33-1 Cont'd.	<p>BEARING PACKAGE, DRIVE SHAFT Part No. 2808 272 Consists of: 1 - Bearing 1 - Collar</p>	<p>5-03-1 BRAKE SHOE LINING PACKAGE Part No. 2585 683 2585 685 3420 955 3420 957 3420 958 3420 959 3420 960 3420 963 3420 964 3579 268 3579 277</p>	
3-33-1	<p>REPAIR PACKAGE, Drive Shaft Bearing Part No. 3420 090 Consists of: 1 - Bearing 1 - Collar 1 - 2404 052 Seal 2 - 2467 095 Gasket 1 - Instruction Sheet</p>	<p>Consists of: 2 - Lining, Frt. Whl. Primary 2 - Lining, Frt. Whl. Secondary 2 - Lining, Rr. Whl. Primary 2 - Lining, Rr. Whl. Secondary</p>	
<p>REPAIR PACKAGE, Drive Shaft Bearing Part No. 3420 091 Consists of: 1 - Bearing 1 - Collar 1 - 2852 948 Seal 1 - 2881 314 Gasket, Inner 1 - 2070 933 Gasket, Outer</p>	<p>5-03-3 BRAKE SHOE and LINING PACKAGE DISC BRAKES Part No. 3579 254 3579 266 Consists of: 4 - Shoe and Lining 2 - 3461 770 Positioner, Frt. Whl. Disc Brk. Rt. 2 - 3461 771 Positioner, Frt. Whl. Disc Brk. Lt.</p>		
<p>REPAIR PACKAGE, Drive Shaft Bearing, Rt. Part No. 3621 992 Consists of: 1 - Retainer and Adjuster, Rt. 1 - 2881 185 Seal 1 - 2404 216 Seal, Outer 1 - Cone 1 - Cup 1 - Collar 1 - 2070 933 Gasket 1 - 2881 314 Gasket</p>	<p>5-03-3 BRAKE SHOE and LINING PACKAGE DISC BRAKES Part No. 3004 759 3004 828 3579 276 Consists of: 4 - Shoe and Linings</p>		
<p>REPAIR PACKAGE, Drive Shaft Bearing, Lt. Part No. 3621 993 Consists of: 1 - Retainer, Lt. 1 - 2881 185 Seal 1 - 2404 216 Seal, Outer 1 - Cone 1 - Cup 1 - Collar 1 - 2070 933 Gasket 1 - 2881 314 Gasket</p>	<p>5-03-3 BRAKE SHOE and LINING PACKAGE FRT. WHEEL Part No. 3004 851 3420 145 3420 146 3420 147 3420 148 3420 956 3579 269 3579 274 Consists of: 2 - Shoe and Lining, Primary 2 - Shoe and Lining, Secondary</p>		
<p>3-35-14 SEAL and GASKETS, PACKAGE, Drive Shaft Brg. Part No. 3621 967 Consists of: 1 - Seal 1 - 2070 933 Gasket 1 - Gasket</p>	<p>5-03-3 BRAKE SHOE and LINING PACKAGE RR. WHEEL Part No. 3004 858 3420 146 3420 148 3420 149 3420 150 3420 952 3420 953 3420 954 3579 270 3579 275 3579 294 Consists of: 2 - Shoe and Linings, Primary 2 - Shoe and Linings, Secondary</p>		
<p>4-25-28 PARKING BRAKE, RELEASE VALVE SURGE TANK PACKAGE Part No. 2421 268 Consists of: 1 - Clamp 1 - Tank, Surge</p>			

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
5-05-9	SEAL and BOOT PACKAGE FRONT WHEEL DISC Part No. 2808 699 Consists of: 4 - Seal Piston 4 - Boot Piston SEAL, BOOT and BUSHING PACKAGE FRONT WHEEL DISC Part No. 3004 865 Consists of: 1 - Boot Piston 1 - Seal Piston 2 - Bushing 2 - Bushing 1 - Lubricant (1 oz.) 1 - 2944 722 Positioner Rt. 1 - 2944 723 Positioner Lt.	5-39-1	MASTER CYLINDER REPAIR PACKAGE Part No. 3420 967 Consists of: 1 - Primary Piston 1 - Secondary Piston 1 - Spring Valve 1 - Valve 2 - Seat 1 - 2881 512 Gasket 1 - 2881 519 Seal 1 - Screw 1 - 2944 381 Wire, Cover Bail
5-05-9	SEAL, Boot and Bushing ¹ Package Front Wheel Disc Part No. 3579 255 Consists of: 1 - Boot, Piston 1 - Seal, Piston 2 - Bushing, Locating Pin - Outer 2 - Bushing, Locating Pin - Inner 1 - Lubricant (1-oz.)	5-39-1	MASTER CYLINDER REPAIR PACKAGE Part No. 3420 968 Consists of: 1 - Primary Piston 1 - Secondary Piston 1 - Spring Valve 1 - Seat 2 - 2944 466 Gasket 1 - 2881 519 Seal 1 - Screw 1 - 2944 467 Wire, Cover Bail
5-39-1	MASTER CYL. REPAIR PKG: Part No. 3420 120 Consists of: 1 - Primary Piston 1 - Secondary Piston 1 - 2881 512 Gasket 1 - Spring 1 - Valve 2 - Seat 1 - 2881 519 Seal 1 - Screw	5-39-1	REPAIR PACKAGE, MASTER CYLINDER MAJOR Part No. 3420 969 Consists of: 1 - Piston, Primary 1 - Piston, Secondary 1 - Spring, Valve 1 - Valve, Residual 2 - Seat, Tube 1 - 2944 466 Gasket, Cover 1 - 2944 467 Wire, Cover Coil 1 - 2265 635 Stop, Primary Piston 1 - 2200 341 Screw, Primary Piston
5-39-1	MASTER CYL. REPAIR PACKAGE Part No. 3420 962 Consists of: 1 - Primary Piston 1 - Secondary Piston 1 - 2823 994 Gasket 1 - Spring 2 - Valve 2 - Insert 1 - 6026 813 Screw and Washer 1 - 1828 388 Boot 1 - 2074 960 Lock Ring	5-39-1	MASTER CYLINDER, REPAIR PACKAGE Part No. 3549 828 Consists of: 1 - 3549 828 Piston, Primary 1 - 3549 828 Piston, Secondary 1 - Spring, Residual Valve 2 - Seat, Tube 1 - 2074 960 Ring, Push Rod Retainer 1 - 1828 388 Boot, Cylinder 1 - 2881 512 Gasket, Cover 1 - 2881 519 Seal, Stop Screw 1 - Screw, Piston Stop
5-39-1	MASTER CYL. REPAIR PACKAGE Part No. 2808 578 Consists of: 1 - 2823 994 Gasket 2 - Valve 2 - Spring 2 - Insert, Tube 1 - Secondary Piston 1 - 2074 960 Ring 1 - 1828 388 Boot 1 - Stop Screw 1 - Primary Piston	5-39-1	REPAIR PACKAGE, MASTER CYLINDER MAJOR Part No. 3579 257 Consists of: 1 - Piston, Secondary 1 - Piston, Primary 2 - Spring, Residual Valve Pri. & Sedy. 2 - Valve, Residual Pri. & Sedy. 2 - Insert, Tube Pri. & Sedy. 1 - 3461 047 Gasket, Cover
		5-39-1	REPAIR PACKAGE, MASTER CYLINDER MAJOR Part No. 3579 258

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
5-39-1	Cont'd.	5-63-1	WHEEL CYLINDER REPAIR PACKAGE Part No. 2808 697
	Consists of:		Consists of:
1 -	Piston, Secondary	2 -	2260 844 Cup, Piston
1 -	Piston, Primary	2 -	2881 618 Boot, Cylinder
1 -	Spring, Residual Valve Secondary		
1 -	Valve, Residual Secondary	5-63-1	WHEEL CYLINDER REPAIR PACKAGE Part No. 3420 140
2 -	Insert, Tube Pri. & Sedy.		Consists of:
1 - 2944 227	Gasket, Cover	4 -	Cup, Frt. Whl. Brake Cyl. Piston
5-39-1	REPAIR PACKAGE, MASTER CYLINDER MAJOR Part No. 3579 259	4 -	Boot, Frt. Whl. Brake Cylinder
	Consists of:	2 -	Spring, Cup
1 -	Piston, Secondary	5-63-1	WHEEL CYLINDER SERVICE PACKAGE RR. Part No. 3420 999
1 -	Piston, Primary		Consists of:
2 -	Spring, Residual Valve Pri. & Sedy.	2 -	2265 574 Cup, Piston
2 -	Valve, Residual Pri. & Sedy.	2 -	2881 604 Boot, Cylinder
2 -	Seat, Tube Pri. & Sedy.	1 -	2072 637 Spring, Cup
1 - 3461 047	Gasket, Cover	5-63-1	WHEEL CYLINDER SERVICE PACKAGE RR. Part No. 3421 000
5-39-1	REPAIR PACKAGE, MASTER CYLINDER MAJOR Part No. 3579 260		Consists of:
	Consists of:	2 -	2260 844 Cup, Piston
1 -	Piston, Secondary	2 -	2881 618 Boot, Cylinder
1 -	Piston, Primary	1 -	1923 765 Spring, Cup
1 -	Spring, Residual Valve Secondary	5-63-1	WHEEL CYLINDER REPAIR PACKAGE FRT. Part No. 3549 803
1 -	Valve, Residual Secondary		Consists of:
2 -	Seat, Tube Primary & Secondary	2 -	2260 838 Cup, Piston
1 - 2944 227	Gasket, Cover	2 -	2881 634 Boot, Cylinder
5-39-3	MASTER CYLINDER PACKAGE Part No. 2808 577	1 -	2260 839 Spring, Cup
	Consists of:	5-63-1	WHEEL CYLINDER SERVICE PACKAGE RR. Part No. 3549 804
1 -	Master Cylinder		Consists of:
1 - 2749 960	Ring	2 -	2534 923 Cup, Piston
1 - 1828 389	Stop	2 -	2881 618 Boot, Cylinder
1 - 180 018	Screw	1 -	1923 765 Spring, Cup
1 - 1828 388	Boot	5-63-1	FRONT WHEEL CYLINDER REPAIR PACKAGE Part No. 3549 819
5-39-3	MASTER CYLINDER PACKAGE Part No. 3420 961		Consists of:
	Consists of:	2 -	2265 573 Cup, Piston
1 -	Master Cylinder	2 -	2881 624 Boot, Cylinder
1 - 1828 389	Stop	1 -	1923 765 Spring, Piston
2 -	180 018 Screw	6-17-3	CLUTCH LEVER PACKAGE Part No. 2240 634
2 - 6022 181	Washer		Consists of:
1 - 1828 388	Boot	3 -	Eyebolt
1 - 2074 960	Lock Ring	3 -	Lever
5-39-3	MASTER CYLINDER PACKAGE Part No. 2808 600	3 -	Nut
	Consists of:	3 -	Pin
1 -	Master Cylinder	3 -	Spring
1 - 1828 388	Boot	3 -	Strut
1 - 1828 389	Stop	5-63-1	CLUTCH LEVER PACKAGE Part No. 2495 052
2 - 6022 201	Screw and Lock Washer		
1 - 2074 960	Ring		
5-63-1	WHEEL CYLINDER SERVICE PACKAGE RR. Part No. 2808 695		
	Consists of:		
2 - 2265 574	Cup		
2 - 2072 636	Cup		
2 - 2881 604	Boot, Cylinder		

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
<p>6-17-1 Cont'd. Consists of: 3- Clip 3- Lever 3- Nut 3- Pin 3- Screw 3- Washer</p>		<p>CLUTCH LEVER PACKAGE Part No. 2525 473 Consists of: 3- Clip 3- Lever 3- Nut 3- Pin 3- Screw 3- Washer</p>	<p>1- 2532 493 Seal Body 1- 2532 492 Seal 1- Shaft w/Slinger 1- Impellar</p>
<p>CLUTCH LEVER PACKAGE Part No. 2808 435 Consists of: 3- Clip 3- Lever 3- Nut 3- Pin 3- Screw 3- Washer</p>	<p>7-42-4 REPAIR PACKAGE, WATER PUMP Part No. 2808 683 Consists of: 1- 1737 705 Gasket, Body 1- 2843 635 Impeller 1- 2532 493 Seal, Body 1- 2843 292 Seal 1- Shaft, w/Bearing</p>	<p>7-42-1 WATER PUMP PACKAGE Part No. 2808 679 Consists of: 1- 1947 523 Gasket, Intermediate 1- Pump, Water</p> <p>7-42-1 WATER PUMP PACKAGE Part No. 2808 680 Consists of: 1- 1737 705 Gasket, Body 1- Pump, Water</p>	<p>7-42-4 REPAIR PACKAGE, WATER PUMP Part No. 2808 684 Consists of: 1- 1737 705 Gasket, Body 1- 2843 923 Impeller 1- 2532 493 Seal, Body 1- 2843 292 Seal 1- Shaft, w/Bearing</p> <p>7-42-4 REPAIR PACKAGE, WATER PUMP Part No. 3420 035 Consists of: 1- 2951 838 Seal 1- 2951 010 Seal Body 1- 2129 013 Gasket, Body 1- Impeller 1- Shaft, w/Bearing</p>
<p>7-42-1 WATER PUMP PACKAGE Part No. 2808 681 Consists of: 1- 1737 705 Gasket, Body 1- Pump, Water</p>	<p>7-42-4 REPAIR PACKAGE, WATER PUMP Part No. 3420 036 Consists of: 1- 2951 838 Seal 1- 2951 010 Seal, Body 1- 2129 013 Gasket, Body 1- Impeller 1- Shaft, w/Bearing</p>	<p>7-42-1 WATER PUMP PACKAGE Part No. 3420 037 Consists of: 1- 2129 013 Gasket Body 1- Pump, Water</p> <p>7-42-1 WATER PUMP PACKAGE Part No. 3420 038 Consists of: 1- 2129 013 Gasket Body 1- Pump, Water</p>	<p>8-14-1 LAMP, REFLECTOR and BEZEL PACKAGE, SIDE MARKER Part No. 3420 646-7 Consists of: 1- 3403 630-1 Bezel 2- 6027 639 Cap Nut 2- 6028 399 Cap Nut 1- 3403 616 Lamp 1- Reflector 1- 3403 635 Retainer</p>
<p>7-42-4 REPAIR PACKAGE, WATER PUMP Part No. 2808 682 Consists of: 1- 1947 521 Gasket Body 1- 1947 523 Gasket, Intermediate 1- 1947 671 Gasket Outlet Elbow</p>	<p>LAMP, REFLECTOR and BEZEL PACKAGE, SIDE MARKER Part No. 3420 714-5 Consists of: 1- 3403 640-1 Bezel 2- 6027 639 Cap Nut 2- 6028 399 Cap Nut 1- 3403 637 Lamp 1- 3403 635 Retainer 1- 3403 646 Reflector</p>		

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
8-29-99	RETAINER, WASHER and SLIP RING PACKAGE, ROTOR GREASE Part No. 2586 512 Consists of: 1 - Slip Ring, Rotor 2 - Retainer 1 - Washer, Rotor Grease Ret.		
8-29-129	CAPACITOR and INSULATOR PACKAGE Part No. 2421 137 Consists of: 1 - Capacitor and Bolt 1 - Insulator, Heat Sink 1 - Insulator, Capacitor Bolt 2 - Lockwasher 2 - Nut, Hex 1 - Washer, Plain		
8-32-2	HORN PACKAGE, UNIVERSAL, LOW NOTE Part No. 2808 868 HIGH NOTE Part No. 2808 869 Consists of: 1 - Bracket, Long 1 - Bracket, Short 1 - Horn 3 - Lockwasher, Brkt. to Horn Mtg. Screw 3 - Screw, Brkt. to Horn Mtg. 1 - Screw and Washer, Brkt. to Car Mtg.		
8-34-278	GEAR and GASKET PACKAGE, ROTATING HEADLAMP Part No. 3420 910 3420 922 Consists of: 1 - Gasket 1 - Gear		
8-37-90	BEZEL and LENS PACKAGE, SPEED and INST. CLUSTER, MILE Part No. 2984 490 Consists of: 1 - Bezel 1 - Lens BEZEL and LENS PACKAGE, SPEED and INST. CLUSTER, MILE Part No. 2984 491 Consists of: 1 - Bezel 1 - Lens		
8-37-178	HOUSING PACKAGE, INST. CLUSTER Part No. 3420 741 Consists of: 1 - Housing 1 - Lens, Brake System Lamp 1 - Seal, Brake System Lamp HOUSING PACKAGE, SPEED and INST. CLUSTER Part No. 3420 838 Consists of: 1 - Dial, Gearshift Indicator 1 - Housing		
			HOUSING PACKAGE, SPEED and INST. CLUSTER Part No. 3420 858 Consists of: 1 - Housing 1 - Lens, Door Ajar Warning Lamp 1 - Seal, Turn Signal and Door Ajar Warning Lamp
		8-38-3	LAMP PACKAGE Part No. 2864 325 2947 218 2947 285 #3488 496 Consists of: 1 - Lamp and Switch 1 - Lens 1 - 1522 44 Bulb
		8-41-17	HOUSING and LENS PACKAGE, WARNING LAMP Part No. 2932 818 Consists of: 1 - Housing 1 - Lens, Cold Warning Lamp 1 - Lens, Warning Lamp
		8-50-184	COVER and WELT PACKAGE, FENDER TURN SIGNAL INDICATOR LAMP Part No. 2932 844-5 Consists of: 1 - Cover 1 - Welt
		8-50-334	LENS and GASKET PACKAGE, PARKING and TURN SIGNAL LAMP Part No. 3420 552-3 3420 554-5 3420 584-5 3420 618-9 3420 624-5 3420 628-9 3420 630-1 3420 632-3 3420 636-7 3420 638-9 3420 640-1 3420 648-9 3420 702-3 3420 710-1 3420 742-3 # 3514 272-3 3514 302-3 # 3514 306 # 3514 324-5 # 3514 336-7 # 3579 174-5 Consists of: 1 - Gasket 1 - Lens

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
8-5-334 Cont'd.	LENS and GASKET PACKAGE, CORNERING LAMP Part No. # 3420 644-5 # 3420 704-5 # 3420 708-9	8-52-121 THRUST WASHER PACKAGE, ARMATURE Part No. 2275 555 Consists of: 6 - Washer, Thrust	8-52-135 BRUSH PACKAGE Part No. 2525 529 Consists of: 1 - Brush 1 - Brush, Field Shunt Coil 1 - Screw and Washer, Brush Att.
8-50-349	SOCKET, CABLE, PLATE and GASKET PACKAGE, PARKING and TURN SIGNAL LAMP Part No. # 3420 712 Consists of: 1 - Gasket 1 - Socket	8-52-137 PLATE and BRUSH HOLDER, BRUSH HOLDER Part No. 2932 812 Consists of: 1 - Brush and Terminal, Negative 1 - Plate, Brush Holder	8-52-140 SPRING PACKAGE, BRUSH Part No. 2084 666 Consists of: 4 - Spring, Brush
8-52-49	FORK and PIN PACKAGE, SHIFTING Part No. 2084 093 Consists of: 1 - Fork, Shifting 1 - Pin, Roll	8-52-180 THRUST WASHER PACKAGE, COMMUTATOR END Part No. 2240 529 Consists of: 10 - Washer	8-52-214 FIELD SERIES COIL PACKAGE Part No. 2084 088 Consists of: 2 - Coil FIELD SERIES COIL PACKAGE Part No. 2275 248 Consists of: 2 - Coil 4 - Insulator, Field Pole 1 - Rivet, Field Series Coil Ground
8-52-82	STOP, SNAP RING and STOP WASHER PACKAGE, PINION Part No. 2448 804 Consists of: 1 - Ring, Pinion Stop Snap 1 - Stop, Pinion 1 - Washer, Pinion Stop	8-52-341 CONTACT and COVER GASKET PACKAGE, SOLENOID Part No. 2084 091 Consists of: 1 - Contact, Solenoid 1 - Gasket, Cover 2 - Spring	8-52-342 CONTACT and SPRING PACKAGE, SOLENOID SWITCH Part No. 2932 814 Consists of: 1 - Contact, Solenoid Switch 2 - Spring 1 - Seal, Solenoid
8-52-86	LINK PACKAGE, CLUTCH STARTER SWITCH ACTUATOR Part No. 3514 257 Consists of: 1 - Link, Retaining 1 - Link, Actuator 1 - 6028 260 Rivet, Blind Type	8-52-344 COVER and GASKET PACKAGE, SOLENOID Part No. 2084 090 Consists of: 1 - Cover 1 - Gasket, Cover	
8-52-87	ACTUATOR and RETAINING RING PACKAGE, CLUTCH SHIFTING Part No. 2275 556 Consists of: 2 - Actuator, Clutch Shifting 1 - Ret. Ring, Clutch Actuator		
8-52-96	GEAR and SNAP RING PACKAGE, PINION SHAFT Part No. 2275 557 Consists of: 1 - Gear, Pinion Shaft 1 - Snap Ring, Pinion Shaft Gear Ret. 1 - Washer, Pinion Shaft Gear Friction		
8-52-98	THRUST WASHER and RETAINING RING PACKAGE, PINION SHAFT Part No. 2275 558 Consists of: 1 - 6022 006 Ret. Ring, Pinion Shaft 2 - Washer, Pinion Shaft Thrust		

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
8-52-345 SOLENOID PACKAGE	Part No. 2932 813		
Consists of:		Consists of:	
1 - Nut, Hex		1 - 9417 867 Bulb	
1 - Seal, Solenoid		1 - Housing	
1 - Solenoid		4 - 6014 023 J-Nut	
3 - Washer		1 - Lens and Bezel	
8-52-354 STUD PACKAGE,		4 - Screw, Hsg. to Panel Att.	
TERMINAL RELAY	Part No. 2084 094	4 - Screw, Lens and Bezel to Hsg. Att.	
Consists of:		8-55-194 LENS and GASKET	
1 - Insulator, Relay Stud		PACKAGE, TAIL, STOP	
1 - Nut, Hex		and TURN SIGNAL	
1 - Stud		LAMP	Part No. 2932 738-9
2 - Washer		2932 742-3	
STUD PACKAGE,		2932 746-7	
TERMINAL RELAY	Part No. 2932 815	2932 752-3	
Consists of:		2932 792-3	
1 - Nut, Solenoid Ball Stud Sealing		2932 824-5	
2 - Stud		3420 556-7	
1 - Washer, Solenoid Relay Stud Insulator		3420 586-7	
8-55-1 LAMP PACKAGE,		3420 592-3	
TAILGATE TAIL STOP		3420 596-7	
and TURN SIGNAL	Part No. 2932 740-1	3420 616-7	
Consists of:		3420 620-1	
1 - 9418 903 Bulb		3420 622-3	
1 - Housing		3420 626-7	
1 - Lens and Bezel		3420 706-7	
4 - J-Nut		3420 716-7	
4 - Screw, Lens and Bezel to Hsg. Att.		3420 718-9	
4 - Screw, Hsg. to Panel Att.		3420 720-1	
LAMP PACKAGE,		3420 738-9	
TAILGATE TAIL, STOP		3420 784-5	
and TURN SIGNAL	Part No. 2932 750-1	3420 818-9	
Consists of:		3420 836-7	
1 - 142 450 Bulb, Tail Lamp		3420 856-7	
1 - 9417 867 Bulb, Tail, Stop and Turn Signal Lamp		3420 860-1	
1 - Housing		3514 258-9	
5 - 6023 111 J-Nut		3514 260-1	
1 - Lens and Bezel		# 3514 268-9	
6 - 6027 475 Screw		# 3514 270-1	
5 - 9414 743 Screw		# 3514 316-7	
LAMP PACKAGE,		# 3514 318-9	
QTR. PANEL TAIL,		# 3514 322-3	
STOP and TURN		# 3514 340-1	
SIGNAL	Part No. 3420 824-5	# 3514 352-3	
Consists of:		# 3514 356-7	
1 - 9414 723 Bulb		# 3514 358-9	
1 - Housing		# 3514 362-3	
1 - 6023 111 J-Nut		# 3514 364-5	
1 - Lens		# 3514 366-7	
2 - Screw, Bezel Att. (Inboard)		# 3514 368-9	
2 - Screw, Bezel Att. (Outboard)		# 3514 370-1	
3 - Screw, Hsg. Att.		# 3514 374-5	
1 - Screw, Hsg. Mtg. (Top)		# 3514 392-3	
LAMP PACKAGE,		# 3514 410-1	
TAILGATE TAIL,		# 3514 420-1	
STOP and TURN		# 3579 154-5	
SIGNAL	Part No. 3420 840-1	# 3579 230-1	
		# 3579 246-7	
		Consists of:	
		1 - Gasket	
		1 - Lens	

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
8-55-194	Cont'd. LENS, FILTER and GASKET PACKAGE, TAIL STOP and TURN SIGNAL LAMP Part No. 3420 588-9 3420 590-1	2 - 1821 391	Seal, Crankshaft Bearing Oil
	Consists of:	2 - 1947 558	Seal, Crankshaft Bearing Oil Seal Retainer
	1 - Filter	6 - 2205 959	Shield, Exhaust Valve Stem Oil
	1 - Gasket	6 - 2205 801	Shield, Intake Valve Stem Oil
	1 - Lens		GASKET SET, ENGINE Part No. 3420 241
8-56-1	LAMP PACKAGE, BACK-UP LAMP Part No. 3514 254-5		Consists of:
	Consists of:	1 - 2129 012	Gasket, Chain Case Cover
	1 - 9417 866 Bulb	2 - 2806 984	Gasket, Cylinder Head
	1 - Housing	2 - 2463 290	Gasket, Cylinder Head Cover
	1 - Lens	1 - 50 082	Gasket, Cylinder Water Outlet
	2 - 9425 250 Screw, Lens Mtg.	1 - 2951 285	Gasket, Exhaust Manifold, w/Heat Shield, Left
	2 - 9418 515 Screw, Hsg. Mtg.	1 - 2843 770	Gasket, Fuel Pump Flange
8-56-8	LENS and GASKET PACKAGE, BACK-UP LAMP Part No. 2932 954 2932 993 3420 581 3420 582-3 3420 594-5 3420 642 3420 728-9 # 3514 320-1 # 3514 354-5 # 3579 728-9 # 3620 734	1 - 1326 836	Gasket, Ignition Distributor
	Consists of:	2 -	Gasket, Intake Manifold
	1 - Gasket	1 -	Gasket, Intake Manifold, Front
	1 - Lens	1 -	Gasket, Intake Manifold, Rear
8-57-54	LENS and GASKET PACKAGE, LICENSE LAMP Part No. 2585 174 3420 839	2 -	Gasket, Oil Pan
	Consists of:	2 -	Gasket, Oil Pan, End
	1 - Gasket	1 - 2129 013	Gasket, Water Pump Body
	1 - Lens	1 - 6027 245	"O" Ring, Ignition Distributor Housing
9-01-5	GASKET SET, ENGINE Part No. 3004 839	1 - 2875 923	"O" Ring, Ignition Distributor Housing
	Consists of:	1 - 2899 532	Oil Seal, Chain Case Cover
	1 - 1947 554 Gasket, Chain Case Cover	1 -	Seal, Crankshaft Bearing No. 5 Oil, Left
	1 - 2843 182 Gasket, Cylinder Head	1 -	Seal, Crankshaft Bearing No. 5 Oil, Right
	1 - 2121 244 Gasket, Cylinder Head Cover	2 -	Seal, Crankshaft Bearing Oil
	1 - 2899 250 Gasket, Cylinder Head Cover	1 -	Sealer, Intake Manifold End Gasket
	1 - 1947 671 Gasket, Cylinder Water Outlet Elbow	16 - 2205 958	Shield, Valve Stem Oil
	1 - 2465 391 Gasket, Exhaust Pipe Flange		GASKET SET, ENGINE Part No. 3004 615
	1 - 2843 770 Gasket, Fuel Pump Flange		Consists of:
	1 - 1947 762 Gasket, Intake and Exhaust Manifold	2 - 1821 170	Gasket, Air Cleaner to Carburetor
	1 - 2843 279 Gasket, Intake to Exhaust Manifold	2 - 2780 629	Gasket, Carburetor Flange
	1 - 1947 793 Gasket, Oil Pan, Front	1 - 2264 794	Gasket, Chain Case Cover
	1 - 2205 801 Gasket, Oil Pan, Rear	2 - 2468 010	Gasket, Cylinder Head
	1 - 1947 678 Gasket, Oil Pan, Left	2 - 2780 566	Gasket, Cylinder Head Cover
	1 - 1947 677 Gasket, Oil Pan, Right	1 - 50 082	Gasket, Cylinder Water Outlet Elbow
	1 - 618 622 Gasket, Oil Pressure Relief Valve Cap	2 - 2780 534	Gasket, Exhaust Manifold
	1 - 2121 404 Gasket, Oil Pump Body	1 - 2843 770	Gasket, Fuel Pump Flange
	1 - 1947 521 Gasket, Water Pump Body	2 - 2780 614	Gasket, Heat Tube
	1 - 1947 523 Gasket, Water Pump Intermediate Plate	2	Gasket, Intake Manifold
	1 - 2899 531 Seal, Chain Case Cover Oil	1 - 2780 614	Gasket, Intake Manifold Exhaust Pipe
		2 -	Gasket, Intake Manifold End
		1 - 2780 680	Gasket, Intake Manifold Plug
		1 - 1326 836	Gasket, Ignition Distributor
		1 - 2658 685	Gasket, Oil Pan
		1 -	Gasket, Oil Pump Body
		1 - 618 622	Gasket, Oil Pressure Relief Valve Cap
		1 - 1737 705	Gasket, Water Pump Body
		2 - 1737 761	Gasket, Water Pump Housing to Cylinder Block
		1 - 2536 481	Seal, Case Cover Oil
		2 -	Seal, Crankshaft Bearing Oil
		2 -	Seal, Crankshaft Bearing Retainer
		16 -	Seal, Intake and Exhaust Valve Stem Oil
		1 - 1855 328	Seal, Oil Pump Body
		1 - 2268 921	Seal, Oil Pump Cover, Large
		1 -	Seal, Oil Pump Cover, Small
		8 - 2899 547	Shield, Intake Valve Stem Oil
		8 - 2899 548	Shield, Exhaust Valve Stem Oil

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
9-01-5	GASKET SET, ENGINE Part No. 3420 029 Consists of:	1 - 2875 923	"O" Ring, Ignition Distributor Housing
	2 - 2806 984 Gasket, Cylinder Head	2 -	Seal, Crankshaft Bearing Oil
	2 - 2463 290 Gasket, Cylinder Head Cover	1 - 2899 532	Seal, Chain Case Cover Oil
	1 - 2129 012 Gasket, Chain Case Cover	1 -	Seal, Crankshaft Bearing No. 5 Cap Oil Rt.
	1 - 50082 Gasket, Cylinder Water Outlet	1 -	Seal, Crankshaft Bearing No. 5 Cap Oil Lt.
	2 - 1618 681 Gasket, Oil Pan	1 -	Sealer, Intake Manifold End Gasket
	2 -	16 - 2205 958	Shield, Valve Stem Oil
	Gasket, Oil Pan, End		
	1 - 2129 013 Gasket, Water Pump Body	9-01-5	GASKET SET, ENGINE Part No. 3549 594
	1 - 2843 770 Gasket, Fuel Pump Body	Consists of:	
	1 - 1326 836 Gasket, Ignition Distributor	1 - 2129 012	Gasket, Chain Case Cover
	2 -	2 - 2863 493	Gasket, Cylinder Head
	Gasket, Intake Manifold	2 - 2951 267	Gasket, Cylinder Head Cover
	1 -	1 - 50 082	Gasket, Cylinder Water Outlet
	Gasket, Intake Manifold, Front	2 - 2856 029	Gasket, Exhaust Pipe Flange
	1 -	1 - 2843 770	Gasket, Fuel Pump Flange
	Gasket, Intake Manifold, Rear	2 -	Gasket, Intake Manifold
16 - 2205 958	Shield, Valve Stem Oil	1 -	Gasket, Intake Manifold, Front
1 -	Seal, Crankshaft Bearing #5 Cap Oil, Rt.	1 -	Gasket, Intake Manifold, Rear
1 -	Seal, Crankshaft Bearing #5 Cap Oil, Lt.	1 - 1326 836	Gasket, Ignition Distributor
1 - 2899 532	Assy, Chain Case Cover Oil Seal	2 - 1618 681	Gasket, Oil Pan
1 -	Seal, Crankshaft Bearing Oil	2 - 3462 386	Gasket, Oil Pan End
1 - 6027 245	O-Ring, Ignition Dist. Housing	2 - 1828 142	Gasket, Oil Pan End
1 - 2875 923	O-Ring, Ignition Dist. Housing	1 - 2129 013	Gasket, Water Pump Body
1 -	Sealer, Intake Manifold End Gasket	1 - 6027 245	"O" Ring Ignition Distributor Housing
		1 - 2875 923	"O" Ring Ignition Distributor Housing
		2 -	Seal, Crankshaft Bearing Oil
		1 - 2899 532	Seal, Chain Case Cover Oil
		1 -	Seal, Crankshaft Bearing No. 5 Cap Oil Rt.
		1 -	Seal, Crankshaft Bearing No. 5 Cap Oil Lt.
		1 -	Sealer, Intake Manifold End Gasket
		16 - 2205 958	Shield, Valve Stem Oil
9-01-5	GASKET SET, ENGINE Part No. 3514 166 Consists of:	9-01-5	GASKET SET, ENGINE Part No. 3514 158 Consists of:
	2 - 3512 260 Gasket, Cylinder Head	1 - 2129 012	Gasket, Chain Case Cover
	2 - 2658 646 Gasket, Cylinder Head Cover	2 - 2806 984	Gasket Cylinder Head
	1 - 1851 664 Gasket, Intake Manifold	2 - 2463 290	Gasket, Cylinder Head Cover
	1 - 618 622 Gasket, Oil Pressure Relief Valve Cap	1 - 50 082	Gasket, Cylinder Water Outlet
	1 - 2843 770 Gasket, Fuel Pump Flange	1 - 2951 285	Gasket, Exhaust Manifold, w/Heat Shield
	1 - 50 082 Gasket, Cylinder Water Outlet Elbow	1 - 2843 770	Gasket, Fuel Pump Flange
	1 - 1737 705 Gasket, Water Pump Body	2 -	Gasket, Intake Manifold
	2 - 1737 761 Gasket, Water Pump to Cylinder Block	1 -	Gasket, Intake Manifold, Front
	1 - 2264 794 Gasket, Chain Case Cover	1 -	Gasket, Intake Manifold, Rear
	1 - 1326 836 Gasket, Ignition Distributor	1 - 1326 836	Gasket, Ignition Distributor
	2 - 2465 391 Gasket, Exhaust Pipe Flange	2 - 1618 681	Gasket, Oil Pan
	2 - 2856 029 Gasket, Exhaust Pipe Flange	2 - 3462 386	Gasket, Oil Pan, End
	2 - 2658 685 Gasket, Oil Pan	1 - 2129 013	Gasket, Water Pump Body
	1 - 1855 327 Gasket, Oil Pump Body	2 -	Seal, Crankshaft Bearing Oil
	1 - 1855 328 Seal, Oil Pump Body	1 - 2899 532	Seal, Chain Case Cover Oil
16 - 2121 686	Shield, Valve Stem Oil	1 -	Seal Crankshaft Bearing No. 5 Cap Oil Rt.
2 -	Seal, Crankshaft Bearing Oil	1 -	Seal, Crankshaft Bearing No. 5 Cap Oil Lt.
2 -	Seal, Crankshaft Bearing Retainer	1 -	Sealer, Intake Manifold End Gasket
1 - 2536 481	Assy., Chain Case Cover Oil Seal	1 - 6027 245	"O" Ring, Ignition Distributor Housing
1 - 6027 245	O-Ring, Ignition Distributor Housing	1 - 2875 923	"O" Ring, Ignition Distributor Housing
9-01-5	GASKET SET, ENGINE Part No. 3514 160 Consists of:	16 - 2205 958	Shield, Valve Stem Oil
	1 - 2129 012 Gasket, Chain Case Cover		
	2 - 2863 493 Gasket, Cylinder Head	9-01-5	GASKET SET, ENGINE Part No. 3514 159 Consists of:
	2 - 2463 290 Gasket, Cylinder Head Cover	1 - 2129 012	Gasket, Chain Case Cover
	1 - 50 082 Gasket, Cylinder Water Outlet	2 - 2806 984	Gasket, Cylinder Head
	1 - 2946 105 Gasket, Exhaust Manifold, Left, w/Heat Shield	2 - 2463 290	Gasket, Cylinder Head Cover
	2 - 2856 029 Gasket, Exhaust Pipe Flange	1 - 3491 023	Gasket, Cylinder Head Cover Oil Fill Pipe
	1 - 2843 770 Gasket, Fuel Pump Flange	1 - 50 082	Gasket, Cylinder Water Outlet
	2 -	1 - 2843 770	Gasket, Fuel Pump Flange
	Gasket, Intake Manifold		
	1 -		
	Gasket, Intake Manifold, Front		
	1 -		
	Gasket, Intake Manifold, Rear		
	1 - 1326 836 Gasket, Ignition Distributor		
	2 - 1618 681 Gasket, Oil Pan		
	2 - 3462 386 Gasket, Oil Pan End		
	1 - 2129 013 Gasket, Water Pump Body		
	1 - 6027 245 "O" Ring, Ignition Distributor Housing		

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
9-01-5	Cont'd.	9-01-5	GASKET SET, ENGINE Part No. 3549 596
2 -	Gasket, Intake Manifold		Consists of:
1 -	Gasket, Intake Manifold, Front	2 - 3512 520	Gasket, Cylinder Head
1 -	Gasket, Intake Manifold, Rear	2 - 2951 267	Gasket, Cylinder Head Cover
1 - 1326 836	Gasket, Ignition Distributor	1 - 2129 012	Gasket, Chain Case Cover
2 - 1618 681	Gasket, Oil Pan	1 - 50 082	Gasket, Cylinder Water Outlet
2 -	Gasket, Oil Pan End	2 -	Gasket, Oil Pan
1 - 2129 013	Gasket, Water Pump Body	1 -	Gasket, Oil Pan, Front
2 -	Seal, Crankshaft Bearing Oil	1 -	Gasket, Oil Pan, Rear
1 - 2899 532	Seal, Chain Case Cover Oil	1 - 2129 013	Gasket, Water Pump Body
1 -	Seal, Crankshaft Bearing No. 5 Cap Oil Rt.	1 - 2843 770	Gasket, Fuel Pump Flange
1 -	Seal, Crankshaft Bearing No. 5 Cap Oil Lt.	1 - 1326 836	Gasket, Ignition, Distributor
1 -	Sealer, Intake Manifold End Gasket	2 -	Gasket, Intake Manifold
1 - 6027 245	"O" Ring, Ignition Distributor Housing	1 -	Gasket, Intake Manifold, Front
1 - 2875 923	"O" Ring, Ignition Distributor Housing	1 -	Gasket, Intake Manifold, Rear
16 - 2205 958	Shield	16 - 2205 958	Shield, Valve Stem Oil
9-01-5	GASKET SET, ENGINE Part No. 3420 231	1 -	Seal, Crankshaft Bearing No. 5 Cap Oil, Rt.
	Consists of:	2 -	Seal, Crankshaft Bearing No. 5 Cap Oil, Lt.
2 - 2863 225	Gasket, Cylinder Head	2 -	Seal, Crankshaft Bearing Oil
2 - 2658 646	Gasket, Cylinder Head Cover	1 - 2899 532	Assy., Chain Case Cover Oil Seal
1 - 2899 299	Gasket, Intake Manifold	1 -	Sealer, Intake Manifold End Gasket
1 - 2843 770	Gasket, Fuel Pump Flange	2 - 2856 029	Gasket, Exhaust Pipe Flange
2 - 2658 685	Gasket, Oil Pan		
1 - 50 082	Gasket, Cylinder Water Outlet Elbow	9-10-2	OIL SEAL PACKAGE,
1 - 1737 705	Gasket, Water Pump Body		CRANKSHAFT REAR
2 - 1737 761	Gasket, Water Pump to Cylinder Block		BEARING NO. 5 CAP Part No. 1326 091
1 - 2264 794	Gasket, Chain Case Cover		Consists of:
1 - 1326 836	Gasket, Ignition Distributor	2 -	Oil Seal Bearing
2 - 2465 391	Gasket, Exhaust Pipe Flange	1 -	Oil Seal Bearing Cap, Right
2 - 2856 029	Gasket, Exhaust Pipe Flange	1 -	Oil Seal Bearing Cap, Left
1 - 618 622	Gasket, Oil Pressure Relief Valve Cap	9-11-1	OIL SEAL PACKAGE,
1 - 1855 327	Gasket, Oil Pump Body		CRANKSHAFT REAR
1 - 1855 328	Seal, Oil Pump Body		BEARING Part No. 1326 093
16 - 2121 686	Shield, Valve Stem Oil		Consists of:
2 -	Seal, Crankshaft Bearing Oil	2 -	Oil Seal, Bearing
2 -	Seal, Crankshaft Bearing Retainer	1 -	Oil Seal, Bearing Cap, Right
1 - 2536 481	Assy., Chain Case Cover Oil Seal	1 -	Oil Seal, Bearing Cap, Left
1 - 6027 245	O-Ring, Ignition Dist. Housing		
9-01-5	GASKET SET, ENGINE Part No. 3549 592		OIL SEAL PACKAGE,
	Consists of:		CRANKSHAFT REAR
2 - 2806 984	Gasket, Cylinder Head		BEARING Part No. 2275 365
2 - 2951 267	Gasket, Cylinder Head Cover		Consists of:
1 - 2129 012	Gasket, Chain Case Cover	2 -	Oil Seal, Rear Bearing
1 - 50 082	Gasket, Cylinder Water Outlet	2 -	Oil Seal, Rear Bearing Retainer
2 -	Gasket, Oil Pan		
2 -	Gasket, Oil Pan, End	9-11-1	OIL SEAL PACKAGE,
2 -	Gasket, Oil Pan, End		CRANKSHAFT REAR
1 - 2129 013	Gasket, Water Pump Body		BEARING Part No. 3549 392
1 - 2843 770	Gasket, Fuel Pump Flange		Consists of:
1 - 1326 836	Gasket, Ignition Distributor	2 -	Seal, Crankshaft Bearing Oil
2 -	Gasket, Intake Manifold	1 -	Seal, Crankshaft Bearing Cap No. 5 Oil, Rt.
1 -	Gasket, Intake Manifold, Front	1 -	Seal, Crankshaft Bearing Cap No. 5 Oil, Lt.
1 -	Gasket, Intake Manifold, Rear		
16 - 2205 958	Shield, Valve Stem Oil	9-39-1	PACKAGE, VALVE
1 -	Seal, Crankshaft Bearing No. 5 Cap Oil, Rt.		GRIND GASKET Part No. 3420 242
1 -	Seal, Crankshaft Bearing No. 5 Cap Oil, Lt.		Consists of:
2 -	Seal, Crankshaft Bearing Oil	2 - 2806 984	Gasket, Cylinder Head
1 - 2899 532	Assy., Chaincase Cover Oil Seal	2 - 2463 290	Gasket, Cylinder Head Cover
1 - 6027 245	O-Ring, Ignition Distributor Housing	2 - 2536 514	Gasket, Intake Manifold
1 - 2875 923	O-Ring, Ignition Distributor Housing	1 - 2806 095	Gasket, Intake Manifold Front
1 -	Sealer, Intake Manifold End Gasket	1 - 2806 096	Gasket, Intake Manifold, Rear
1 - 3491 023	Gasket, Cylinder Head Cover Oil Filler Pipe	1 - 2951 285	Gasket, Left, w/Heat Shield, Exhaust Manifold

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
9-39-1	Cont'd.	9-39-1	PACKAGE, VALVE
	1 - 3462 388 Sealer, Intake Manifold End Gasket		GRIND GASKET Part No. 3549 597
	16-2205 958 Shield, Valve Stem Oil		Consists of:
9-39-1	PACKAGE VALVE		2 - 3512 520 Gasket, Cylinder Head
	GRIND GASKET, Part No. 3420 030		2 - Gasket, Cylinder Head Cover
	Consists of:		2 - Gasket, Intake Manifold
	2 - 2806 984 Gasket, Cylinder Head		1 - Gasket, Intake Manifold, Frt.
	2 - 2463 290 Gasket, Cylinder Head Cover		1 - Gasket, Intake Manifold, Rear
	1 - 3491 023 Gasket, Cylinder Head Cover Oil Fill Pipe		16 - 2205 958 Shield, Valve Stem Oil
	2 - 2536 514 Gasket, Intake Manifold		1 - Sealer, Intake Manifold End Gasket
	1 - 2806 095 Gasket, Intake Manifold Front		2 - 2856 029 Gasket, Exhaust Pipe Flange
	1 - 2806 096 Gasket, Intake Manifold Rear	9-39-1	PACKAGE, VALVE
	1 - 3462 388 Sealer, Intake Manifold End Gasket		GRIND GASKET Part No. 3549 595
	16 - 2205 958 Shield, Valve Stem Oil		Consists of:
9-39-1	PACKAGE, VALVE		2 - 3863 493 Gasket, Cylinder Head
	GRIND GASKET Part No. 3420 232		2 - Gasket, Cylinder Head Cover
	Consists of:		2 - Gasket, Intake Manifold
	2 - 2863 225 Gasket Cylinder Head		1 - Gasket, Intake Manifold, Frt.
	2 - 2658 646 Gasket, Cylinder Head Cover		1 - Gasket, Intake Manifold, Rear
	2 - 2465 391 Gasket, Exhaust Pipe Flange		16 - 2205 958 Shield, Valve Stem Oil
	2 - 2856 029 Gasket, Exhaust Pipe Flange		2 - 2856 029 Gasket, Exhaust Pipe Flange
	1 - 2899 299 Gasket, Intake Manifold		1 - Sealer, Intake Manifold End Gasket
	2 - 1737 761 Gasket, Water Pump to Cylinder Block	9-39-1	PACKAGE, VALVE
	16-2121 686 Shield, Valve Stem Oil		GRIND GASKET Part No. 3004 840
9-39-1	PACKAGE, VALVE		Consists of:
	GRIND GASKET Part No. 3514 167		1 - 2843 182 Gasket, Cylinder Head
	Consists of:		1 - 2121 244 Gasket, Cylinder Head Cover
	2 - 3512 260 Gasket, Cylinder Head		1 - 2899 250 Gasket, Cylinder Head Cover
	2 - 2658 646 Gasket, Cylinder Head Cover		1 - 1947 761 Gasket, Cylinder Water Outlet Elbow
	2 - 2465 391 Gasket, Exhaust Pipe Flange		1 - 2465 391 Gasket, Exhaust Pipe Flange
	2 - 2856 029 Gasket, Exhaust Pipe Flange		1 - 1947 762 Gasket, Intake & Exhaust Manifold
	1 - 1851 664 Gasket, Intake Manifold		1 - 2843 279 Gasket, Intake & Exhaust Manifold
	2 - 1737 761 Gasket, Water Pump to Cylinder Block		6 - 2205 959 Shield, Exhaust Valve Stem Oil
	16-2121 686 Shield, Valve Stem Oil		6 - 2205 958 Shield, Intake Valve Stem Oil
9-39-1	PACKAGE, VALVE		6 - 2205 959 Shield, Exhaust Valve Stem Oil
	GRIND GASKET Part No. 3004 726	9-39-1	PACKAGE, VALVE
	Consists of:		GRIND GASKET Part No. 3549 593
	2 - 2863 493 Gasket, Cylinder Head		Consists of:
	2 - 2463 290 Gasket, Cylinder Head Cover		2 - 2806 984 Gasket, Cylinder Head
	2 - Gasket, Intake Manifold		2 - Gasket, Cylinder Head Cover
	1 - Gasket, Intake Manifold, Frt.		2 - Gasket, Intake Manifold
	1 - Gasket, Intake Manifold, Rear		1 - Gasket, Intake Manifold, Front
	1 - 2946 105 Assy., Exhaust Manifold Gasket Lt & Heat Shield		1 - Gasket, Intake Manifold, Rear
	16 - 2205 958 Shield, Valve Stem Oil		16 - 2205 958 Shield, Valve Stem Oil
	2 - 2856 029 Gasket, Exhaust Pipe Flange		1 - Sealer, Intake Manifold End Gasket
	1 - Sealer, Intake Manifold End Gasket		1 - 3491 023 Gasket, Cylinder Head Cover Oil Filler Pipe
9-39-1	PACKAGE, VALVE	9-39-1	PACKAGE, VALVE
	GRIND GASKET Part No. 3514 167		GRIND GASKET Part No. 3004 726
	Consists of:		Consists of:
	1 - 1851 664 Gasket, Intake Manifold		2 - 2863 493 Gasket, Cylinder Head
	2 - 3512 260 Gasket, Cylinder Head		2 - 2463 290 Gasket, Cylinder Head Cover
	2 - 2658 646 Gasket, Cylinder Head Cover		2 - Gasket, Intake Manifold
	2 - 1737 761 Gasket, Water Pump to Cyl. Block		1 - Gasket, Intake Manifold, Frt.
	2 - 2465 391 Gasket, Exhaust Pipe Flange		1 - Gasket, Intake Manifold, Rear
	2 - 2856 029 Gasket, Exhaust Pipe Flange		1 - 2946 105 Assy., Exhaust Manifold Gasket Lt & Heat Shield
	16 - 2121 686 Shield, Valve Stem Oil		16 - 2205 958 Shield, Valve Stem Oil
			2 - 2856 029 Gasket, Exhaust Pipe Flange
			1 - Sealer, Intake Manifold End Gasket

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
9-39-1	PACKAGE, VALVE GRIND GASKETPart No. 3004 616 Consists of: 2 - 1821 170 Gasket, Air Cleaner to Carburetor 2 - 2468 010 Gasket, Cylinder Head 2 - 2780 566 Gasket, Cylinder Head Cover 2 - 2780 629 Gasket, Carburetor Flange 2 - 2780 534 Gasket, Exhaust Manifold 1 - 2780 614 Gasket, Intake Manifold Exhaust Pipe 2 - Gasket, Intake Manifold 2 - Gasket, Intake Manifold End 1 - 2780 680 Gasket, Intake Manifold Plug 2 - 2780 614 Gasket, Heat Tube 8 - 2899 548 Shield, Exhaust Valve Stem Oil 8 - 2899 547 Shield, Intake Valve Stem Oil	9-58-1	HEAT CONTROL VALVE PACKAGE, MANIFOLD Part No. 3420 047 Consists of: 2 - Bushing 1 - Counterweight, Valve 1 - Plate 2 - Seal, Valve Shaft 1 - Shaft 1 - 3462 514 Spring, Valve Shaft Damper 1 - Stop, Valve 1 - Thermostat
9-41-1	PACKAGE, TAPPET CHAMBER SILENCERPart No. 1879 747 Consists of: 1 - Silencer, Front 1 - Silencer, Rear	9-58-1	PACKAGE, MANIFOLD HEAT CONTROL VALVEPart No. 2808 393 Consists of: 1 - Shaft 1 - Plate 2 - Bushing (Option) 2 - Bushing (Option) 1 - 148 148 Retainer, Shaft 1 - 2843 685 Thermostat 2 - 2806 387 Spring, Valve 1 - 2780 615 Assy., Counterweight 1 - 9418 087 Bolt, Counterweight 1 - Nut, Counterweight Bolt 1 - 2806 151 Lock, Counterweight
9-50-1	PACKAGE, INTAKE MANIFOLD GASKETPart No. 3420 027 Consists of: 2 - Gasket, Intake Manifold 1 - Gasket, Intake Manifold, Front 1 - Gasket, Intake Manifold, Rear 1 - Sealer, Intake Manifold End Gasket	9-58-1	PACKAGE, MANIFOLD HEAT CONTROL VALVEPart No. 3420 046 Consists of: 1 - Shaft 1 - Plate 2 - Bushing 1 - Counterweight, Valve (Optional) 1 - Counterweight, Valve (Optional) 1 - Stop Valve 1 - Thermostat 2 - Seal, Valve Shaft 1 - 3462 514 Spring, Valve Shaft Damper
9-50-1	PACKAGE, INTAKE MANIFOLD GASKETPart No. 2808 689 Consists of: 2 - Gasket, Intake Manifold 1 - Gasket, Intake Manifold, Front 1 - Gasket, Intake Manifold, Rear 1 - Sealer, Intake Manifold End Gasket	9-58-1	PACKAGE, MANIFOLD HEAT CONTROL VALVEPart No. 3549 398 Consists of: 1 - Plate, Valve 1 - Shaft, Valve 1 - 2946 083 Stop, Valve 1 - Counterweight Valve (Optional) 1 - Counterweight Valve (Optional) 1 - Thermostat, Valve 1 - 2951 626 Spring, Valve Shaft Damper 2 - Bushing, Valve Shaft 2 - Seal, Valve Shaft
9-50-1	PACKAGE, INTAKE MANIFOLD GASKETPart No. 3514 187 Consists of: 2 - Gasket, Intake Manifold 1 - Gasket, Intake Manifold, Front 1 - Gasket, Intake Manifold, Rear 1 - Sealer, Intake Manifold End Gasket	9-58-1	PACKAGE, MANIFOLD HEAT CONTROL VALVEPart No. 3420 047 Consists of: 1 - Shaft 1 - Plate 2 - Bushing 1 - Counterweight, Valve (Optional) 1 - Counterweight, Valve (Optional) 1 - 2946 107 Stop Valve 1 - Thermostat 2 - Seal, Valve Shaft 1 - 2951 870 Spring, Valve Shaft Damper
9-50-1	PACKAGE, INTAKE MANIFOLD GASKETPart No. 2808 306 Consists of: 2 - Gasket, Intake Manifold End 2 - Gasket, Intake Manifold		
9-50-1	PACKAGE, INTAKE MANIFOLD GASKETPart No. 3514 186 Consists of: 4 - Gasket, Intake Manifold 1 - Sealer, Intake Manifold End Gasket		
9-50-1	GASKET SET, MANIFOLDPart No. 3004 663 Consists of: 1 - Gasket, Intake and Exhaust Manifold 1 - 2843 279 Gasket, Intake to Exhaust		

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
9-58-1	PACKAGE, MANIFOLD HEAT CONTROL VALVE.....Part No. 3004 709 Consists of: 1 - Shaft 1 - Plate 2 - Bushing 1 - Counterweight, Valve (Opt. 3418 410) 1 - Thermostat 1 - 2951 626 Spring, Valve Shaft Damper 1 - 2946 083 Stop, Valve 2 - Seal, Valve Shaft 1 - Counterweight, Valve (Opt. 3418 409)		
9-58-1	PACKAGE, MANIFOLD HEAT CONTROL VALVE.....Part No. 3004 574 Consists of: 1 - Plate, Valve 1 - Shaft, Valve 1 - 2843 957 Plug, Valve Shaft Hole 1 - 2946 083 Stop, Valve 1 - Counterweight, Valve (Opt. 2951 007) 1 - Thermostat, Valve 1 - 2863 388 Spring, Valve Shaft Damper 1 - Bushing, Valve Shaft Outer (Optional) 1 - Bushing, Valve Shaft Outer (Optional) 1 - Bushing, Valve Shaft Inner 1 - Seal, Valve 1 - Counterweight, Valve (Optional 2863 393)		
9-58-1	PACKAGE, MANIFOLD HEAT CONTROL VALVE.....Part No. 3420 045 Consists of: 1 - Shaft 1 - Plate 2 - Bushing 1 - Counterweight, Valve (Optional) 1 - Counterweight, Valve (Optional) 1 - 2946 083 Stop Valve 1 - Thermostat 2 - Seal, Valve Shaft 1 - 3462 514 Spring, Valve Shaft Damper		
10-07-2	GASKET AND SEAL PACKAGE, OIL PUMP Part No. 2084 355 Consists of: 3 - Gasket 1 - Seal		
10-07-3	SHAFT and ROTOR PACKAGE, OIL PUMP DRIVE Part No. 2084 354 2084 415 Consists of: 1 - Rotor, Outer 1 - Shaft, Drive		
10-07-6	OIL PUMP PACKAGE Part No. 2808 507 Consists of: 1 - 2121 404 Gasket 1 - Pump		
			OIL PUMP PACKAGE Part No. 2808 509 2808 510 Consists of: 1 - Gasket 1 - Pump
			10-24-1 GASKET PACKAGE, OIL PAN Part No. 3514 157 Consists of: 2 - Gasket, Oil Pan Side 2 - Gasket, Oil Pan End
			GASKET PACKAGE, OIL PAN Part No. 2240 647 Consists of: 1 - Gasket, Oil Pan, Rt. 1 - Gasket, Oil Pan, Lt. 1 - Gasket, Oil Pan, Front 1 - Gasket, Oil Pan, Rear
			10-24-1 GASKET PACKAGE, OIL PAN Part No. 3549 388 Consists of: 2 - Gasket, Oil Pan 1 - Gasket, Oil Pan, Front 1 - Gasket, Oil Pan, Rear
			10-26-8 CARTRIDGE, OIL FILTER Part No. 2532 752 Consists of: 1 - Cartridge 1 - 2532 753 Gasket, Filter Body 1 - 2532 754 Gasket, Filter Cover
			13-68-5 GUARD PACKAGE, BUMPER, FRONT Part No. 2809 825 Consists of: 2 - 2533 342 Cushion 2 - 2768 588 Guard 4 - 180 122 Bolt 4 - 120 382 L/Washer 6 - 6023 271 Nut w/Washer 4 - 6025 269 P/Washer
			13-68-5 GUARD PACKAGE, BUMPER, FRONT Part No. 3481 803 Consists of: 1 - 2962 291 Brace 2 - 180 124 Bolt 2 - 2962 290 Cushion 1 - 2962 288-9 Guard 6 - 6023 201 Nut w/Washer 2 - 118 615 Nut w/Washer 4 - 6025 375 Screw w/Washer 2 - 6025 269 P/Washer 2 - 120 382 L/Washer
			GUARD PACKAGE, BUMPER, FRONT Part No. 3481 805 Consists of: 2 - 2962 342 Cushion 1 - 2962 416-7 Guard 6 - 6023 201 Nut w/Washer 2 - 180 122 Screw w/Washer

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
13-68-5	GUARD PACKAGE, BUMPER, FRONTPart No. 3481 807 Consists of: 2 - 2962 342 Cushion 1 - 2962 340-1 Guard 6 - 6023 201 Nut w/Washer 2 - 180 121 Screw w/Washer GUARD PACKAGE, BUMPER, FRONTPart No. 3481 811 Consists of: 2 - 2962 527 Cushion 2 - 2962 538 Guard 6 - 6023 201 Nut w/Washer 2 - 6022 233 Screw w/Washer 2 - 6022 248 Screw w/Washer	13-68-5	GUARD PACKAGE, BUMPER, FRONTPart No. 3620 328 Consists of: 2 - 3464 162 Cushion 2 - 3464 161 Guard 4 - 180 078 Bolt 6 - 6028 800 Nut 4 - 120 387 P/Washer 4 - 120 214 L/Washer GUARD PACKAGE, BUMPER, FRONTPart No. 3620 331 Consists of: 1 - 3464 343 Brace 2 - 3464 352 Cushion 2 - 3464 351 Guard 2 - 120 387 P/Washer 2 - 120 214 L/Washer 4 - 131 100 L/Washer 2 - 120 376 Nut 4 - 118 615 Nut 6 - 6023 201 Nut w/Washer 4 - 6025 375 Screw
13-68-5	GUARD PACKAGE, BUMPER, FRONTPart No. 3481 813 Consists of: 2 - 2962 527 Cushion 1 - 2962 608-9 Guard 4 - 6023 201 Nut w/Washer 2 - 120 376 Nut w/Washer 2 - 6022 233 Screw w/Washer GUARD PACKAGE, BUMPER, FRONTPart No. 3481 815 Consists of: 1 - 2962 672-3 Guard 8 - 6023 204 Nut w/Washer	13-68-5	GUARD, BUMPER PACKAGE, FRONTPart No. 3620 332 Consists of: 1 - 2962 292 Brace 2 - 3464 358 Cushion 2 - 3464 356 Guard 6 - 6023 201 Nut 4 - 118 615 Nut 2 - 120 376 Nut 4 - 6025 375 Screw 4 - 131 100 L/Washer 2 - 120 214 L/Washer GUARD PACKAGE, BUMPER, FRONTPart No. 3620 337 Consists of: 2 - 3464 710 Guard 10 - 6028 800 Nut
13-68-5	GUARD PACKAGE, BUMPER, FRONTPart No. 3481 817 Consists of: 2 - 2962 772 Cushion 1 - 2962 770-1 Guard 4 - 180 151 Bolt 6 - 6023 201 Nut w/Washer 4 - 131 100 L/Washer 4 - 120 395 P/Washer	13-68-5	GUARD PACKAGE, BUMPER, REARPart No. 2809 832 Consists of: 2 - 2533 342 Cushion 2 - 2768 616 Guard 2 - 180 122 Bolt 2 - 120 382 L/Washer 6 - 6023 271 Nut w/Washer 2 - 6025 269 P/Washer
13-68-5	GUARD PACKAGE, BUMPER, FRONTPart No. 3420 326 Consists of: 1 - 2962 292 Brace 2 - 180 124 Bolt 2 - 3464 058 Cushion 1 - 3464 056-7 Guard 2 - 118 615 Nut 6 - 6023 201 Nut w/Washer 2 - 120 382 L/Washer 2 - 131 100 L/Washer 2 - 6025 269 P/Washer 4 - 6025 375 Screw w/Washer GUARD PACKAGE, BUMPER, FRONTPart No. 3620 327 Consists of: 1 - 3464 126 Guard 4 - 6028 880 Nut	13-68-5	GUARD PACKAGE, BUMPER, REARPart No. 3481 804 Consists of: 2 - 2962 342 Cushion 1 - 2962 436-7 Guard 6 - 6023 201 Nut w/Washer 2 - 180 122 Screw w/Washer

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
13-68-5	Cont'd. GUARD PACKAGE, BUMPER, REAR.....Part No. 3481 810 Consists of: 2 - 2962 481 Adapter 2 - 2931 150 Cushion 2 - 2962 483 Guard 2 - 579 719 Bolt 2 - 120 382 L/Washer 6 - 6023 204 Nut w/Washer	2 - 6025 269	P/Washer
		4 - 120 382	L/Washer
		6 - 6028 800	Nut
		2 - 6025 213	U-Nut
		4 - 152 277	U-Nut
		4 - 180 079	Screw
13-68-5	GUARD PACKAGE, BUMPER, REAR.....Part No. 3481 812 Consists of: 2 - 2962 560 Cushion 1 - 2962 564-5 Guard 6 - 6023 201 Nut w/Washer 4 - 180 078 Screw w/Washer	13-68-5	GUARD PACKAGE, BUMPER, REAR.....Part No. #3620 334 Consists of: 1 - 3464 462-3 Brace 2 - 3464 414 Cushion 2 - 3464 412 Guard 4 - 180 124 Bolt 4 - 120 382 L/Washer 6 - 6023 201 Nut w/Washer 2 - 6025 269 P/Washer 4 - 152 277 U-Nut 2 - 6025 513 U-Nut 4 - 180 079 Screw
	GUARD PACKAGE, BUMPER, REAR.....Part No. 3481 816 Consists of: 1 - 2962 708-9 Guard 6 - 6023 204 Nut w/Washer		GUARD PACKAGE, BUMPER, REAR.....Part No. #3620 335 Consists of: 1 - 3464 564-5 Cushion 1 - 3454 562-3 Guard 4 - 181 113 Bolt 4 - 6025 269 P/Washer 4 - 120 382 L/Washer 6 - 6023 201 Nut w/Washer
13-68-5	GUARD PACKAGE, BUMPER, REAR.....Part No. 3481 818 Consists of: 2 - 2962 772 Cushion 2 - 2962 819 Guard 4 - 180 124 Bolt 6 - 6023 201 Nut w/Washer 4 - 6025 269 P/Washer 4 - 120 382 L/Washer	13-68-5	GUARD PACKAGE, BUMPER, REAR.....Part No. #3620 336 Consists of: 2 - 2962 772 Cushion 2 - 3464 919 Guard 2 - 3464 924 Bracket 2 - 180 124 Bolt 4 - 6025 269 P/Washer 4 - 120 382 L/Washer 2 - 118 615 Nut 6 - 6023 201 Nut w/Washer
	GUARD PACKAGE, BUMPER, REAR.....Part No. 3481 819 Consists of: 1 - 2962 902-3 Adapter 2 - 2962 898 Cushion 1 - 2962 896-7 Guard 2 - 180 132 Bolt 6 - 6023 201 Nut w/Washer 2 - 118 615 Nut 4 - 6025 269 P/Washer 4 - 120 382 L/Washer		GUARD PACKAGE, BUMPER, REAR.....Part No. #3620 338 Consists of: 1 - 3464 694 Guard 12 - 6028 800 Nut
13-68-5	GUARD PACKAGE, BUMPER, REAR.....Part No. #3620 329 Consists of: 1 - 3464 218 Guard 11 - 6028 800 Nut	13-72-4	BAR and BASE PACKAGE, BUMPER JACK.....Part No. 2808 641 2932 519 3419 940
	GUARD PACKAGE, BUMPER, REAR.....Part No. #3620 330 Consists of: 1 - 3464 230-1 Guard 16 - 6023 201 Nut w/Washer		Consists of: 1 - Bar 1 - Base
	GUARD PACKAGE, BUMPER, REAR.....Part No. #3620 333 Consists of: 1 - 3464 462-3 Brace 2 - 3464 440 Cushion 2 - 3464 438 Guard 4 - 180 124 Bolt	17-15-25	CLIP and CLAMP PACKAGE, REAR SPRING ALIGNMENT INSULATOR.....Part No. 2808 399 Consists of: 1 - Clamp 1 - Clip 1 - 1829 929 Insulator

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
17-16-1	SHACKLE and BUSHING PACKAGE, REAR SPRING Part No. 3004 822		
	Consists of:		
	4 - 1940 725 Bushing, Shackle		
	2 - 118 615 Nut, Shackle Pin		
	1 - Plate, Shackle		
	1 - Shackle w/Pin		
	SHACKLE and BUSHING PACKAGE, REAR SPRING Part No. 3514 980		
	Consists of:		
	4 - 2403 154 Bushing, Shackle		
	1 - Insert, Shackle Bushing		
	2 - 271 502 Nut, Shackle Bolt		
	1 - Plate, Shackle-Loose		
	1 - Shackle, w/Pin		
	SHACKLE and BUSHING PACKAGE, REAR SPRING Part No. 3004 823		
			3420 118
	Consists of:		
	4 - 1400 269 Bushing, Shackle		
	2 - 271 502 Nut, Shackle Pin		
	1 - Plate, Shackle		
	1 - Shackle w/Pin		
	SHACKLE and BUSHING PACKAGE, REAR SPRING Part No. 3004 824		
			# 3514 978
			# 3514 979
	Consists of:		
	4 - 1400 269 Bushing, Shackle		
	1 - Insert, Shackle Bushing		
	2 - 271 502 Nut, Shackle Pin		
	1 - Plate, Shackle		
	1 - Shackle, w/Pin		
17-23-3	ABSORBER and BUSHING PACKAGE, FRONT SHOCK Part No. 2525 460		
			2525 461
			2808 378
			2808 379
			3004 960
			3004 961
			3004 777
			3004 778
	Consists of:		
	1 - Absorber		
	1 - 2206 923 Bushing		
	ABSORBER and BUSHING PACKAGE, FRONT SHOCK Part No. 3004 958		
			3004 959
	Consists of:		
	1 - Absorber		
	1 - 2206 923 Bushing		
	1 - 2206 925 Washer		
19-01-3	OVERHAUL PACKAGE, STEERING Part No. 2525 481		
	Consists of:		
	2 - 2126 760 Bearing, Steering Gear Shaft		
	2 - 2072 060 Bearing, Steering Gear Worm Thrust		
	2 - 2127 097 Cup, Steering Gear Worm Thrust Bearing		
	1 - 2267 468 Gasket, Steering Gear Shaft Cover		
	1 - Seal, Steering Gear Shaft Oil		
	1 - 2267 156 Seal, Steering Gear Worm Shaft		
	1 - Shim, Steering Gear Shaft Adjusting Screw		
	1 - Shim, Steering Gear Shaft Adjusting Screw		
	1 - Shim, Steering Gear Shaft Adjusting Screw		
	OVERHAUL PACKAGE, STEERING Part No. 2808 419		
	Consists of:		
	2 - 2072 060 Bearing, Strg. Worm Thrust		
	2 - 2267 128 Bushing, Strg. Gear Shaft		
	2 - 2127 097 Cup, Strg. Gear Worm Thrust Bearing		
	1 - 2127 108 Gasket, Strg. Gear Shaft Cover		
	1 - 2127 154 Seal, Strg. Gear Shaft Oil		
	1 - 2267 156 Seal, Strg. Gear Worm Shaft		
	1 - Washer, Strg. Gear Shaft Adjusting Screw		
	1 - Washer, Strg. Gear Shaft Adjusting Screw		
	1 - Washer, Strg. Gear Shaft Adjusting Screw		
	OVERHAUL PACKAGE, STEERING Part No. 2808 420		
	Consists of:		
	3 - 2126 890 Bearing, Strg. Gear Shaft		
	2 - 2072 060 Bearing, Strg. Gear Worm Thrust		
	2 - 2127 097 Cup, Strg. Gear Worm Thrust Bearing		
	1 - 2127 108 Gasket, Strg. Gear Shaft Cover		
	1 - 2127 154 Seal, Strg. Gear Shaft Oil		
	1 - 2267 156 Seal, Strg. Gear Worm Shaft		
	1 - Washer, Strg. Gear Shaft Adjusting Screw		
	1 - Washer, Strg. Gear Shaft Adjusting Screw		
	1 - Washer, Strg. Gear Shaft Adjusting Screw		
19-01-4	"O" RING and SEAL PACKAGE, POWER STEERING GEAR Part No. 3004 996		
	Consists of:		
	1 - 1733 724 Gasket, Valve Housing Plug		
	1 - 1733 602 "O" Ring, Column Support		
	2 - 1733 562 "O" Ring, Cylinder Head		
	1 - 1486 205 "O" Ring, Cylinder Head Ferrule		
	1 - 1316 849 "O" Ring, Housing (up to jobs)		
	1 - 1823 150 "O" Ring, Housing (after jobs)		
	2 - 1556 385 "O" Ring, Housing Port		
	1 - 1536 268 "O" Ring, Pressure Control Valve		
	1 - 1822 149 "O" Ring, Reaction, Lower		
	1 - 2537 716 "O" Ring, Shaft Cover		
	1 - 1733 615 "O" Ring, Shaft Cover		
	1 - 1733 612 "O" Ring, Valve Housing		
	1 - 1822 151 Seal, Reaction, Upper		

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
19-01-4	Cont'd.		
1 - 1822 203	Seal, Shaft Adjusting Screw		ARM PACKAGE,
1 -	Seal, Shaft Dust		STEERING LINK GEAR Part No. 3004 810
1 - 2537 153	Seal, Shaft Oil		Consists of:
1 - 1822 324	Seal, Worm Shaft, Inner		1 - 2835 840 Arm, Strg. Link Gear
			1 - 128 005 Nut, Strg. Link Gear Arm
	"O" RING and SEAL		ARM PACKAGE,
	PACKAGE, POWER		STEERING LINK GEAR Part No. 3004 811
	STEERING GEAR Part No. 3004 997		Consists of:
	Consists of:		1 - 2835 835 Arm, Strg. Link Gear
1 - 1733 724	Gasket, Valve Housing Plug		1 - 9425 132 Nut, Strg. Link Gear Arm
1 - 1733 602	"O" Ring, Column Support		ARM PACKAGE,
2 - 1733 562	"O" Ring, Cylinder Head		STEERING LINK GEAR Part No. 3004 812
1 - 1486 205	"O" Ring, Cylinder Head Ferrule		Consists of:
1 - 1316 849	"O" Ring, Housing (up to jobs)		1 - 2835 841 Arm, Strg. Link Gear
1 - 1823 150	"O" Ring, Housing (after jobs)		1 - 128 025 Nut, Strg. Link Gear Arm
2 - 1556 385	"O" Ring, Housing Part		ARM PACKAGE,
1 - 1536 268	"O" Ring, Pressure Control Valve		STEERING LINK GEAR Part No. 3004 813
1 - 1823 091	"O" Ring, Reaction, Lower		Consists of:
1 - 1733 615	"O" Ring, Shaft Cover		1 - 2835 854 Arm Strg. Link Gear
1 - 2537 716	"O" Ring, Shaft Cover		1 - 9425 132 Nut, Strg. Link Gear Arm
1 - 1733 612	"O" Ring, Valve Housing		19-27-45 BOLT PACKAGE,
1 - 1733 593	Seal, Reaction, Upper		STEERING LINK IDLER
1 - 1822 203	Seal, Shaft Adjusting Screw		ARM BRACKET END Part No. 3004 804
1 - 2267 350	Seal, Shaft Dust		Consists of:
1 - 2537 153	Seal, Shaft Oil		1 - 6027 776 Bolt, Strg. Link Idler Arm Bracket End
1 - 1822 324	Seal, Worm Shaft, Inner		1 - 128 025 Nut, Strg. Link Idler Arm Bracket Bolt
	"O" RING and SEAL		BOLT PACKAGE,
	PACKAGE, POWER		STEERING LINK IDLER
	STEERING GEAR Part No. 3004 998		ARM BRACKET END Part No. 3004 805
	Consists of:		Consists of:
1 - 1733 724	Gasket, Valve Housing Plug		1 - 6027 777 Bolt, Strg. Link Idler Arm Bracket End
1 - 1733 602	"O" Ring, Column Support		1 - 128 025 Nut, Strg. Link Idler Arm Bracket Bolt
2 - 1733 562	"O" Ring, Cylinder Head		BOLT PACKAGE,
1 - 1486 205	"O" Ring, Cylinder Head Ferrule		STEERING LINK IDLER
1 - 1823 150	"O" Ring, Housing		ARM BRACKET END Part No. 3004 805
2 - 1556 385	"O" Ring, Housing Part		Consists of:
1 - 1536 268	"O" Ring, Pressure Control Valve		1 - 6027 777 Bolt, Strg. Link Idler Arm Bracket End
1 - 1822 149	"O" Ring, Reaction, Lower		1 - 128 025 Nut, Strg. Link Idler Arm Bracket Bolt
1 - 1733 615	"O" Ring, Shaft Cover		19-48-7 SMALL PARTS PACKAGE,
1 - 2537 716	"O" Ring, Shaft Cover		GEARSHIFT CONTROL Part No. 2808 426
1 - 1733 612	"O" Ring, Valve Housing		Consists of:
1 - 1822 151	Seal, Reaction, Upper		2 - 2781 445 Bushing, Gearshift Control Rod Strg.
1 - 1822 203	Seal, Shaft Adjusting Screw		Column Lever
1 - 2267 351	Seal, Shaft Dust		1 - 2208 159 Bushing, Gearshift Control Torque
1 - 2537 154	Seal, Shaft Oil		Shaft Bracket
1 - 1822 324	Seal, Worm Sleeve		2 - 1137 669 Clip, Gearshift Control Rod Swivel
19-19-1 SEAL PACKAGE, STEERING			2 - 1137 669 Clip, Gearshift Control Rod
GEAR SHAFT COVER Part No. 3004 995			2 - 2781 444 Grommet, Gearshift Control Rod Strg.
Consists of:			Column Lever
1 - 2537 716	"O" Ring, Cover		1 - 2208 158 Grommet, Gearshift Control Torque
1 - 1822 203	Seal, Shaft Adjusting Screw		Shaft Bracket
19-19-40 WASHER PACKAGE,			1 - 1671 569 Retainer, Gearshift Control Torque
STEERING GEAR SHAFT			Shaft
ADJUSTING SCREW Part No. 2279 961			2 - 2208 172 Spacer, Gearshift Control Torque Shaft
Consists of:			1 - 631 217 Washer, Gearshift Control Rod
3 -	Washer		4 - 631 217 Washer, Gearshift Control Rod Swivel
19-27-2 ARM PACKAGE,			2 - 6023 085 Washer, Gearshift Control Torque
STEERING LINK GEAR Part No. 3004 807			Shaft Plain
Consists of:			1 - 6023 086 Washer, Gearshift Control Torque
1 - 2835 827	Arm, Strg. Link Gear		Shaft Spring
1 - 9425 132	Nut, Strg. Link Gear Arm		SMALL PARTS PACKAGE,
			GEARSHIFT CONTROL Part No. 2808 425

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
19-48-7 Cont'd.	<p>Consists of:</p> <ul style="list-style-type: none"> 2 - 2781 445 Bushing, Gearshift Control Rod Strg. Column Lever 2 - 1137 669 Clip, Gearshift Control Rod Swivel 2 - 1137 669 Clip, Gearshift Control Rod 2 - 2781 444 Grommet, Gearshift Control Rod Strg. Column Lever 2 - 631 217 Washer, Gearshift Control Rod Swivel 2 - 1618 918 Washer, Gearshift Control Rod Swivel 6 - 631 217 Washer, Gearshift Control Rod 	<p>Consists of:</p> <ul style="list-style-type: none"> 1 - 2537 869 "O" Ring, Power Steering Pump Reservoir Flange 1 - 2891 131 Pump, Power Steering 1 - 2127 486 Seal, Power Steering Pump Oil Reservoir Mounting 	
SMALL PARTS PACKAGE, GEARSHIFT CONTROL Part No. 2808 424	<p>Consists of:</p> <ul style="list-style-type: none"> 2 - 2781 445 Bushing, Gearshift Control Rod Strg. Column Lever 2 - 1137 669 Clip, Gearshift Control Rod Swivel 2 - 1137 669 Clip, Gearshift Control Rod 2 - 2781 444 Grommet, Gearshift Control Rod Strg. Column Lever 4 - 631 217 Washer, Gearshift Control Rod Swivel 8 - 631 217 Washer, Gearshift Control Rod 	19-54-54 PACKAGE, POWER STRG. PUMP ROTATING GROUP Part No. 2537 995	
SMALL PARTS PACKAGE, GEARSHIFT CONTROL Part No. 2808 427	<p>Consists of:</p> <ul style="list-style-type: none"> 1 - 2208 159 Bushing, Gearshift Control Torque Shaft Bracket 2 - 1137 669 Clip, Gearshift Control Rod Swivel 1 - 2208 158 Grommet, Gearshift Control Torque Shaft Bracket 1 - 1671 569 Retainer, Gearshift Control Torque Shaft 2 - 2208 172 Spacer, Gearshift Control Torque Shaft 1 - 1618 918 Washer, Gearshift Control Rod 2 - 631 217 Washer, Gearshift Control Rod 2 - 631 217 Washer, Gearshift Control Rod Swivel 1 - 1618 918 Washer, Gearshift Control Rod Swivel 2 - 6023 085 Washer, Gearshift Control Torque Shaft, Plain 1 - 6023 086 Washer, Gearshift Control Torque Shaft Spring 	<p>Consists of:</p> <ul style="list-style-type: none"> 1 - Cam 1 - 2537 951 Plate, Front 1 - 2537 627 Plate, Pressure 2 - 1738 681 Ring, Snap 12 - 2537 099 Roller 1 - Rotor 	
19-54-2 PUMP PACKAGE, POWER STEERING Part No. 3004 799	<p>Consists of:</p> <ul style="list-style-type: none"> 1 - 2537 869 "O" Ring, Power Steering Pump Reservoir Flange 1 - 2891 129 Pump, Power Steering 1 - 2127 486 Seal, Power Steering Pump Oil Reservoir Mounting <p>PUMP PACKAGE, POWER STEERING Part No. 3004 800</p> <p>Consists of:</p> <ul style="list-style-type: none"> 1 - 2537 869 "O" Ring, Power Steering Pump Reservoir Flange 1 - 2891 130 Pump, Power Steering 1 - 2127 486 Seal, Power Steering Pump Oil Reservoir Mounting 	19-58-7 HOSE PACKAGE, POWER STRG. PUMP PRESSURE Part No. 3004 833	
PUMP PACKAGE, POWER STEERING Part No. 3004 801		<p>Consists of:</p> <ul style="list-style-type: none"> 1 - 2891 082 Hose, Pressure 1 - 1859 445 "O" Ring, Pressure Hose Pump Fitting 1 - 2891 133 Sleeve, Pressure Hose 	
		HOSE PACKAGE, POWER STRG., PUMP PRESSURE Part No. 3004 834	
		<p>Consists of:</p> <ul style="list-style-type: none"> 1 - 2891 084 Hose, Pressure 1 - 1859 445 "O" Ring, Pressure Hose Pump Fitting 1 - 2891 133 Sleeve, Pressure Hose 	
		HOSE PACKAGE, POWER STRG. PUMP PRESSURE Part No. 3004 835	
		<p>Consists of:</p> <ul style="list-style-type: none"> 1 - 2891 079 Hose, Pressure 1 - 1859 445 "O" Ring, Pressure Hose Pump Fitting 	
		HOSE PACKAGE, POWER STRG. PUMP PRESSURE Part No. 3420 193	
		<p>Consists of:</p> <ul style="list-style-type: none"> 1 - 2891 232 Hose, Pressure 1 - 1859 445 "O" Ring, Pressure Hose Pump Fitting 	
		HOSE PACKAGE, POWER STRG. PUMP PRESSURE Part No. 3420 194	
		<p>Consists of:</p> <ul style="list-style-type: none"> 1 - 2891 214 Hose, Pressure 1 - 1859 445 "O" Ring, Pressure Hose Pump Fitting 	
		HOSE PACKAGE, POWER STRG. PUMP PRESSURE Part No. 3004 836	
		<p>Consists of:</p> <ul style="list-style-type: none"> 1 - 2891 083 Hose, Pressure 1 - 1859 445 "O" Ring, Pressure Hose Pump Fitting 	
		HOSE PACKAGE, PUMP STRG. PUMP PRESSURE Part No. 3004 887	
		<p>Consists of:</p> <ul style="list-style-type: none"> 1 - Hose Pressure 1 - 1859 445 "O" Ring, Pressure Hose Pump Fitting 	
		21-01-03 GASKET and SEAL PACKAGE, MANUAL TRANSMISSION Part No. 3420 066	

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
21-01-3 Cont'd.		1 - 1941 831	Ring, Accumulator Piston Seal, Small
1 - 2538 695	Seal, Rr. Clutch Piston, Outer	1 - 2124 255	Ring, Accumulator Piston Seal, Large
2 - 1942 109	Ring, Governor Support Seal	1 - 2538 571	Ring, Speedometer Drive Pinion Retainer Seal
1 - 2466 954	Gasket, Extension	1 - 6022 816	Ring, Output Shaft Snap
1 - 2466 548	Seal, Throttle Lever Shaft	1 - 6024 311	Ring, Output Shaft Snap
1 - 2205 299	Gasket, Oil Pan	1 - 6024 312	Ring, Output Shaft Snap
1 - 2538 669	Washer, Output Shaft Thrust	1 - 6025 752	Ring, Speedometer Drive Pinion Retainer
1 - 2538 670	Washer, Output Shaft Thrust	1 - 2400 300	Seal, Yoke
1 - 2538 671	Washer, Output Shaft Thrust	1 - 2801 398	Gasket, Output Shaft Brg. Cover
1 - 6026 291	Snap Ring, Output Shaft	GASKET and SEAL PACKAGE, AUTOMATIC TRANSMIS- SION Part No. 3420 092	
1 - 1672 287	Ring, Kickdown Servo Piston Seal, Small	Consists of:	
1 - 1636 470	Ring, Kickdown Servo Guide	1 - 2466 842	Seal, Manual Valve Shaft
1 - 1636 470	Ring, Kickdown Servo Piston Seal, Large	1 - 2124 705	Seal, Torque Conv. Impeller Hub
1 - 1942 486	Ring, Kickdown Servo Snap	1 - 2204 709	Seal, Oil Pump Hsg.
1 - 1941 831	Ring, Accumulator Piston Seal, Small	1 - 1942 390	Gasket, Torque Conv. Reaction Shaft Support
1 - 2124 255	Ring, Accumulator Piston	1 - 1942 396	Seal, Frt. Clutch Piston, Inner
1 - 2464 462	Seal, Reverse Servo Piston	1 - 1942 397	Seal, Frt. Clutch Piston, Outer
1 - 6027 153	Ring, Reverse Servo Plug	1 - 2538 510	Seal, Rr. Clutch Piston, Inner
1 - 2464 464	Ring, Reverse Servo Piston Spring Retainer Snap	1 - 2538 695	Seal, Rr. Clutch Piston, Outer
2 - 2204 369	Washer, Frt. Clutch Thrust	2 - 1556 385	Seal, Reverse Band Lever Shaft
2 - 2538 515	Washer, Sun Gear Driving Shell Thrust	1 - 2464 462	Seal, Reverse Servo Piston
2 - 3410 540	Plate, Sun Gear Driving Shell Thrust	1 - 2400 163	Seal, Yoke
1 - 6026 289	Snap Ring, Output Shaft	1 - 2466 954	Gasket, Extension
1 - 6026 290	Snap Ring, Output Shaft	1 - 2801 398	Gasket, Output Shaft Brg. Cover
1 - 2801 398	Gasket, Output Shaft Brg. Cover	1 - 2466 548	Seal, Throttle Lever Shaft
1 - 2400 163	Seal, Yoke	1 - 2205 299	Gasket, Oil Pan
1 - 6025 752	"O" Ring, Speedometer Drive Pinion Adapter	1 - 1316 815	Seal, Oil Filler Tube
1 - 2538 588	Seal, Speedometer Drive Pinion Adapter	1 - 6025 752	"O" Ring, Speedometer Drive Pinion Adapter
1 - 2538 571	Ring, Speedometer Seal Retainer	1 - 2538 588	Seal, Speedometer Drive Pinion Adapter
1 - 2466 842	Seal, Manual Valve Shaft	1 - 2538 571	Ring, Speedometer Seal Retainer
1 - 1323 593	Ring, Clutch Retainer Seal	2 - 3410 572	Washer, Front Clutch Thrust
1 - 1556 385	Seal, Reverse Band Reaction	1 - 2538 696	Washer, Front Annulus Gear Support Thrust
2 - 2801 356	Washer, Sun Gear Driving Shell Thrust	2 - 3410 540	Plate, Sun Gear Drive Shell Thrust
GASKET and SEAL PACKAGE, AUTOMATIC TRANSMISSION Part No. 3420 020		2 - 2801 356	Washer, Sun Gear Drive Shell Thrust
Consists of:		2 - 2538 515	Washer, Sun Gear Drive Shell Thrust
1 - 1942 020	Seal, Torque Conv. Impeller Hub	1 - 2538 669	Washer, Output Shaft Thrust
1 - 1942 021	Seal, Frt. Oil Pump Hsg.	1 - 2538 670	Washer, Output Shaft Thrust
1 - 2124 820	Seal, Frt. Clutch Piston, Inner	1 - 2538 671	Washer, Output Shaft Thrust
1 - 2124 821	Seal, Frt. Clutch Piston, Outer	GASKET and SEAL PACKAGE, AUTOMATIC TRANSMISSION Part No. 3420 093	
1 - 1942 054	Seal, Rr. Clutch Piston, Inner	Consists of:	
1 - 2124 835	Seal, Rr. Clutch Piston, Outer	1 - 2466 842	Seal, Manual Valve Shaft
1 - 2464 481	Seal, Reverse Servo Piston, Rubber	1 - 1942 020	Seal, Torque Conv. Impeller Hub
1 - 2466 548	Seal, Throttle Valve Shaft	1 - 1942 021	Seal, Oil Pump Hsg.
1 - 2538 588	Seal, Speedometer Drive Pinion	1 - 2124 846	Gasket, Oil Pump Hsg.
1 - 2466 842	Seal, Manual Valve Shaft	1 - 3410 226	Seal, Frt. Clutch Piston, Inner
1 - 1672 358	Seal, Reverse Band Lever Shaft	1 - 3410 225	Seal, Frt. Clutch Piston, Outer
1 - 2124 846	Gasket, Oil Pump Hsg.	1 - 1942 054	Seal, Rr. Clutch Piston, Inner
1 - 2466 954	Gasket, Extension	1 - 2124 835	Seal, Rr. Clutch Piston, Outer
1 - 2464 324	Gasket, Oil Pan	1 - 6028 864	Seal, Kickdown Inner Piston
1 - 2268 513	Gasket, Oil Pan Drain Plug	1 - 1672 358	Seal, Reverse Band Lever Shaft
2 - 1942 109	Ring, Governor Support Seal	1 - 2464 481	Seal, Reverse Servo Piston
2 - 2124 813	Ring, Torque Conv. Reaction Shaft Support Seal	1 - 2400 300	Seal, Yoke
2 - 2801 054	Ring, Input Shaft Seal	1 - 2801 398	Gasket, Output Shaft Brg. Cover
1 - 1942 123	Ring, Kickdown Servo Piston Seal, Large	1 - 2466 954	Gasket, Extension
1 - 1942 123	Ring, Kickdown Servo Guide Seal	1 - 2466 548	Seal, Throttle Lever Shaft
1 - 1942 130	Ring, Kickdown Servo Guide Snap		
1 - 2124 851	Ring, Kickdown Servo Piston Seal, Small		
1 - 6027 153	Ring, Reverse Servo Plug		

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
21-01-3	Cont'd.		
1 - 2464 324	Gasket, Oil Pan	1 - 6026 290	Snap Ring, Output Shaft
1 - 2268 513	Gasket, Oil Pan Drain Hole	1 - 6026 291	Snap Ring, Output Shaft
1 - 1316 815	Seal, Oil Filler Tube	1 - 6028 901	Snap Ring, Output Shaft Bearing
1 - 6025 752	"O" Ring, Speedometer Drive Pinion Adapter	2 - 1942 444	Snap Ring, Front Annulus Gear
1 - 2538 588	Seal, Speedometer Drive Pinion Adapter	1 - 6026 278	Snap Ring, Front Annulus Gear Support
1 - 2538 571	Ring, Speedometer Seal Retainer	1 - 1942 486	Snap Ring, Kickdown Servo
2 - 2204 622	Washer, Frt. Clutch Thrust, Frt.	1 - 6028 863	Snap Ring, Kickdown Servo
1 - 2204 623	Washer, Frt. Clutch Thrust, Frt.	1 - 2464 464	Snap Ring, Reverse Servo Piston Spring Retainer
1 - 2400 284	Washer, Frt. Clutch Thrust, Frt.	2 - 1942 439	Lock Ring, Sun Gear Drive Shell
3 - 1942 081	Washer, Frt. Planet Pinion Carrier Thrust	1 - 1672 287	Ring Seal, Kickdown Servo Piston (Small) (After)
2 - 2801 060	Washer, Frt. Planet Pinion Carrier Thrust	1 - 3410 374	Ring Seal, Kickdown Servo Piston (Small)
1 - 1942 080	Plate, Sun Gear Drive Shell Thrust	2 - 1636 470	Ring Seal, Kickdown Servo Piston (Large)
1 - 2801 568	Washer, Output Shaft Thrust	2 - 3410 372	Ring Seal, Kickdown Servo Piston (Large)
1 - 2400 580	Plate, Rr. Annulus Gear Thrust	2 - 1942 109	Ring Seal, Governor Support
	SEALS, GASKETS, THRUST	1 - 6027 271	Snap Ring, Governor Body
	WASHERS and SNAP RINGS	1 - 2400 185	Snap Ring, Output Shaft Bearing, Outer
	PACKAGE, AUTOMATIC	1 - 1626 749	E-Ring, Parking Sprag Rod Swivel Retainer
	TRANSMISSION, COMPLETE Part No. 3621 459	1 - 2538 034	Snap Ring, Parking Sprag Reaction Plug
	Consists of:	1 - 6025 857	Snap Ring, Throttle Valve Lever Shaft
1 - 2466 842	Seal, Manual Valve Shaft	1 - 1941 831	Ring Seal, Accumulator Piston (Small)
1 - 2124 705	Seal, Torque Conv. Impeller Hub	1 - 2124 255	Ring Seal, Accumulator Piston (Large)
1 - 2204 709	Seal, Oil Pump Hsg.	1 - 1672 287	Ring Seal, Kickdown Servo Piston (Small) (Up To)
1 - 1942 390	Gasket, Torque Conv. Reaction Shaft Support	1 - 2125 187	Seal, Rear Clutch Piston, Inner (Up To)
1 - 1942 396	Seal, Frt. Clutch Piston, Inner	1 - 3515 176	Seal, Front Clutch Piston, Inner (After)
2 - 1942 397	Seal, Frt. Clutch Piston, Outer	1 - 3515 177	Seal, Front Clutch Piston, Outer (After)
1 - 2538 510	Seal, Rr. Clutch Piston, Inner		
1 - 2538 695	Seal, Rr. Clutch Piston, Outer		
2 - 1556 385	Seal, Reverse Band Lever Shaft		
1 - 2464 462	Seal, Reverse Servo Piston		
1 - 2400 163	Seal, Yoke		
1 - 2466 954	Gasket, Extension		
1 - 2801 398	Gasket, Output Shaft Brg. Cover		
1 - 2466 548	Seal, Throttle Lever Shaft		
1 - 2205 299	Gasket, Oil Pan		
1 - 1316 815	Seal, Oil Filler Tube		
1 - 6025 752	"O" Ring, Speedometer Drive Pinion Adapter		
1 - 2538 588	Seal, Speedometer Drive Pinion Adapter		
1 - 2538 571	Ring, Speedometer Seal Retainer		
2 - 3410 572	Washer, Frt. Clutch Thrust (After)		
1 - 2538 696	Washer, Frt. Annulus Gear Support Thrust		
2 - 3410 540	Plate, Sun Gear Drive Shell Thrust		
2 - 2801 356	Washer, Sun Gear Drive Shell Thrust		
2 - 2538 515	Washer, Sun Gear Drive Shell Thrust		
1 - 2538 669	Washer, Output Shaft Thrust		
1 - 2538 670	Washer, Output Shaft Thrust		
1 - 2538 671	Washer, Output Shaft Thrust		
1 - 2892 478	Plate, Rear Annulus Gear Thrust		
1 - 2204 369	Washer, Front Clutch Thrust (Up To)		
2 - 1942 389	Ring Seal, Torque Conv. Reaction Shaft Support		
1 - 1942 400	Snap Ring, Frt. Clutch, Inner		
1 - 3410 571	Snap Ring, Frt. Clutch, Outer (After)		
1 - 1942 421	Snap Ring, Frt. Clutch, Outer (Up To)		
1 - 1941 831	Ring Seal, Input Shaft (After)		
1 - 1942 397	Ring Seal, Input Shaft (Up To)		
1 - 6022 859	Snap Ring, Input Shaft		
1 - 1323 593	Ring Seal, Rear Clutch Retainer		
1 - 1942 421	Snap Ring, Rear Clutch Retainer		
1 - 1942 423	Snap Ring, Rear Clutch Retainer		
1 - 2538 617	Snap Ring, Rear Clutch Retainer		
1 - 6026 289	Snap Ring, Output Shaft		
	SEALS, GASKETS, THRUST		
	WASHERS and SNAP RINGS		
	PACKAGE, AUTOMATIC		
	TRANSMISSION, COMPLETE Part No. 3621 460		
	Consists of:		
2 - 2124 813	Ring Seal, Trans. to Reaction Shaft Support (Up To)		
2 - 3515 321	Ring Seal, Trans. to Reaction Shaft Support (After)		
1 - 2466 842	Seal, Manual Valve Shaft		
1 - 1942 020	Seal, Torque Conv. Impeller Hub		
1 - 1942 021	Seal, Oil Pump Housing		
1 - 2124 846	Gasket, Oil Pump Housing		
1 - 3410 226	Seal, Front Clutch Piston, Inner		
1 - 3410 225	Seal, Front Clutch Piston, Outer		
1 - 1942 054	Seal, Rear Clutch Piston, Inner		
1 - 2124 835	Seal, Rear Clutch Piston, Outer		
1 - 6028 864	Seal, Kickdown Inner Piston		
1 - 1672 358	Seal, Reverse Band Lever Shaft		
1 - 2464 481	Seal, Reverse Servo Piston		
1 - 2400 300	Seal, Yoke		
1 - 2801 398	Gasket, Output Shaft Bearing Cover		
1 - 2466 954	Gasket, Extension		
1 - 2466 548	Seal, Throttle Lever Shaft		
1 - 2464 324	Gasket, Oil Pan		
1 - 2268 513	Gasket, Oil Pan Drain Hole		
1 - 1316 815	Seal, Oil Filler Tube		
1 - 6025 752	"O" Ring, Speedometer Drive Pinion Adapter		
1 - 2538 588	Seal, Speedometer Drive Pinion Adapter		
1 - 2538 571	Ring, Speedometer Seal Retainer		
2 - 2204 622	Washer, Front Clutch Thrust, Front and Rear		
1 - 2204 623	Washer, Front Clutch Thrust, Front		
1 - 2400 284	Washer, Front Clutch Thrust, Front		
3 - 1942 081	Washer, Front Planet Pinion Carrier Thrust		

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
21-01-3	Cont'd.		
2-	2801 060 Washer, Front Planet Pinion Carrier Thrust		REPAIR PACKAGE, AUTOMATIC TRANSMISSION
1-	1942 080 Plate, Sun Gear Drive Shell Thrust		FRONT CLUTCH REACTION
1-	2801 568 Washer, Output Shaft Thrust		SHAFT Part No. 3420 096
1-	2400 580 Plate, Rear Annulus Gear Thrust		Consists of:
1-	2644 764 Seal, Speedometer Cable		1- 3410 810 Retainer, Frt. Clutch
1-	2124 824 Snap Ring, Front Clutch, Inner		1- 3410 225 Seal, Frt. Clutch Piston - Outer
1-	2466 369 Snap Ring, Front Clutch, Inner		1- 3410 226 Seal, Frt. Clutch Piston - Inner
1-	3410 570 Snap Ring, Front Clutch		1- 3410 570 Snap Ring, Frt. Clutch - Outer
1-	3515 212 Snap Ring, Front Clutch		1- 3410 814 Retainer, Rr. Clutch Piston
1-	3515 215 Snap Ring, Front Clutch		1- 3410 899 Support, Reaction Shaft
2-	2801 054 Ring Seal, Input Shaft		2- 3515 321 Ring, Reaction Shaft Support Seal
1-	2124 872 Snap Ring, Rear Clutch Piston Retainer		REPAIR PACKAGE, AUTOMATIC TRANSMISSION
1-	1942 063 Snap Ring, Rear Clutch Retainer		FRONT CLUTCH REACTION
1-	1942 064 Snap Ring, Rear Clutch Retainer		SHAFT Part No. 3420 097
1-	1942 065 Snap Ring, Rear Clutch Retainer		Consists of:
1-	2466 811 Snap Ring, Rear Clutch Retainer		1- 3410 900 Retainer, Frt. Clutch
1-	6022 816 Snap Ring, Output Shaft		1- 3410 225 Seal, Frt. Clutch Piston - Outer
1-	6024 311 Snap Ring, Output Shaft		1- 3410 226 Seal, Frt. Clutch Piston - Inner
1-	6024 312 Snap Ring, Output Shaft		1- 3515 212 Snap Ring, Frt. Clutch
2-	6025 570 Snap Ring, Output Shaft Bearing		1- 3515 215 Snap Ring, Frt. Clutch
2-	1736 521 Lock Ring, Sun Gear Drive Shell		1- 3410 814 Retainer, Rr. Clutch Piston
1-	6024 336 Snap Ring, Kickdown Inner Piston		1- 3410 899 Support, Reaction Shaft
1-	2124 851 Ring Seal, Kickdown Servo Piston (Small)		2- 3515 321 Ring, Reaction Shaft Support Seal
2-	1942 123 Ring Seal, Kickdown Servo Piston (Large)		REPAIR PACKAGE, Automatic Transmission
2-	1942 130 Snap Ring, Kickdown Servo Guide		FRONT CLUTCH REACTION
2-	1942 109 Ring Seal, Governor Support		SHAFT Part No. 3420 098
1-	6022 817 Snap Ring, Governor Body		Consists of:
1-	2400 320 Snap Ring, Output Shaft Bearing, Outer		1- 3515 467 Retainer, Frt. Clutch
1-	1626 749 "E" Ring, Parking Sprag Rod Swivel Retainer		1- 3410 225 Seal, Frt. Clutch Piston - Outer
1-	2538 034 Snap Ring, Parking Sprag Reaction Plug		1- 3410 226 Seal, Frt. Clutch Piston - Inner
1-	6025 857 Snap Ring, Throttle Valve Lower Shaft		1- 3515 212 Snap Ring, Frt. Clutch - Outer
1-	1941 831 Ring Seal, Accumulator Piston (Small)		1- 3410 814 Retainer, Rr. Clutch Piston
1-	2124 255 Ring Seal, Accumulator Piston (Large)		1- 3410 899 Support, Reaction Shaft
2-	3515 321 Ring, Reaction Shaft Support Seal		2- 3515 321 Ring, Reaction Shaft Support Seal
21-84-4	SHAFT or CABLE		
	PACKAGE, SPEEDO-		
	METER Part No. 2448 294		
	Consists of:		
1-	Cable		
1-	Tip		
1-	Die		
21-118-6	ROTOR PACKAGE,		
	FRONT OIL PUMP		
	AUTOMATIC TRANS-		
	MISSION Part No. 2808 675		
	2808 685		
	Consists of:		
1-	Rotor, Frt. Oil Pump, Inner		
1-	Rotor, Frt. Oil Pump, Outer		
21-129-1	REPAIR PACKAGE, Reaction Shaft and		
	Frt. Clutch		
21-133-1	REPAIR PACKAGE, AUTOMATIC TRANSMISSION		
	Front Clutch Reaction		
	Shaft Part No. 3420 095		
	Consists of:		
1-	3515 314 Retainer, Frt. Clutch		
1-	3410 225 Seal, Frt. Clutch Piston - Outer		
1-	3410 226 Seal, Frt. Clutch Piston - Inner		
1-	3410 570 Snap Ring, Frt. Clutch - Outer		
1-	3410 814 Retainer, Rr. Clutch Piston		
1-	3410 899 Support, Reaction Shaft		
2-	3515 321 Seal, Reaction Shaft Support		
21-136-228	CAM and RETAINER		
	PACKAGE, OVER-		
	RUNNING CLUTCH		
	AUTOMATIC TRANS-		
	MISSION Part No. 2808 637		
	Consists of:		
1-	Cam		
1-	Retainer		
7-	138 212 Screw		
1-	Washer		
21-138-2	REPAIR PACKAGE,		
	GOVERNOR AUTO-		
	MATIC TRANSMISSION Part No. 2275 498		
	Consists of:		
1-	Body, Gov.		
2-	1942 109 Ring, Support Seal		
1-	1636 461 Weight, Gov., Outer		
1-	1636 462 Weight, Gov., Inner		
1-	1636 464 Snap Ring, Weight, Inner		
1-	1636 465 Snap Ring, Weight, Outer		
1-	2124 663 Valve, Gov.		
1-	1556 082 Shaft, Gov. Valve		
2-	1638 461 Snap Ring, Valve Shaft		
1-	6022 817 Snap Ring, Gov. Body		
2-	2125 024 Lock, Body Bolt		
4-	Bolt, Body		
1-	1949 858 Spring, Gov.		

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
21-138-2 Cont'd. REPAIR PACKAGE, GOVERNOR AUTO- MATIC TRANSMISSION Part No. 2298 514 Consists of: 1 - Body, Gov. 2 - 1942 109 Ring, Support Seal 1 - 1636 461 Weight, Gov., Outer 1 - 1636 462 Weight, Gov., Inner 1 - 1636 464 Snap Ring, Weight, Inner 1 - 1636 465 Snap Ring, Weight, Outer 1 - 2124 663 Valve, Gov. 1 - 1556 082 Shaft, Valve 2 - 1638 461 Snap Ring, Valve Shaft 1 - 6022 817 Snap Ring, Gov. Body 2 - 2125 024 Lock, Body Bolt 4 - Bolt, Body 1 - 1949 859 Spring, Gov.	1 - 1556 082 Shaft, Valve 3 - 1638 461 Snap Ring, Valve Shaft 1 - 6027 271 Snap Ring, Gov. Body 4 - Bolt, Body 2 - 2125 024 Lock, Body Bolt 1 - 1636 465 Snap Ring, Weight, Outer REPAIR PACKAGE, GOVERNOR AUTO- MATIC TRANSMISSION Part No. 3004 607 Consists of: 1 - Body, Gov. 2 - 1942 109 Ring, Support Seal 1 - 1636 461 Weight, Gov., Outer 1 - 1636 462 Weight, Gov., Inner 1 - 1636 464 Snap Ring, Weight, Inner 1 - 1636 465 Snap Ring, Weight, Outer 1 - 2124 663 Valve, Gov. 1 - 1556 082 Shaft, Valve 3 - 1638 461 Snap Ring, Valve Shaft 1 - 6027 271 Snap Ring, Gov. Body 2 - 2125 024 Lock, Body Bolt 4 - Bolt, Body 1 - 1949 858 Spring, Gov. Weight		
REPAIR PACKAGE, GOVERNOR AUTO- MATIC TRANSMISSION Part No. 2585 589 Consists of: 1 - Body, Gov. 2 - 1942 109 Ring, Support Seal 1 - 1636 461 Weight, Gov., Outer 1 - 1636 462 Weight, Gov., Inner 1 - 1636 464 Snap Ring, Weight, Inner 1 - 1636 465 Snap Ring, Weight, Outer 1 - 2124 663 Valve, Gov. 1 - 1556 082 Shaft, Valve 2 - 1638 461 Snap Ring, Valve Shaft 1 - 6022 817 Snap Ring, Body 2 - 2125 024 Lock, Body Bolt 4 - 179 794 Bolt, Body 1 - 2124 662 Spring, Weight	REPAIR PACKAGE, GOVERNOR AUTO- MATIC TRANSMISSION Part No. 2808 362 Consists of: 1 - Body, Gov. 2 - 1942 109 Ring, Support Seal 1 - 1823 726 Weight, Gov., Outer 1 - 2801 257 Weight, Gov., Inner 1 - 1636 464 Snap Ring, Weight, Inner 1 - 1636 465 Snap Ring, Weight, Outer 1 - 2124 663 Valve, Gov. 1 - 1556 082 Shaft, Valve 2 - 1638 461 Snap Ring, Valve Shaft 1 - 6022 817 Snap Ring, Body 2 - 2125 024 Lock, Body Bolt 4 - Bolt, Body 1 - 1949 859 Spring, Weight		
REPAIR PACKAGE, GOVERNOR AUTO- MATIC TRANSMISSION Part No. 3004 545 Consists of: 1 - Body, Gov. 2 - 1942 109 Ring, Support Seal 1 - 1636 461 Weight, Gov., Outer 1 - 1636 462 Weight, Gov., Inner 1 - 1636 464 Snap Ring, Weight, Inner 1 - 2892 248 Spring, Weight 1 - 2124 663 Valve, Gov. 1 - 1556 082 Shaft, Valve 2 - 1638 461 Snap Ring, Valve Shaft 1 - 6022 817 Snap Ring, Gov. Body 4 - Bolt, Body 2 - 2125 024 Lock, Body Bolt 1 - 1636 465 Snap Ring, Weight, Outer	REPAIR PACKAGE, GOVERNOR AUTOMATIC TRANSMISSION Part No. 3621 450 Consists of: 1 - Body, Gov. 2 - 1942 109 Ring, Support Seal 2 - 2125 024 Lock, Body Bolt 4 - Bolt, Body 1 - 6022 817 Snap Ring, Body 1 - 3515 482 Weight, Gov. Inner 1 - 3515 491 Weight, Gov. Outer 1 - 3515 110 Spring, Gov. Weight 1 - 1636 464 Snap Ring, Weight, Inner 1 - 1636 465 Snap Ring, Weight, Outer 1 - 3515 479 Valve, Gov. 1 - 1556 082 Shaft, Valve 1 - 1638 461 Snap Ring, Valve Shaft		
REPAIR PACKAGE, GOVERNOR AUTO- MATIC TRANSMISSION Part No. 3004 606 Consists of: 1 - Body, Gov. 2 - 1942 109 Ring, Support Seal 1 - 1636 461 Weight, Gov., Outer 1 - 1636 462 Weight, Gov., Inner 1 - 1636 464 Snap Ring, Weight, Inner 1 - 2124 662 Spring, Gov. Weight 1 - 2124 663 Valve, Gov.	REPAIR PACKAGE, GOVERNOR AUTOMATIC TRANSMISSION Part No. 3621 452 Consists of: 1 - Body, Gov.		

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
<p>21-138-2 Cont'd.</p> <p>2 - 1942 109 Ring, Support Seal</p> <p>2 - 2125 024 Lock, Body Bolt</p> <p>4 - Bolt, Body</p> <p>1 - 6022 817 Snap Ring, Body</p> <p>1 - 3515 478 Weight, Gov., Inner</p> <p>1 - 1636 461 Weight, Gov., Outer</p> <p>1 - 3515 110 Spring, Weight</p> <p>1 - 1636 464 Snap Ring, Weight, Inner</p> <p>1 - 1636 465 Snap Ring, Weight, Outer</p> <p>1 - 3515 479 Valve, Gov.</p> <p>1 - 1556 082 Shaft, Gov. Valve</p> <p>1 - 1638 461 Snap Ring, Valve Shaft</p> <p>REPAIR PACKAGE, GOVERNOR AUTOMATIC TRANSMISSION Part No. 3621 451</p> <p>Consists of:</p> <p>1 - Body, Gov.</p> <p>2 - 1942 109 Ring, Support Seal</p> <p>2 - 2125 024 Lock, Body Bolt</p> <p>4 - Bolt, Body</p> <p>1 - 6022 817 Snap Ring, Body</p> <p>1 - 3515 478 Weight, Gov., Inner</p> <p>1 - 1636 461 Weight, Gov., Outer</p> <p>1 - 3515 085 Spring, Weight</p> <p>1 - 1636 464 Snap Ring, Weight, Inner</p> <p>1 - 1636 465 Snap Ring, Weight, Outer</p> <p>1 - 3515 479 Valve, Gov.</p> <p>1 - 1556 082 Shaft, Valve</p> <p>1 - 1638 461 Snap Ring, Valve Shaft</p> <p>REPAIR PACKAGE, GOVERNOR AUTOMATIC TRANSMISSION Part No. 3621 453</p> <p>Consists of:</p> <p>1 - Body</p> <p>2 - 1942 109 Seal</p> <p>2 - 2125 024 Lock</p> <p>4 - 180 020 Bolt</p> <p>1 - 6022 817 Snap Ring, Body</p> <p>1 - 3515 126 Weight, Inner</p> <p>1 - 3515 491 Weight, Outer</p> <p>1 - 3515 110 Spring</p> <p>1 - 1636 464 Snap Ring, Inner</p> <p>1 - 1636 465 Snap Ring, Outer</p> <p>1 - 3515 479 Valve</p> <p>1 - 1556 082 Shaft</p> <p>2 - 1638 461 Snap Ring, Shaft</p> <p>REPAIR PACKAGE, GOVERNOR AUTOMATIC TRANSMISSION Part No. 3621 454</p> <p>Consists of:</p> <p>1 - Body</p> <p>2 - 1942 109 Seal</p> <p>2 - 2125 024 Lock</p> <p>4 - 180 020 Bolt</p> <p>1 - 6027 271 Snap Ring, Body</p> <p>1 - 1636 461 Weight, Outer</p> <p>1 - 3515 478 Weight, Inner</p> <p>1 - 3515 085 Spring</p> <p>1 - 1636 464 Snap Ring, Inner</p> <p>1 - 1636 465 Snap Ring, Outer</p> <p>1 - 3515 479 Valve</p>		<p>1 - 1556 082 Shaft</p> <p>2 - 1638 461 Snap Ring, Shaft</p> <p>REPAIR PACKAGE, GOVERNOR AUTOMATIC TRANSMISSION Part No. 3621 455</p> <p>Consists of:</p> <p>1 - Body</p> <p>2 - 1942 109 Seal</p> <p>2 - 2125 024 Lock</p> <p>4 - 180 020 Bolt</p> <p>1 - 6027 271</p> <p>1 - 3515 491 Weight, Outer</p> <p>1 - 3515 482 Weight, Inner</p> <p>1 - 3515 110 Spring</p> <p>1 - 1636 464 Snap Ring, Inner</p> <p>1 - 1636 465 Snap Ring, Outer</p> <p>1 - 3515 479 Valve</p> <p>1 - 1556 082 Shaft</p> <p>2 - 1638 461 Snap Ring, Shaft</p> <p>21-139-67 VALVE PACKAGE, REGULATOR AUTO- MATIC TRANSMISSION Part No. 2240 685</p> <p>Consists of:</p> <p>1 - Valve, Regulator</p> <p>1 - 2124 734 Spring</p> <p>1 - 2204 975 Retainer</p> <p>1 - 2124 736 Screw</p> <p>1 - 2124 737 Nut</p> <p>23-19-24 SPOILER PACKAGE, DECK LID MOUNTING Part No. 3579 056</p> <p>Consists of:</p> <p>1 - 3506 470-1 Bracket, Mtg.</p> <p>1 - 3506 488-9 Gasket</p> <p>1 - 6026 687 Washer</p> <p>4 - 135 629 Washer</p> <p>4 - 124 838 Jam Nut</p> <p>4 - 163 226 Screw</p> <p>4 - 445 445 U/Nut</p> <p>Part No. 3579 057</p> <p>Consists of:</p> <p>1 - 3506 472-3 Bracket, Mtg.</p> <p>1 - 3506 490-1 Gasket</p> <p>4 - 6026 687 Nut w/Seal</p> <p>4 - 135 629 Washer</p> <p>4 - 124 838 Jam Nut</p> <p>8 - 163 226 Screw</p> <p>4 - 445 445 U/Nut</p> <p>4 - 6029 104 Nut</p> <p>Part No. 3579 058</p> <p>Consists of:</p> <p>1 - 3506 482-3 Bracket, Mtg.</p> <p>1 - 3506 488-9 Gasket</p> <p>4 - 6026 687 Nut w/Seal</p> <p>4 - 135 629 Washer, Ext. Lock</p> <p>4 - 124 838 Jam Nut</p> <p>4 - 163 226 Screw</p> <p>4 - 6029 104 Nut</p> <p>Part No. 3579 059</p> <p>Consists of:</p> <p>1 - 3506 480-1 Bracket, Mtg.</p> <p>1 - 3506 488-9 Gasket</p>	

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
23-19-24	Cont'd.		
4 - 6026 687	Nut w/Seal		
4 - 135 629	Washer		
4 - 124 838	Jam Nut		
8 - 163 226	Screw		
8 - 445 445	U/Nut		
4 - 6029 104	Nut		
			Consists of:
			1 - Gear Pinion
			1 - Seal
			1 - "O" Ring
			1 - Screw
			23-41-106 MOTOR and MECHANISM
			PACKAGE, ELECTRIC
			WINDOW LIFT, RT Part No. 3004 124
			Consists of:
			1 - 2862 832 Motor and Mechanism
			2 - 1842 026 Terminal, Female
			2 - 2097 173 Insulator, Female
			MOTOR and MECHANISM
			PACKAGE, ELECTRIC
			WINDOW LIFT, LT Part No. 3004 123
			Consists of:
			1 - 2862 833 Motor and Mechanism
			2 - 1842 026 Terminal, Female
			2 - 2097 173 Insulator, Female
			MOTOR and MECHANISM
			PACKAGE, ELECTRIC
			WINDOW LIFT, RT Part No. 3004 126
			Consists of:
			1 - 2862 830 Motor and Mechanism
			2 - 1842 026 Terminal, Female
			2 - 2097 173 Insulator, Female
			MOTOR and MECHANISM
			PACKAGE, ELECTRIC
			WINDOW LIFT, LT Part No. 3004 125
			Consists of:
			1 - 2862 831 Motor and Mechanism
			2 - 1842 026 Terminal, Female
			2 - 2097 173 Insulator, Female
			23-41-176 TERMINAL and INSULATOR
			PACKAGE, WINDOW LIFT
			SWITCH (5 WAY) Part No. 2809 016
			Consists of:
			1 - 2770 607 Insulator, Window Lift
			Switch Wiring Terminal
			5 - 2427 529 Terminal, Window Lift
			Switch Wiring
			TERMINAL and INSULATOR
			PACKAGE, WINDOW LIFT
			SWITCH (7 WAY) Part No. 2809 017
			Consists of:
			1 - 2771 564 Insulator, Window Lift
			Switch Wiring Terminal
			7 - 2427 529 Terminal, Window Lift
			Switch Wiring
			TERMINAL and INSULATOR
			PACKAGE, FRONT DOOR
			WINDOW LIFT SWITCH
			(10 WAY) RT Part No. 2809 018
			Consists of:
			1 - 2771 571 Insulator, Front Door
			Window Lift Switch Terminal
			10 - 2427 529 Terminal, Window Lift
			Switch Wiring
23-19-24	Cont'd.		
1 - 3506 474-5	Bracket, Mtg.		
1 - 3506 488-9	Gasket		
4 - 6026 687	Nut w/Seal		
4 - 135 629	Washer, Ext. Lock		
4 - 124 838	Jam Nut		
6 - 163 226	Screw		
6 - 445 445	U/Nut		
4 - 6029 104	Nut		
			Part No. 3579 060
			Consists of:
			1 - 3506 478-9 Bracket, Mtg.
			1 - 3506 488-9 Gasket
			4 - 6026 687 Nut w/Seal
			4 - 135 629 Washer, Ext. Lock
			4 - 124 838 Jam Nut
			6 - 163 226 Screw
			6 - 445 445 U/Nut
			4 - 6029 104 Nut
			Part No. 3579 061
			Consists of:
			1 - 3506 478-9 Bracket, Mtg.
			1 - 3506 488-9 Gasket
			4 - 6026 687 Nut w/Seal
			4 - 135 629 Washer
			4 - 124 838 Jam Nut
			6 - 163 226 Screw
			6 - 445 445 U/Nut
			4 - 6029 104 Nut
			Part No. 3579 062
			Consists of:
			1 - 3506 476-7 Bracket, Mtg.
			1 - 3506 490-1 Gasket
			4 - 6026 687 Nut w/Seal
			4 - 135 629 Washer
			4 - 124 838 Jam Nut
			4 - 163 226 Screw
			6 - 445 445 U/Nut
			4 - 6029 104 Nut
			Part No. 3579 669
			Consists of:
			1 - 3506 488-9 Gasket
			1 - 3506 490-1 Gasket
			4 - 6026 687 Nut, w/Seal
			4 - 135 629 Washer
			4 - 445 445 U/Nut
			4 - 6029 155 Sleeve Nut
			4 - 124 934 Nut
			4 - 163 226 Screw
			Part No. 3579 668
			Consists of:
			1 - 3506 490-1 Gasket
			4 - 6026 687 Nut w/Seal
			4 - 135 629 Washer
			4 - 445 445 U/Nut
			4 - 6029 155 Sleeve Nut
			4 - 124 934 Nut
			8 - 163 226 Screw
23-41-34	GEAR and SEAL PACKAGE, ELECTRIC WINDOW REGULATOR MECHANISM		Part No. 2932 973

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
23-41-176	Cont'd. TERMINAL and INSULATOR PACKAGE, FRONT DOOR WINDOW LIFT SWITCH (10 WAY) LT Part No. 2809 019 Consists of: 1 - 2771 567 Insulator, Front Door Window Lift Switch Terminal 10 - 2427 529 Terminal, Window Lift Switch Wiring		
23-49-1	REAR SEAT SHOULDER BELT PACKAGE Part No. 4776 GX9 Consists of: 1 - Belt 1 - Reinforcement 2 - Screw 2 - 6027 311 Bolt		REAR SEAT SHOULDER BELT PACKAGE Part No. 4782 GX9 Consists of: 1 - Belt 1 - 3548 851 Reinforcement 2 - Screw 1 - 6027 310 Bolt
	REAR SEAT SHOULDER BELT PACKAGE Part No. 4777 GX9 Consists of: 1 - Belt 1 - Reinforcement 2 - Screw 2 - 6027 311 Bolt	23-58-381	ROTOR PACKAGE, FOLDING TOP MOTOR PUMP Part No. 2573 840 Consists of: 1 - Rotor, Inner 1 - Rotor, Outer
	REAR SEAT SHOULDER BELT PACKAGE Part No. 4778 GX9 Consists of: 1 - Belt 1 - 2999 102 Reinforcement 1 - 2999 033 Grommet 2 - Screw 1 - 6027 311 Bolt	23-58-388	BOLT PACKAGE, FOLDING TOP LIFT PUMP RESERVOIR Part No. 2573 839 Consists of: 1 - Bolt 1 - Washer 1 - "O" Ring
	REAR SEAT SHOULDER BELT PACKAGE Part No. 4779 GX9 Consists of: 1 - Belt 1 - 2999 030 Reinforcement 1 - 2999 033 Grommet 2 - Screw 1 - 6027 311 Bolt 1 - 6027 312 Bolt 1 - 9417 098 Washer 1 - 6026 397 Washer 1 - 2999 053 Spacer	23-63-33	WEATHERSTRIP PACKAGE, FRONT DOOR ON FRONT EDGE OF GLASS Part No. 2932 230 Consists of: 1 - Weatherstrip 4 - 2841 646 Slide 2 - 2861 744 Pin
	REAR SEAT SHOULDER BELT PACKAGE Part No. 4780 GX9 Consists of: 1 - Belt 1 - 6027 311 Bolt	23-63-100	WEATHERSTRIP PACKAGE, QUARTER WINDOW GLASS FRONT Part No. 2932 230 Consists of: 1 - Weatherstrip 4 - 2841 646 Slide 2 - 2861 744 Pin
	REAR SEAT SHOULDER BELT PACKAGE Part No. 4781 GX9 Consists of: 1 - Belt 2 - 6027 311 Bolt	23-64-1	FIELD KIT, REAR WINDOW INSTALLATION Part No. 2807 425 Consists of: 1 - Cartridge 1 - Primer 1 - Spacer Dam 2 - Spacer 2 - Spacer
		23-64-181	LATCH PACKAGE, QUARTER WINDOW GLASS Part No. 3419 945 Consists of: 1 - Latch 1 - 6000 379 Screw 1 - 1708 996 Grommet 1 - 1909 944 Washer
			HANDLE PACKAGE, QUARTER WINDOW GLASS LATCH Part No. 3620 490 Consists of: 1 - Handle 1 - Link 1 - 2841 446 Retainer 1 - 9417 273 Screw

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
23-67-252	Cont'd. 1 - 6000 379 Screw 1 - 1909 944 Washer 1 - 1708 996 Grommet 1 - 273 752 Pin		Consists of: 1 - Adhesive 1 - Sealant Primer
23-64-240	PIVOT PACKAGE, V/WING UPPER Part No. 2809 961 Consists of: 1 - Bracket 1 - 6000 374 Screw 1 - 1909 917 Grommet 1 - 6000 379 Screw 1 - 1708 996 Grommet 1 - 1708 998 Clamp 1 - 1909 944 Washer PIVOT PACKAGE, V/WING UPPER Part No. 2932 436 2932 437 Consists of: 2 - Bracket 2 - 1909 944 Washer 2 - 6000 374 Screw 2 - 1909 917 Grommet 2 - 6000 379 Screw 2 - 1708 996 Grommet 2 - 1708 998 Clamp PIVOT PACKAGE, V/WING UPPER Part No. 2807 956 2807 957 Consists of: 2 - Bracket 2 - 1708 998 Clamp 2 - 1909 917 Grommet 2 - 1909 944 Washer 2 - 60000 374 Screw	23-67-2	CAM RELEASE PACKAGE, WIPER PARKING Part No. 2932 869 Consists of: 1 - Release, Wiper Parking Cam 1 - Cam, Wiper Parking 1 - Spring, Wiper Parking 1 - Spring Washer, Wiper Drive Link 1 - 2983 017 Retainer, Wiper Link
23-64-242	BRACKET PACKAGE, UPPER WING PIVOT Part No. 3419 350 3419 351 Consists of: 1 - Bracket, Rt. 1 - Bracket, Lt. 2 - 1909 944 Washer 2 - 1708 998 Clamp 2 - 6000 374 Screw 2 - 1909 917 Grommet 2 - 1708 996 Grommet	23-67-10	GEAR and SEAL PACKAGE, WIPER MOTOR Part No. 3420 871 Consists of: 1 - Gear 1 - Seal, Switch Plate GEAR and GASKET PACKAGE, WIPER MOTOR Part No. 3620 735 Consists of: 1 - Gasket 1 - Gear 1 - Grease-Pack
23-66-75	FIELD KIT, WINDSHIELD INSTALLATION Part No. 2807 425 Consists of: 1 - Cartridge 1 - Primer 1 - Spacer Dam 2 - Spacer 2 - Spacer FIELD KIT, WINDSHIELD INSTALLATION Part No. 3419 959	INTERMEDIATE GEAR PACKAGE, W/SHIELD WIPER MOTOR Part No. 3431 508 Consists of: 1 - Gear 1 - Lubricant 1 - Spring Washer 6 - Screw 6 - Nut w/Washer OUTPUT GEAR PACKAGE, W/SHIELD WIPER MOTOR . . . Part No. 3431 511 Consists of: 1 - Gear w/Shaft 1 - Lubricant 6 - Screw 6 - Nut w/Washer	
		23-67-20	GROMMET and SPACER PACKAGE, MOTOR MTG. Part No. 2932 708 Consists of: 3 - Grommet 3 - Spacer GROMMET and SPACER PACKAGE, MOTOR MTG. Part No. 2421 482 Consist of: 3 - Grommet 3 - Spacer
		23-67-104	SEAL and SPACER PACKAGE, MOTOR MTG. Part No. 2808 831 Consists of: 1 - Seal 3 - Spacer

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
23-67-106	ARMATURE PACKAGE, W/SHIELD WIPER MOTORPart No. 3431 510 Consists of: 1 - Armature 1 - Spring Washer 2 - Washer	23-67-240	RESERVOIR and SEAL PACKAGE, W/SHIELD WASHER Part No. 2809 011 Consists of: 1 - Reservoir 2 - Seal
23-67-112	HOUSING PACKAGE, W/SHIELD WIPER MOTORPart No. 3431 509 Consists of: 1 - Housing 1 - Spring Washer 2 - Washer		RESERVOIR and SEAL PACKAGE, W/SHIELD WASHER Part No. 2889 803 Consists of: 1 - Reservoir 1 - Seal
23-67-164	SWITCH PLATE and LATCH PACKAGE, WIPER MOTOR Part No. 3420 870 Consists of: 1 - Switch Plate 1 - Latch, Shaft and "O" Ring 1 - Seal, Switch Plate 1 - Grease - Pack		RESERVOIR and SEAL PACKAGE, W/SHIELD WASHER Part No. 2932 830 Consists of: 1 - Reservoir 1 - Seal
	SWITCH PLATE, BUSHING and LATCH PACKAGE, WIPER MOTORPart No. 3620 736 Consists of: 1 - Bushing 1 - Gasket 1 - Latch 1 - Switch Plate 1 - Grease-Pack		RESERVOIR and SEAL PACKAGE, T/GATE WINDOW WASHER Part No. 3004 120 Consists of: 1 - Reservoir 1 - Seal
	SWITCH PLATE and LATCH PACKAGE, WIPER MOTOR Part No. 3420 918 Consists of: 1 - Switch Plate 1 - Latch, Shaft and "O" Ring 1 - Seal, Switch Plate 1 - Grease - Pack		RESERVOIR and SEAL PACKAGE, T/GATE WINDOW WASHER Part No. 3420 873 Consists of: 1 - RESERVOIR 1 - Seal
	PARK SWITCH PACKAGE, W/SHIELD WIPER MOTOR (DEPRESSED) Part No. 3431 506 Consists of: 1 - Gear & Brush Holder Hsg. 6 - Screw 6 - Nut w/Washer 1 - Lubricant 2 - Washer 1 - Spring Washer 1 - Spring Washer	23-67-246	NOZZLE and BRACKET PACKAGE, W/SHIELD WASHERPart No. 3579 482 Consists of: 2 - 3431 213 Nozzle w/Bracket 2 - 9414 597 Screw
	PARK SWITCH PACKAGE, W/SHIELD WIPER MOTOR (NON-DEPRESSED) Part No. 3431 507 Consists of: 1 - Gear & Brush Holder Hsg. 6 - Screw 6 - Nut w/Washer 1 - Lubricant 2 - Washer 1 - Spring Washer 1 - Spring Washer	23-67-252	PUMP and SEAL PACKAGE, W/SHIELD WASHER Part No. 2809 013 Consists of: 1 - Pump 2 - Seal
			PUMP and SEAL PACKAGE, T/GATE WINDOW WASHER Part No. 3004 121 Consists of: 1 - Pump 1 - Seal
			FOOT PUMP and CHECK VALVE PACKAGE, W/SHIELD WASHER Part No. 2932 868 Consists of: 1 - Pump and Spring 1 - Washer 1 - Check Valve

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
24-01-1	BASIC PACKAGE, MODEL "E" Part No. # 2027 816 Consists of: 1 - 3450 598 Evaporator 1 - 3450 650 Valve, Expansion 1 - 3450 248 Circuit Breaker 1 - 3451 415 Wheel, Blower Motor C.W. 1 - 3451 416 Wheel, Blower Motor C.C.W. 2 - 2837 680 Clamp, Wheel 1 - 3450 250 Motor, Blower 1 - 3450 591 Grille, Evaporator 1 - 3450 235 Thermostat 1 - 3450 571 Switch, Blower Motor 2 - 3450 588 Knob 1 - 3450 602 Panel, Control 2 - 3450 579 Louver 4 - 3450 589 Retainer, Louver 1 - 3450 247 Coil, Evap. 1 - 3484 253 Compressor 1 - 2968 331 Receiver Drier 1 - 2607 440 Bracket, Drier Mtg. 1 - 2014 009 Grommet, Discharge Hose	1 - 2870 253 Pulley and Hub 1 - 2097 102 Washer, Hub Mtg. 1 - 2812 765 Hose, Discharge, 3/8" 1 - 1742 762 Hose, Suction, 5/8" 1 - 2013 092 Hose, Liquid, 3/8"	
	BASIC PACKAGE MODEL "F" Part No. 2027 820 Consists of: 1 - 3450 628 Evaporator 1 - 3451 410 Valve, Expansion 1 - 3450 596 Switch, Blower Motor 1 - 3451 404 Thermostat 1 - 3450 613 Knob, Mtr. Switch 1 - 3450 614 Knob, Thermostat 2 - 2837 680 Clamp 1 - 3450 248 Breaker, Circuit 1 - 3451 416 Wheel, Blower Mtr. Rt. C.C.W. 1 - 3451 415 Wheel, Blower Mtr. Lt. C.W. 6 - 117 957 Insulator, Motor Mtg. 2 - 1991 576 Housing, Blower 1 - 2870 270 Motor, Blower 1 - 2968 273 Coil, Evaporator 1 - 3484 253 Compressor 1 - 2968 331 Drier, Receiver 1 - 2607 440 Bracket 1 - 2014 009 Grommet, Discharge Hose 2 - 3450 586 Louver 4 - 3450 589 Retainer, Louver Mtg.	ADAPTER PACKAGE Part No. 2027 818 Consists of: 1 - 3450 635 Bracket, Frt. Mtg. 1 - 2951 866 Bracket, Rr. Mtg. 1 - 2968 253 Pulley, Compressor 1 - 2968 252 Pulley, Fan Drive 1 - 2968 251 Pulley, Fan 2 - 2772 142 Spacer, Drive Pulley 1 - 3450 642 Bracket, Idler Pulley Adj. 1 - 2013 876 Pulley, Idler 1 - 3451 409 Strap, Altr. Adj. 1 - 2951 825 Support, Rt. 1 - 3418 261 Bracket, Support Side Lt. 1 - 2013 877 Bolt 1 - 2951 747 Bracket, Frt. 1 - 3409 548 Baffle, Floor Air 1 - 2097 105 Coil, Field 1 - 2003 058 Hub and Pulley 1 - 2097 102 Washer, Hub Mtg. 1 - 1658 638 Screw, Hub Mtg. 1 - 1742 762 Hose, Suction, 5/8" 1 - 2013 092 Hose, Liquid, 3/8" 1 - 2812 765 Hose, Discharge, 3/8" 1 - 3451 443 Belt, Comp. Drive 1 - 2128 751 Belt, Fan and Altr. Drive	
	ADAPTER PACKAGE Part No. 2027 817 Consists of: 1 - 2468 809 Bracket, Compressor Mtg. Frt. 1 - 2806 152 Support, Rr. Rt. 1 - 2806 812 Support, Rr. Lt. 1 - 2946 134 Support, Rr. Lt. 1 - 2203 035 Bracket, Idler Pulley Adj. 1 - 2203 031 Idler, Pulley 1 - 2406 039 Fan and Pulley 1 - 2202 794 Pulley, Compressor Drive 1 - 3418 384 Belt, Compressor Drive 1 - 2006 395 Coil, Field 1 - 2006 396 Pulley and Hub 1 - 2006 397 Washer, Hub Mtg. 1 - 1658 638 Screw, Hub Mtg. 1 - 2812 840 Coil, Field	ADAPTER PACKAGE Part No. 2027 819 Consists of: 1 - 2968 330 Bracket, Frt. 1 - 2951 809 Bracket, Rr. 1 - 2899 961 Bracket, Rr. 1 - 3462 023 Support, Rr. Lt. 1 - 3462 022 Support, Rr. Lt. 1 - 2899 576 Support, Rr. Rt. 1 - 3462 353 Support, Rr. Rt. 1 - 2814 696 Bracket, Pulley Mtg. 1 - 2899 962 Bracket, Spring 1 - 1999 184 Strap, Altr. Adj. 1 - 2013 678 Spacer 1 - 2004 767 Bracket, Pulley Adj. 1 - 2004 767 Pulley, Idler 1 - 2919 395 Hose, Radiator Inlet 1 - 1742 762 Hose, Suction, 5/8" 1 - 2013 092 Hose, Liquid 3/8" 1 - 2812 765 Hose, Discharge, 3/8" 1 - 2968 251 Pulley, Fan 1 - 2003 059 Spacer, Fan Pulley 1 - 2968 252 Pulley, Drive 1 - 2968 253 Pulley, Comp. Drive * 1 - 1825 903 Belt, Comp. Drive 1 - 1551 006 Belt, Altr. Drive 1 - 2097 105 Coil, Field 1 - 2003 058 Pulley and Hub 1 - 2097 102 Washer, Hub Mtg. 1 - 1658 638 Screw, Hub Mtg.	
	ADAPTER PACKAGE Part No. 3450 632 Consists of: 1 - 3450 632 Duct, Spot Cooler Air, Complete	ADAPTER PACKAGE Part No. 3450 632 Consists of: 1 - 3450 632 Duct, Spot Cooler Air, Complete	

CODE	PART NAME AND PART NUMBER	CODE	PART NAME AND PART NUMBER
24-01-1	Cont'd.		
	CONDENSER		
	PACKAGE Part No. 2027 787		
	Consists of:		
	1 - 2812 689 Condenser		
	4 - 2812 692 Brackets		
	CONDENSER		
	PACKAGE Part No. 2027 814		
	Consists of:		
	1 - 2968 361 Condenser		
	1 - 2968 364 Mtg. and Tube Support		
	1 - 2014 004 Bracket, Mtg. Rt.		
	1 - 2772 101 Mtg. and Tube Support		
	3 - 2272 098 Bracket, Condenser Mtg.		
24-25-2	PISTON RING		
	PACKAGE Part No. 2275 207		
	Consists of:		
	1 - Ring		
	1 - 1377 825 Gasket, Oil Sump		
	1 - 1990 584 Gasket, Cyl. Head		
	1 - 1990 598 Gasket, Valve Plate		
24-25-3	PISTON and CONNECTING ROD		
	PACKAGE Part No. 2541 330		
	Consists of:		
	1 - Ball, Oil Pressure Relief		
	1 - 1990 584 Gasket, Cylinder Head		
	1 - 1990 598 Gasket, Valve Seat		
	1 - Gasket, Oil Sump		
	1 - Piston and Connecting Rod		
	1 - Spring, Oil Pressure		
	PISTON and CONNECTING ROD		
	PACKAGE Part No. 2932 972		
	Consists of:		
	1 - Piston and Connecting Rod		
	1 - 1377 825 Gasket, Oil Sump		
	1 - 1990 584 Gasket, Cylinder Head		
	1 - 1990 598 Gasket, Valve Seat		
	1 - Ball, Oil Pressure Relief		
	1 - Spring, Oil Pressure		
24-25-70	CRANKSHAFT GAS		
	SEAL PACKAGE Part No. 1426 501		
	Consists of:		
	1 - Seal, Crankshaft Gas		
	1 - 1982 542 Seal, Crankshaft Bearing Housing		
24-25-93	VALVE PLATE		
	PACKAGE Part No. 2275 204		
	Consists of:		
	1 - 1990 584 Gasket, Cylinder Head		
	1 - 1990 598 Gasket, Valve Plate		
	1 - Plate, Valve		
	VALVE PLATE		
	PACKAGE Part No. 2275 205		
	Consists of:		
	1 - 1990 584 Gasket, Cylinder Head		
	1 - 1990 598 Gasket, Valve Plate		
	1 - Plate, Valve		
24-25-154	CRANKSHAFT		
	PACKAGE Part No. 2815 762		
	Consists of:		
	1 - Crankshaft		
	1 - 1377 825 Gasket, Oil Sump		
	1 - 1990 584 Gasket, Cylinder Head		
	1 - 1990 598 Gasket, Valve Plate		
	1 - 1377 831 Seal, Bearing Housing		
	1 - Seal, Gas		
	1 - 1747 982 Washer, Thrust		
	CRANKSHAFT		
	PACKAGE Part No. 2815 755		
	Consists of:		
	1 - Crankshaft		
	1 - 1990 584 Gasket, Cylinder Head		
	1 - 1990 598 Gasket, Valve Plate		
	1 - 1377 825 Gasket, Oil Sump		
	1 - 1377 831 Seal, Bearing Housing		
	1 - Seal, Gas		
	1 - 1747 982 Washer, Thrust		
24-25-162	BEARING HOUSING		
	PACKAGE Part No. 3420 916		
	Consists of:		
	1 - Housing		
	1 - Seal		
	1 - 2919 681 Ball Bearing		
	BEARING HOUSING		
	PACKAGE Part No. 2541 332		
	Consists of:		
	1 - Housing		
	1 - 1377 831 Seal		
	BEARING HOUSING		
	PACKAGE Part No. 2196 315		
	Consists of:		
	1 - Housing		
	1 - 1377 831 Seal		
24-25-246	OIL PUMP		
	PACKAGE Part No. 2021 191		
	Consists of:		
	1 - Cover, Oil Pump		
	1 - Rotor, Outer		
	1 - Rotor, Inner		
	1 - 1747 988 Seal, Cover		
	1 - Shaft		